

USER GUIDE

PTP 700 Series

System Release 700-04-20



Reservation of Rights

Cambium reserves the right to make changes to any products described herein to improve reliability, function, or design, and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Cambium recommends reviewing the Cambium Networks website for the latest changes and updates to products. Cambium does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others. It is possible that this publication may contain references to, or information about Cambium products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Cambium intends to announce such Cambium products, programming, or services in your country.

Copyrights

This document, Cambium products, and 3rd Party software products described in this document may include or describe copyrighted Cambium and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Cambium, its licensors, and other 3rd Party supplied software certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Cambium, its licensors, or the 3rd Party software supplied material contained in the Cambium products described in this document may not be copied, reproduced, reverse engineered, distributed, merged or modified in any manner without the express written permission of Cambium. Furthermore, the purchase of Cambium products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Cambium or other 3rd Party supplied software, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.

Restrictions

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Cambium.

License Agreements

The software described in this document is the property of Cambium and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

© 2024 Cambium Networks Limited. All Rights Reserved.

Contents

About This User Guide	1
Contacting Cambium Networks.....	1
Purpose	1
Cross references	2
Feedback.....	2
Important regulatory information.....	3
Complying with rules for the country of operation.....	3
Radar avoidance.....	3
Application firmware.....	3
External antennas.....	3
Ethernet networking skills.....	4
Lightning protection	4
Training	4
Problems and warranty	5
Reporting problems	5
Repair and service.....	5
Hardware warranty	5
Security advice	6
Precautionary statements.....	7
Warning.....	7
Attention.....	7
Note.....	7
Caring for the environment.....	8
In EU countries	8
In non-EU countries	8
Chapter 1: Product description	1-1
Overview of the PTP 700 Series	1-2
Purpose	1-2
Key features.....	1-2
Frequency bands.....	1-4
Typical bridge deployment	1-4
Hardware overview.....	1-5
Protected links.....	1-6
Wireless topology.....	1-8
PTP topology	1-8
HCMP topology	1-8
Hot Standby (1+1) link protection.....	1-9
2+0 link protection	1-11
Wireless interface	1-12
Orthogonal Frequency Division Multiplexing (OFDM).....	1-12
OFDM and channel bandwidth.....	1-12
Adaptive modulation	1-13
MIMO	1-14
Spatial diversity.....	1-15
Time division duplexing in PTP wireless topology	1-16
Time division duplexing in Hot Standby (1+1) link protection	1-18
Time division duplexing in HCMP wireless topology	1-19
TDD synchronization	1-21

Wireless resource allocation.....	1-24
License keys and regulatory bands.....	1-24
Spectrum management.....	1-25
RF channel selection.....	1-25
Fixed frequency.....	1-26
Dynamic spectrum optimization.....	1-26
Slave scan in HCMP.....	1-28
Radar avoidance.....	1-29
Link mode optimization.....	1-30
Link symmetry.....	1-31
Dynamic time slot allocation in HCMP.....	1-35
Automatic alignment.....	1-36
Beam Steering ODU.....	1-36
TD-90 antenna positioner.....	1-37
Using the Beam Steering ODU with TD-90.....	1-38
Wireless encryption.....	1-39
Access method.....	1-39
Encryption options.....	1-39
TLS RSA.....	1-40
TLS PSK 128-bit and TLS PSK 256-bit.....	1-41
Over the air rekeying.....	1-42
Designing PTP networks.....	1-43
Ethernet bridging.....	1-45
Ethernet ports.....	1-45
Data and management services.....	1-45
Ethernet switching.....	1-46
Data Service.....	1-47
Out-of-Band Management Service.....	1-49
Link protection.....	1-51
TD-90 Service.....	1-52
Protocol model.....	1-52
Synchronous Ethernet.....	1-53
IEEE 1588-2008 Transparent Clock.....	1-54
TDM bridging.....	1-55
System management.....	1-56
Management agent.....	1-56
Network management.....	1-57
IPv6.....	1-59
cnMaestro device agent.....	1-60
Critical security parameters.....	1-61
Configuration templates.....	1-61
Web server.....	1-63
Web management authentication.....	1-65
SNMP.....	1-69
Standalone management of TD-90.....	1-70
Integrated management of TD-90.....	1-70
System Clock.....	1-72
SNMPv3 security.....	1-72
System logging (syslog).....	1-75
Domain Name Service (DNS).....	1-75
Instant messaging.....	1-76
AES license.....	1-76
Firmware upgrade.....	1-77
Capability upgrades.....	1-78
Full capability trial period.....	1-79

Recovery mode	1-80
Upgrade from earlier releases	1-81
PTP topology	1-81
HCMP topology	1-81
FIPS 140-3 mode	1-82
FIPS 140-3 approved mode.....	1-82
Exiting from the FIPS operational state.....	1-84
Reverting to the standard (non-FIPS) mode.....	1-85
Chapter 2: System hardware	2-1
Outdoor unit (ODU).....	2-2
ODU description	2-2
PTP 45700 Connectorized+Integrated ODU.....	2-3
PTP 45700 Connectorized ODU	2-6
PTP 45700 Beam Steering ODU	2-8
PTP 78700 Integrated ODU	2-9
PTP 78700 Connectorized ODU.....	2-10
ODU capability upgrades	2-12
ODU accessories.....	2-13
ODU cables	2-13
ODU mounting brackets.....	2-13
ODU interfaces	2-15
ODU mechanical specifications.....	2-18
Power supply units (PSU).....	2-20
AC+DC Enhanced Power Injector 56V.....	2-20
Antennas and antenna cabling	2-24
Antenna requirements.....	2-24
RF cable and connectors.....	2-24
Antenna accessories	2-24
RF Combiner Kit	2-25
Ethernet cabling	2-27
Ethernet standards and cable lengths.....	2-27
Outdoor copper Cat5e Ethernet cable	2-28
Cable grounding kit.....	2-29
Lightning protection unit (LPU) and grounding kit	2-30
LPU for GPS drop cables.....	2-31
RJ45 connectors and spare glands	2-32
Cable hoisting grip.....	2-33
Indoor Cat5e cable.....	2-33
SFP module kits	2-33
Optical cable and connectors.....	2-35
PTP-SYNC unit	2-37
PTP-SYNC unit description.....	2-37
PTP-SYNC part numbers	2-38
PTP-SYNC unit interfaces.....	2-39
PTP-SYNC specifications.....	2-40
GPS receivers	2-43
Trimble Acutime™ GG GPS receiver for PTP-SYNC	2-43
Chapter 3: System planning	3-1
Typical deployment	3-2
ODU with POE interface to PSU	3-2
SFP and Aux Ethernet interfaces	3-5
GPS receiver interfaces.....	3-8
Site planning	3-10
Grounding and lightning protection	3-10
Lightning protection zones	3-10

Site grounding system.....	3-11
ODU and external antenna location.....	3-11
ODU ambient temperature limits	3-12
ODU wind loading.....	3-13
Hazardous locations.....	3-14
PSU DC power supply	3-14
PSU AC power supply	3-14
PSU location.....	3-14
PTP-SYNC location.....	3-14
GPS receiver location.....	3-14
Drop cable grounding points.....	3-15
LPU location	3-16
Multiple LPUs	3-16
Hot Standby	3-19
Radio spectrum planning.....	3-20
General wireless specifications	3-20
Regulatory limits.....	3-21
Conforming to the limits.....	3-22
Available spectrum.....	3-22
Channel bandwidth.....	3-22
Frequency selection	3-22
Link planning	3-24
LINKPlanner.....	3-24
Range and obstacles.....	3-24
LINKPlanner for synchronized networks.....	3-25
Path loss.....	3-25
Adaptive modulation	3-25
Calculating data rate capacity.....	3-25
Planning for connectorized units.....	3-30
When to install connectorized units.....	3-30
Choosing external antennas.....	3-30
Protected links with shared antenna	3-31
Link configurations for protection and spatial diversity.....	3-32
Unprotected links.....	3-32
Protected links.....	3-33
End configurations for spatial diversity.....	3-34
Configuration options for TDD synchronization.....	3-36
Using PTP-SYNC with PTP 45700	3-36
Using a direct connection between ODUs.....	3-39
TDD burst durations in PTP topology	3-40
TDD frame durations.....	3-45
TDD frame design for standalone synchronization.....	3-46
TDD frame design for network-wide synchronization	3-46
Data network planning.....	3-47
Ethernet bridging	3-47
Layer two control protocols.....	3-47
Ethernet port allocation.....	3-48
VLAN membership.....	3-53
Priority for management traffic	3-53
IP interface for NMS	3-54
IP interface for integrated TD-90 management.....	3-54
Quality of service for bridged Ethernet traffic.....	3-54
Integrated management of TD-90	3-55
“Daisy-chaining” PTP 700 links.....	3-55
Green Ethernet switches	3-56

Network management planning.....	3-57
Planning for cnMaestro	3-57
Standard templates in the simplified web interface	3-57
Custom templates in the simplified web interface	3-60
Planning for SNMP operation.....	3-61
SNMP Configuration Mode.....	3-62
Planning for Domain Name Service (DNS)	3-67
Hot Standby links	3-67
Security planning	3-68
License key digital signature.....	3-68
Planning for SNTP operation	3-69
Using the Security Wizard	3-69
Planning for wireless encryption	3-70
Planning for HTTPS/TLS operation	3-72
Planning for protocols and ports.....	3-73
Planning for SNMPv3 operation.....	3-73
Planning for RADIUS operation	3-77
Planning for Single Sign-On (SSO) Operation	3-78
Internally-generated random keys.....	3-79
Integrated management of TD-90	3-79
Planning for FIPS 140-3 operation.....	3-80
System threshold, output power and link loss.....	3-82
Connectorized+Integrated ODUs.....	3-83
Connectorized and Beam Steering ODUs.....	3-94
Data throughput capacity tables	3-112
Data capacity in PTP topology	3-112
Time slots per frame in PTP topology with synchronization.....	3-169
Frame duration in HCMP topology with standard configuration.....	3-172
Frame duration in HCMP topology with expert configuration	3-180
Capacity per time slot	3-181
Chapter 4: Regulatory information.....	4-1
Compliance with safety standards.....	4-2
Electrical safety compliance	4-2
Electromagnetic compatibility (EMC) compliance.....	4-2
Human exposure to radio frequency energy	4-2
Compliance with radio regulations	4-5
Chapter 5: Installation.....	5-1
Safety.....	5-2
Power lines.....	5-2
Working at heights	5-2
PSU	5-2
Grounding and protective earth.....	5-2
AC supply	5-2
DC supply	5-2
Powering down before servicing	5-3
Primary disconnect device	5-3
External cables	5-3
Drop cable tester.....	5-3
Grounding PTP-SYNC.....	5-3
RF exposure near the antenna	5-3
Minimum separation distances.....	5-3
Grounding and lightning protection requirements.....	5-3
Grounding cable installation methods	5-4
Siting ODUs and antennas	5-4
Thermal Safety	5-4

ODU variants and mounting bracket options	5-5
Installing the ODU and top LPU	5-6
Attach ground cables to the ODU	5-6
Mount the ODU on the mast	5-6
Mount the top LPU.....	5-11
Interconnect and ground the ODU and top LPU.....	5-12
Install external antennas.....	5-15
Install RF Combiners.....	5-17
Assemble and mount the RF Combiners.....	5-17
Interconnect the RF Combiners, ODUs and antennas.....	5-18
Installing the copper Cat5e Ethernet interface	5-19
Install the ODU to top LPU drop cable	5-19
Install the main drop cable	5-22
Install the bottom LPU to PSU drop cable.....	5-24
Test resistance in the drop cable	5-26
Installing the PSU	5-27
Installing the AC+DC Enhanced Power Injector 56V.....	5-27
Installing a PTP-SYNC unit	5-29
Mounting the PTP-SYNC unit.....	5-29
Connecting up the PTP-SYNC unit.....	5-30
Powering up the PTP-SYNC installation.....	5-32
Installing the Trimble Accutime GPS receiver	5-33
Mounting the GPS receiver	5-33
Preparing the GPS drop cable.....	5-33
Assembling an RJ45 plug and housing for GPS	5-34
Assembling a 12 way circular connector	5-36
Connecting the GPS drop cable	5-40
Top grounding point for GPS adapter cable	5-40
Installing and connecting the GPS LPU	5-42
Installing an SFP Ethernet interface	5-43
Fitting the long cable gland	5-45
Inserting the SFP module	5-46
Connecting the cable.....	5-48
Fitting the gland	5-49
Removing the cable and SFP module	5-51
Installing an Aux Ethernet interface	5-52
Supplemental installation information	5-53
Stripping drop cable	5-53
Creating a drop cable grounding point	5-54
Weatherproofing an N type connector.....	5-57
Replacing PSU fuses.....	5-60
Chapter 6: Configuration and alignment.....	6-1
Preparing for configuration and alignment.....	6-2
Safety precautions	6-2
Regulatory compliance	6-2
Selecting configuration options.....	6-2
Generating license keys	6-2
Connecting to the unit	6-4
Configuring the management PC.....	6-4
Connecting to the PC and powering up.....	6-5
Using the web interface.....	6-6
Creating a user account.....	6-6
Logging into the web interface.....	6-7
Using the menu options for the standard web interface	6-8
Using the menu options for the simplified web interface.....	6-11

Standard Installation menu	6-12
Starting the Installation Wizard	6-12
Disarm Installation page	6-13
Current Installation Summary page.....	6-13
Software License Key page.....	6-16
Wireless Topology Configuration page	6-18
Interface Configuration page.....	6-19
Management Configuration page	6-26
Wireless Configuration page.....	6-28
TDD Frame page	6-37
TDD Synchronization page (optional).....	6-41
Confirm Installation Configuration page	6-45
Simplified Installation menu.....	6-47
Starting the Installation Wizard	6-47
Disarm Installation page	6-47
Current Installation Summary page.....	6-48
Equipment Configuration page.....	6-49
Template Configuration page.....	6-50
Wireless Configuration page.....	6-51
Interface Configuration page.....	6-53
Confirm Installation Configuration page	6-54
System menu	6-56
System Configuration page.....	6-56
LAN Configuration page.....	6-60
QoS Configuration page.....	6-70
SFP Configuration page.....	6-73
Authorization Control page.....	6-75
Save and Restore Configuration page	6-77
Reset Configuration page	6-79
Software Upgrade page.....	6-80
Management menu.....	6-83
Web-Based Management page	6-83
Local User Accounts page	6-85
RADIUS Configuration page	6-89
SSO Configuration page.....	6-91
Webpage Properties page.....	6-92
Email Configuration page.....	6-95
Instant Messaging page	6-97
Diagnostic Alarms page.....	6-98
Time Configuration page.....	6-99
Syslog Configuration page	6-104
SNMP pages (for SNMPv3)	6-106
Current SNMP Summary (for SNMPv3)	6-106
Step 1: SNMP Configuration (for SNMPv3)	6-107
Step 2: SNMP MIB-II System Objects (for SNMPv3)	6-109
Step 3: SNMP User Policy Configuration (for SNMPv3)	6-110
Step 4: SNMP User Accounts Configuration (for SNMPv3)	6-111
Step 5: SNMP Trap Configuration (for SNMPv3).....	6-112
Confirm SNMP Configuration (for SNMPv3)	6-114
SNMP pages (for SNMPv1/2c).....	6-115
Current SNMP Summary (for SNMPv1/2c).....	6-115
Step 1: SNMP Configuration (for SNMPv1/2c)	6-115
Step 2: SNMP MIB-II System Objects (for SNMPv1/2c).....	6-116
Step 3: SNMP Trap Configuration (for SNMPv1/2c).....	6-117
Confirm SNMP Configuration (for SNMPv1/2c)	6-118

Template Manager.....	6-119
Security menu	6-122
Preparation	6-122
Security Configuration Wizard page	6-122
Security options.....	6-123
Key of Keys.....	6-124
Entropy.....	6-126
Enter User Security Banner	6-126
Enter Login Information Settings.....	6-127
Enter HTTPS Configuration	6-128
Configure Wireless Security	6-129
HTTP and Telnet options.....	6-132
Confirm Security Configuration.....	6-134
Zeroize SSPs page	6-136
Configuring security for FIPS 140-3 applications	6-137
Prerequisites for FIPS 140-3 configuration.....	6-137
Configuration procedures for FIPS 140-3	6-138
Checking that the unit is in the FIPS 140-3 operational state	6-138
External Devices.....	6-140
TD-90 antenna positioner	6-140
Aligning fixed beam antennas.....	6-144
Hardware installation	6-144
Management connection	6-144
Arm the ODUs for installation	6-144
Aligning antennas.....	6-144
Aligning separate antennas for spatial diversity	6-145
ODU installation tones.....	6-146
Graphical Install page	6-147
Disarming the units.....	6-148
Comparing actual to predicted performance.....	6-149
Beam Steering ODU automatic alignment	6-150
Hardware installation	6-150
Management connection	6-150
Configure the ODUs for installation with automatic alignment.....	6-150
Automatic alignment	6-150
Disarming the units.....	6-151
Comparing actual to predicted performance.....	6-151
Automatic alignment at one end of a link	6-153
Automatic alignment at the Slave	6-153
Automatic alignment at the Master.....	6-153
Other configuration tasks	6-154
Connecting to the network.....	6-154
Upgrading firmware using TFTP	6-155
Chapter 7: Operation	7-1
System summary and status.....	7-2
System Summary page	7-2
Standard System Status page.....	7-3
Simplified System Status page	7-17
Rebooting and logging out.....	7-22
Login Information page	7-22
Reboot Wireless Unit page.....	7-22
Change Password page	7-23
Logging out	7-23
Alarms, alerts and messages	7-24
Alarms.....	7-24

Email alerts	7-27
Syslog page	7-28
Format of syslog server messages	7-29
Configuration and status messages	7-29
Event messages	7-29
Spectrum Management	7-32
Spectrum Expert and Spectrum Management pages	7-32
Spectrum Expert page	7-33
Spectrum Management page.....	7-38
Spectrum Management Settings	7-39
Interpreting the receive spectrum plot.....	7-41
Barring channels	7-47
Selecting a Channel and a Time period	7-49
Interpreting the timeseries plot	7-50
Interpreting the Interference Waterfall plot	7-51
Interpreting the histogram plot	7-53
Spectrum Expert example	7-54
Managing security.....	7-57
Exiting FIPS 140-3 approved mode.....	7-57
Zeroizing sensitive security parameters.....	7-57
System statistics.....	7-59
System Statistics page	7-59
Wireless Port Counters page	7-65
Main Port Counters page (PTP topology only).....	7-68
Aux Port Counters page (PTP topology only)	7-70
SFP Port Counters page (PTP topology only)	7-71
Ethernet Port Counters page (HCMP topology only)	7-71
Management Counters page (HCMP topology only)	7-73
SyncE Status page	7-73
Diagnostics Plotter page	7-76
Generate Downloadable Diagnostics page	7-78
Recovery mode.....	7-80
Entering recovery mode.....	7-80
Upgrading firmware image.....	7-83
Resetting IP & Ethernet configuration.....	7-84
Resetting all configuration data	7-86
Zeroize Sensitive Security Parameters	7-87
Rebooting the unit	7-89
Chapter 8: Troubleshooting	8-1
Cable Diagnostics	8-2
Test scenarios	8-2
Cable Diagnostics test.....	8-3
Testing link end hardware	8-7
AC+DC Enhanced Power Injector 56V LED sequence.....	8-7
Ethernet packet test.....	8-10
Testing the radio link	8-13
No activity	8-13
Some activity	8-13
Radio and television interference	8-14
Testing PTP-SYNC.....	8-15
Checking the PTP-SYNC LEDs	8-15
LEDs do not illuminate	8-15
STATUS LED is on steady	8-16
STATUS LED double-blinks	8-16
ODU LED does not illuminate within 90 seconds	8-16

CONTENTS

ODU LED blinks red.....8-16
GPS LED does not illuminate or blink on clustered units.....8-16
Glossary..... I

About This User Guide

This guide describes the planning, installation, configuration and operation of the Cambium PTP 700 Series of point-to-point wireless Ethernet bridges. It is intended for use by the system designer, system installer and system administrator.

For radio network design, refer to the following chapters:

- [Chapter 1: Product description](#)
- [Chapter 2: System hardware](#)
- [Chapter 3: System planning](#)
- [Chapter 4: Regulatory information](#)

For radio equipment installation, refer to the following chapter:

- [Chapter 5: Installation](#)

For system configuration, monitoring and fault-finding, refer to the following chapters:

- [Chapter 6: Configuration and alignment](#)
- [Chapter 7: Operation](#)
- [Chapter 8: Troubleshooting](#)

Contacting Cambium Networks

Support website:	https://support.cambiumnetworks.com
Main website:	http://www.cambiumnetworks.com
Sales enquiries:	solutions@cambiumnetworks.com
Support enquiries:	https://support.cambiumnetworks.com
RMA enquiries:	https://support.cambiumnetworks.com
Telephone number list:	http://www.cambiumnetworks.com/contact-us/
Address:	Cambium Networks Limited, Linhay Business Park, Eastern Road, Ashburton, Devon, UK, TQ13 7UP

Purpose

Cambium Networks Point-To-Point (PTP) documents are intended to instruct and assist personnel in the operation, installation and maintenance of the Cambium PTP equipment and ancillary devices. It is recommended that all personnel engaged in such activities be properly trained.

Cambium disclaims all liability whatsoever, implied or express, for any risk of damage, loss or reduction in system performance arising directly or indirectly out of the failure of the customer, or anyone acting on the customer's behalf, to abide by the instructions, system parameters, or recommendations made in this document.

Cross references

References to external publications are shown in italics. Other cross references, emphasized in blue text in electronic versions, are active links to the references.

This document is divided into numbered chapters that are divided into sections. Sections are not numbered, but are individually named at the top of each page, and are listed in the table of contents.

Feedback

We appreciate feedback from the users of our documents. This includes feedback on the structure, content, accuracy, or completeness of our documents. Send us feedback at <https://support.cambiumnetworks.com>

Important regulatory information

Complying with rules for the country of operation

The PTP 45700 product operates in frequency bands between 4.4 GHz and 5.8 GHz. These bands are made available for licensed or unlicensed operation according to the individual rules and regulations in force in each country.

Ensure that the equipment is operated in accordance with applicable regulations.

Obtain the necessary licenses or permits before using the equipment in licensed bands.

Some regional variants of PTP 45700 are locked to a single country of operation. For the remaining regional variants, use the Cambium Networks Support Centre to obtain a country-specific license key for the country of operation. Country-specific license keys are automatically populated with the list of regulatory bands allowed in that country.

In some regulatory bands, PTP 45700 may be allowed as a secondary user of the band, where operation is subject to the condition that the product does not cause interference to primary users of the band. In this case, take care to avoid causing interference to primary users.

Radar avoidance

In countries where radar systems are the primary band users, the regulators have mandated special requirements to protect these systems from interference caused by unlicensed devices. Unlicensed devices must detect and avoid co-channel operation with radar systems.

The PTP 45700 provides detect and avoid functionality for countries and frequency bands requiring protection for radar systems.

Installers and users must meet all local regulatory requirements for radar detection. To meet these requirements, users must install a license key for the correct country during commissioning of the PTP 700. If this is not done, installers and users may be liable to civil and criminal penalties.

Contact Cambium Customer Support if more guidance is required.

Application firmware

Download the latest PTP 700 Series firmware and install it in the Outdoor Units (ODUs) before deploying the PTP 700 equipment. Instructions for installing firmware are provided in [Upgrading firmware image](#) on page 7-83.

External antennas

When using an external connectorized antenna (as compared to the integrated antenna in the Integrated or Connectorized+Integrated platform variants), the conducted transmit power may need to be reduced to ensure the regulatory limit on transmitter EIRP is not exceeded. The installer must have an understanding of how to compute the effective antenna gain from the actual antenna gain and the feeder cable losses.

The ranges of permissible values for maximum antenna gain and feeder cable losses are included in this user guide together with a sample calculation. The product GUI automatically applies the correct conducted power limit to ensure that it is not possible for the installation to exceed the EIRP limit, when the appropriate values for antenna gain and feeder cable losses are entered into the GUI.

Ethernet networking skills

The installer must have the ability to configure IP addressing on a PC and to set up and control products using a web browser interface.

Lightning protection

To protect outdoor radio installations from the impact of lightning strikes, the installer must be familiar with the normal procedures for site selection, bonding and grounding. Installation guidelines for the PTP 700 can be found in [Chapter 2: System hardware](#) and [Chapter 5: Installation](#).

Training

The installer needs to have basic competence in radio and IP network installation. The specific requirements applicable to the PTP 700 should be gained by reading [Chapter 5: Installation](#) and [Chapter 6: Configuration and alignment](#) and by performing sample set ups at base workshop before live deployments.

Problems and warranty

Reporting problems

If any problems are encountered when installing or operating this equipment, follow this procedure to investigate and report:

- 1 Search this document and the System Release Notes of supported releases.
- 2 Visit the support website.
- 3 Ask for assistance from the Cambium product supplier.
- 4 Gather information from affected units, such as any available diagnostic downloads.
- 5 Escalate the problem by emailing or telephoning support.

Repair and service

If unit failure is suspected, obtain details of the Return Material Authorization (RMA) process from the support website.

Hardware warranty

Cambium's standard hardware warranty is for one (1) year from date of shipment from Cambium Networks or a Cambium distributor. Cambium Networks warrants that hardware will conform to the relevant published specifications and will be free from material defects in material and workmanship under normal use and service. Cambium shall within this time, at its own option, either repair or replace the defective product within thirty (30) days of receipt of the defective product. Repaired or replaced product will be subject to the original warranty period but not less than thirty (30) days.

To register PTP products or activate warranties, visit the support website. For warranty assistance, contact the reseller or distributor.



Attention Using non-Cambium parts for repair could damage the equipment or void warranty. Contact Cambium for service and repair instructions.

Portions of Cambium equipment may be damaged from exposure to electrostatic discharge. Use precautions to prevent damage.

Security advice

Cambium Networks systems and equipment provide security parameters that can be configured by the operator based on their particular operating environment. Cambium recommends setting and using these parameters following industry recognized security practices. Security aspects to be considered are protecting the confidentiality, integrity, and availability of information and assets. Assets include the ability to communicate, information about the nature of the communications, and information about the parties involved.

In certain instances, Cambium makes specific recommendations regarding security practices, however the implementation of these recommendations and final responsibility for the security of the system lies with the operator of the system.

Precautionary statements

The following describes how precautionary statements are used in this document.

Warning

Precautionary statements with the Warning tag precede instructions that contain potentially hazardous situations. Warnings are used to alert the reader to possible hazards that could cause loss of life or physical injury. A warning has the following format:



Warning Warning text and consequence for not following the instructions in the warning.

Attention

Precautionary statements with the Attention tag precede instructions that are used when there is a possibility of damage to systems, software, or individual items of equipment within a system. However, this damage presents no danger to personnel. An attention statement has the following format:



Attention Attention text and consequence for not following the instructions.

Note

Precautionary statements with the Note tag indicate the possibility of an undesirable situation or provide additional information to help the reader understand a topic or concept. A note has the following format:



Note Note text.

Caring for the environment

The following information describes national or regional requirements for the disposal of Cambium Networks supplied equipment and for the approved disposal of surplus packaging.

In EU countries

The following information is provided to enable regulatory compliance with the European Union (EU) directives identified and any amendments made to these directives when using Cambium equipment in EU countries.



Disposal of Cambium equipment

European Union (EU) Directive 2002/96/EC Waste Electrical and Electronic Equipment (WEEE)

Do not dispose of Cambium equipment in landfill sites. For disposal instructions, refer to

<http://www.cambiumnetworks.com/support/weee-compliance>

Disposal of surplus packaging

Do not dispose of surplus packaging in landfill sites. In the EU, it is the individual recipient's responsibility to ensure that packaging materials are collected and recycled according to the requirements of EU environmental law.

In non-EU countries

In non-EU countries, dispose of Cambium equipment and all surplus packaging in accordance with national and regional regulations.

Chapter 1: Product description

This chapter provides a high-level description of products in the PTP 700 series. It describes in general terms the function of the product, the main product variants and the main hardware components. The following topics are described in this chapter:

- [Overview of the PTP 700 Series](#) on page 1-2 introduces the key features, typical uses, product variants and components of the PTP 700 series.
- [Wireless](#) on page 1-8 describes how the PTP 700 wireless link is operated, including modulation modes, power control and spectrum management.
- [Ethernet bridging](#) on page 1-45 describes how the PTP 700 controls Ethernet data, in both the customer data and system management networks.
- [System management](#) on page 1-56 introduces the PTP 700 management system, including the web interface, installation, configuration, security, alerts and upgrades.
- [FIPS 140-3 mode](#) on page 1-82 describes the (optional) FIPS 140-3 approved mode of operation.

Overview of the PTP 700 Series

This section introduces the key features, typical uses, product variants and components of the PTP 700 series.

Purpose

Cambium PTP 700 Series Bridge products are designed for Ethernet bridging over point-to-point (PTP) and high-capacity multipoint (HCMP) microwave links in licensed, unlicensed and lightly licensed frequency bands.

Two PTP 700 frequency variants are available with the following frequency ranges:

- PTP 45700: 4400 MHz to 5875 MHz.
- PTP 78700: 7125 MHz to 8500 MHz.

Users must ensure that the PTP 700 Series complies with local operating regulations.

The PTP 700 Series acts as a transparent bridge between two or more segments of the operator's network. In this sense, it can be treated as a virtual wired connection between two or more points. The PTP 700 Series forwards 802.3 Ethernet frames destined for the other part or parts of the network and filters frames it does not need to forward. The system is transparent to higher-level protocols such as VLANs and Spanning Tree.

Key features

The PTP 700 is a high-performance wireless bridge for Ethernet traffic with a maximum throughput of 503 Mbps. It can operate in line-of-sight (LOS), near-LOS and non-LOS propagation conditions. Its maximum LOS range is 250 km. It has a very high spectral efficiency of 11.2 bps/Hz and supports a channel bandwidth of up to 45 MHz.

The PTP 700 operates in licensed, unlicensed and lightly licensed frequency bands, with two frequency variants covering the following frequency ranges:

- 4400 MHz to 5875 MHz.
- 7125 MHz to 8500 MHz.

The PTP 45700 (4400-5875 MHz) is available as a Connectorized+Integrated ODU for use with an external antenna or with an integrated 22 dBi flat plate antenna, as a Connectorized ODU for use with an external antenna, and as Beam Steering ODU with an electronically-steerable integrated 21 dBi flat plate antenna for automatic alignment.

The PTP 78700 (7125-8500 MHz) is available as Integrated ODU with an integrated 26 dBi flat plate antenna, and as a Connectorized ODU for use with an external antenna.

PTP 700 operates in two distinct wireless topologies: point-to-point (PTP) and high-capacity multipoint (HCMP). A PTP link consists of one outdoor unit (ODU) configured as a Master and one ODU configured as a Slave. An HCMP sector consists of one ODU configured as a Master and up to eight ODUs configured as Slaves.

The wireless link uses Time Division Duplex (TDD) to connect in both directions over a single RF channel and supports both symmetric and asymmetric TDD configurations.

The PTP 700 wireless link forwards Ethernet traffic between wired Ethernet interfaces as a transparent Layer 2 bridge. Each ODU supports up to three Gigabit Ethernet ports. Two ports support twisted pair Gigabit Ethernet. One of them can provide power via standard 802.3at PoE to an external device such as a video surveillance camera or a wireless access point. The third port accepts either a twisted pair or fibre GE SFP module.

The PTP 700 Series has extensive quality of service (QoS) classification capability and supports up to eight levels of queues. Management of the unit may be via the same interface as the bridged traffic (in-band management) or on a separate port (out-of-band local or remote management).

PTP 700 supports both synchronous Ethernet and operation as an IEEE 1588-2008 transparent clock.

Table 1 gives a summary of the main PTP 700 characteristics.

Table 1 Main characteristics of the PTP 700 Series

Characteristic	Value
Topology	PTP, HCMP
Wireless link condition	LOS, near LOS or non-LOS
Range	Up to 250 km (PTP topology), up to 100 km (HCMP topology)
Duplexing	TDD (symmetric and asymmetric)
Modulation	OFDM
Connectivity	Ethernet
Maximum Ethernet Frame Size	PTP: 9600 bytes HCMP: 2000 bytes
Protected Links	Hot Standby (1+1), 2+0
Synchronous Ethernet	ITU-T G.8262/Y.1362 EEC-Option 1 and EEC-Option 2
Transparent clock	IEEE 1588-2008 compliant
Operating frequencies	PTP 45700: 4400 MHz to 5875 MHz PTP 78700: 7125 MHz to 8500 MHz
Channel bandwidth	5, 10, 15, 20, 30, 40 or 45 MHz
High spectral efficiency	Up to 11.2 bps/Hz (PTP 78700, 45 MHz channel BW)
Aggregate data capacity	Up to 503 Mbps (PTP 78700, 45 MHz channel BW)
Management protocols	cnMaestro, HTTP, HTTPS, SNMP v1/2c, SNMP v3, syslog, SMTP, RADIUS
Security	AES, FIPS 140-3 Level 2
Color	White, Green, Desert Tan

Frequency bands

The PTP 45700 ODU can be configured by the user to operate in the following bands:

- 4.7 GHz band: 4400 MHz to 5000 MHz
- 4.9 GHz band: 4940 MHz to 4990 MHz
- 5.1 GHz band: 5150 MHz to 5250 MHz
- 5.2 GHz band: 5250 MHz to 5350 MHz
- 5.4 GHz band: 5470 MHz to 5725 MHz
- 5.8 GHz band: 5725 MHz to 5875 MHz




Note The supported frequency coverage may be restricted in some country licenses to comply with the applicable regulations.

The PTP 78700 ODU can be configured by the user to operate at any frequency in the 7125 MHz to 8500 MHz spectrum.

Typical bridge deployment

The PTP 700 is an “all outdoor” solution consisting of a wireless bridge between two or more sites. Each site installation consists of a PTP 700 Integrated outdoor unit (ODU), PTP 700 Connectorized ODU, PTP 700 Connectorized+Integrated ODU, PTP 700 Beam Steering ODU, and a power injector (PSU) (Figure 1). The ODU provides the following interfaces:

- PSU port: This provides proprietary power over Ethernet and connection to the management and/or data networks via 100BASE-TX or 1000BASE-T Ethernet. In the basic configuration, this is the only Ethernet connection to the ODU.
- SFP port: This provides an optical or copper Gigabit Ethernet interface for customer data and/or network management.
- Aux port: This provides an optional power and 100BASE-TX or 1000BASE-T Ethernet connection to an IEEE803.2at device such as a video camera or wireless access point.

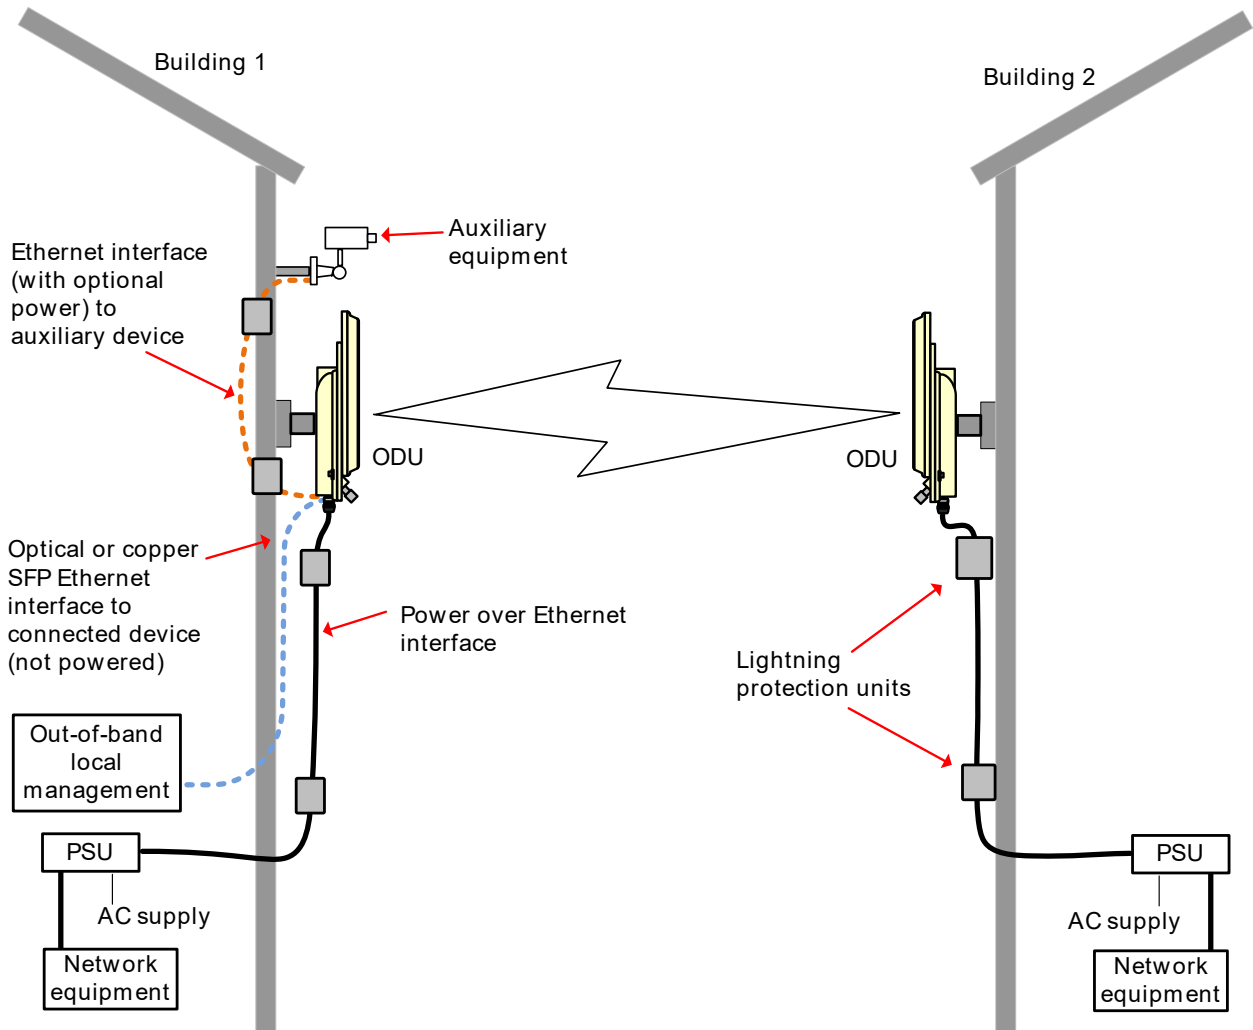Figure 1 PTP 700 typical bridge deployment

Hardware overview

The main hardware components of the PTP 700 are as follows:

- Outdoor unit (ODU): The ODU is a self-contained transceiver unit that houses both radio and networking electronics. The PTP 700 ODU is supplied in five configurations:
 - A PTP 45700 Connectorized ODU intended to work with separately mounted external antennas.
 - A PTP 45700 Connectorized+Integrated ODU intended to work with either separately mounted external antennas or with an integrated 22 dBi flat plate antenna.
 - A PTP 45700 Beam Steering ODU with an integrated, electronically steerable 21 dBi antenna, supporting automatic alignment. The Beam Steering ODU eliminates the need for manual alignment, leading to reduced effort for installers in tactical deployments, and minimizing exposure for installers in hazardous environments.
 - A PTP 78700 Connectorized ODU intended to work with separately mounted external antennas.
 - A PTP 78700 Integrated ODU intended to work with an integrated 26 dBi flat plate antenna.

- Power supply unit (PSU): The AC+DC Power Injector 56V is required when powering a single PTP 700 ODU from a DC supply, when powering an auxiliary device, or when using PTP-SYNC.
- Antennas and antenna cabling: Connectorized ODUs require external antennas connected using RF cable.
- RF Combiners for protected links
- PTP SYNC unit (optional): The PTP SYNC unit can be used with the AC+DC Enhanced Power Injector 56V to provide TDD synchronization at a TDD Master ODU. PTP-SYNC must be used with the AC+DC Enhanced Power Injector 56V. The PTP-SYNC unit is not supported by PTP 78700 ODUs.
- GPS receivers: The Trimble Acutime™GG GPS receiver is used with PTP-SYNC for network-wide TDD synchronization.
- Ethernet cabling: All configurations require a copper Ethernet Cat5e connection from the ODU (PSU port) to the PSU. Advanced configurations may also require one or both of the following:
 - A copper or optical Ethernet connection from the ODU (SFP port) to network terminating equipment or another device.
 - A copper Ethernet Cat5e connection from the ODU (Aux port) to an auxiliary device.
- Lightning protection unit (LPU): LPUs are installed in the PSU and Aux copper drop cables to provide transient voltage surge suppression.
- Ground cables: ODU, LPUs and outdoor copper Ethernet cables are bonded to the site grounding system using ground cables.

For more information about these components, including interfaces, specifications and Cambium part numbers, refer to [Chapter 2: System hardware](#).

Protected links

PTP 700 ODUs can be deployed as a high-availability Hot Standby PTP link for mission-critical applications. In a Hot Standby (1+1) link, Primary and Secondary Master ODUs are collocated at one end of the link, and Primary and Secondary Slave ODUs are collocated at the other end of the link. The ODUs are connected to a standard Ethernet switch at each end of the link.



Note The PTP-SYNC unit is not supported for TDD synchronization with PTP 78700 (7125-8500 MHz) ODUs. For these ODUs, use an alternative synchronization source.

The Hot Standby link is resilient to failure of any single unit or interconnection, and resilient to some multiple failures.

The hardware components for a Hot Standby link are as follows:

- Four PTP 700 ODUs, Integrated, Connectorized or Connectorized+Integrated
 - Two ODUs collocated at each end of the link
- Power Supply Units (PSUs): Two AC+DC Power Injector 56V at each end of the link.
- Antennas and antenna cabling for individual antennas or shared antennas
- RF Combiners for shared antennas

- If AC+DC Power Injector 56V is used:
 - Two PTP SYNC units connected to ODUs at the Master end of the link.
 - Two Trimble Acutime™GG GPS receivers connected to the PTP-SYNC units
- Ethernet cabling:
 - Copper Ethernet Cat5e connection from the ODUs (PSU port) to the PSUs
 - Copper Ethernet Cat5e connection (suitable for 1000BASE-T) as a Protection link between the Aux ports of collocated ODUs
- Lightning protection units (LPUs): LPUs installed in the PSU drop cables to provide transient voltage surge suppression.
- Ground cables: ODU, LPUs and outdoor copper Ethernet cables are bonded to the site grounding system using ground cables.

Wireless topology

PTP 700 supports operation in two distinct topologies:

- Point to point (PTP)
- High-capacity multipoint (HCMP)

PTP topology

The PTP topology provides Ethernet bridging over a point-to-point wireless link consisting of one outdoor unit (ODU) configured as a TDD Master and one ODU configured as a TDD Slave.

The PTP topology supports the following features:

- Range: Up to 250 km
- Operating frequencies: 4400 MHz to 5875 MHz, 7125 MHz to 8500 MHz
- Channel bandwidth: 5 MHz, 10 MHz, 15 MHz, 20 MHz, 30 MHz, 40 MHz, 45 MHz
- TDD ratio: 1:5, 1:3, 1:2, 1:1, 2:1, 3:1, 5:1, adaptive
- Link optimization: IP or TDM
- TDD synchronization using PTP-SYNC (PTP 45700 MHz ODUs only)
- Spectral efficiency: Up to 11.2 bps/Hz
- Aggregate data capacity: Up to 503 Mbit/s
- Dynamic Spectrum Optimization (DSO): Symmetric, Asymmetric
- Out-of-band management
- Synchronous Ethernet
- IEEE 1588 Transparent Clock
- Hot Standby (1+1) and 2+0 link protection
- Maximum Ethernet frame size: 9600 bytes

HCMP topology

The optional HCMP topology provides Ethernet bridging over a star of individual point-to-point wireless links connecting one ODU configured as a TDD Master with up to eight ODUs configured as TDD Slaves. Each of the individual wireless links is connection-oriented and operates in a dedicated transmission burst in the TDD frame. The capacity of the sector is shared between the individual links, but apart from this each of the links has efficiency and performance similar to links provided in the PTP topology.

The Master ODU will normally be installed with a connectorized sector or omni-directional antenna. Slave ODUs will normally be installed with an integrated or connectorized directional antenna.

The Master ODU includes an Ethernet bridging function with address learning to forward Ethernet data traffic via a wireless link to the appropriate Slave, based on the destination address of the end-station reached through the Slave. Traffic with broadcast or unknown unicast destination address is duplicated in the Master and forwarded on each of the links separately.

The star of wireless links and the Ethernet bridging function in the Master together provide LAN-like connectivity between the wired ports at up to nine ODUs. Data traffic forwarded from a wired port on one Slave to a wired port on a different Slave is delivered via the Master ODU and thus consumes wireless capacity in two different time slots.

The HCMP topology supports the following features:

- Operating frequencies: 4400 MHz to 5875 MHz, 7125 MHz to 8500 MHz
- Channel bandwidth: 20 MHz or 40 MHz
- Range: Up to 100 km
- Number of Slaves: Up to eight
- Link symmetry: 4:1, 3:1, 2:1, 1:1, 1:2, 1:3, 1:4. Link symmetry at 20 MHz channel bandwidth depends on maximum range and the maximum number of Slaves
- Link optimization: IP
- TDD synchronization using PTP-SYNC (PTP 45700 ODUs only)
- Spectral efficiency: Up to 8.3 bps/Hz
- Aggregate data capacity: Up to 338 Mbit/s
- Dynamic Spectrum Optimization (DSO): Symmetric
- Maximum Ethernet frame size: 2000 bytes

Synchronous Ethernet and IEEE 1588 Transparent Clock are not supported for the HCMP topology in this release, but may be added in later releases.

Further reading

For information about...	Refer to...
Wireless encryption in HCMP topology	Wireless encryption on page 1-39
Capability upgrades for HCMP	Capability upgrades on page 1-78
Configuring encryption in HCMP	Wireless encryption on page 1-39
Configuring the Whitelist	Authorization Control page on page 6-75

Hot Standby (1+1) link protection

The Hot Standby feature of PTP 700 provides a high-availability PTP link configuration for mission-critical applications.

The overall arrangement uses four ODUs, with Primary and Secondary Master ODUs collocated at one end of the link, and Primary and Secondary Slave ODUs collocated at the other end of the link.

The four ODUs are based on identical hardware and firmware, configured appropriately for four individual roles, as follows:

- Primary Master
- Primary Slave
- Secondary Master


- Secondary Slave

Use of Primary and Secondary wireless links

A Primary wireless link is established between the Primary ODUs, and a Secondary wireless link is established between the Secondary ODUs, as shown in [Figure 2](#).

Primary and Secondary wireless links are established concurrently during normal operation. This is different from typical protection schemes for licensed microwave where only one link is established at any time. The protection scheme does not require (or allow) a Primary Master to establish a link with a Secondary Slave, or a Secondary Master to establish a link with a Primary Slave. This also is different from typical protection schemes.

Figure 2 Hot Standby Link

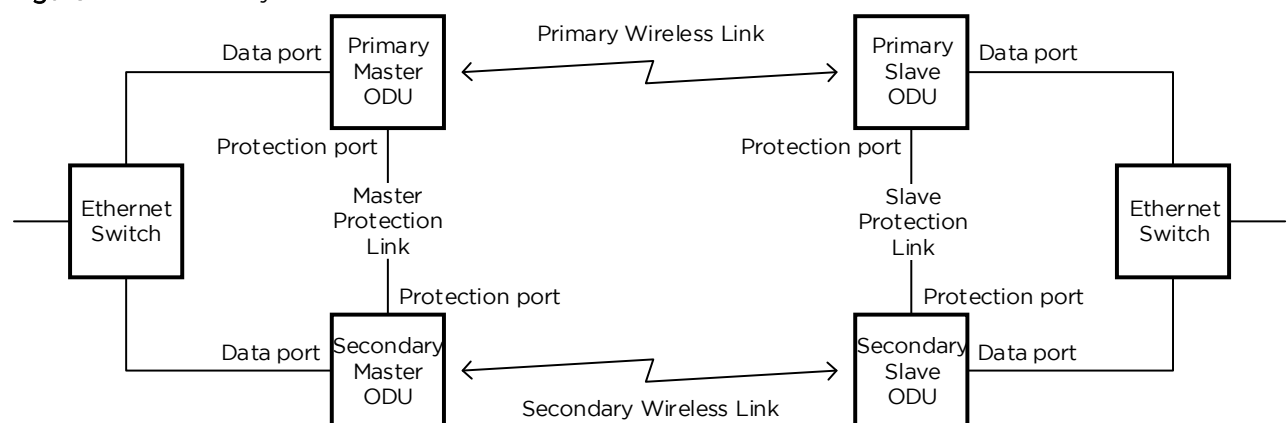

Protection state

Normally, one link (Primary or Secondary) in a Hot Standby arrangement is established and in the Active protection state, and the other link (Secondary or Primary respectively) is established and in the Standby protection state. A link in the Active state forwards traffic in the Data and Management services; a link in the Standby state blocks Data and Management services.

Any link with a fault is not available for service, and therefore necessarily in the Standby state. It follows that if both Primary and Secondary links have faults, both are in the Standby state.

A protection switch is the event where a link transitions from Active to Standby protection state, or from Standby to Active protection state. Protection switching is normally coordinated between Primary and Secondary links.

Channel bandwidth

The Hot Standby feature is available in the following bandwidths:

- 20 MHz
- 30 MHz
- 40 MHz
- 45 MHz

RF combiners

For the highest availability, connect neighboring ODUs in a Hot Standby link to independent antennas. If this is not possible, consider connecting the two ODUs to a shared dual-polarized antenna through the Cambium RF combiner Kit.

Further reading

For information about...	Refer to...
RF Combiner Kit	RF Combiner Kit on page 2-25
Planning link configurations for Hot Standby	Link configurations for protection and spatial diversity on page 3-32

2+0 link protection

Two PTP 700 links can be deployed in a 2+0 PTP link configuration so that the capacity of Primary and Secondary links is aggregated using an external Ethernet switch at each network site.

The individual links must operate on different RF channels and will normally have their TDD frames synchronized to avoid mutual interference. It is almost impossible to achieve enough isolation between collocated antennas, or shared antennas, to operate the 2+0 configuration without using TDD Synchronization.



Note PTP 700 does not provide, and does not require, a specific 2+0 Link Protection mode. 2+0 deployments consist of two standard synchronized links on different channels with external link aggregation.

RF combiners

For the highest availability, connect neighboring ODUs in a 2+0 link to independent antennas. If this is not possible, consider connecting the two ODUs to a shared dual-polarized antenna through the Cambium RF Combiner Kit (N000070L123A).

Further reading

For information about...	Refer to...
RF Combiner Kit	RF Combiner Kit on page 2-25
Planning link configurations for 2+0	Link configurations for protection and spatial diversity on page 3-32

Wireless interface

Orthogonal Frequency Division Multiplexing (OFDM)

PTP 700 transmits using Orthogonal Frequency Division Multiplexing (OFDM) to encode data onto multiple RF carriers, with Low Density Parity Check (LDPC) for Forward Error Correction (FEC). The PTP 700 radio transmits on two orthogonal polarizations with polarization diversity (single payload, sometimes called MIMO-A) or polarization multiplexing (dual payload, sometimes called MIMO-B).

Time slots

PTP 700 transmit bursts always contain a multiple of 10 OFDM symbols. In most PTP and HCMP applications, the system selects the multiple of 10 symbols in a transmit burst automatically, based on configured attributes including Topology, Channel Bandwidth, Symmetry, Link Optimization, Link Range and (in the case where Link Optimization is set to Adaptive) traffic loading in each direction. In TDD Synchronized operation, the burst duration is again a multiple of 10 OFDM symbols but is selected directly with units of μs . The HCMP Expert mode offers a finer level of control over wireless operation in HCMP, and here burst duration is selected in terms of time slots.

A time slot is simply the time taken to transmit 10 OFDM symbols. The duration of a time slot varies inversely with Channel Bandwidth.

OFDM and channel bandwidth

The PTP 700 series transmits using Orthogonal Frequency Division Multiplexing (OFDM). This wideband signal consists of many equally spaced sub-carriers. Although each sub carrier is modulated at a low rate using conventional modulation schemes, the resultant data rate from the sub-carriers is high. OFDM works exceptionally over a Non-Line-of-Sight (NLoS) channel.

In the PTP wireless topology, the channel bandwidth of the OFDM signal is configurable to one of the following values: 5, 10, 15, 20, 30, 40 and 45 MHz. Higher bandwidths provide greater link capacity at the expense of using more bandwidth. Systems configured for a narrower channel bandwidth provide better receiver sensitivity and can also be an appropriate choice in deployments where the amount of free spectrum is limited.

In the HCMP wireless topology, the channel bandwidth of the OFDM signal is 20 MHz or 40 MHz.

Each channel is offset in center frequency from its neighboring channel by 10 MHz or 5 MHz.



Note The Channel Bandwidth must be configured to the same value at both ends of the link. Not all channel bandwidths are available in all regulatory bands.

Further reading

For information about...	Refer to...
Channel bandwidths per frequency band	General wireless specifications on page 3-20

For information about...	Refer to...
How to plan for channel bandwidth	Channel bandwidth on page 3-22
Effect of channel bandwidth on link data throughput capacity	Calculating data rate capacity on page 3-25 Data throughput capacity tables on page 3-112
How to configure channel bandwidth	Wireless Configuration page on page 6-28
How to monitor channel bandwidth	Spectrum Management on page 7-32

Adaptive modulation

The PTP 700 series can transport data over the wireless link using a number of different modulation modes ranging from 256QAM 0.94 to BPSK 0.63. For a given channel bandwidth and TDD frame structure, each modulation mode transports data at a fixed rate. Also, the receiver requires a minimum signal to noise ratio in order to successfully demodulate a given modulation mode. Although the more complex modulations such as 256QAM 0.94 will transport data at a much higher rate than the less complex modulation modes, the receiver requires a much higher signal to noise ratio.

The PTP 700 series provides an adaptive modulation scheme where the receiver constantly monitors the quality of the received signal and notifies the far end of the link of the optimum modulation mode with which to transmit. In this way, optimum capacity is achieved at all times. This is one of a number of features which allows the PTP 700 to operate in challenging non-line of sight radio channels.



Note LINKPlanner includes an estimate of mean data rate, the data rate provided by each modulation and the percentage of time spent in each modulation mode.

Further reading

For information about...	Refer to...
Lowest data modulation mode	Lowest Data Modulation Mode on page 1-49
Planning for adaptive modulation	Adaptive modulation on page 3-25
Effect of modulation mode on link data throughput capacity	Calculating data rate capacity on page 3-25 Data throughput capacity tables on page 3-112
Effect of modulation mode on system threshold, output power and link loss	System threshold, output power and link loss on page 3-82
How to configure modulation modes	Interface Configuration page on page 6-19 Wireless Configuration page on page 6-28 System Configuration page on page 6-56

For information about...	Refer to...
Modulation mode when the ODU is armed	Arm on page 6-144
How to view the transmit and receive modulation modes	Standard System Status page on page 7-3 Wireless Port Counters (PTP topology) on page 7-62

MIMO

Multiple-Input Multiple-Output (MIMO) techniques provide protection against fading and increase the probability that the receiver will decode a usable signal. When the effects of MIMO are combined with those of OFDM techniques and a high link budget, there is a high probability of a robust connection over a non-line-of-sight path.

The PTP 700 transmits two signals on the same radio frequency, one of which is vertically polarized and the other horizontally polarized. Depending on the channel conditions, the PTP 700 will adapt between two modes of operation:

- **Dual Payload:** When the radio channel conditions allow, the PTP 700 will transmit two different and parallel data streams, one on the vertically polarized channel and one on the horizontally polarized channel. This doubles the capacity of the PTP 700. Dual payload is an example of polarization multiplexing, sometimes referred to as “MIMO-B”.
- **Single Payload:** In non-line-of-sight (NLOS) transmission, the direct path is typically blocked by terrain, buildings or foliage. Fading is a bigger problem in a link with an NLOS path, than in a link with a Line of Sight (LOS) path. However, fading in the vertical polarization is largely independent from fading in the horizontal polarization. There is therefore a greatly reduced probability that both polarizations will fade simultaneously. PTP 700 detects this fading condition and exploits the independence between H and V channels by selecting only single payload modulation modes. In single payload, PTP 700 transmits the same data on both channels and the receiver combines the two signals to maximise availability. Single payload is an example of polarization diversity, sometimes referred to as “MIMO-A”.

Lower order modulations (BPSK 0.63 up to QPSK 0.87) only operate in single payload mode. Higher order modulations (16QAM 0.63 to 256QAM 0.94) are available in single payload mode and dual payload mode. The switching between modes is automatically controlled by the adaptive modulation feature described in [Adaptive modulation](#) on page 1-13.



Note The system automatically chooses between dual and single payload to try to increase the capacity of a link. If necessary, disable the dual payload mode, forcing the more robust option of single payload.

Further reading

For information about...	Refer to...
How to configure dual or single payload	Wireless Configuration page on page 6-28

For information about...	Refer to...
Single and dual payload modulation modes	System threshold, output power and link loss on page 3-82

Spatial diversity

[MIMO](#) on page [1-14](#) describes the benefit of polarization diversity in a fading NLOS link.


Fading may also be caused by multipath interference in a Line of Sight (LOS) link. Multipath fading occurs where a signal reflected from water, or from a flat land surface, combines with the direct signal so that the reflected signal fully or partially cancels the direct signal. The deepest fade occurs when the two signals are similar amplitude but out of phase. This is the case when the reflected path is longer than the direct path by an odd number of half wavelengths. Where the same direct and reflected paths are used for horizontal and vertical polarization, the multipath cancellation tends to occur in both polarizations simultaneously. This means that polarization diversity alone does not address problems caused by multipath fading in a LOS path.

The unwanted effects of multipath interference can be reduced significantly by incorporating connectorized antennas with spatial diversity (SD) techniques. In PTP 700, SD requires separate antennas for horizontal and vertical polarization at one end or both ends of the link. The separate antennas ensure that the path length for horizontal polarization is different from the path length for vertical polarization. With optimum antenna spacing, fading in the two paths is independent. Single payload modulation then allows the receiver to combine data received in the two paths to achieve high availability.

Spatial diversity can be used with separate antennas at both ends of the link, but this configuration does not offer advantages over the simpler option with separate antennas at one end only.

[Figure 3](#) shows an example of a link with spatial diversity and separate single-polarized antennas at one end.

Figure 3 Horizontal and vertical paths in spatial diversity

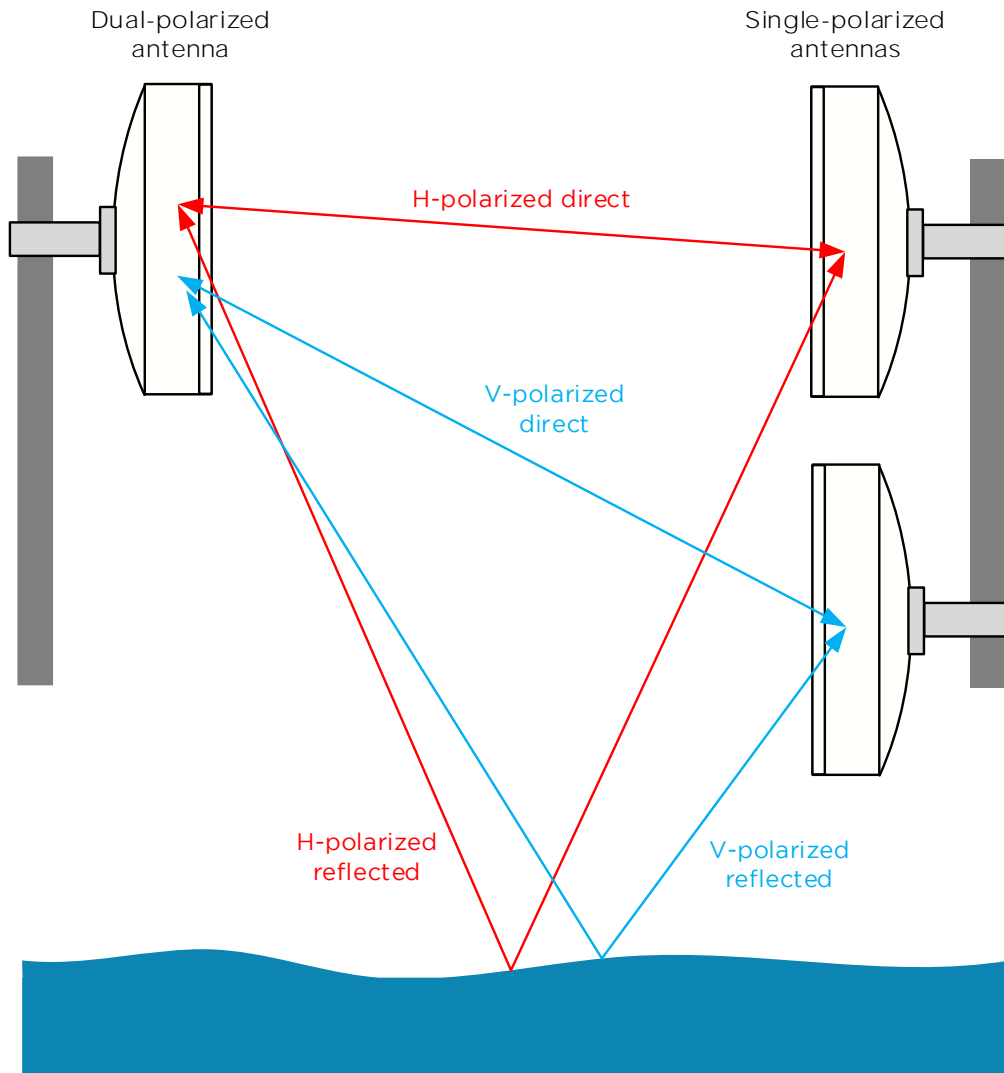

Attention To ensure high availability always use connectorized antennas with spatial diversity in links where there is a possibility of multipath interference reflected from water. This is often the case with a link across a bay, between islands, from an island to the mainland, or where one end is on a oil or gas platform.



Note LINKPlanner provides a very effective calculation of the optimum antenna spacing in links with Spatial Diversity.

Time division duplexing in PTP wireless topology

TDD cycle

PTP 700 links operate using Time Division Duplexing (TDD). They use a TDD cycle in which the ODUs alternately transmit and receive TDD bursts. The TDD cycle for a PTP link is illustrated in Figure 4. The steps in the cycle are as follows:

- 1 The TDD master transmits a burst to the TDD Slave.
- 2 A delay occurs as the Master-Slave burst propagates over the link.
- 3 The Slave receives the burst from the Master.
- 4 The Slave processes the Master-Slave burst.
- 5 The Slave transmits a burst to the Master.
- 6 A delay occurs as the Slave-Master burst propagates over the link.
- 7 The Master receives the burst from the Slave.
- 8 The Master transmits the next burst to the Slave.

The frame duration must be long enough to allow the Master to receive the complete burst in 7 before starting to transmit in 8.

TDD frame parameters


The TDD burst duration varies depending on the following:

- Channel bandwidth
- Link range
- Link optimization mode
- Link symmetry
- Offered traffic loading.

The TDD frame duration varies depending on the following:

- TDD burst duration Master-Slave.
- TDD burst duration Slave-Master.
- Link range.

The propagation delay in Step 2 is necessarily equal to the propagation delay in Step 6, and is determined solely by the link range.

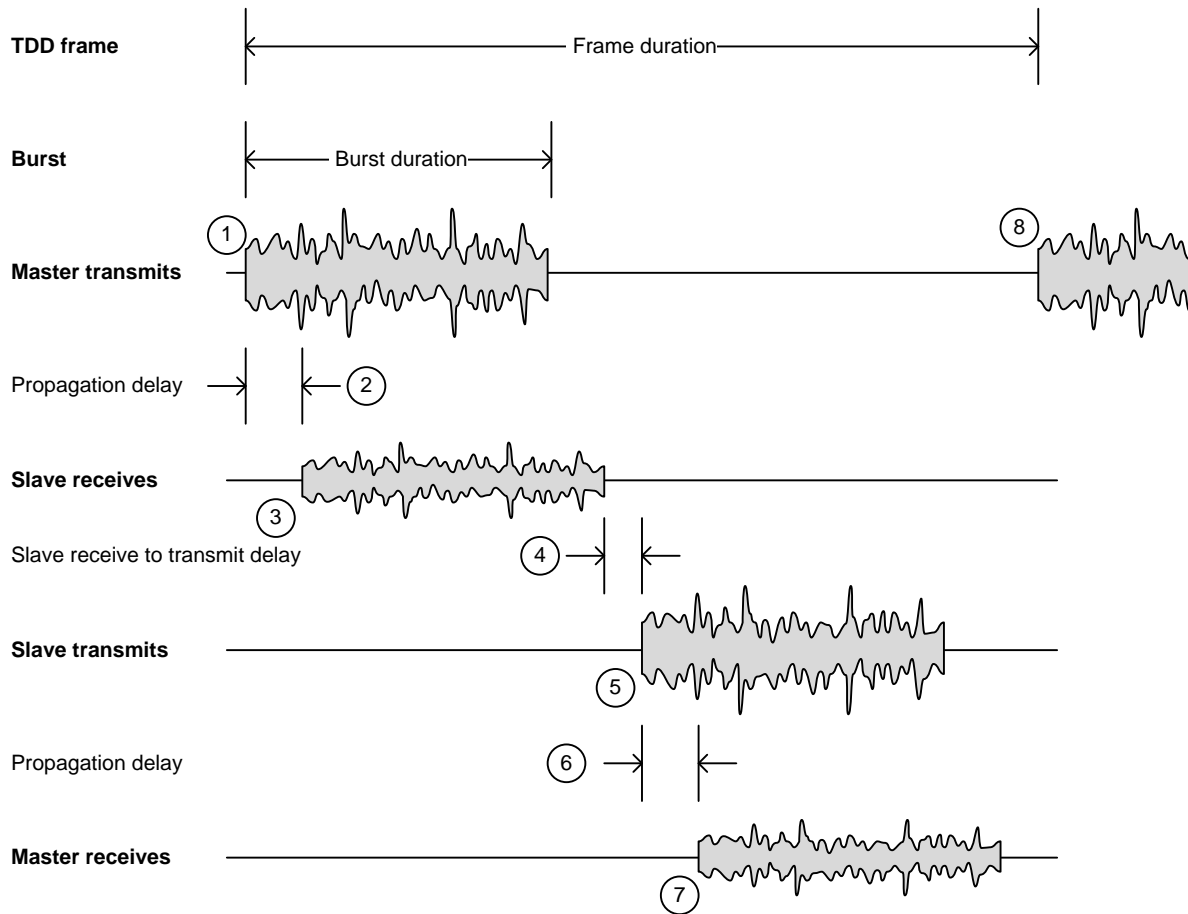Figure 4 TDD cycle for PTP

Channel selection

The PTP 700 series links can transmit and receive on the same channel, or on different channels. In other words, the slave-master direction may use a different channel from the master-slave direction. Independent selection of transmit and receive frequencies can be useful in planned networks or for countering interference.

When links operate in radar avoidance regions, each unit monitors its transmit channel for the presence of radar signals. Therefore, transmit and receive channels are always identical.

Time division duplexing in Hot Standby (1+1) link protection

In a PTP 700 link with Hot Standby (1+1) link protection, a Primary wireless link is established between a pair of Primary ODUs, and a Secondary wireless link is established between a pair of Secondary ODUs. Primary and Secondary wireless links are established concurrently during normal operation. The Primary and Secondary links have their TDD frames synchronized and interleaved to avoid mutual interference, and ideally share a single RF channel.

Burst duration

A Secondary link in Hot Standby scheme operates with the same bandwidth and same TDD frame duration as the associated Primary link. The Primary and Secondary links have synchronized TDD frames.

The transmit (or receive) burst duration of a link in the Standby state is always equivalent to a single time slot. The transmit (or receive) burst duration of an Active link is normally equivalent to several time slots. A transition between Active and Standby states therefore involves a modification of the transmit and receive burst duration.

Capacity

The capacity or spectral efficiency of the Active link is reduced compared with an equivalent unprotected link because the overall burst duration of the Hot Standby system is divided (unequally) between the Active and the Standby links, while only the Active link is used for customer data traffic. Longer burst durations increase the proportion of the burst that is used for customer traffic and thereby provide higher efficiency.

Time division duplexing in HCMP wireless topology

TDD cycle

The TDD cycle in HCMP operation is like the equivalent case for the PTP topology, except that the individual wireless links are accommodated in separate time slots within the TDD frame.

The TDD cycle for a simple HCMP sector with two Slave ODUs is illustrated in [Figure 5](#). The steps in the cycle are as follows:

- 1 The TDD Master transmits a burst to the first TDD Slave.
- 2 A delay occurs as the Master-Slave burst propagates over the link.
- 3 The first Slave receives the burst from the Master.
- 4 The first Slave processes the Master-slave burst.
- 5 The first Slave transmits a burst to the Master.
- 6 A delay occurs as the Slave-Master burst propagates over the link.
- 7 The Master receives the burst from the first Slave.
- 8 The Master transmits a burst to the second TDD Slave. A similar set of steps leads to:
- 9 The Master receives the burst from the second Slave.
- 10 The Master transmits the next burst to the first Slave.

Sectors configured for more than two Slaves necessarily have extended frame duration to accommodate additional Master-Slave and Slave-Master transmissions.

TDD frame parameters


In the HCMP topology, the TDD burst duration is a multiple of the time slot duration.

The TDD frame duration varies depending on the following:

- Maximum number of Slaves
- Maximum link range
- Link symmetry

The propagation delay in Step 2 is necessarily equal to the propagation delay in Step 6, and is determined solely by the link range. The propagation delay for the second Slave will be different from the delay for the first Slave unless the two Slaves are at the same range.

Figure 5 TDD cycle for HCMP

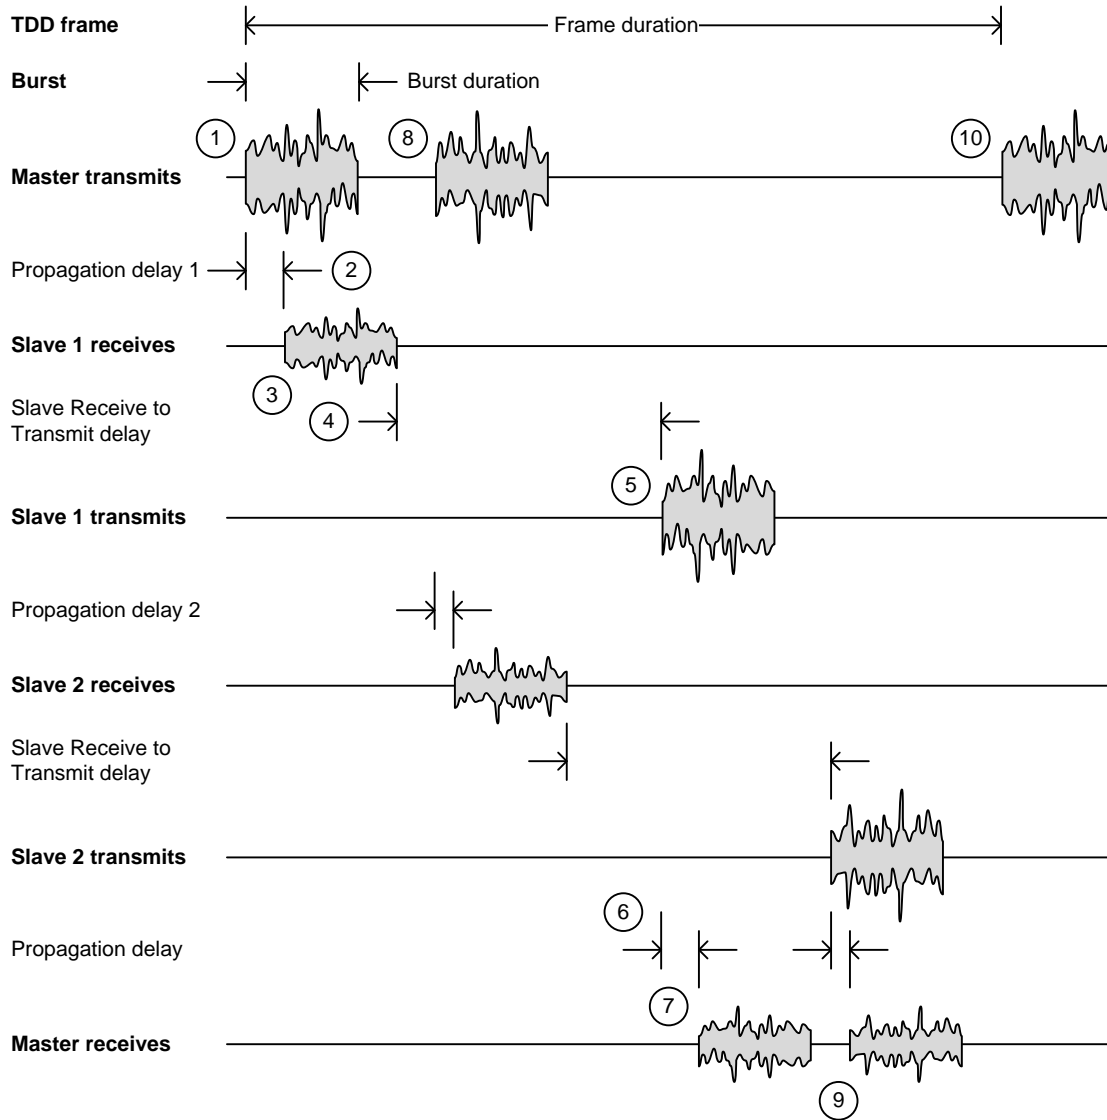

Channel selection

In the HCMP topology, the ODUs in a sector all transmit and receive on a common channel.

Further reading

For information about...	Refer to...
TDD synchronization in PTP and HCMP networks	TDD synchronization on page 1-21

TDD synchronization

PTP 700 supports two hardware options for TDD Synchronization of PTP 45700 and one option for TDD Synchronization of PTP 78700:

- **PTP-SYNC:** One PTP-SYNC unit is connected in line in the drop cable between the AC+DC Power Injector 56V and each Master PTP 45700 ODU, close to the AC+DC Power Injector 56V. The PTP SYNC hardware option can synchronize an isolated or standalone cluster of PTP-SYNC units without a GPS receiver. An optional GPS receiver can be added to provide network-wide synchronization. PTP-SYNC is not supported for PTP 78700.
- **Direct connection between two ODUs:** Two PTP 700 Master ODUs may be synchronized in a standalone configuration using a direct cable connection between wired Ethernet ports. There is no option in this case to synchronize with a GPS receiver, and so no possibility of network-wide synchronization. This option may be useful in an isolated Hot Standby (1+1) link, an isolated 2+0 link, or at the centre point of a relay of two links using the same mast.

PTP-SYNC



Note The PTP-SYNC unit is not supported for TDD synchronization with PTP 78700 (7125-8500 MHz) ODUs. For these ODUs, use an alternative synchronization source.

Up to ten PTP-SYNCS can be connected in a chain to share the timing signal from one timing reference.

PTP-SYNC provides two deployment options:

- An isolated or standalone cluster of PTP-SYNC units, without an external timing reference. In this case, one ODU acts as a reference for other collocated units. The associated ODUs may be synchronized with each other, but will not be synchronized with Master ODUs at other sites.
- One PTP-SYNC unit, or a cluster of several PTP-SYNC units, connected to an external timing reference, which is typically a GPS receiver. In this case, all of the associated ODUs may be synchronized with a network-wide reference, and thereby synchronized with other Master ODUs in the network. The timing reference can be from any timing system that provides a 1 Hz signal, accurately synchronized in frequency and phase with a network-wide master timing reference. GPS timing receivers are a very practical way of obtaining a suitable reference. The PTP-SYNC is compatible with the Trimble Acutime™ GG and Trimble Acutime™ Gold GPS receivers.



Attention The PTP-SYNC is compatible only with the AC+DC Power Injector 56V. PTP-SYNC is not compatible with standards-based power-over-Ethernet (PoE).

Direct connection between two ODUs

The Direct Connection option consists of one ODU configured as a free-running synchronization source, with a 1PPS output on its Aux port, and one ODU configured to receive the 1PPS signal at its Main PSU port or Aux port. The two ODUs must be interconnected using standard outdoor Cat5e cable that is gel-filled and shielded with copper-plated steel.

Configuring the TDD frame

In synchronized operation, frame duration, master-slave burst duration and slave-master burst duration must be configured directly in the web-based management interface. Frame duration must be identical across all links in a synchronized network.

The PTP LINKPlanner provides a capability for computing suitable frame parameters in a synchronized network. Please refer to the *LINKPlanner User Guide* for guidance on configuring TDD synchronization.

In the HCMP topology, frame duration is determined automatically as a function of the maximum number of Slaves and the maximum link range.

Link capacity in synchronized networks

The TDD frame duration is extended in synchronized networks to allow for the propagation delay of the longest link in the network and to incorporate additional guard periods. These guard periods protect against delayed interference from distant units in the same network.

The longer frame duration results in slightly lower link capacity than for an equivalent non-synchronized link with the same channel bandwidth and modulation mode. However, TDD synchronization also reduces interference, and this may allow operation in higher modulation modes. The benefit of operating in a higher modulation mode normally outweighs the penalty of the slightly longer TDD frame.

Links in Hot Standby

PTP links configured for Hot Standby can use extended TDD frame durations, identical to the frame durations used in HCMP topology. The longer frame duration ensures that the capacity sacrificed by operating a link in the Standby state is minimised, and the capacity of the associated Active state link is maximised.

End-to-end latency is increased when long frame durations are used.

Unprotected PTP links can be operated with the long frame durations, allowing constructions of synchronized links containing a mixture of protected and unprotected links. To use the extended frame duration, set the Long Frame Duration attribute to Enabled.

Further reading

For information about...	Refer to...
The PTP-SYNC unit	PTP-SYNC unit on page 2-37
Trimble GPS and cnPulse receivers	GPS receivers on page 2-43
Typical deployment diagrams for GPS	GPS receiver interfaces on page 3-8
Choosing a site for the PTP-SYNC unit	PTP-SYNC location on page 3-14
Choosing a site for the GPS receiver	GPS receiver location on page 3-14

For information about...	Refer to...
Use of LINKPlanner for TDD synchronization	LINKPlanner for synchronized networks on page 3-25
TDD synchronization methods that may be implemented using PTP-SYNC	Configuration options for TDD synchronization on page 3-36
TDD frame duration in HCMP topology	Frame duration in HCMP topology with standard configuration on page 3-172 Frame duration in HCMP topology with expert configuration on page 3-180
How to install a PTP-SYNC unit	Installing a PTP-SYNC unit on page 5-29
How to install an optional GPS receiver	Installing the Trimble Accutime GPS receiver on page 5-33
How to enable TDD synchronization	Wireless Configuration page on page 6-28
How to configure TDD synchronization	TDD Synchronization page (optional) on page 6-41
How to view TDD synchronization status	Standard System Status page on page 7-3
TDD synchronization alarms	Alarms on page 7-24
How to test a PTP-SYNC installation when a fault is suspected	Testing PTP-SYNC on page 8-15

Wireless resource allocation

License keys and regulatory bands

The PTP 700 license key specifies the country of operation for the ODU, and lists the regulatory bands that are licensed by regulators in that country. If a license key provides access to more than one regulatory band, PTP 700 provides a choice between the available bands. In each regulatory band, PTP 700 sets the following aspects of wireless operation to comply with the applicable regulations:

- Maximum transmit power
- Radar avoidance
- Transmit power reduction in edge channels
- Frequency range
- Channel plan
- HCMP and/or PTP topology

The country of operation (and thus the supported regulatory bands) can be changed by generating a new license key at the License Key Generator page of the Cambium web-site, and entering the new license key using the Installation Wizard.

ODU kits (see [Table 7](#), [Table 10](#)) provide an option to order CE-marked ODUs. CE marking indicates that the upgraded ODU complies with all applicable EU regulations including EMC, safety, hazardous materials, and wireless. CE-marked ODUs can only be used with country-specific License Keys for countries that are EU members, EEA members, or Turkey. These licenses necessarily restrict the maximum power that can be transmitted in 5 GHz bands to comply with EU regulations. Operation in 4 GHz bands is not regulated by the EU and is unchanged from the Global variant.



Attention To avoid possible enforcement action by the country regulator, always operate links in accordance with local regulations.

Further reading

For information about...	Refer to...
Planning PTP 700 links to conform to the regulatory band restrictions	Radio spectrum planning on page 3-20
Radio regulations in the country of operation	Compliance with radio regulations on page 4-5
How to generate a license key for the country of operation	Generating license keys on page 6-2
How to configure the regulatory band	Wireless Configuration page on page 6-28
How to view the regulatory band	Standard System Status page on page 7-3

For information about...	Refer to...
Regulatory band alarms	Alarms on page 7-24

Spectrum management

The spectrum management feature of the PTP 700 Series monitors the wireless spectrum and provides a real-time spectrum analyzer display to indicate the levels of interference in the available channels. This interference analysis supports a manual or automatic selection of the best operating channel.

Spectrum management measurements

The PTP 700 Series performs two signal measurements per TDD cycle. This measurement represents the mean received signal power during a 40 μ s measurement period.

The Spectrum Management algorithm makes measurements using a round-robin channel selection process to collect an equal amount of measurements from each channel. The measurement process is not altered by the channel barring process. Measurements are still collected for all channels irrespective of the number of barred channels.

Measurement analysis

Spectrum Management uses statistical analysis to process the received peak and mean measurement. The statistical analysis is based on a fixed, one minute, measurement quantization period. Spectrum Management collects data for the specified quantization period and only at the end of the period is the statistical analysis performed.

Statistical summary

The display of statistical measurement on the Spectrum Expert and Spectrum Management pages always shows a statistical summary of all channel measurement. The mean and percentile values displayed for each channel are calculated over a 20-minute statistics window period. All channel decisions are made using the values computed over the statistics window period.

Further reading

For information about...	Refer to...
How to perform spectrum management	Spectrum Management on page 7-32

RF channel selection

The PTP 700 Series supports two methods for Spectrum Management Control:

- Fixed frequency
- Dynamic Spectrum Optimization (DSO)

Master and Slave ODUs in a PTP link, or in an HCMP sector must be configured with the same setting for Spectrum Management Control.

Fixed frequency

Transmit and receive frequencies can be fixed in a PTP 700 wireless link. Once fixed frequency mode is configured, the spectrum management function will not attempt to move the wireless link to a channel with lower co-channel and adjacent-channel interference. Therefore, this mode of operation is only recommended for deployments where the installer has a good understanding of the prevailing interference environment. Care must also be taken to ensure that the frequency allocations at each end of the link are compatible.

Fixed frequency mode is not available in regions where radar detection is required by the regulations.

Dynamic spectrum optimization

Dynamic Spectrum Optimization (DSO) is an interference mitigation technique where the operating channel is selected based on background spectrum measurements at each of the ODUs. This is a dynamic process allowing the PTP 700 to move to a channel with a minimum level of co-channel and adjacent channel interference.

PTP topology

Two modes of DSO operation are available:

- **Symmetric:** the two link directions use the same frequency, determined by the Master ODU based on worst-case measurements at Master and Slave ODUs.
- **Asymmetric:** the frequency of operation is determined independently for each direction.

The Asymmetric mode is not permitted in radar regions.



Note Dynamic Spectrum Optimization is not supported in a PTP Hot Standby link.

HCMP topology

In the HCMP topology, only the Symmetric mode of DSO is supported. The Master ODU selects the optimum channel considering co-channel and adjacent channel interference measured in the uplink direction, together with co-channel and adjacent channel interference measured in the downlink direction and reported by each of the Slave ODUs.

Further reading

For information about...	Refer to...
Using DSO in PTP and HCMP networks	Using Dynamic Spectrum Optimization on page 1-43
Planning to use DSO	Frequency selection on page 3-22
How to configure DSO	Wireless Configuration page on page 6-28
Asymmetric DSO in non-radar regions	Spectrum Management Settings on page 7-39

Null Steering

The PTP 45700 Beam Steering ODU employs analog beamforming to achieve high directional gain and significant side lobe reduction. Currently, side lobes are reduced to as low as 8 dB for most steering angles up to 45°. However, this lower side lobe level does not guarantee the cancellation of interference sources, especially if they align with one of the grating lobes. To address this issue, a Null Steering algorithm is employed to create adaptive nulls and reject strong interfering sources.

The potential sources of interference considered in the PTP 45700 Beam Steer ODU communication scenario include:

1. **Signal Interference from Jammers:** Intentional jamming is common in defense environments to block communications (EW attacks).
2. **Interference from Radars:** Radars operating in the same band can cause interference to Radios mounted on the same platform and using nearby Frequency bands.
3. **Self-Interference from other PTP 45700 Links:** These links may be deployed in the same frequency band or with partial overlap.

The Null Steering algorithm in the PTP system is based on an optimization approach and uses SINR (Vector Error) as a fitness metric to optimize the performance. The algorithm does not require knowledge of the interferer's direction of arrival and effectively creates a radiation pattern with a null in the direction of the interferer.

A subset of available patches is used by the algorithm for null creation. The radiation pattern is modified by using the existing codebook and adjusting the edge elements to achieve a pattern with a null towards the interferer and minimal degradation to the main lobe beam. Patch selection is optimized to create effective nulls of 10 dB or more. The algorithm is designed to handle single or multiple interferers, providing an overall improvement in vector error.

The algorithm has a low convergence time, completing the optimization process within a couple of minutes. Null steering can be enabled in both fixed frequency and DSO modes of operation.

Fixed Frequency Mode

For the Fixed frequency mode of operation, the Null Steering algorithm provides better channel conditions in case of interference. The algorithm uses an initial SINR baseline which is calculated upon wireless link establishment. The baseline is used for monitoring an SINR delta change on the ongoing link. If the SINR delta changes by 6 dB or more, the Null Steering algorithm is triggered. Typically, the Null Steering algorithm converges on an average in less than 2 minutes. The baseline SINR is recalculated continuously for monitoring the wireless link conditions to trigger Null steering if conditions dictate it.

DSO Mode

On powerup, PTP will always run DSO initially on the available frequencies to search for a channel with maximum Channel quality/ SNR. Once DSO selects the best channel (out of all available Channels), Radio does the initial SINR baseline for use as a reference operating point for the existing link. In case Radio detects a drop in SINR by an order of 6 dB, then an automatic Null Steering Algorithm will be triggered. This will take a couple of minutes to optimize the SINR. During the Null Steering process, Channel measurements are still taken in the DSO slot but channel changeover is deactivated to avoid conflict with ongoing optimization. After completion of the Null Steering process, a new measurement will be taken and compared against the set threshold (Interference Threshold + Interference Tolerance Margin). If the SINR after completion of Null Steering is above the set threshold and max mod is achieved, the link will continue to operate at the same frequency, and channel changeover will not be considered.

Operators have the flexibility to change the interference threshold or Interference Tolerance Margin on the Spectrum Expert page based on specific requirements which will allow preference of DSO channel change over Null steering to decide in case of bad interference scenario conditions.

The DSO channel change considers interference conditions at both nodes (Master and Slave). The Null Steering algorithm is mainly designed to work in a node (Master/Slave) and only depends on the Interference conditions around this node.

Slave scan in HCMP

A Slave ODU operating in the HCMP topology with Spectrum Management Control set to Fixed Frequency (meaning that DSO is disabled) provides three different approaches for determining the operating channel. These options are selected using the Slave Scan attribute:

- **Disabled:** The Slave must be configured with the same Fixed Frequency channels as the associated Master ODU. The channel is selected by management action.
- **Auto Single:** The Slave scans the selected Regulatory Band, connecting to the first suitable HCMP Master that it detects. This avoids the need to know the operating channel in advance and minimises the scan time.
- **Auto Optimum:** The Slave scans the whole of the selected Regulatory Band, connecting to the best (highest spare capacity or strongest signal) HCMP Master that it detects. This is a more reliable approach in a network where several HCMP Masters serve the same area. All Master and Slave ODUs must be configured with the same Group ID.



Note To use automatic Slave Scan in an HCMP sector, configure the HCMP Master with the same (fixed) Transmit and Receive frequencies.

Barring channels at the Slave ODU

An HCMP Slave ODU using Slave Scan provides an option to administratively bar RF channels using the Spectrum Expert page in the web-based interface. Barred channels are not scanned for Slave Scan.

If the channels used by the available Master ODUs are known, the remaining (unused) channels can be barred so that the Slave Scan considers only a small subset of channels. This approach reduces the scan time and allows Slaves to connect with less delay.

Force scan

Use the Force Scan button in the Spectrum Expert page to restart a new scan at the lowest channel. This may be useful if some aspect of the physical installation (for example antenna alignment) has been changed while the scan is in progress.

Auto optimum slave scan

The Auto Single behavior is appropriate and useful in a planned network, where the assignment of Slave ODUs to Master ODUs is unique and determined in advance.

However, other deployment models are possible, resulting in a network with a selection of Master ODUs on different RF channels but configured with the same Group ID. This situation typically occurs in the case in HCMP networks in tactical or rapidly-developing scenarios. If multiple Master ODUs are configured with the same Group ID, the first-come-first-served behavior of the standard Auto Single Scan technique can result in the Slave ignoring correctly-configured alternative Master ODUs that would have offered stronger RF signal level and/or greater unused capacity.

This problem is addressed by the Auto Optimum Slave Scan feature, allowing a Slave to survey the whole of the selected Regulatory Band, and to then select a Master based on received signal level and free capacity.

Auto Optimum Slave Scan necessarily involves an increase in scan time because the Slave cannot attempt to establish a link until the scan is complete.

Auto optimum selection method

An HCMP Slave ODU using Auto Optimum Slave Scan scans until it completes a complete scan having detected one or more correctly-configured Master ODUs. It then constructs a scan list of Masters with spare capacity, excluding from the list any Master ODU providing received signal level significantly below the level from the strongest Master. The remaining Masters in the scan list are then ranked according to spare capacity, from highest to lowest.

The threshold for excluding Masters with low receive signal level is set by the Master Receive Power Threshold attribute. If the threshold is set to a low value (say 6 dB) the selection method is predominantly based on signal strength. If the threshold is set to a high value (say 30 dB) the selection method is predominantly based on spare capacity.

In Standard TDD Frame Configuration, any Master with remaining capacity necessarily has capacity to connect at least one more Slave.

In Expert TDD Frame Configuration, the Slave additionally excludes from the scan list any Master that does not have spare capacity equal to or greater than the configured Uplink and Downlink Slots Request.



Note An HCMP Slave will not detect a Master ODU that has no remaining capacity.

Establishing a link

An HCMP Slave ODU using Auto Optimum Slave Scan attempts to connect to the highest ranked Master ODU in the scan list and, if this fails, tries the remaining Master ODUs in order until the list is exhausted. If none of the listed Master ODUs forms a link, the Slave ODU repeats the scan of the Regulatory Band.

Radar avoidance

In regions where protection of radars is part of the local regulations, the PTP 700 must detect interference from radar-like systems and avoid co-channel operation with these systems.

To meet this requirement, the PTP 700 implements the following features:

- The radar detection algorithm will always scan a usable channel for 60 seconds for radar interference before making the channel an available channel.

- This compulsory channel scan will mean that there is at least 60 seconds service outage every time radar is detected and that the installation time is extended by at least 60 seconds even if no radar is found.
- When operating on a channel, the spectrum management algorithm implements a radar detection function which looks for impulsive interference on the operating channel. If impulsive interference is detected, spectrum management will mark the current operating channel as having detected radar (unavailable channel) and initiate a channel hop to an available channel. The previous operating channel will remain in the unavailable state for thirty minutes after the impulsive interference pulse was detected.
- After the thirty minutes have expired the channel will be returned to the usable channel pool.

There is a secondary requirement for bands requiring radar avoidance. Regulators have mandated that products provide a uniform loading of the spectrum across all devices. In general, this prevents operation with fixed frequency allocations. Fixed frequency allocation is not recommended in radar avoidance regions, as any radar detection would cause a system outage of at least 30 minutes.



Note PTP 700 does not support Radar Avoidance in the PTP 78700 ODUs.



Note PTP 700 does not support Radar Avoidance in the HCMP topology.



Note PTP 700 does not support Radar Avoidance in a Hot Standby link.

Further reading

For information about...	Refer to...
Radar avoidance in the country of operation	License keys and regulatory bands on page 1-24
Planning for mandatory radar detection	Frequency selection on page 3-22
Radar avoidance when aligning antennas	ODU installation tones on page 6-146
Effect of radar detection on spectrum management	Spectrum Expert page in radar avoidance mode on page 7-44

Link mode optimization

Link mode optimization allows the PTP 700 link to be optimized according to the type of traffic that will be bridged. The link supports two modes, IP Traffic and TDM Traffic.

IP link optimization in the PTP topology

The IP link optimization mode provides the maximum possible link capacity. IP mode is an appropriate choice where applications in the bridged networks provide some measure of reliable transmission, and where very low latency is not critical. IP mode supports both fixed and adaptive link symmetry.

TDM link optimization in the PTP topology

The TDM link optimization mode provides the lowest possible latency. TDM mode additionally implements a more conservative approach to adaptive modulation, leading to lower error rates in fading channels at the expense of slightly lower link capacity. TDM mode is an appropriate choice for delay intolerant data without reliable transmission (for example voice over IP data). TDM Traffic mode is selected automatically when TDM interfaces are enabled.

Link optimization in the HCMP topology

The HCMP topology supports only IP link optimization.

Further reading

For information about...	Refer to...
Effect of IP and TDM modes on link symmetry	Link symmetry on page 1-31
Effect of IP and TDM modes on link data throughput capacity	Calculating data rate capacity on page 3-25 Data throughput capacity tables on page 3-112
Effect of IP and TDM modes on system threshold, output power and link loss	System threshold, output power and link loss on page 3-82
How to configure link mode optimization	Wireless Configuration page on page 6-28
Link mode optimization alarms	Alarms on page 7-24

Link symmetry

PTP topology without TDD Synchronization

The PTP 700 series provides eight configuration options for apportioning the available capacity between the two link directions.

- **Symmetric** – The Master and Slave have equal capacity. The PTP 700 series achieves this by allocating an equal Burst Duration for the Master and the Slave.
- **5:1** – The capacity in the direction Master to Slave is five times that of the direction Slave to Master. The PTP 700 series achieves this by setting the Burst Duration of the Master to five times that of the Slave
- **3:1** – The capacity in the direction Master to Slave is three times that of the direction Slave to Master. The PTP 700 series achieves this by setting the Burst Duration of the Master to three times that of the Slave.
- **2:1** – The capacity in the direction Master to Slave is twice that of the direction Slave to Master. The PTP 700 series achieves this by setting the Burst Duration of the Master to twice that of the Slave.

- **1:2** – The capacity in the direction Slave to Master is twice that of the direction Master to Slave. The PTP 700 series achieves this by setting the Burst Duration of the Slave to twice that of the Master.
- **1:3** – The capacity in the direction Slave to Master is three times that of the direction Master to Slave. The PTP 700 series achieves this by setting the Burst Duration of the Slave to three times that of the Master.
- **1:5** – The capacity in the direction Slave to Master is five times that of the direction Master to Slave. The PTP 700 series achieves this by setting the Burst Duration of the Slave to five times that of the Master.
- **Adaptive** – This is only available on the Full capacity variant. The capacity allocated to a given link direction is dependent on the offered level of network traffic in both link directions. If the level of offered traffic in both directions is equally high or equally low, the PTP 700 will allocate equal capacity to both directions. If however the offered level of traffic is greater in one direction, it is allocated a greater proportion of the overall link capacity. The PTP 700 series achieves this by increasing (or decreasing) the duration of the Transmit Burst in a given link direction as the offered level of network traffic increases (or decreases) in this same direction. This is done independently for the two directions.



Note Adaptive mode is not available in the following configurations:

- When link mode optimization is set to TDM Traffic (see [Link mode optimization](#) on page 1-30).
- In regions where radar avoidance is operational (see [Radar avoidance](#) on page 1-29).
- When the ODU is the Lite capacity variant.

PTP topology with TDD Synchronization

When the PTP 700 series is used with TDD Synchronization, the ODU supports independent selection of the TDD burst duration in the master-slave and slave-master directions, providing different capacity in the two directions.

When the optional Long Frame Duration option is enabled, the ODU allows maximum asymmetric configurations of:

- 20 MHz channel bandwidth: 85.7% of the capacity in one direction
- 30/40/45 MHz channel bandwidth: 88.2% of the capacity in one direction



Note Asymmetric TDD is not available for a synchronized link in regions where radar avoidance is operational (see [Radar avoidance](#) on page 1-29).

HCMP topology with Standard TDD Frame Configuration

The PTP 700 series provides seven configuration options for apportioning the available capacity between the two link directions.

- **4:1** – The capacity in the downlink (Master to Slave) direction is four times that of the uplink (Slave to Master) direction.
- **3:1** – The capacity in the downlink direction is three times that of the uplink direction.
- **2:1** – The capacity in the downlink direction is twice the uplink direction.
- **1:1** – Uplink and downlink capacity is equal.
- **1:2** – The capacity in the uplink direction is twice the downlink direction.
- **1:3** – The capacity in the uplink direction is three times that of the downlink direction.
- **1:4** – The capacity in the uplink direction is four times that of the downlink direction.

The asymmetric options are available independent of TDD Synchronization.

The available Link Symmetry options in HCMP topology depend on Channel Bandwidth, Maximum Link Range and the number of Slaves, as shown in [Table 2](#).

Table 2 Link symmetry options in HCMP

Channel Bandwidth	Number of slaves	Maximum Link Range	Supported link symmetry options	
20 MHz	Two, three, four	5.0 km to 100.0 km	4:1, 3:1, 2:1, 1:1, 1:2, 1:3, 1:4	
	Five	5.0 km to 100.0 km	3:1, 2:1, 1:1, 1:2, 1:3	
	Six	5.0 km to 100.0 km	2:1, 1:1, 1:2	
	Seven		5.0 km to 57.0 km	2:1, 1:2
			5.0 km to 100.0 km	1:1
	Eight	5.0 km to 100.0 km	1:1	
40 MHz	Two to eight	5.0 km to 100.0 km	4:1, 3:1, 2:1, 1:1, 1:2, 1:3, 1:4	

HCMP topology with Expert TDD Frame Configuration

The Expert option for TDD Frame Configuration Mode offers a flexible approach to configuring link symmetry in HCMP sectors, allowing individual links to be provided with additional time slots in the uplink or downlink as required to meet differing traffic loads. This is useful where HCMP Slaves are deployed to serve different organizational functions.

In the Expert mode, the HCMP Master is configured for:

- TDD Frame Configuration Mode = Expert
- Channel Bandwidth
- HCMP Maximum Link Range
- Maximum Number of Slaves
- Total Downlink Time Slots
- Total Uplink Time Slots

The Master configuration determines the overall TDD frame structure for the HCMP sector.

The HCMP Slaves are all configured to match the HCMP Master, and individually configured with:

- Downlink Slots Request
- Uplink Slots Request
- Downlink Slots Limit
- Uplink Slots Limit

The HCMP Master allows a Slave to connect if it can provide at least the requested uplink and downlink time slots. If some capacity is available, but it is insufficient to meet the request then the Master rejects the connection attempt.

Table 3 shows the maximum number of time slots in the TDD frame as a function of Channel Bandwidth and Maximum Link Range.

Table 3 Maximum number of time slots in HCMP Expert mode

Channel Bandwidth	Maximum Link Range	Maximum total number of time slots
20 MHz	5.0 km to 57.0 km	21
	57.1 km to 100.0 km	20
40 MHz	5.0 km to 11.9 km	44
	12.0 km to 59.7 km	43
	59.8 km to 100.0 km	42

The minimum uplink or downlink request for one HCMP Slave is 1 time slot.

The maximum uplink or downlink request for one HCMP Slave is 15 time slots.



Note The Expert mode allows a population of Slaves to be created where the sum of all uplink or downlink requests exceeds the total time slots available at the Master. The system does not apply a check for this condition when Slaves are configured. If the time slots requested exceeds the total time slots, some Slaves will be unable to connect.

If it is important for all Slaves to be able to connect at the same time, take care not to over-subscribe the total number of time slots.

Further reading

For information about...	Refer to...
Link symmetry in synchronized PTP networks	TDD synchronization on page 1-21
Effect of link symmetry on link data throughput capacity	Calculating data rate capacity on page 3-25 Data throughput capacity tables on page 3-112
How to configure link symmetry	Wireless Configuration page on page 6-28

Dynamic time slot allocation in HCMP

Standard TDD Frame Configuration

In the Standard TDD Frame Configuration mode, the TDD frame is constructed with the number of time slots needed to support the maximum number of slaves at the configured asymmetry. For example, four Slaves and 3:1 asymmetry requires a total of 16 time slots.

If the number of Slaves connected at some time is less than the configured maximum, the surplus time slots will be temporarily assigned to the connected slaves. The temporarily assigned time slots may be reassigned in the future if a new Slave connects. It follows from this that the capacity of an HCMP link may be greater than the planned value.

The allocation of surplus time slots is on a round robin basis, aiming to provide even distribution of the surplus resources.



Note Dynamic time slot allocation is reassessed when HCMP Slaves connect or disconnect. Resources are not assigned based on traffic load or the volume of queued traffic.

Expert TDD Frame Configuration

In the Expert TDD Frame Configuration mode, the TDD frame is constructed with a configured number of uplink and downlink time slots. Time slots are assigned to Slaves when a link is established, based on the Requested Uplink Timeslots and Requested Downlink Timeslots attributes configured for the Slave.

If the sum of the requested time slots at some time is less than the total time slots available at the Master, the surplus time slots will be temporarily assigned to the connected slaves. The temporarily assigned time slots may be reassigned in the future if a new Slave connects.

The allocation of surplus time slots is on a round robin basis, aiming to provide even distribution of the surplus time slots, measured as a multiple of the requested time slots.

The allocation of surplus time slots is subject to a limit set by the Uplink Timeslot Limit and Downlink Timeslot Limit attributes.



Note Dynamic time slot allocation is reassessed when HCMP Slaves connect or disconnect. Resources are not assigned based on traffic load or the volume of queued traffic.



Note If there is no advantage in providing additional capacity to a particular Slave (for example because the link carries constant rate traffic) set the Timeslots Limit equal to the Requested Timeslots. This ensures that surplus resources are assigned to other links where there may be some benefit.

Automatic alignment

Beam Steering ODU

The PTP 45700 Beam Steering ODU includes an integrated electronically-steerable phased array antenna to provide effective automatic alignment in fixed PTP links.

Automatic alignment removes the need for accurate mechanical antenna alignment when a PTP link is installed, reducing the work load for installers in urgent tactical deployments, and minimizing exposure for installers in hazardous environments.

Supported features when automatic alignment is disabled

When automatic alignment is disabled, the Beam Steering ODU operates as a conventional fixed-beam integrated ODU, with the ODU supporting the same features as the Integrated antenna option in a PTP 45700 Connectorized+Integrated ODU.

When automatic alignment is disabled, the antenna in the Beam Steering ODU can be configured for a 120° sector pattern with antenna gain of approximately 14 dBi, or a fixed directional pattern with antenna gain of approximately 21 dBi, centred on the axis normal to the plane of the antenna.

Supported features when automatic alignment is enabled

The Beam Steering ODU supports the same features as the Integrated antenna option in a PTP 45700 Connectorized+Integrated ODU except that the following configurations are not available:

- Wireless Topology = HCOMP
- Protection Mode = Hot Standby Primary
- Protection Mode = Hot Standby Secondary

The electronically steerable directional pattern covers the range 360° in azimuth and 315° in elevation, centered on the axis normal to the physical plane of the antenna. Antenna gain is approximately 21 dBi in the centre of the coverage. Similar to other planar phased array antennas, the antenna gain is progressively reduced for alignments further away from the center of the coverage.

Installation with automatic alignment

The Beam Steering ODU determines the optimum antenna alignment during installation, scanning over the full range of 360° in azimuth and 315° in elevation, and selecting the alignment that provides the maximum received signal strength indication (RSSI). The steerable antenna provides a resolution of 2° in azimuth and 1° in elevation. This results in a worst-case loss due to quantization of the beam position of less than 0.5 dB.

When a link is installed between two ODUs with automatic alignment enabled, the link is aligned during the Searching state of the Wireless Link Status, so that alignment is complete before the Wireless Link Status transitions to the Up state.

The Beam Steering ODU is prepared for installation using the Installation Wizard, by selecting Installation Mode = Arm Without Tones. The option for alignment with tones is not available with the Beam Steering ODU. Alternatively, the installation mode can be selected by clicking on the Force Scan button in the Spectrum Expert page of the web-based interface.

Link acquisition in the installation mode of automatic alignment is necessarily slower than regular link acquisition because the ODUs must scan to determine the optimum alignment. This extended acquisition time only occurs during installation and automatic alignment is almost always simpler and quicker than manual alignment.

Null Steering

When Automatic Alignment is enabled, you can enable or disable the Null Steering feature using the Null Steering Control. Null Steering is enabled by default.

Operation of installed link

When alignment of a link between Beam Steering ODUs is complete, the ODUs operate using the beam coordinates determined during installation, and link acquisition is essentially identical for all ODU variants. Importantly, the Beam Steering ODU does not scan and realign following a restart unless it is first placed into the installation mode.

Interworking between ODU platform variants

Beam Steering ODUs will normally be deployed as a pair, with both ends of the link automatically aligned using the installation mode. PTP 700 additionally supports interworking between beam steering and fixed beam ODUs, with the Beam Steering ODU aligned automatically, and the fixed beam ODUs aligned manually. This mixed operation requires a modified alignment process, described in detail in [Automatic alignment at one end of a link](#) on page 6-153.

Further reading

For information about...	Refer to...
Installation with automatic alignment	Beam Steering ODU automatic alignment on page 6-150

TD-90 antenna positioner

The Cambium Networks TD-90 antenna positioner provides mechanical automatic alignment of a PTP 700 ODU using an integrated fixed-beam antenna or a connectorized antenna up to 90 cm diameter. The TD-90 aligns the PTP 700 antenna using signal strength and link status information provided by the PTP 700 via SNMP.



Note The TD-90 antenna positioner cannot be used at an HCMP Master ODU.

PTP 700 and TD-90 support two deployment scenarios for network management of the TD-90 as follows:

- Standalone management
- Integrated management

SFP interface

In the integrated management configuration, the TD-90 is connected at the SFP port of the PTP 700 ODU, requiring the Gig-Ethernet SFP Interface per ODU SFP module kit (C000065L010A).

Transmission of alignment messages

When TD-90 antenna positioners are used at both ends of a link, the two TD-90 units exchange UDP broadcast messages to coordinate alignment.

In the standalone management scenario, the TD-90 units at both ends of the link are connected in the same Layer 2 network, with connectivity over the PTP 700 wireless link.

For integrated management, the two TD-90 units are automatically connected via a dedicated Ethernet link between the TD-90 and the SFP port of the PTP 700, and a dedicated virtual circuit in the PTP 700 wireless link.

Further reading

For information about...	Refer to...
TD-90 Operation and Maintenance	<i>Cambium TD-90 User Guide</i>
Integrated management for TD-90	Integrated management of TD-90 on page 1-70
Copper SFP module kit	SFP module kits on page 2-33
Ethernet port allocation for TD-90	Ethernet port allocation on page 3-48

Using the Beam Steering ODU with TD-90

Beam Steering and TD-90 automatic alignment will not interwork, and should not be enabled at the same time on the same ODU, or on ODUs at opposite ends of a PTP link.

The Beam Steering ODU and TD-90 can be used together in the following configurations:

- Using one TD-90 under manual control to approximately align a Beam Steering ODU before enabling Beam Steering automatic alignment.
- As above but with TD-90 at both ends of the link.
- A TD-90 platform hosting a Beam Steering ODU with automatic alignment disabled on the ODU, and TD-90 automatic alignment enabled. The Beam Steering ODU emulates a conventional fixed-beam Integrated ODU.
- As above but with TD-90 at both ends of the link.

Wireless encryption

Access method

PTP topology

PTP 700 provides protection against accidentally establishing a PTP link to the wrong remote unit using a choice of three different access methods:

- **Link Access:** The MAC address of the remote unit must match the configured Target MAC Address.
- **Link Name Access:** The Link Name of the remote unit must match the configured Link Name.
- **Group Access:** The Group ID of the remote unit must match the configured Group ID.

HCMP topology

In the HCMP wireless topology, PTP 700 always uses the Group Access method. The Master and Slave ODUs must all share the same Group ID.



Note The configured Access Method provides effective protection against an accidental attempt to form a link with the wrong remote unit. Use wireless encryption to protect against a malicious attempt to connect an unauthorized ODU to the wireless network.

Further reading

For information about...	Refer to...
Configuring Access Method	Wireless Configuration page on page 6-28
Configuring Target MAC Address	Wireless Configuration page on page 6-28
Authorization Control page	Authorization Control page on page 6-75

Encryption options

The PTP 700 supports optional encryption for data transmitted over the wireless link using a choice of three different encryption algorithms. In each case, the ODUs establish a randomly-generated master secret using Elliptic Curve Diffie Hellman Ephemeral (ECDHE) key agreement.

- **TLS RSA:** The ODUs authenticate each other by exchange of RSA certificates. The TLS RSA option supports unencrypted operation of traffic in the wireless link, or encryption with 128-bit or 256-bit AES.
- **TLS PSK 128-bit:** The ODUs authenticate each other using the same 128-bit pre-shared key. The wireless link is encrypted using 128-bit AES.
- **TLS PSK 256-bit:** The ODUs authenticate each other using the same 256-bit pre-shared key. The wireless link is encrypted using 256-bit AES.

The Advanced Encryption Standard (AES) is a symmetric encryption algorithm approved by U.S. Government organizations (and others) to protect sensitive information. The AES implementation in PTP 700 is approved to FIPS 197.

The use of AES encryption in PTP 700 is controlled by the AES license and enabled through the purchase of a capability upgrade.



Note Encryption Algorithm cannot be configured as TLS RSA when Access Method is Link Name Access. In this case, only the TLS PSK algorithms are supported.

TLS RSA

Wireless encryption TLS RSA can be used with the following Access Methods:

- Link Access
- Group Access

Access Method is automatically configured to Group Access in the HCMP topology.

Authentication using TLS RSA

TLS RSA uses the bidirectional exchange and verification of RSA device certificates to determine the authentic identity of both ODUs. The ODU will not form a wireless link if the encryption algorithm is TLS RSA and the certificate of the remote unit cannot be verified.

PTP 700 can be configured to use factory-installed device certificates, or user-supplied device certificates. Both ends of the link must use the same certificate type.

User-supplied device certificates must be RSA certificates with key size of 2048 bits and SHA2-256, where the subject of the certificate is the MAC address of the ODU. For user-supplied certificates, each ODU must be additionally configured with a self-signed Root CA certificate that validates the device certificate of the remote ODU.

The private key, public key certificate and root certificate for User-supplied device certificates are zeroized along with the other Sensitive Security Parameters (SSPs). Factory-installed certificates are in permanent memory and are never zeroized.

Authorization using TLS RSA with Link Access

When PTP 700 is configured for Wireless encryption of TLS RSA and Access Method of Link Access, the ODU will not connect unless the authenticated MAC address of the remote ODU is equal to the configured Target MAC Address attribute. The Target MAC Address authorizes the remote ODU.

Authorization using TLS RSA with Group Access

When PTP 700 is configured for Wireless encryption of TLS RSA and Access Method of Group Access, two options are available for authorizing the remote ODU. With the Whitelist option, the ODU will connect only if the authenticated MAC address of the remote unit has previously been added to a list of authorized ODUs. With the Blacklist option, the ODU will always connect unless the authenticated MAC address has previously been added to a list of unauthorized ODUs. The Whitelist and Blacklist cannot be used at the same time. The selection of Whitelist and Blacklist is independent of the selection of Factory or User-provided certificates.

The default Blacklist/Factory combination offers limited benefits in a deployed network, since it is impossible to add all PTP 700 ODUs with Factory certificates to the Blacklist. However, this combination does provide a relatively simple way to build a network with the minimum of configuration, in applications where security is not an immediate priority, for example when evaluating wireless performance.

The Blacklist/User combination is attractive where links are to be established on an ad hoc basis, as units pre-configured with the user-supplied certificate form a closed group that is automatically trusted, whilst only compromised units from the closed group need be added to the Blacklist.



Note Authentication is the process of verifying the identity of the remote unit that is attempting to form a connection. Authorization is the check that takes place to confirm that a unit with the authenticated identity is permitted to connect. For example, a genuine unit that is not under the control of the operator might be authenticated, but not authorized.

Negotiation of TLS RSA key size

In TLS RSA operation, the ODUs encrypt wireless traffic using the largest mutually supported key size provided in the respective AES licenses. For example, if the Master has the 256-bit AES license and the Slave has the 128-bit AES license, then the link may be encrypted using a key size of 128 bits.

PTP 700 also allows a TLS Minimum Security Level to be configured; this is the smallest key size that will be allowed in a link between Master and Slave. For example, if the Master has TLS Minimum Security Level of 128-bit AES and the Slave has no AES license then the link cannot be established.

In a network where all links must be encrypted, set TLS Minimum Security Level to TLS RSA 128-bit or TLS RSA 256-bit to prevent inadvertent connection of unencrypted links.

Further reading

For information about...	Refer to...
Description of Access Method	Access method on page 1-39
Authentication of the remote ODU	Wireless encryption on page 1-39
Licensing AES encryption	AES license on page 1-76 Capability upgrades on page 1-78
How to generate AES license keys	Generating license keys on page 6-2
How to configure AES encryption	System Configuration page on page 6-56
Configuring the Whitelist of approved ODUs for an HCMP sector.	Authorization Control page on page 6-75

TLS PSK 128-bit and TLS PSK 256-bit

Wireless Encryption TLS PSK can be used with the following Access Methods:

- Link Access
- Link Name Access
- Group Access

Access Method is automatically configured to Group Access in the HCMP topology.

Authentication and authorization in TLS PSK 128-bit or TLS PSK 256-bit occur as a single step, based on the secret pre-shared key. Both ends of the link must be configured for the same key size. Each unit will connect only to a remote unit that shares the same secret.

Further reading

For information about...	Refer to...
Description of Access Method	Access method on page 1-39
Authentication of the remote ODU	Wireless encryption on page 1-39
Licensing AES encryption	AES license on page 1-76 Capability upgrades on page 1-78
How to generate AES license keys	Generating license keys on page 6-2
How to configure AES encryption	System Configuration page on page 6-56

Over the air rekeying

PTP 700 provides an option for automatically refreshing the TLS master secret (and thereby the AES session keys) after a configured interval. Over the air rekeying can be used with TLS RSA or TLS PSK encryption algorithms. This capability is controlled by the Over the Air Rekey license.

Further reading

For information about...	Refer to...
General description of TLS-RSA	TLS RSA on page 1-40.
General description of TLS-PSK	TLS PSK 128-bit and TLS PSK 256-bit on page 1-41
Upgrading for Over the Air Rekey	Capability upgrades on page 1-78
Configuring Rekey Interval	System Configuration page on page 6-56

Designing PTP networks

Using Dynamic Spectrum Optimization

The Dynamic Spectrum Optimization (DSO) feature allows a PTP 700 unit to select wireless channels for a lower level of radio frequency (RF) interference. This approach is appropriate where the network consists of a small number of PTP links, or where the RF interference is predominantly from equipment belonging to other operators.

Using frequency planning

Networks will benefit from the use of fixed channel allocations if (a) the network consists of multiple PTP links, and (b) RF interference predominantly arises from equipment in the same network.

Frequency planning is the exercise of assigning operating channels to PTP units so as to minimize RF interference between links. Frequency planning must consider interference from any PTP unit to any other PTP unit in the network. Low levels of interference normally allow for stable operation and high link capacity.

The frequency planning task is made more straightforward by use of the following techniques:

- Using several different channels
- Separating units located on the same mast
- Using high performance (directional) external antennas

Synchronized networks

TDD synchronization can be used to relax constraints on the frequency planning of PTP networks. Synchronization has the following benefits:

- Allows tighter frequency re-use, and thus wider channel bandwidth.
- Allows more convenient collocation of units on a single mast.
- Allows use of smaller or lower performance antennas.
- Reduces inference, resulting in use of more efficient modulation modes.

In a correctly designed synchronised network, all links are configured with the same TDD frame duration, and the TDD frame contains guard periods longer than the propagation delay between the most distant interfering units.

Each synchronized unit is assigned to one of two phases. A master ODU can be assigned to either phase. A slave ODU must be assigned to a different phase from the associated master ODU. The phase is set by suitable configuration of TDD Frame Offset.

TDD synchronization eliminates RF interference between units in the same phase. This means that frequency planning in a synchronized network is concerned only with interference between units in different phases. Frequency planning is still necessary, but the number of potential interference paths to be considered is halved. Frequency planning in a synchronized TDD network has approximately the same level of complexity as frequency planning in a Frequency Division Duplex (FDD) network.

Further reading

For information about...	Refer to...
How to plan networks	Chapter 3: System planning , or contact your Cambium distributor or re-seller.

Ethernet bridging

This section describes how the PTP 700 ODU processes Ethernet data, and how Ethernet ports are allocated to the Data Service, Management Service, Local Management Service, Protection Service and TD-90 Service.

Ethernet ports

The PTP 700 Series ODU has three Ethernet ports:

- **Main PSU:** The Main PSU port provides a copper Ethernet interface for 100BASE-TX and 1000BASE-T, and accepts power from the AC+DC Enhanced Power Injector 56V to the ODU using a proprietary power over Ethernet (PoE) method.
- **Aux:** The Aux port provides a copper Ethernet interface for 100BASE-TX and 1000BASE-T, and supplies power from the ODU to external equipment using standards-based power over Ethernet (PoE) complying with IEEE 802.3at.
- **SFP:** The SFP port is a small format pluggable receptacle accepting copper or optical plug-in modules supplied as part of the SFP module kit.

Data and management services

The PTP 700 Series ODU supports five different types of virtual circuits or Ethernet services providing data and management transport.

- **Data Service:** This transparent service carries customer's data between Ethernet ports at the local ODU and Ethernet ports at an associated remote ODU.
- **Management Service:** This transparent service connects management systems at both ends of the link with the embedded management agents in the ODUs. The Management Service may be configured as:
 - In-Band Management
 - Out-of-Band Management
- **Local Management Service:** The Local Management service provides a connection to the embedded management agent, isolated from the customer data network. Management frames in the Local Management Service are not forwarded over the wireless link.
- **Protection Service:** The Protection Service carries fault status and configuration data between neighbor ODUs as part of Hot Standby Link Protection.
- **TD-90 Service:** The TD-90 Service carries SNMP network management traffic between the ODU and an associated collocated TD-90 antenna positioner. This service also forwards alignment messages over the wireless link between the local TD-90 and a second TD-90 at the remote end of the link.

The Data, Out-of-Band Management, Local Management, Protection and TD-90 Services are carried by isolated virtual circuits, and Ethernet frames in one service never cross over to another service.

In-Band Management shares the same virtual circuit as the Data Service.

Further reading

For information about...	Refer to...
A more detailed description of the Data Service	Data Service on page 1-47
A more detailed description of the Out-of-Band Management Service	Out-of-Band Management Service on page 1-49
SFP optical or copper module kits	SFP module kits on page 2-33
The PSU, AUX and SFP ports of the ODU	ODU interfaces on page 2-15
Diagrams showing Ethernet connections	Typical deployment on page 3-2
How to plan the use of Ethernet ports for customer and management traffic	Ethernet bridging on page 3-47
How to install the Ethernet interfaces to the ODU	Installing the copper Cat5e Ethernet interface on page 5-19 Installing an SFP Ethernet interface on page 5-29 Installing an Aux Ethernet interface on page 5-52
How to configure the ODU Ethernet ports	Interface Configuration page on page 6-19 LAN Configuration page on page 6-60
Ethernet port status attributes	Ethernet / Internet on page 7-8
Ethernet port alarms	Alarms on page 7-24

Ethernet switching

Port Allocation

The ODU provides conventional Ethernet bridging between wired Ethernet ports configured for the same service, using an embedded Ethernet switch. The wired Ethernet ports may be configured as follows:

- One to three Ethernet ports may be allocated to the Data Service. If In Band Management is configured, management access shares the same set of ports.
- If Out of Band Management is configured, up to two ports may be allocated to the Management service. These ports are not used by the Data Service.
- Up to two ports can be allocated to the Local Management Service.

The Protection Service and TD-90 Service cannot be mapped to more than one port. If the TD-90 Service is enabled, it is always mapped to the SFP Port.

MAC Filtering

The embedded Ethernet switch implements standard Layer 2 bridging with MAC address filtering by learning the location of end stations in a filter database, and forwarding Ethernet frames with a learned unicast destination address at the appropriate wired or wireless port. Importantly, MAC filtering protects the capacity of the wireless link by ensuring that traffic is not forwarded across the link if the destination address (DA) in a frame is associated with a wired port on the same ODU.

Disabling MAC Filtering

PTP 700 allows MAC address filtering to be disabled in the embedded Ethernet switch. If filtering is disabled, the embedded switch does not learn the location of end stations and all (unicast, multicast and broadcast) frames are flooded to the configured wired or wireless ports.

Two steps are required to disable MAC filtering:

- Set MAC Filtering Control = Enabled on the Web Properties page. This adds the MAC Filtering control under the Bridging heading on the LAN Configuration page.
- Set MAC Filtering = Disabled on the LAN Configuration page.

MAC filtering should normally be enabled in PTP 700 applications, and always where multiple wired ports are allocated to the Data Service or Management Service. MAC filtering should always be enabled for an ODU configured as an HCMP Master.

MAC filtering can be usefully disabled in PTP 700 applications where external Ethernet switches use a network protocol to build a loop-free network, for example Spanning Tree Protocol (STP) or Rapid Spanning Tree Protocol (RSTP). In this application, ensure that:

- A single wired port is allocated to the Data Service at each ODU, *AND*
- No more than one wired port is allocated to the Management Service at each ODU

Further reading

For information about...	Refer to...
Enabling the MAC Filtering Control	Webpage Properties page on page 6-92
Disabling MAC Filtering	LAN Configuration page on page 6-60

Data Service

Transparent Ethernet service

The PTP 700 Series provides an Ethernet service between Ethernet ports at a local ODU and Ethernet ports at an associated remote ODU. The Ethernet service is based on conventional layer two transparent bridging, and is equivalent to the Ethernet Private Line (EPL) service defined by the Metro Ethernet Forum (MEF).

The service is transparent to untagged frames, standard VLAN frames, priority-tagged frames, provider bridged frames, Q-in-Q frames and provider backbone bridged frames. In each case, the service preserves MAC addresses, VLAN ID, Ethernet priority and Ethernet payload in the forwarded frame. The maximum frame size for bridged frames in the customer network is 9600 bytes.

There is no requirement for the customer data network to be connected to the same Ethernet ports at both ends of a wireless link. For example, it is possible to connect the Main PSU port to the customer data network at one end of the link and to connect the SFP and Aux ports to the customer data network at the other end of the link.

Layer two control protocols

The Data Service in the PTP 700 Series is transparent to layer two control protocols (L2CP) including:

- Spanning tree protocol (STP), rapid spanning tree protocol (RSTP)
- Multiple spanning tree protocol (MSTP)
- Link aggregation control protocol (LACP)
- Link OAM, IEEE 802.3ah
- Port authentication, IEEE 802.1X
- Ethernet local management interface (E-LMI), ITU-T Q.933.
- Link layer discovery protocol (LLDP)
- Multiple registration protocol (MRP)
- Generic attribute registration protocol (GARP)

The PTP 700 Series does not generate or respond to any L2CP traffic.

Quality of service for bridged Ethernet traffic

In the PTP wireless topology, the PTP 700 supports eight traffic queues in the Data Service for Ethernet frames waiting for transmission over the wireless link. In the HCMP wireless topology, the PTP 700 supports four queues for each wireless link.

Ethernet frames are classified by inspection of the Ethernet priority code point in the outermost VLAN tag, the Differentiated Services Code Point (DSCP) in an IPv4 or IPv6 header including DSCP in an IPv4 or IPv6 datagrams encapsulated in PPP and PPPoE headers, or the Traffic Class in an MPLS header.

PTP 700 provides a configurable mapping between Ethernet, IP or MPLS priority and transmission queue, together with a simple way to restore a default mapping based on the recommended default in IEEE 802.1Q-2005. Untagged frames, or frames with an unknown network layer protocol, can be separately classified.

Scheduling for transmission over the wireless link is by strict priority. In other words, a frame at the head of a given queue is transmitted only when all higher priority queues are empty.

Fragmentation

The PTP 700 Series minimizes latency and jitter for high-priority Ethernet traffic by fragmenting Ethernet frames before transmission over the wireless link. The fragment size is selected automatically according to channel bandwidth and modulation mode of the wireless link. Fragments are reassembled on reception, and incomplete Ethernet frames are discarded.

Data port wireless link down alert

The PTP 700 Series provides an optional indication of failure of the wireless link by means of a brief disconnection of the copper or optical data port allocated to the customer data network. The Wireless link down alert can be used to trigger protection switching by Spanning Tree Protocol (STP) or Ethernet Automatic Protection Switching (EAPS) and other higher layer protocols in a redundant network.



Note PTP 700 does not support Data port wireless link down alert in the HCMP topology.

Lowest Data Modulation Mode

The PTP 700 ODU can be configured to discard Ethernet frames in the Data Service when the modulation mode is lower than the configured Lowest Data Modulation Mode.

This feature is likely to be useful in networks that have alternate routes, for example in a ring or mesh topology where EAPS or RSTP is used to resolve loops. In this application, Lowest Data Modulation Mode should be set to ensure that an active link will provide at least the minimum necessary capacity for high-priority constant bit rate traffic such as voice over IP or TDM pseudo wire. An active link will be blocked when the capacity falls below the minimum required, triggering a routing change in associated Ethernet switches to bring alternate links into use.

Lowest Data Modulation Mode should normally be set to BPSK 0.63 Single in simply connected tree networks or other topologies that do not have alternative routes.

Further reading

For information about...	Refer to...
Factors to be considered when planning PTP 700 customer data networks	Data network planning on page 3-47
How to configure the Ethernet service	LAN Configuration page on page 6-60
How to configure Ethernet quality of service	QoS Configuration page on page 6-70
How to monitor Ethernet performance	System statistics on page 7-59

Out-of-Band Management Service

Transparent Ethernet service

The PTP 700 Series provides an optional Ethernet service for out-of-band network management between Ethernet ports at a local ODU and Ethernet ports at an associated remote ODU. The Ethernet service is based on conventional layer two transparent bridging. The PTP 700 maintains complete separation between Ethernet traffic in the customer Data Service and the Management Service.

The service is transparent to untagged frames, standard VLAN frames, priority-tagged frames, provider bridged frames, Q-in-Q frames and provider backbone bridged frames. In each case, the service preserves MAC addresses, VLAN ID, Ethernet priority and Ethernet payload in the forwarded frame. The maximum frame size for bridged frames in the management network is 2000 bytes.

There is no requirement for the management network to be connected to the same Ethernet ports at both ends of a wireless link. For example, it is possible to connect the Main PSU port to the management network at one end of the link and to connect the Aux port to the management network at the other end of the link.

Layer two control protocols

The Management Service in the PTP 700 Series is transparent to layer two control protocols (L2CP) including:

- Spanning tree protocol (STP), rapid spanning tree protocol (RSTP)
- Multiple spanning tree protocol (MSTP)
- Link aggregation control protocol (LACP)
- Link OAM, IEEE 802.3ah
- Port authentication, IEEE 802.1X
- Ethernet local management interface (E-LMI), ITU-T Q.933.
- Link layer discovery protocol (LLDP)
- Multiple registration protocol (MRP)
- Generic attribute registration protocol (GARP)

The management service in the PTP 700 Series does not generate or respond to any L2CP traffic.

Quality of service for bridged Ethernet traffic

The PTP 700 Series supports a single traffic queue in the Management Service for Ethernet frames waiting for transmission over the wireless link. The priority of the queue can be varied with respect to the eight queues used for the Data Service.

Fragmentation

Ethernet frames in the PTP 700 Series management service are always fragmented for transmission over the wireless link, even when the single queue for the management service has higher priority than all of the customer data queues.

Management port wireless Down Alert

The PTP 700 Series provides an optional indication of failure of the wireless link by means of a brief disconnection of the copper or optical data port allocated to the management network. The Wireless link down alert can be used to trigger protection switching by Spanning Tree Protocol (STP) or Ethernet Automatic Protection Switching (EAPS) and other higher layer protocols in a redundant network.

Lowest Data Modulation Mode

The Lowest Data Modulation Mode attribute does not prevent bridging in the management service. See [Lowest Data Modulation Mode](#) on page 1-49.

Further reading

For information about...	Refer to...
Factors to be considered when planning PTP 700 management data networks	Data network planning on page 3-47
How to configure the Ethernet service	LAN Configuration page on page 6-60
How to configure Ethernet quality of service	QoS Configuration page on page 6-70
How to monitor Ethernet performance	System statistics on page 7-59

Link protection

Ethernet switches

Hot Standby (1+1) Link Protection depends on external Ethernet switches to forward Ethernet frames to the link in the Active protection state. The protection switch event in Hot Standby requires only standard Ethernet switch functions, but it does require the switch to flush entries from its Filter Database (FDB) when the ODU disconnects the Ethernet connection briefly. The FDB flush action is commonly supported by managed Ethernet switches, but is sometimes missing from basic desktop switches.



Note Ensure that external Ethernet switches used as part of a PTP Hot Standby link can be configured to flush corresponding entries in the Filter Database on disconnection of an Ethernet port.

Data bridging in the PTP link

Data bridging is disabled at the ODU wireless interface in a PTP link in the Standby protection state. This blocks end-to-end forwarding of traffic in the Data and Management services. The Management Agent in the ODU remains accessible via suitably configured wired Ethernet ports, but is not accessible via the wireless link.

Normally, the Management Agent at a remote ODU in the Standby protection state can be reached via the Active wireless link and the Ethernet switch at the remote site.

Mapping of Data and Management services

In standard non-protected operation, the embedded Ethernet switch offers relatively flexible configuration options, including the possibility of between one and three ports mapped to the Data service. When configured for Hot Standby, this flexibility is constrained as follows:

- Exactly one port must be mapped to the Data service
- Either the Aux port or SFP port must be configured as a Protection port.
- A Protection port cannot be mapped to the Data or Management services.

A consequence of this is that no more than one port can be mapped to the Management service.

TD-90 Service

PTP 700 supports an integrated deployment scenario for network management of a collocated TD-90 antenna positioner. In this scenario, the TD-90 is managed by the NMS via the web-based management interface or SNMP interface of the PTP 700, with the PTP 700 acting as an SNMP Proxy. The connection between the PTP 700 and the NMS may be secured using the standard PTP 700 HTTPS or SNMPv3 features.

Integrated management of the TD-90 is enabled by allocating the PTP 700 SFP Port to the TD-90 Service.

The TD-90 Service provides a transparent Ethernet service with the following connectivity:

- From the PTP 700 Management Agent to the local SFP port. This carries SNMPv1 or SNMPv2c messages between the Management Agent and the TD-90.
- From the SFP Port on the local ODU to the SFP Port on the remote ODU. This carries alignment messages between the TD-90 antenna positioners when TD-90 is used at both ends of the link.

SFP interface

The TD-90 Service requires the Gig-Ethernet SFP Interface per ODU SFP module kit (C000065L010A).

Quality of service for bridged Ethernet traffic

The PTP 700 Series supports a single high priority traffic queue in the TD-90 Service for Ethernet frames waiting for transmission over the wireless link. This ensures that TD-90 alignment is not interrupted when the link is saturated by customer data traffic.



Note The TD-90 antenna positioner cannot be used at an HCMP Master ODU.

Further reading

For information about...	Refer to...
TD-90 Operation and Maintenance	<i>Cambium TD-90 User Guide</i>
SNMP Proxy for TD-90	Integrated management of TD-90 on page 1-70
Copper SFP module kit	SFP module kits on page 2-33
Ethernet port allocation for TD-90	Ethernet port allocation on page 3-48

Protocol model

Ethernet bridging behavior at each end of the wireless link is equivalent to a four-port, managed, transparent MAC bridge where the ports are the three wired Ethernet ports and the Wireless port.

The wired ports may be allocated to the Data Service, Out-of-Band Management Service or Local Management Service. Ethernet frames are bridged between wired ports allocated to the same service. Frames are not bridged between different services.

Frames are transmitted at the Wireless port over a proprietary point-to-point circuit-mode link layer between ends of the PTP 700 link. The Wireless Port provides two distinct service access ports (SAPs) where the first is always used for the Data Service, while the second is used by the Out-of-Band Management Service.

Ethernet frames received at the Ethernet ports, or generated internally within the management agent, are encapsulated within a lightweight MAC layer for transmission over the wireless link.

Further reading

For information about...	Refer to...
Layer two control protocols (L2CPs) identified by PTP 700	Layer two control protocols on page 3-47

Synchronous Ethernet



Note PTP 700 does not support Synchronous Ethernet in the HCMP topology.

PTP 700 can be configured to relay a Synchronous Ethernet frequency reference across the wireless link, supporting operation as part of an ITU-T G.781 Synchronous Digital Hierarchy. A single PTP 700 link has at least two, and up to six, active Ethernet ports. When the link is synchronised to an external frequency reference, one of these active ports receives the reference (acting a Sync E slave port) and the remaining active ports transmit the frequency reference (acting as Sync E master ports).

At each end of the link, either the Main PSU port or the Fiber SFP port can be nominated as a candidate Sync E Slave Port.

In an established link, if the ODU detects a valid reference at the nominated port at the local end, or at the nominated port at the remote end, it relays the reference received at this port to all of the remaining Ethernet ports. If the ODU detects a valid reference at both ends of the link, it selects the best reference. If the ODU does not detect any valid reference at either end of the link, it operates in a free-running or holdover mode.

The nominated Sync E Slave Port can be set to Main PSU Port at one end of the link and to SFP Port at the other end of the link, forwarding the reference between two different media.

If the wireless link is down, the ODU configured as the TDD Master can relay the reference received at the nominated Sync E Slave Port to the remaining ports. The ODU configured as the TDD Slave does not forward the reference frequency until the link is established.

PTP 700 makes the selection of the best incoming reference based on the Quality Level (QL) in Synchronization Status Messages (SSMs) received at the nominated ports. SSMs are processed and transmitted as specified by ITU-T G.8264 and in Section 5 of G.781.



Note PTP 700 does not support Synchronous Ethernet on a copper SFP module.

Further reading

For information about...	Refer to...
Availability of synchronous Ethernet	Capability upgrades on page 1-78
Relationship between synchronous Ethernet and Ethernet port allocation	Additional port allocation rules on page 3-53
How to configure synchronous Ethernet	LAN Configuration page on page 6-60
Upgrading to synchronous Ethernet	Generating license keys on page 6-2
Synchronous Ethernet status indicators	Synchronous Ethernet on page 7-14
Synchronous Ethernet alarms	Alarms on page 7-24
Synchronous Ethernet status	SyncE Status page on page 7-73

IEEE 1588-2008 Transparent Clock



Note PTP 700 does not support IEEE 1588-2008 Transparent Clock in the HCMP topology.

PTP 700 is capable of operating as an IEEE 1588-2008 Transparent Clock. When operational, IEEE 1588-2008 event frames (Sync, Delay_Req, Pdelay_Req, Pdelay_Resp) have their “Correction Field” adjusted to reflect the residence time of the frame in the system. This results in greatly improved performance of downstream 1588-2008 slave clocks. The Transparent Clock feature is available at the Main PSU Port, Aux Port and at the SFP Port when a fiber SFP module is installed.

Unicast and multicast addressing models are supported, along with UDP over IPv4 or IPv6, and Ethernet communication services. The IEEE 1588 messages can be encapsulated in Untagged, C-tagged, S-tagged, S-C-tagged and C-C-tagged Ethernet frames.



Note For the most accurate residence time corrections, use Synchronous Ethernet in conjunction with the Transparent Clock feature. In this configuration, PTP 700 uses the Synchronous Ethernet clock to increase the accuracy of 1588 residence time measurements.



Note PTP 700 does not support IEEE 1588 Transparent Clock on a copper SFP module.

Further reading

For information about...	Refer to...
Availability of IEEE 1588-2008 Transparent Clock	Capability upgrades on page 1-78
Relationship between IEEE 1588-2008 Transparent Clock and Ethernet port allocation	Additional port allocation rules on page 3-53
Relationship between IEEE 1588-2008 Transparent Clock and VLAN membership	VLAN membership on page 3-53
Upgrading to IEEE 1588-2008	Generating license keys on page 6-2
How to configure IEEE 1588-2008 Transparent Clock	LAN Configuration page on page 6-60
IEEE 1588-2008 Transparent Clock status indicators	Synchronous Ethernet on page 7-14
IEEE 1588-2008 Transparent Clock alarms	Alarms on page 7-24

TDM bridging

This release of PTP 700 does not support the TDM bridging feature. TDM traffic (E1 or T1) may be carried over PTP 45700 links using the Network Indoor Unit (NIDU) using System Release PTP 700-02-50.

System management

This section introduces the PTP 700 management system, including the web interface, installation, configuration, alerts and upgrades.

Management agent

PTP 700 equipment is managed through an embedded management agent. Management workstations, network management systems or PCs can be connected to this agent using a choice of in-band or out-of-band network management modes. These modes are described in detail in [Network management](#) on page 1-57.

Application layer protocols

The management agent supports the following application layer protocols at the NMS interface:

- Hypertext transfer protocol (HTTP)
- HTTP over transport layer security (HTTPS/TLS)
- RADIUS authentication
- SAML for single sign on authentication
- TELNET
- Simple network management protocol (SNMP)
- Simple mail transfer protocol (SMTP)
- Simple network time protocol (SNTP)
- System logging (syslog)
- Domain Name Service (DNS)
- cnMaestro



Note PTP 700 supports a single public key certificate for HTTPS. Certificates using the Common Name field must be based on an IPv4 or IPv6 address, but not both. Certificates using the Subject Alternative Name (SAN) field can be based on multiple addresses. The SAN field should be used with the Dual IPv4/IPv6 interface.

IP interface for NMS

The management agent includes a dual IPv4/IPv6 interface for the connection to a Network Management System (NMS). The IP interface operates in the following modes:

- IPv4 only (default)
- IPv6 only
- Dual IPv4/IPv6

In the dual IPv4/IPv6 mode, the IP interface is configured with an IPv4 address and an IPv6 address and can operate using both IP versions concurrently. This dual mode of operation is useful when a network is evolving from IPv4 to IPv6.

The NMS interface supports all of the application layer protocols listed in [Application layer protocols](#) above.

IP interface for TD-90

The management agent includes an optional separate IPv4 interface for configuration, performance and fault management of an attached TD-90 antenna positioner. This interface is configured automatically by the ODU to communicate with a collocated TD-90 in factory default configuration.

The management agent supports the SNMP v1/v2c application layer protocol at the TD-90 interface, with the following functions:

- **SNMP Agent:** Provides signal strength and link status information to the TD-90 supporting the alignment and tracking function of the TD-90. The TD-90 queries this information, acting as an SNMP Manager.
- **SNMP Manager:** Provides remote configuration and fault management of the TD-90 using the SNMP Proxy Function in the PTP 700. The PTP 700 communicates with the SNMP Agent in the TD-90.

The dedicated copper Ethernet connection between the PTP 700 and the TD-90 uses the TD-90 Service at the SFP Port.

Further reading

For information about...	Refer to...
TD-90 Antenna Positioner	TD-90 antenna positioner on page 1-37
TD-90 Service	Data and management services on page 1-45
TD-90 SNMP Proxy	Integrated management of TD-90 on page 1-70

Network management

IPv4 and IPv6 interfaces for NMS

The PTP 700 ODU contains an embedded management agent with IPv4 and IPv6 interfaces. Network management communication is exclusively based on IP and associated higher layer transport and application protocols. The default IPv4 address of the management agent is 169.254.1.1. There is no default IPv6 address. The PTP 700 does not require use of supplementary serial interfaces.

MAC address

The management agent end-station MAC address is recorded on the enclosure and is displayed on the Status web page. The MAC address is not configurable by the user.

VLAN membership

The management agent can be configured to transmit and receive frames of one of the following types: untagged, priority-tagged, C-tagged (IEEE 802.1Q) or S-tagged (IEEE 802.1ad). C-tagged and S-tagged frames must be single tagged. The VLAN ID can be 0 (priority tagged) or in the range 1 to 4094.

Ethernet and DSCP priority

The management agent transmits IPv4 and IPv6 management packets with a configurable DSCP value in the range 0 to 63. If the management agent is configured to operate in a management VLAN, the Ethernet frames will be transmitted with a configurable Ethernet priority in the range 0 to 7. The same DSCP and Ethernet priorities are assigned to all management packets generated by the agent. Management frames are multiplexed with customer data frames of the same priority for transmission at the wireless port.

Access to the management agent

The management agent can be reached from any Ethernet port at the local ODU that is allocated to the Management Service or the Local Management Service.

If the wireless link is established, the management agent can also be reached from the remote ODU via an Ethernet port that is allocated to the Management Service.

Management frames are processed by the management agent if (a) the destination MAC address in the frame matches the ODU MAC address, and (b) the VLAN ID in the frame matches the VLAN configuration of the management agent.

If Local Packet Filtering is enabled, unicast frames forwarded to the management agent are filtered, that is, not forwarded in the customer data network or the management network.

MAC address and IP address of the management agent

The MAC address and IP address used by the management agent will be the same at each port that is allocated the Management Service or Local Management Service. The management agent does not provide the function of a dual-homed or multi-homed host. Network designers should take care to ensure that the ODU will not be connected to more than one IP network.

Further examples of useful port allocation schemes are provided in [Chapter 3: System planning](#).

Further reading

For information about...	Refer to...
Planning the IP interface	IP interface on page 3-54
How to configure the IP interface	Interface Configuration page on page 6-19
How to configure the target MAC address	Wireless Configuration page on page 6-28
Planning VLAN membership	VLAN membership on page 3-53
How to configure VLAN for the management interface	Interface Configuration page on page 6-19 LAN Configuration page on page 6-60
Planning the Ethernet and IP (DSCP) priority	Priority for management traffic on page 3-53

For information about...	Refer to...
Planning the use of Ethernet ports for customer and management traffic	Additional port allocation rules on page 3-53

IPv6

The PTP 700 management agent supports the following IPv6 features:

Neighbor discovery

PTP 700 supports neighbor discovery for IPv6 as specified in RFC 4861 including:

- Neighbor un-reachability detection (NUD),
- Sending and receiving of neighbor solicitation (NS) and neighbor advertisement (NA) messages,
- Processing of redirect functionality.

PTP 700 sends router solicitations, but does not process router advertisements.

Path MTU discovery and packet size

PTP 700 supports path MTU discovery as specified in RFC 1981, and packet fragmentation and reassembly as specified in RFC 2460 and RFC 5722.

ICMP for IPv6

PTP 700 supports ICMPv6 as specified in RFC 4443. PTP 700 does not support RFC 4884 (multi-part messages).

Addressing

The PTP 700 management agent is compatible with the IPv6 addressing architecture specified in RFC 4291. PTP 700 allows static configuration of the following:

- Global unicast address
- IPv6 prefix length
- IPv6 default router.

PTP 700 additionally assigns an automatically configured Link Local address using stateless address auto-configuration (SLAAC) as specified in RFC 4862. PTP 700 does not assign a global unicast IP address using SLAAC.

PTP 700 responds on the standard management agent interfaces (HTTP, HTTPS, syslog, Telnet, SNMP, SMTP, Sntp) using the global unicast address.

Privacy extensions

PTP 700 does not support the privacy extensions specified in RFC 4941.

DHCPv6

PTP 700 does not support address assignment using DHCPv6. The address of the management agent must be configured statically.

Multicast listener discovery for IPv6

The PTP 700 management agent supports Multicast Listener Discovery version 1 (MLDv1) as specified in RFC 2710.

PTP 700 does not support Multicast Listener Discovery version 2 (MLDv2).

Textual representation of IPv6 addresses

PTP 700 allows users to input text-based IP addresses in any valid format defined in RFC 5952. IPv6 addresses are automatically converted by PTP 700 to the preferred compressed form, apart from those using the prefix length on the same line as the address, such as **2000::1/64**.

Security

PTP 700 does not support IP security (IPsec).

Further reading

For information about...	Refer to...
Planning the IPv6 interface	IP interface on page 3-54
How to enable IPv6 capability	Software License Key page on page 6-16
How to configure IPv6	Interface Configuration page on page 6-19 LAN Configuration page on page 6-60

cnMaestro device agent

The cnMaestro Wireless Network Management System is a cloud-based or on-premises software platform for secure, end-to-end network control. cnMaestro wireless network manager simplifies device management by offering full network visibility and zero touch provisioning.

The PTP 700 management agent includes the device agent function for cnMaestro. The device agent implementation in PTP 700 provides Fault Management, Performance Management and regular synchronization of the system clock.

Support for additional functional areas may be introduced in later releases.

The device agent shares a common IP interface with the remaining management protocols (HTTP, HTTPS, SNMP, SMTP, syslog, RADIUS).

PTP 700 makes an outgoing connection to the cnMaestro server using the WebSocket Secure protocol. The connection between the PTP 700 and the cnMaestro server is encrypted using AES.

The cnMaestro server address is configured in the PTP 700 as follows:

- Cloud cnMaestro Server: Pre-configured Fully Qualified Domain Name (FQDN)
- On-Premises cnMaestro Server: Static IPv4 address or FQDN

PTP 700 supports the following Onboarding Methods:

- Cloud cnMaestro Server: Serial Number, Cambium ID
- On-Premises cnMaestro Server: Serial Number, Cambium ID, MAC Address

The device identity is authenticated to the server as follows:

- Serial number: Random characters embedded in the serial number
- MAC address: MAC address pre-configured in the cnMaestro server
- Cambium ID: Onboarding key.

The cnMaestro device agent operates in ODUs configured as PTP Master, PTP Slave, HCMP Master and HCMP Slave. Master devices do not act as proxy agents for the associated Slave devices. All ODUs must be configured for connection to the cnMaestro server.

Critical security parameters

The critical security parameters (CSPs) are the secret cryptographic keys or passwords that form the basis for security in PTP 700. CSPs are a subset of Sensitive Security Parameters (SSPs). The non-volatile CSPs are as follows:

- Key of keys.
- Entropy seed.
- Private key for the HTTPS/TLS interface.
- Private key for user-supplied device certificates.
- Pre-shared key (PSK) for authentication and encryption the wireless interface.
- SNMPv3 USM authentication keys
- SNMPv3 USM privacy keys
- SNTP server keys for SHA1
- SHA2-256 digest of user account passwords for the web-based interface.

CSPs are encrypted for non-volatile storage in the ODU and are never exported. The CSPs can be reset (zeroized) along with other sensitive security-related attributes using the web-based interface.

Further reading

For information about...	Refer to...
How to zeroize SSPs	Zeroize SSPs page on page 6-136
How to zeroize SSPs (recovery mode)	Zeroize Sensitive Security Parameters on page 7-87

Configuration templates

PTP 700 provides four standard configuration templates, and up to eight user-defined custom configuration templates. Standard and custom configuration templates are applied by an operator with the Installer user-role using the simplified Installation Wizard in the web-based management interface.

The standard templates are pre-configured and optimized to address four different commonly-occurring use-cases. The custom templates can be created by an expert user to address specific missions or deployment cases not covered by the standard templates.

The custom configuration templates are created, imported, exported, and deleted by operators with the Security Officer or System Administrator user-roles using the Template Manager page in the web-based management interface.

Each standard or custom configuration template captures the complete non-volatile configuration of the PTP 700 ODU, with the following exceptions:

Table 4 Configuration attributes excluded from configuration templates

Attribute	Notes
License Key	The ODU License Key is not saved in a template. The existing License Key preserved when a template is applied.
Equipment configuration	Attributes Unit Name and Site Name are not saved in a template. An Installer user has an opportunity to enter values for Unit Name and Site Name when configuring an ODU using the simplified Installation Wizard.
Security configuration	Security parameters (including Sensitive Security Parameters) are not saved in a template. The existing ODU security configuration (including user accounts, passwords, wireless encryption, encryption keys, and certificates) is preserved when a template is applied.
Antenna configuration	Attributes Antenna Type and Antenna Selection are not saved in a template. Existing values are preserved when a template is applied.
Web properties	Web properties are not saved in a template. Existing values in Web properties are preserved when a template is applied.
Editable controls	<p>In addition to selecting the template, the simplified Installation Wizard allows a user with the Installer role to configure some essential attributes at the point of installation. The attributes that can be configured individually are as follows:</p> <ul style="list-style-type: none"> • Master Slave Mode • Target MAC Address • Link Name • Group ID • Maximum Transmit Power • Installation Mode • IP Configuration • Spectrum Management Control • Lower Centre Frequency • Fixed Tx Frequency, Fixed Rx Frequency <p>Each custom template specifies the individually-configured attributes that will be available for use with that template in the simplified Installation Wizard.</p> <p>When an editable control is selected for use as an individually-configured attribute in a custom template, the associated attribute value is not saved in the template.</p>

Attribute	Notes
	When an editable control is not selected for a custom template, the associated attribute value is saved in the template, and set in the ODU when the template is applied, in the same way as for non-editable controls.

Further reading

For information about...	Refer to...
Details of the preconfigured standard templates in the simplified web interface.	Standard templates in the simplified web interface on page 3-57
Preparing custom templates in the simplified web interface.	Custom templates in the simplified web interface on page 3-60.

Web server

The PTP 700 management agent contains a web server. The web server supports the HTTP and HTTPS/TLS interfaces.

Web-based management offers a convenient way to manage the PTP 700 equipment from a locally connected computer or from a network management workstation connected through a management network, without requiring any special management software. The web-based interfaces are the only interfaces supported for installation of PTP 700.

Web interfaces

PTP 700 provides two different web interfaces:

- **Simplified:** This interface is used by users with the Installer user role. The simplified interface allows configuration to be selected from a list of standard and custom templates. In addition to selecting the template, an Installer can configure a limited set of attributes that must be individually configured for each ODU. The simplified interface provides a subset of the most important performance management data.
- **Standard:** This interface is used by the remaining user roles. Allows any feature to be configured (subject to licensing) and exposes all performance management data.

Web pages in the simplified interface

The web-based management interfaces provide essential web-based fault, configuration, and performance management functions organized into the following web-pages and groups:

- **Status:** The Status web-page reports the detailed status of the PTP 700, including alarms.
- **Installation:** The Installation Wizard is used to configure the PTP 700 ODU and to arm the unit ready for alignment.
- **Change Password:** The Change Password web page changes the web interface password of the active user.
- **Logout:** Allows a user to log out from the web-based interface.

Web pages in the standard interface

The web-based management interfaces provide comprehensive web-based fault, configuration, performance and security management functions organized into the following web-pages and groups:

- **Home:** The Home web-page reports Wireless Link Status and basic information needed to identify the link.
- **Status:** The Status web-page reports the detailed status of the PTP 700.
- **Alarms:** The Alarms web-page lists all active alarm conditions.
- **System:** The System web-pages provide configuration management, performance management, and fault location for the ODU.
- **Installation:** The Installation Wizard is used to install license keys, configure the PTP 700 wireless and LAN interfaces, and to arm the unit ready for alignment.
- **Management:** The Management web-pages are used to configure the network management protocols and interfaces used by the embedded management agent.
- **Template Manager:** The Template Manager is used to create, import, export and delete custom configuration Templates. The Templates are applied to ODU configuration by an Installer user using the Simplified Web Interface.
- **Security:** The Security Wizard is used to configure a master Key of Keys, an external entropy source, security banner, login information, HTTPS/TLS interface, wireless security, and HTTP and telnet options. The Security Wizard is disabled until AES encryption is enabled by license key.
- **Change Password:** The Change Password web page changes the web interface password of the active user. The User Accounts page is also used to change passwords.
- **Logout:** Allows a user to log out from the web-based interface.

Transport layer security

The HTTPS/TLS interface provides the same set of web-pages as the HTTP interface, but allows HTTP traffic to be encrypted using Transport Layer Security Version 1.3 (TLS 1.3). PTP 700 uses AES encryption for HTTPS/TLS with the following cipher suites:

- TLS_AES_256_GCM_SHA384
- TLS_AES_128_GCM_SHA256

Operation of HTTPS/TLS is enabled by purchase of an optional AES upgrade.

HTTPS/TLS requires installation of a private key and a public key certificate where the Common Name of the subject, or the Subject Alternative Name, in the public key certificate is the IP address or host name of the PTP 700 unit. PTP 700 supports certificates with 2048-bit key size.

HTTPS/TLS operation is configured through the web-based interfaces using the Security Wizard.



Note The PTP 700 has no default public key certificate, and Cambium Networks is not able to generate private keys or public key certificates for specific network applications. See the *RSA Certificate Generation User Guide* for further information about generating security material using open-source software.



Note PTP 700 supports a single public key certificate for HTTPS. This certificate must be based on an IPv4 or IPv6 address as the Common Name or Subject Alternative Name (SAN). Any attempt to use HTTPS without a certificate for the associated IP address will not be secure and will trigger browser security warnings. Use certificates with the SAN extension to encode dual addresses with the Dual IPv4/IPv6 interface.

Further reading

For information about...	Refer to...
Planning the security material needed for HTTPS/TLS.	Security planning on page 3-68
How to log in and use the menu.	Using the web interface on page 6-6
How to configure user accounts.	Local User Accounts page on page 6-85

Web management authentication

Locally-authenticated role-based authentication

By default, the PTP 700 web-based interface is protected by a single password shared by all users. Configuration, fault, performance and security management capabilities can be utilized on entry of the valid password. The configured password is stored securely within the ODU, and access to the management network is not needed for authentication.

PTP 700 allows the following attributes to be configured for role-based authentication:

- Auto Logout Period
- Web Absolute Timeout
- Minimum Password Change Period
- Password Expiry Period
- Maximum Number of Login Attempts
- Login Attempt Lockout Period

In role-based authentication, PTP 700 applies a straightforward minimum password length of eight characters.



Note PTP 700 does not use a default password, and a new password must be set on first use of the ODU.

Locally-authenticated identity-based user accounts

When the Identity Based User Accounts attribute is enabled in the Local User Accounts page, the PTP 700 web-based interface allows up to 10 locally-authenticated user accounts to be configured, with individual usernames and passwords. Users must enter one of the configured user names together with the associated password in order to log in. The user account credentials are stored securely within the ODU, and access to the management network is not needed for authentication.

Identity-based user accounts are associated with one of four possible user roles:

- Security officer.
- System administrator.
- Installer.
- Read only.

When Identity Based User Accounts is Enabled, PTP 700 allows a user with the Security Officer user role to enforce a configurable policy for password complexity.



Note PTP 700 uses the Simplified Web Interface for users with the Installer role, and the Standard Web Interface for other roles.



Note Identity-based user accounts are automatically enabled in the FIPS 140-3 Approved mode.

Remote authentication using RADIUS

PTP 700 supports remote authentication for users of the web interface using the Remote Authentication Dial-In User Service (RADIUS). RADIUS is only available when PTP 700 is configured for Identity-based User Accounts.

RADIUS authentication can be used in addition to local authentication, or can be used as a alternative to local authentication. If remote and local authentication methods are used together, PTP 700 first checks log in attempts against locally-stored user credentials. If the entered user name is not found in the local user accounts, and the PTP 700 submits a challenge and response to the RADIUS server for remote authentication. Remote authentication is not attempted if the username and password match locally stored credentials, or fails against the local database.

RADIUS can be used with the following authentication methods:

- Challenge Handshake Authentication Protocol (CHAP)
- Microsoft CHAP Version 2 (MS-CHAPv2)

PTP 700 supports connections to primary and secondary RADIUS servers. The RADIUS interface is configured through the RADIUS Authentication page of the web-based interfaces.

PTP 700 RADIUS supports the standard Service Type attribute to indicate authentication roles of System Administrator and Read Only together with a vendor specific attribute (VSA) to indicate authentication roles of Security Officer, System Administrator, Installer and Read Only.



Note The RADIUS feature is disabled in FIPS 140-3 approved mode.

Remote authentication using Single Sign On method

PTP 700 supports remote authentication using an external Identity Provider (IdP) using a standard Single Sign On (SSO) architecture based on messages in the Secure Assertion Markup Language (SAML) format, where authentication and authorization of a user is handled by the IdP, and authorization is delivered from the IdP to the ODU by means of a secure token.

If SSO is configured in the ODU, a user can choose to enter username and password locally using the standard login dialog or to use SSO with the external IdP.

In the SSO architecture, the user enters credentials at a web interface provided by the IdP. An operator may then choose to authenticate users using a simple username and password, or to implement a variety of different schemes offering two-factor authentication (2FA) or even multi-factor authentication (MFA).




Note

When PTP 700 is used with RADIUS, users enter username and password credentials at the PTP 700 login dialog, and the ODU requests authentication from the RADIUS server based on these credentials. By contrast, in the SSO feature, the ODU redirects a login attempt from the ODU to the IdP, and authentication occurs between the users web browser and the IdP..

An example message flow for the case where the user is successfully authorized with SSO is shown in [Figure 6](#).

1. The login dialog served by the ODU provides options for local authentication with username and password, or single sign on (SSO). Here the user has selected SSO.
2. The ODU creates a SAML Authentication Request containing identification of the Service Provider (the ODU). The message includes a redirection request to the Identity Provider (IdP).
3. The Browser reformats the SAML Authentication Request and sends it to the IdP.
4. The IdP authenticates the Service Provider and serves the SSO login dialog to the Browser. The User provides necessary credentials. This could be username and password, or a security certificate.
5. The IdP could additionally include further authenticating factors, such as entering a time-based one time password (TOTP) sent via a registered mobile device.
6. The IdP authenticates and authorizes the user based on the credentials provided. If authorized, the IdP sends a SAML response to the browser with redirection request to the ODU.
7. The browser redirects the SAML response.
8. The ODU authenticates the SAML response and extracts the details of the authorization (for example, authorized user role). The ODU sets a cookie in the browser and provides web access to the user.

Figure 6 SSO message flow

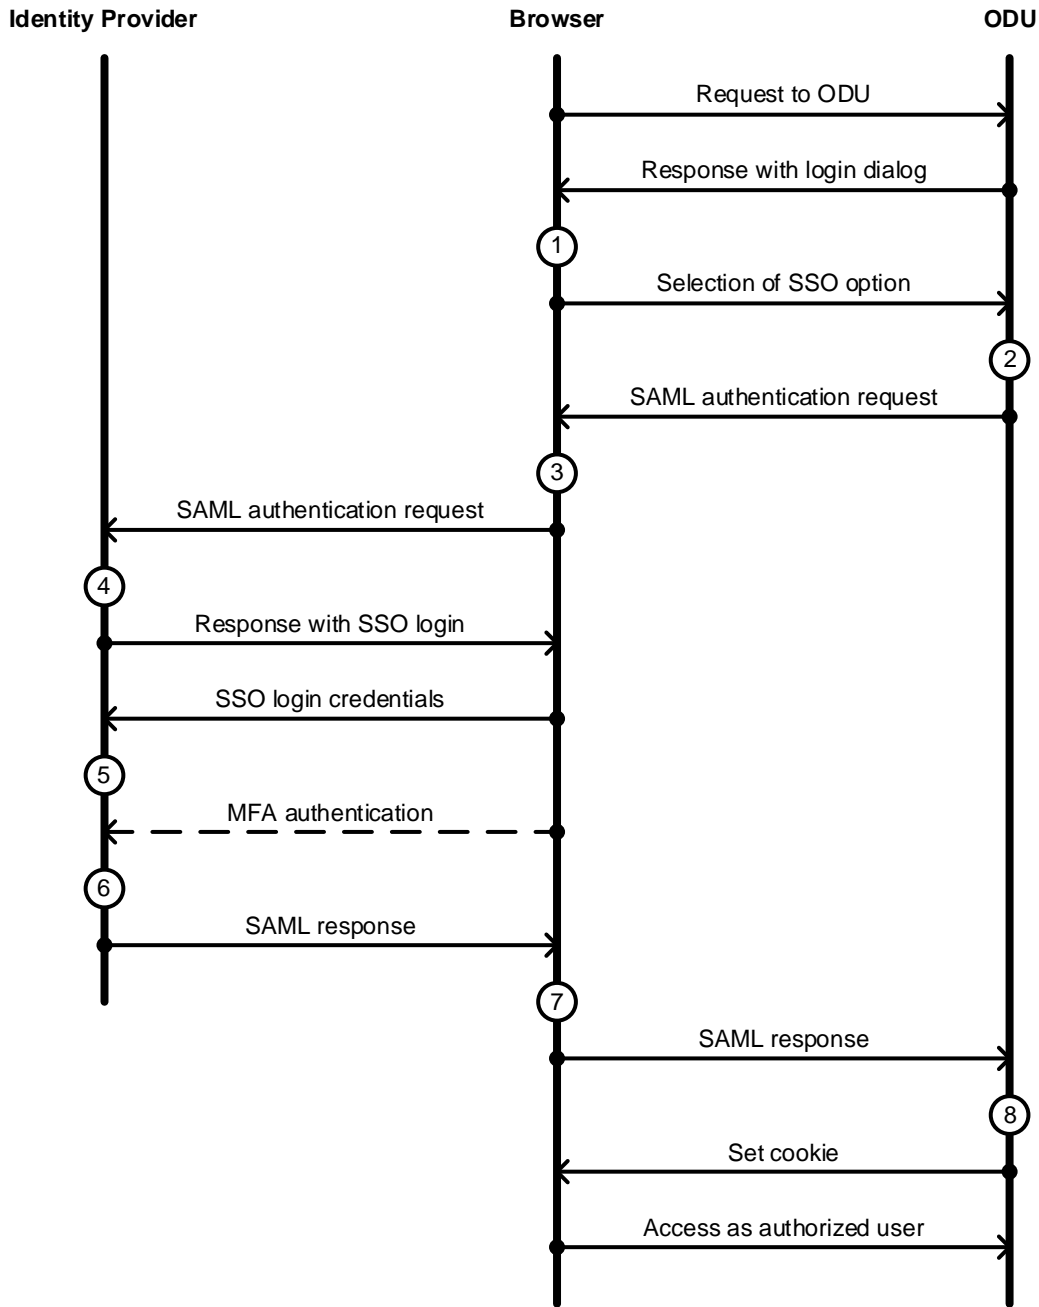

SNMP control of passwords

PTP 700 allows the role-based and identity-based passwords for the web-based interface to be updated using the proprietary SNMP MIB. This capability is controlled by the SNMP Control of Passwords, and is disabled by default. SNMP Control of Passwords is automatically and permanently disabled in the FIPS 140-3 mode.

SNMP Control of Passwords can be used together with SNMPv3 to provide a secure means to update passwords from a central network manager. Password complexity rules configured in the web interface are applied to passwords updated using SNMP.

Further reading

For information about...	Refer to...
How to plan the use of RADIUS	Planning for RADIUS operation on page 3-77
How to plan the use of SSO	Error! Reference source not found. on page Error! Bookmark not defined.
How to configure RADIUS	RADIUS Configuration page on page 6-89
How to configure SSO	SSO Configuration page on page 6-91

SNMP

The management agent supports configuration, fault and performance management by means of an SNMP interface. The management agent is compatible with SNMP v1, SNMP v2c, and SNMPv3.

Standard MIBs

PTP 700 supports the following Management Information Bases (MIBs):

- RFC-1493. BRIDGE-MIB. dot1dBase group.
- RFC-2233. IF-MIB. Interfaces group, and ifXTable table.
- RFC-3411. SNMP-FRAMEWORK-MIB. snmpEngine group.
- RFC-3412. SNMP-MPD-MIB. snmpMPDStats group.
- RFC-3413. SNMP-TARGET-MIB. snmpTargetObjects group and SNMP-NOTIFICATION-MIB snmpNotifyTable table.
- RFC-3414. SNMP-USER-BASED-SM-MIB. usmStats group and usmUser group.
- RFC-3415. SNMP-VIEW-BASED-ACM-MIB vacmMIBObjects group.
- RFC-3418. SNMPv2-MIB. System group, SNMP group, and set group.
- RFC-3826. SNMP-USM-AES-MIB. usmAesCfb128Protocol OID.
- RFC-4293 IP-MIB, ipForwarding, ipAdEntAddr, ipAdEntIfIndex, ipAdEntNetMask

Enterprise MIB

PTP 700 is managed using the following enterprise MIB:

- PTP 700 Series proprietary MIB.

SNMP Configuration Mode

PTP 700 supports configuration management via SNMP with a transactional model, and validation of the requested configuration equivalent to validation in the web-based management interface.

Configuration management using SNMP addresses approximately the same range of user-configurable attributes as the System Administrator role in the web-based interface.

Further reading

For information about...	Refer to...
Planning for for SNMPv1/2c	Planning for SNMP operation on page 3-61
Planning for SNMP Configuration Mode	SNMP Configuration Mode on page 3-62
How to enable SNMP control of HTTP, Telnet and passwords	Web-Based Management page on page 6-83 HTTP and Telnet options on page 6-132.
How to configure SNMPv1 or SNMPv2c	SNMP pages (for SNMPv1/2c) on page 6-115
How to upgrade firmware remotely using Trivial FTP (TFTP) triggered by SNMP	Upgrading firmware using TFTP on page 6-155

Standalone management of TD-90

The TD-90 antenna positioner can be managed directly from a suitable Network Management System (NMS), using the TD-90 web-based management interface or using SNMP. Secure network management is provided using SNMPv3.

In this scenario, the TD-90 and PTP 700 are managed independently.



Note The TD-90 antenna positioner cannot be used at an HCMP Master ODU.

Integrated management of TD-90

PTP 700 provides optional integrated network management for the TD-90 antenna positioner. In this case, the TD-90 is managed by the NMS via the web-based management interface or SNMP interface of the PTP 700, with the PTP 700 acting as an SNMP Proxy.

The connection between the PTP 700 and the NMS may be secured using the standard PTP 700 HTTPS or SNMPv3 features.

The connection between the ODU and the TD-90 is on an isolated, directly-connected Ethernet link using SNMPv1 or SNMPv2c.

SNMP Proxy

In the integrated management scenario for TD-90, the PTP 700 ODU acts as an SNMP Proxy Forwarder.

The Proxy Forwarder consists of:

- The standard SNMP Agent function that receives GET and SET commands from the NMS in the Management Service. The Enterprise MIB for the PTP 700 includes objects that model all the managed functions of the TD-90, and is therefore a superset of the TD-90 MIB. The SNMP Agent supports SNMPv1, SNMPv2c and SNMPv3.

- Web pages in the PTP 700 web-based management interface that duplicate pages of the TD-90 web-based management. Controls in the PTP 700 web pages are linked to attributes in the PTP 700 data manager.
- Non-volatile storage in the PTP 700 data manager for attributes relating to TD-90 configuration
- Volatile storage in the PTP 700 data manager for attributes relating to TD-90 status
- A translation function mapping attributes in the PTP 700 data manager to the SNMP objects in the TD-90 Enterprise MIB.
- An SNMP Manager that generates GET and SET commands sent to the attached TD-90, and processes GET RESPONSE and SET RESPONSE messages received from the TD-90. All communication between the PTP 700 and the TD-90 is in the isolated TD-90 Service. The SNMP Manager supports SNMPv1 and SNMPv3.

Offline configuration

The TD-90 can be configured in the PTP 700 when the TD-90 is offline. Stored configuration for the TD-90 is passed to the TD-90 when the connection is subsequently re-established, or when the TD-90 is reset.

SNMP Agent for antenna alignment

The PTP 700 provides a separate instance of the SNMP Agent attached to the TD-90 Service allowing the TD-90 to obtain signal strength and link status information from the PTP 700 to support the alignment and tracking function.

IP interface

PTP 700 provides a dedicated IPv4 interface for connection to the TD-90 in the TD-90 Service. This interface is configured automatically. The IP address is set to one of two values depending on the Master/Slave status of the ODU.

Discovery

The TD-90 antenna positioner uses a discovery method to detect the IP interface in the PTP 700 TD-90 Service at the Master or Slave ODU. The discovery method is armed by resetting the TD-90 to factory defaults. The TD-90 selects its own IP address automatically following discovery of an attached PTP 700.



Note The TD-90 antenna positioner cannot be used at an HCMP Master ODU.

Further reading

For information about...	Refer to...
TD-90 Operation and Maintenance	<i>Cambium TD-90 User Guide</i>
Ethernet bridging in the TD-90 Service	TD-90 Service on page 1-52
Ethernet port allocation for TD-90	Ethernet port allocation on page 3-48

System Clock

The System Clock supplies accurate date and time information to the system. It can be set manually, configured to synchronize at regular intervals to a network time server using SNTP, or configured to synchronize at registration with a connected cnMaestro server.

The System Clock is configured to display local time by setting the time zone and daylight saving in the Time Configuration web page.

PTP 700 can be configured to authenticate received NTP messages using an MD5 or SHA-1 signature.

Further reading

For information about...	Refer to...
How to plan for SNTP operation	Planning for SNTP operation on page 3-69
How to configure SNTP	Time Configuration page on page 6-99

SNMPv3 security

SNMP Engine ID

PTP 700 supports four different formats for SNMP Engine ID:

- MAC address
- IPv4 address
- Configurable text string
- IPv6 address

SNMPv3 security configuration is re-initialized when the SNMP Engine ID is changed.

User-based security model

PTP 700 supports the SNMPv3 user-based security model (USM) for up to 10 users, with MD5, SHA-1, DES and (subject to the license key) AES protocols in the following combinations:

- No authentication, no privacy,
- MD5, no privacy,
- SHA-1, no privacy,
- MD5, DES,
- SHA-1, DES,
- MD5, AES,
- SHA-1, AES.

Use of AES privacy requires the PTP 700 AES upgrade described in [AES license](#) on page 1-76.

View-based access control model

PTP 700 supports the SNMPv3 view-based access control model (VACM) with a single context. The context name is the empty string. The context table is read-only, and cannot be modified by users.

Access to sensitive security parameters

The SNMPv3 management interface does not provide access to sensitive security parameters (SSPs) of PTP 700 except for the security configuration of the SNMPv3 interface itself.

MIB-based management of SNMPv3 security

PTP 700 supports a standards-based approach to configuring SNMPv3 users and views through the SNMP MIB. This approach provides maximum flexibility in terms of defining views and security levels appropriate for different types of user.

PTP 700 provides a default SNMPv3 configuration. This initial configuration is not secure, but it provides the means by which a secure configuration can be created using SNMPv3.

The secure configuration should be configured in a controlled environment to prevent disclosure of the initial security keys necessarily sent as plaintext, or sent as encrypted data using a predictable key. The initial security information should not be configured over an insecure network.

The default configuration is restored when any of the following occurs:

- All ODU configuration data is erased.
- All SNMP users are deleted using the SNMP management interface.
- The SNMP Engine ID Format has been changed.
- The SNMP Engine ID Format is Internet Address AND the Internet Address has been changed.
- The SNMP Engine ID Format is Text String AND the text string has been changed.
- The SNMP Engine ID Format is MAC Address AND configuration has been restored using a file saved from a different unit.
- SNMPv3 Security Management is changed from web-based to MIB-based.

The default user configuration is specified in [SNMPv3 default configuration \(MIB-based\)](#) on page 3-75.

PTP 700 creates the `initial` user and template users with localized authentication and privacy keys derived from the passphrase string 123456789. Authentication keys for the templates users are fixed and cannot be changed. Any or all of the template users can be deleted.

The default user `initial` is created with a view of the entire MIB, requiring authentication for SET operations. There is no access for template users.



Note VACM grants access for requests sent with more than the configured security level.

The default user `initial` will have read/write access to the whole of the MIB. This is described in further detail in [View-based access control model](#) on page 1-73. The template users have no access to the MIB in the default configuration. User `initial` will normally be used to create one or more additional users with secret authentication and privacy keys, and with appropriate access to the whole of the MIB or to particular views of the MIB according to the operator's security policy. New users must be created by cloning template users. The user `initial` may then be deleted to prevent access using the well-known user name and keys. Alternatively, the keys associated with `initial` may be set to some new secret value.

Web-based management of SNMPv3 security

PTP 700 supports an alternative, web-based approach for configuring SNMPv3 security. In this case, the web-based interface allows users to specify SNMPv3 users, security levels, privacy and authentication protocols, and passphrases. Web-based management will be effective for many network applications, but the capabilities supported are somewhat less flexible than those supported using the MIB-based security management.

Selection of web-based management for SNMPv3 security disables the MIB-based security management.

Web-based management of SNMPv3 security allows for two security roles:

- Read Only
- System Administrator

Read Only and System Administrator users are associated with fixed views allowing access to the whole of the MIB, excluding the objects associated with SNMPv3 security. System Administrators have read/write access as defined in the standard and proprietary MIBs.

Web-based management of SNMPv3 security allows an operator to define the security levels and protocols for each of the security roles; all users with the same role share a common selection of security level and protocols.

Web-based security configuration is re-initialized when any of the following occurs:

- All ODU configuration data is erased.
- The SNMP Engine ID Format has been changed.
- The SNMP Engine ID Format is Internet Address and the Internet Address has been changed.
- The SNMP Engine ID Format is Text String and the text string has been changed.
- The SNMP Engine ID Format is MAC Address and configuration has been restored using a file saved from a different unit.
- SNMPv3 Security Management is changed from MIB-based to web-based.

Additionally, all SNMP user accounts are disabled when the authentication protocol, the privacy protocol, or the security level is changed.

Downgrade of the license key

A possible lockout condition exists if a user downgrades the PTP 700 license key so as to disable the AES capability when SNMPv3 users are configured with AES privacy and VACM is configured to require privacy. In this case, recovery is by either (a) restoring the correct license key, or (b) using recovery mode to reset all configuration and entering new configuration.

Option (b) will cause default users and access configuration to be re-created.

Further reading

For information about...	Refer to...
How to plan for SNMPv3 operation	Planning for SNMPv3 operation on page 3-73
How to configure SNMPv3	SNMP pages (for SNMPv3) on page 6-106

System logging (syslog)

PTP 700 supports the standard syslog protocol to log important configuration changes, status changes and events. The protocol complies with RFC 3164.

PTP 700 creates syslog messages for configuration changes to any attribute that is accessible via the web-based interface, or via the enterprise MIB at the SNMP interface.

PTP 700 additionally creates syslog messages for changes in any status variable displayed in the web-based interface.

PTP 700 creates syslog messages on a number of events (for example successful and unsuccessful attempts to log in to the web-based interface).

PTP 700 can be configured to send syslog messages to one or two standard syslog servers.

Additionally, PTP 700 logs event notification messages locally. Locally-stored event messages survive reboot of the unit, and are overwritten only when the storage capacity is exhausted (approximately 2000 messages). The locally stored events can be reviewed using the web-based user interface.

Only users with Security Officer role are permitted to configure the syslog client. Users with Security Officer, System Administrator or Read Only roles are permitted to review the locally logged event messages.

Further reading

For information about...	Refer to...
Configuring system logging	Syslog Configuration page on page 6-104
Syslog alarms	Alarms on page 7-24
How to view the local log of event messages	Syslog page on page 7-28
How to interpret syslog messages	Format of syslog server messages on page 7-29

Domain Name Service (DNS)

The PTP 700 Management Agent supports use of an external DNS server to resolve the Domain Name configured for network management servers to IPv4 or IPv6 addresses. PTP 700 allows the configuration of a primary DNS server and optionally a second DNS server.

When DNS is enabled and configured, the following server addresses can be configured as a Fully Qualified Domain Name (FQDN):

- cnMaestro Server

- RADIUS Server
- SMTP Server
- SNMP Trap
- SNTP Server
- Syslog Server
- TFTP Server

The FQDN must comply with the following:

- Not longer than 63 characters
- Must contain some structure (at least one “.”)
- Must consist of only the characters “0”..”9”, “a”..”z”, “A”..”Z”, “\$”, hyphen, underscore, dot/stop, plus, exclamation, star, single quote, left parenthesis, right parenthesis

Instant messaging

PTP 700 provides a simple text-based messaging service between the ODUs in a link. The Instant Messaging interface can be used to send messages to a technician or operator at the remote end of the link. The messaging service does not depend on external servers and can be used as soon as basic connectivity is achieved.

The maximum message size is 180 characters.

Unread messages are indicated by an alert in the Status Bar of the web-based interface.

AES license

PTP 700 provides optional encryption using the Advanced Encryption Standard (AES). Encryption is not available in the standard PTP 700 system.

AES upgrades are purchased from your Cambium Point-to-Point distributor or solutions provider. The upgrade authorizes AES operation for one ODU. Two upgrades are needed to operate AES on a link.

AES encryption may be used in the following ways:

- At the wireless port to encrypt data transmitted over the wireless link.
- At the SNMP management interface in the SNMPv3 mode.
- At the HTTPS/TLS management interface.

Two levels of encryption are available to purchase:

- 128-bit: This allows an operator to encrypt all traffic sent over the wireless link using 128-bit encryption.
- 256-bit: This allows an operator to encrypt traffic using either 128-bit or 256-bit encryption.

Wireless encryption can be configured for TLS RSA, TLS PSK 128-bit, or TLS PSK 256-bit algorithms. TLS RSA uses factory installed or user-supplied RSA device certificates to authorize remote units. TLS RSA automatically uses the largest key size mutually supported by licensing at the two ends of the link. TLS PSK algorithms using a 128-bit or 256-bit pre-shared key are available only if the associated key size is supported by licensing at both ends of the link.

AES encryption for SNMPv3 is always based on a 128-bit key, regardless of level enabled in the PTP 700 license key.



Note that the connection between the PTP 700 and the cnMaestro server is always encrypted using TLS 1.3 with AES. The optional AES license is not required for secure operation with cnMaestro.

Further reading

For information about...	Refer to...
General description of wireless encryption in PTP 700	Wireless encryption on page 1-39
Capability upgrades for AES	Capability upgrades on page 1-78
AES and HTTPS/TLS operation	Planning for HTTPS/TLS operation on page 3-72
AES and SNMPv3 operation	Planning for SNMPv3 operation on page 3-73
How to generate an AES license key	Generating license keys on page 6-2
How to enable AES capability	Software License Key page on page 6-16
How to configure AES encryption	System Configuration page on page 6-56
How to configure security with AES	Security menu on page 6-122

Firmware upgrade

The management agent supports application firmware upgrade using either the web-based interface or the SNMP interface.

PTP 700 firmware images are digitally signed, and the ODU will accept only images that contain a valid Cambium Networks digital signature. The ODU always requires a reboot to complete a firmware upgrade.



Note Obtain the application firmware and this user guide from the support website.



Attention ODU firmware version must be the same at both ends of the link. Limited operation may sometimes be possible with dissimilar firmware versions, but such operation is not supported by Cambium Networks.



Attention Take care when upgrading ODU firmware using the wireless link to a remote ODU. Upgrade the remote unit first, reboot the remote ODU, and then upgrade the local unit to the same firmware version.

Transition of digital signature algorithms

Application firmware from System Release 700-04-10 onwards accepts only replacement firmware signed using the Edwards Curve Digital Signature Algorithm (EdDSA). Firmware with a EdDSA signature is indicated by a file extension of DLD3.

Application firmware from releases earlier than 700-04-10 accepts only replacement firmware signed using the Digital Signature Algorithm (DSA), indicated by a file extension of DLD2.

Firmware for System Release 700-04-10 is available for download from the support website and includes separate firmware images with EdDSA signature (DLD3) and DSA signature (DLD2).

Recovery firmware from RECOVERY-02-00 onwards accepts only DLD3. Earlier versions of Recovery accept only DLD2.



Note Install firmware PTP45700-04-10.DLD2 or PTP78700-04-10.DLD2 to upgrade from an earlier release to 700-04-10.



Attention EdDSA provides enhanced security. DSA is deprecated for security-critical applications. A PTP 700 ODU with Application firmware 700-04-10 or later, and Recovery firmware RECOVERY-02-00 or later, cannot be downgraded to a release earlier than 700-04-10 by any means.

Further reading

For information about...	Refer to...
How to upgrade the firmware using the web interface	Software Upgrade page on page 6-80
How to upgrade firmware remotely using Trivial FTP (TFTP) triggered by SNMP	Upgrading firmware using TFTP on page 6-155

Capability upgrades

ODUs are shipped with a default License Key factory-installed. The default license key enables a limited set of capabilities which depend upon the ODU variant.

Capability upgrades are purchased from Cambium and supplied as an Entitlement Certificate, delivered by email. One Entitlement Certificate can deliver multiple upgrades. Follow the instructions in the certificate to redeem the purchased upgrade products at the Cambium Support Center.

Individual upgrades can then be activated by specifying the MAC address of a PTP 700 ODU. For each upgrade activated, the Support Center creates a new license key and delivers it by email. Install the license key using the ODU web interface to enable the purchased capability in the ODU.



Note License keys are bound to a single ODU and are not transferrable.

Further reading

For information about...	Refer to...
Capabilities of the PTP 45700 Connectorized+Integrated ODU	PTP 45700 Connectorized+Integrated ODU on page 2-3
Capabilities of the PTP 45700 Connectorized ODU	PTP 45700 Connectorized ODU on page 2-6
Capabilities of the PTP 45700 Beam Steering ODU	PTP 45700 Beam Steering ODU on page 2-8
Capabilities of the PTP 78700 Integrated ODU	PTP 78700 Integrated ODU on page 2-9
Capabilities of the PTP 78700 Connectorized ODU	PTP 78700 Connectorized ODU on page 2-10
Ordering capability upgrades	ODU capability upgrades on page 2-12
How to obtain License Keys	Generating license keys on page 6-2
How to install capability upgrades	Software License Key page on page 6-16

Full capability trial period

A full capability trial period is available for PTP 45700 units that are licensed for “Lite” (up to 225 Mbps) data throughput capability. This trial allows the ODU to operate with “Full” capability (up to 450 Mbps) during a 60 day period, reverting to the Lite capability afterwards. The trial period can be started, paused and resumed from the web interface.



Note PTP 45700 does not support HCMP topology in units with the Lite capacity variant, and the trial period is therefore not applicable to HCMP operation.

Further reading

For information about...	Refer to...
How to control the trial period	Software License Key page on page 6-16

Recovery mode

The PTP 700 recovery mode provides a means to recover from serious configuration errors including lost or forgotten passwords and unknown IP addresses.

Recovery mode also allows new main application firmware to be loaded even when the integrity of the existing main application firmware image has been compromised. The most likely cause of an integrity problem with the installed main application firmware is where the power supply has been interrupted during an earlier firmware upgrade.

The ODU operates in recovery mode in the following circumstances:

- When a checksum error occurs for the main application firmware image.
- When a power on, power off, power on cycle is applied to the ODU with the power off period being around 5sec.

Recovery mode supports a single IPv4 interface, with IP address 169.254.1.1, and with default link settings. Recovery mode does not support IPv6.



Note When Recovery has been entered through a power on/off/on cycle, the ODU will revert to normal operation if no web access has been made to the unit within 30 seconds. This prevents the unit remaining inadvertently in recovery following a power outage.

Recovery mode options

Options in recovery mode (IPv4 only) are as follows:

- Load new main application firmware.
- Reset all configuration data. This option resets IP, Ethernet and security configuration
- Reset IP and Ethernet configuration.
- Reset (zeroize) sensitive security parameters.
- Reboot with existing firmware and configuration.

If recovery mode has been entered because of a checksum error, after a 30 second wait the ODU will attempt to reboot with existing firmware and configuration.

The recovery firmware image is installed during manufacture of the ODU and cannot be upgraded by operators.

Further reading

For information about...	Refer to...
How to recover from configuration errors or firmware image corruption	Recovery mode on page 7-80

Upgrade from earlier releases

PTP topology

To upgrade a PTP link to 700-04-10, upload the new firmware to the ODUs at the two ends of the link, program the firmware image into non-volatile memory in the two ODUs, and then reboot both ODUs together.

HCMP topology

To upgrade an HCMP sector to 700-04-10, upload the new firmware to all of the ODUs, program the firmware image into non-volatile memory in the ODUs, and then reboot all ODUs together.



Note Upgrade new Slave ODUs with earlier firmware to 700-04-10 before installing on the upgraded Master ODU.



Note See [Transition of digital signature algorithms](#) on page 1-78 for details of a transition in digital signatures of replacement firmware.

FIPS 140-3 mode

This section describes the (optional) FIPS 140-3 cryptographic mode of operation.

PTP 700 provides an optional secure cryptographic mode of operation that complies with the requirements for Level 2 of Federal Information Processing Standards (FIPS) Publication 140-3.

FIPS 140-3 approved mode

PTP 700 operates in the FIPS 140-3 approved mode whenever the special FIPS firmware is installed in the PTP 700 ODU.



Attention Use the following NIST web site to confirm that the FIPS firmware has been validated:

<https://csrc.nist.gov/Projects/cryptographic-module-validation-program/validated-modules/search>

The special FIPS firmware image can be identified by a FIPS- prefix to the filename, for example: FIPS-PTP700-04-10.DLD3.



Note PTP 700 will not upload the FIPS firmware unless the unit is licensed for 128-bit or 256-bit AES encryption and for FIPS operation.

Indication of FIPS 140-3 approved mode

The FIPS 140-3 approved mode is indicated by the “FIPS 140-3” text displayed at the top of the navigation bar in the web-based interface, as shown in [Figure 7](#).

Figure 7 Indication of FIPS 140-3 capability

The screenshot shows the Cambium Networks web-based interface. At the top, the Cambium Networks logo is visible. Below the logo, the text "Link: Bolinas Ridge to Mount Tamalpais", "Site: Bolinas Ridge", and "Unit: Bolinas 6" is displayed. On the left side, there is a navigation bar with the following items: "Home", "Status", "Alarms", and "System". The "FIPS 140-3" text is prominently displayed in the top left corner of the main content area. To the right, there is a "System Summary" section with a table of attributes and values.

Attributes	Value	Units
Wireless Link Status	Up	
Link Name	Bolinas Ridge to Mount Tamalpais	
Unit Name	Bolinas 6	
Site Name	Bolinas Ridge	
Elapsed Time Indicator	20 Days 00:29:20	
System Clock	04-Dec-2023 11:20:44	

Enforced configuration in FIPS approved mode

When the PTP 700 ODU operates in the FIPS approved mode, the following configuration settings are automatically enforced:

- Identity-based user accounts is Enabled.
- Telnet management interface is Disabled.
- SNMP control of HTTP and Telnet is Disabled.
- SNMP control of passwords is Disabled.
- TFTP client is Disabled.
- RADIUS client is Disabled.
- Device Certificate is User.

In addition, the License Key must have a valid EdDSA signature.

Secure mode alarm

The Secure mode alarm indicates that the unit is operating in the FIPS approved mode, but that it has not been configured correctly for FIPS 140-3 operation. The secure mode alarm appears in the System Summary page as shown in [Figure 8](#).

Figure 8 Secure mode alarm in the System Summary page

System Summary		
Attributes	Value	Units
Wireless Link Status	Searching	
Link Name	Pikes Peak to Cripple Creek	
Elapsed Time Indicator	00:01:01	
Secure Mode Alarm	Secure Mode Is Not Configured	

The Secure mode alarm is also displayed in the first page of the Security Wizard as shown in [Figure 9](#).

Figure 9 Secure mode alarm in the Security Wizard

Security Configuration Wizard		
This page shows a summary of the current security configuration. Press the 'Continue to Security Wizard' button below to change this configuration.		
Security configuration		
Attributes	Value	Units
Secure Mode Alarm	Secure Mode Is Not Configured	
Key of Keys	Not configured	
Private Key	Not configured	
Public Certificate	Not configured	

Security configuration for FIPS approved mode

The security configuration for the FIPS approved mode consists of the following:

- Key of keys (128-bit or 256-bit to match the AES license)
- Entropy (512-bit)

- The HTTPS/TLS management interface must be correctly configured, including:
 - Private key (2048-bit RSA key size)
 - Public key certificate (2048-bit RSA key size, signed using SHA2-256 Secure Hash Algorithm)
- The HTTP management interface must be Disabled
- AES encryption must be configured and enabled at the wireless interface.
- Passwords must be configured (with minimum length 15 characters) for enabled accounts in the web-based interface.

When the security configuration is completed correctly, the Secure mode alarm is cleared from the System Summary page and the Security Wizard displays the Active state as shown in [Figure 10](#).

Figure 10 Secure mode active

Security Configuration Wizard		
This page shows a summary of the current security configuration. Press the 'Continue to Security Wizard' button below to change this configuration.		
Security configuration		
Attributes	Value	Units
Secure Mode Alarm	Secure Mode Is Active	
Key of Keys	Configured	
Private Key	Configured	
Public Certificate	Configured	

Further reading

For information about...	Refer to...
Cryptographic material needed for FIPS operation	Planning for FIPS 140-3 operation on page 3-80
Installing license keys	Software License Key page on page 6-16
Loading firmware images	Software Upgrade page on page 6-80
Configuring the ODU for FIPS operation	Configuring security for FIPS 140-3 applications on page 6-137

Exiting from the FIPS operational state

A PTP 700 ODU in the FIPS operation state can be prepared to accept new security configuration by zeroizing sensitive security parameters (SSPs). The unit remains in the FIPS approved mode.

Further reading

For information about...	Refer to...
Zeroizing the SSPs	Zeroize SSPs page on page 6-136

Reverting to the standard (non-FIPS) mode

A FIPS 140-3 capable ODU can be used in standard (non-FIPS) mode by loading a standard (non-FIPS) firmware image and rebooting.

The sensitive security parameters (SSPs) are zeroized when the unit is no longer FIPS 140-3 capable.

Further reading

For information about...	Refer to...
Exiting the FIPS approved mode	Managing security on page 7-57

Chapter 2: System hardware

This chapter describes the hardware components of a PTP 700 link.

The following topics are described in this chapter:

- [Outdoor unit \(ODU\)](#) on page 2-2 describes ODU hardware variants, upgrades, accessories, cables, and brackets.
- [Power supply units \(PSU\)](#) on page 2-20 contains details of the AC+DC Enhance Power Injector.
- [Antennas and antenna cabling](#) on page 2-24 lists cable and connector types for antenna connections, together with the RF Combiner Kit used in some protected links.
- [Ethernet cabling](#) on page 2-27 lists ready made data cables for PTP 78700 and specifies approved Ethernet cable and connectors for permanent or infrastructure deployments. This section also deals with Lightning Protection Units (LPUs) and SFP modules.
- [PTP-SYNC unit](#) on page 2-37 provides information about the optional PTP-SYNC unit used for TDD Synchronization with PTP 45700.
- [GPS receivers](#) on page 2-43 describes the Trimble Acutime GPS receiver used with PTP-SYNC.

Outdoor unit (ODU)

ODU description

The ODU is a self-contained transceiver unit that houses both radio and networking electronics.

Two ODUs are required for a PTP link.

One ODU is required as a Master in an HCMP sector, with up to eight ODUs configured as Slaves.

Hardware platform variants

PTP 700 ODUs are available in five different hardware platform and frequency variants:

- PTP 45700 Connectorized+Integrated ODU (4400-5875 MHz)
- PTP 45700 Connectorized ODU (4400-5875 MHz)
- PTP 45700 Beam Steering ODU (4400-5875 MHz)
- PTP 78700 Integrated ODU (7125-8500 MHz)
- PTP 78700 Connectorized ODU (7125-8500 MHz)

PTP 700 ODUs are available in three color schemes:

- White
- Green
- Desert Tan

Regional variants

PTP 700 ODUs are available as a Global variant.

In PTP 45700 ODUs, the default License Key for country “Other” supports the following regulatory bands:

- 8 “5.4 GHz unrestricted”
- 35 “5.8 GHz unrestricted”
- 61 “4.9 GHz unrestricted”
- 62 “5.2 GHz unrestricted”
- 81 “4.7 GHz NATO Band IV”

ODUs may be configured for individual country licenses. Refer to [Generating license keys](#) on page 6-2 and [Software License Key page](#) on page 6-16. The list of available regulatory bands depends on the country.

PTP 45700 ODU kits (see [Table 7](#), [Table 10](#)) provide an option to order CE-marked ODUs. CE marking indicates that the upgraded ODU complies with all applicable EU regulations including EMC, safety, hazardous materials, and wireless. CE-marked ODUs can only be used with country-specific License Keys for countries that are EU members, EEA members, or Turkey. These licenses necessarily restrict the maximum power that can be transmitted in 5 GHz bands to comply with EU regulations. Operation in 4 GHz bands is not regulated by the EU and is unchanged from the Global variant.

PTP 45700 Beam Steering ODUs and PTP 78700 ODUs are supplied exclusively for use of governments and public safety and carry the CE marking without restriction on the wireless capabilities.

Capacity variants

Some of the PTP 45700 ODU models were previously available in a Lite capacity variant. The Lite capacity variant provides data transfer capped at half the capacity of the equivalent configuration in the Full capacity variant. The Lite capacity variant is no longer available from Cambium Networks. Existing ODUs licensed for Lite capacity can be operated at the reduced capacity, or can be licensed for the Full capacity by purchase of an upgrade (see [ODU capability upgrades](#) on page 2-12).

PTP 45700 Connectorized+Integrated ODU

The PTP 45700 Connectorized+Integrated ODU provides a choice between using external antennas, similar to the Connectorized ODU, or a 22 dBi integrated antenna ([Figure 11](#) and [Figure 12](#)). The integrated antenna offers a convenient and easily-deployed solution where the additional gain of external antennas is not needed.

Figure 11 PTP 45700 Connectorized+Integrated ODU - White (front and rear views)



Figure 12 PTP 45700 Connectorized+Integrated ODU -Desert Tan (front and rear views)

Capacity and capability licensing

PTP 45700 ODUs support the following capacity and capability upgrades (see [ODU capability upgrades](#) on page 2-12):

- Lite to Full capacity upgrade
- SFP port operation
- AES encryption
- Synchronous Ethernet and 1588 Transparent Clock
- High-Capacity Multipoint (HCMP)
- Over-the air rekeying



Note The HCMP upgrade can only be applied to ODUs that have the Full capacity license.

Full capacity trial period

A full capacity trial period is available for PTP 45700 ODUs of the Lite capacity variant. This trial allows the ODU to operate with Full capacity during a 60 day period, reverting to Lite capacity afterwards. The trial period can be started, paused and resumed from the web interface ([Software License Key page](#) on page 6-16).



Note The HCMP upgrade can only be applied to ODUs that already have the Full capacity license, and so the Full capacity trial does not apply to ODUs operating in the HCMP topology.

Individual ODU part numbers

Order PTP 45700 Connectorized+Integrated ODUs from Cambium Networks ([Table 5](#)). ODUs are supplied without mounting brackets.

Table 5 PTP 45700 Connectorized+Integrated ODU individual part numbers

Cambium description	Capacity variant	Cambium part number
PTP 700 Connectorized+Integrated ODU (Global), White, 4400-5875 MHz	Full	C045070B004A
PTP 700 Connectorized+Integrated ODU (Global), Green, 4400-5875 MHz	Full	C045070B038A
PTP 700 Connectorized+Integrated ODU (Global), Desert Tan, 4400-5875 MHz	Full	C045070B040A

PTP 700 Lite

The Lite capacity PTP 45700 ODU ([Table 6](#)) is no longer available from Cambium Networks. Existing Lite capacity ODUs are supported in the PTP 700 firmware and can be upgraded to the Full capacity license (see [ODU capability upgrades](#) on page 2-12).

Table 6 PTP 700 Lite Connectorized+Integrated individual ODU part numbers

Cambium description	Capacity variant	Cambium part number
PTP 700 Lite Connectorized+Integrated ODU (Global), White, 4400-5875 MHz	Lite	C045070B010A

ODU kit part numbers

Order PTP 45700 Connectorized+Integrated ODU kits from Cambium Networks ([Table 7](#)).

Each of the parts listed in [Table 7](#) includes the following items:

- One Connectorized+Integrated ODU (Global).
- Upgrade to apply CE marking to the ODU.

Table 7 PTP 45700 ODU kit part numbers for Connectorized+Integrated ODUs

Cambium description	Capacity variant	Cambium part number
PTP 700 Connectorized+Integrated ODU with CE mark, White, 4400-5875 MHz	Full	C045070H032A
PTP 700 Connectorized+Integrated ODU with CE mark, Green, 4400-5875 MHz	Full	C045070H034A
PTP 700 Connectorized+Integrated ODU with CE mark, Desert Tan, 4400-5875 MHz	Full	C045070H036A

PTP 45700 Connectorized ODU

The PTP 45700 Connectorized ODU is intended to work with separately mounted external antennas (Figure 13). External antennas generally have higher gains than the integrated antennas, allowing the PTP 700 to cope with more difficult radio conditions.

Figure 13 PTP 45700 Connectorized ODU - White (front and rear views)



Figure 14 PTP 45700 Connectorized ODU - Green (front and rear views)



Note To determine when to install external antennas and to calculate their impact on link performance and regulatory limits, see [Planning for connectorized units](#) on page 3-30.

To select antennas, RF cables and connectors for connectorized units, see [Antennas and antenna cabling](#) on page 2-24.

Capacity and capability licensing

PTP 45700 ODUs support the following capacity and capability upgrades (see [ODU capability upgrades](#) on page 2-12):

- Lite to Full capacity upgrade
- SFP port operation
- AES encryption
- Synchronous Ethernet and 1588 Transparent Clock
- High-Capacity Multipoint (HCMP)
- Over-the air rekeying

Full capability trial period

A full capability trial period is available for PTP 45700 ODUs of the Lite capacity variant. This trial allows the ODU to operate with Full capacity during a 60 day period, reverting to Lite capability afterwards. The trial period can be started, paused and resumed from the web interface ([Software License Key page](#) on page 6-16).



Note The HCMP upgrade can only be applied to ODUs that already have the Full capacity license, and so the Full capability trial does not apply to ODUs operating in the HCMP topology.

Individual ODU part numbers

Order PTP 45700 Connectorized ODUs from Cambium Networks ([Table 8](#)). ODUs are supplied without mounting brackets.

Table 8 PTP 45700 Connectorized individual ODU part numbers

Cambium description	Capacity variant	Cambium part number
PTP 700 Connectorized ODU (Global), White, 4400-5875 MHz	Full	C045070B003B
PTP 700 Connectorized ODU (Global), Green, 4400-5875 MHz	Full	C045070B034A
PTP 700 Connectorized ODU (Global), Desert Tan, 4400-5875 MHz	Full	C045070B039A

PTP 700 Lite

The Lite capacity ODU ([Table 9](#)) is no longer available from Cambium Networks. Existing Lite capacity ODUs are supported in the PTP 700 firmware and can be upgraded to the Full capacity license (see [ODU capability upgrades](#) on page 2-12).

Table 9 PTP 45700 Lite Connectorized individual ODU part numbers

Cambium description	Capacity variant	Cambium part number
PTP 700 Lite Connectorized ODU (Global), White, 4400-5875 MHz	Lite	C045070B009B

ODU kit part numbers

Order PTP 45700 Connectorized ODU kits from Cambium Networks ([Table 10](#)).

The part listed in [Table 10](#) includes the following items:

- One Connectorized ODU (Global).
- Upgrade to apply CE marking to the ODU.

Table 10 PTP 45700 ODU kit part numbers for Connectorized ODUs

Cambium description	Capacity variant	Cambium part number
PTP 700 Connectorized ODU with CE mark, White, 4400-5875 MHz	Full	C045070H031A
PTP 700 Connectorized ODU with CE mark, Green, 4400-5875 MHz	Full	C045070H033A
PTP 700 Connectorized ODU with CE mark, Desert Tan, 4400-5875 MHz	Full	C045070H035A

PTP 45700 Beam Steering ODU

The PTP 45700 Beam Steering ODU ([Figure 15](#)) provides an integrated, electronically steerable 21 dBi antenna, supporting automatic alignment. The Beam Steering ODU eliminates the need for manual alignment, leading to reduced effort for installers in tactical deployments, and minimizing exposure for installers in hazardous environments.

Figure 15 PTP 45700 Beam Steering ODU - White (front and rear views)

Capability licensing

PTP 45700 Beam Steering ODUs support the following capability upgrades (see [ODU capability upgrades](#) on page 2-12):

- SFP port operation
- AES encryption
- Synchronous Ethernet and 1588 Transparent Clock
- High-Capacity Multipoint (HCMP)
- Over-the air rekeying

Individual ODU part numbers

Order PTP 45700 Beam Steering ODUs from Cambium Networks ([Table 11](#)).

Table 11 PTP 45700 Beam Steering ODU individual part numbers

Cambium description	Cambium part number
PTP 700 Beam Steering ODU (Global), White, 4400-5875 MHz	C045070B041A
PTP 700 Beam Steering ODU (Global), Green, 4400-5875 MHz	C045070B042A
PTP 700 Beam Steering ODU (Global), Desert Tan, 4400-5875 MHz	C045070B043A

PTP 78700 Integrated ODU

The PTP 78700 Integrated ODU incorporates a 26 dBi integrated antenna ([Figure 16](#)). The integrated antenna offers a convenient and easily deployed solution where the additional gain of external antennas is not needed.

Figure 16 PTP 78700 Integrated ODU - White (front and rear views)

Capability licensing

PTP 78700 ODUs support the following capability upgrades (see [ODU capability upgrades](#) on page 2-12):

- SFP port operation
- AES encryption
- Synchronous Ethernet and 1588 Transparent Clock
- High-Capacity Multipoint (HCMP)
- Over-the air rekeying

Individual ODU part numbers

Order PTP 78700 Integrated ODUs from Cambium Networks ([Table 12](#)). ODUs are supplied without mounting brackets.

Table 12 PTP 78700 Integrated ODU part numbers

Cambium description	Capacity variant	Cambium part number
PTP 700 Integrated ODU (Global), White, 7125-8500 MHz	Full	C070070B002A
PTP 700 Integrated ODU (Global), Green, 7125-8500 MHz	Full	C070070B004A
PTP 700 Integrated ODU (Global), Desert Tan, 7125-8500 MHz	Full	C070070B006A

PTP 78700 Connectorized ODU

The PTP 78700 Connectorized ODU is intended to work with separately mounted external antennas ([Figure 17](#) and [Figure 18](#)). External antennas generally have higher gains than the integrated antennas, allowing the PTP 700 to cope with more difficult radio conditions.

Figure 17 PTP 78700 Connectorized ODU - Green (front and rear views)**Figure 18** PTP 78700 Connectorized ODU - Desert Tan (front and rear views)

Note To determine when to install external antennas and to calculate their impact on link performance and regulatory limits, see [Planning for connectorized units](#) on page 3-30.

To select antennas, RF cables and connectors for connectorized units, see [Antennas and antenna cabling](#) on page 2-24.

Capability licensing

PTP 78700 ODUs support the following capability upgrades (see [ODU capability upgrades](#) on page 2-12):

- SFP port operation
- AES encryption
- Synchronous Ethernet and 1588 Transparent Clock
- High-Capacity Multipoint (HCMP)
- Over-the air rekeying

Individual ODU part numbers

Order PTP 78700 Connectorized ODUs from Cambium Networks ([Table 13](#)). ODUs are supplied without mounting brackets.

Table 13 PTP 78700 Connectorized ODU part numbers

Cambium description	Capacity variant	Cambium part number
PTP 700 Connectorized ODU (Global), White, 7125-8500 MHz	Full	C070070B001A
PTP 700 Connectorized ODU (Global), Green, 7125-8500 MHz	Full	C070070B003A
PTP 700 Connectorized ODU (Global), Desert Tan, 7125-8500 MHz	Full	C070070B005A

ODU capability upgrades

To upgrade a PTP 700 ODU to one or more new capabilities, order the necessary upgrades from Cambium Networks ([Table 14](#)). For details of how to install the capability upgrades, refer to [Generating license keys](#) on page 6-2 and [Software License Key page](#) on page 6-16.

Table 14 Capacity and capability upgrades available for PTP 700 Series ODUs

Cambium description	Part number
PTP 700 128-bit AES Encryption - per END (*1)	C000070K001A
PTP 700 256-bit AES Encryption - per END (*1)	C000070K002A
PTP 700 Precise Network Timing Software License - per END	C000070K003A
PTP 700 FIPS 140 Upgrade including 128-bit AES - per END	C000070K005A
PTP 700 FIPS 140 Upgrade including 256-bit AES - per END	C000070K006A
PTP 700 Lite to Full Upgrade - per END (*2)	C000070K008A
PTP 700 High Capacity Multipoint Upgrade - per END (*3)	C000070K009A
PTP 700 Over-the-Air Rekey License (*4)	C000070K013A
Global to CE Conversion Kit (*5)	C045070K001A

(*1) Cambium Networks will supply AES upgrades only if there is official permission to export AES encryption to the country of operation.

(*2) The Lite to Full upgrade can be applied to PTP 45700 Lite ODUs.

(*3) Order one upgrade for every ODU that will be used as a TDD Master or TDD Slave in an HCMP sector. The HCMP upgrade can only be applied to ODUs that already have the Full capacity license.

(*4) Order one upgrade for every ODU that will be used as a TDD Master in an HCMP sector or PTP link.

(*5) The upgrade to apply CE marking is applied in the Distribution Centre when the ODU is ordered as part of an ODU Kit (C045070H031A, C045070H032A, C045070H033A, C045070H034A, C045070H035A, C045070H036A). The conversion kit (C045070K001A) cannot be ordered separately.

ODU accessories

ODU accessories available from Cambium Networks are listed in [Table 15](#).

Table 15 ODU accessory part numbers

Cambium description	Cambium part number
Blanking Plug Pack (Qty 10)	N000065L036A

ODU cables

Use the following cables to connect the PTP 78700 ODU to the top LPU:

Table 16 ODU cables for PTP 78700 ODUs

Cambium description	Cambium part number
PTP 700 Drop Cable 38999 to 1 x RJ45 male extension Cable 2'	N000070L018A
PTP 700 Drop Cable 38999 to 2 x RJ45 male extension Cable 2'	N000070L019A

ODU mounting brackets

The Tilt Bracket Assembly ([Figure 19](#)) and Heavy Duty Mounting Bracket (Integrated) bracket ([Figure 20](#)) are used to mount a PTP 700 ODU on a pole with diameter in the range 40 mm to 80 mm (1.6 inches to 3.1 inches). The Tilt Bracket Assembly may be used with third-party band clamps to mount an ODU on pole with diameter in the range 90 mm to 230 mm (3.6 inches to 9.0 inches).

The Smart Antenna Clamp Set ([Figure 21](#)) is used to mount a PTP 45700 Beam Steering ODU on a pole with diameter in the range 40 mm to 100 mm (1.6 inches to 3.9 inches)

Order ODU mounting brackets from Cambium Networks ([Table 17](#)).

Figure 19 ODU Tilt Bracket Assembly

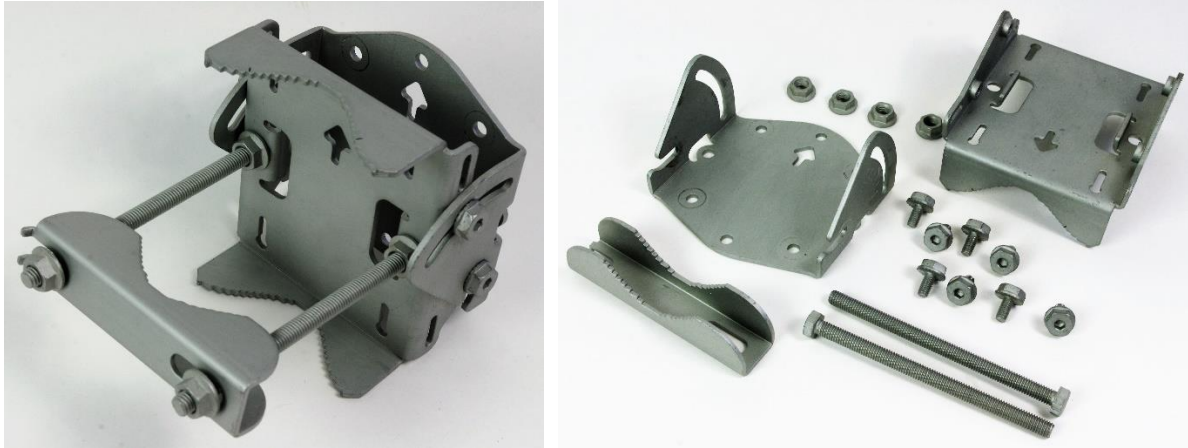


Figure 20 ODU Heavy Duty Mounting Bracket (Integrated)

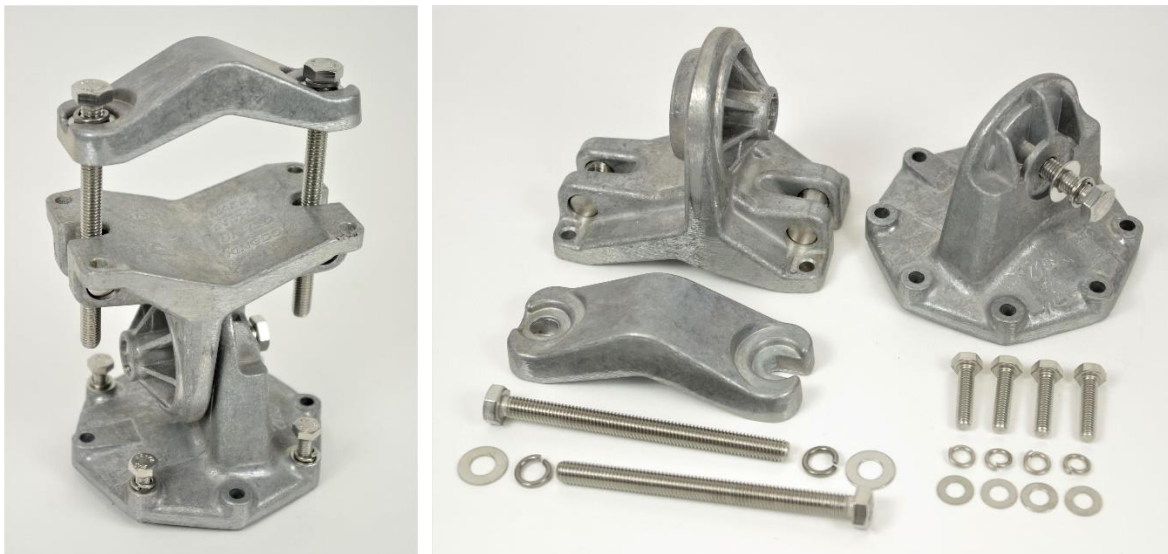


Figure 21 Smart Antenna Clamp Set

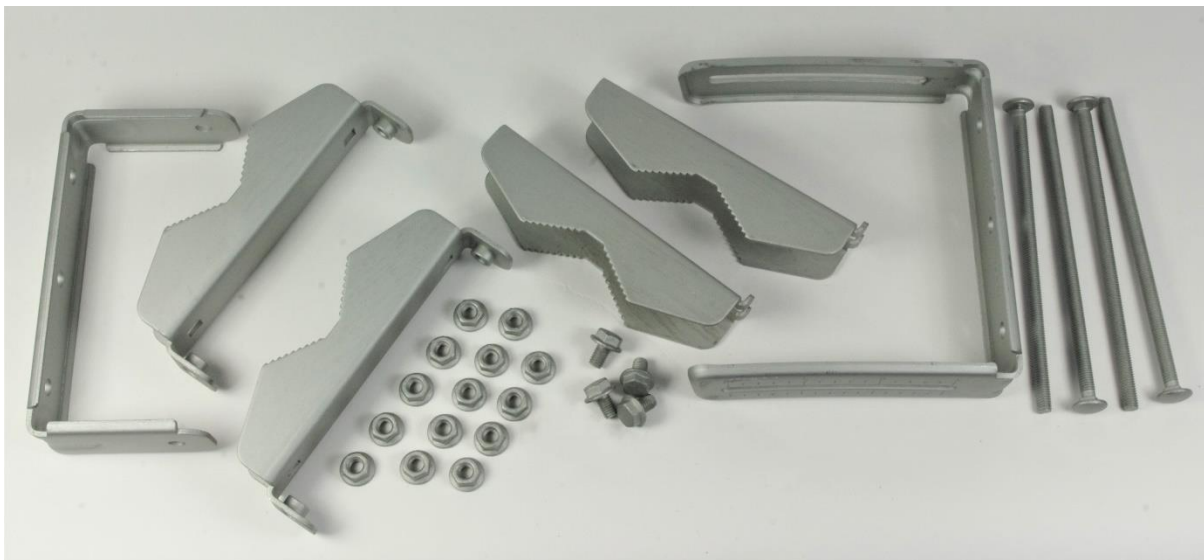


Table 17 ODU mounting bracket part numbers

Bracket	ODU variants	Bracket part number
Tilt Bracket Assembly	PTP 700 Integrated PTP 700 Connectorized+Integrated PTP 700 Connectorized	N000045L002A
Heavy Mounting Bracket (Integrated)	PTP 700 Integrated PTP 700 Connectorized+Integrated	N000070L021A
Beam Steering ODU Pole Mounting Bracket	PTP 700 Beam Steering	N000070L022A

ODU interfaces

Ethernet and power ports

The Main PSU, AUX and SFP ports are on the rear of the ODUs ([Figure 22](#) and [Figure 23](#)). These interfaces are described in [Table 18](#) and [Table 19](#).

Each of the PSU, AUX and SFP ports can be configured to disable Ethernet traffic, connected in a local loop-back between any two ports, or selected to the following services:

- Data Service
- Management Service
- Local Management Service
- Protection Service

Figure 22 Ethernet and power interfaces for PTP 45700 ODU

Figure 23 Ethernet and power interfaces for PTP 78700 ODU**Table 18** Ethernet interfaces PTP 45700 ODU

Port name	Connector	Interface	Description
Main PSU	RJ45	POE input	Proprietary power over Ethernet (POE).
		100/1000BASE-T Ethernet	Management and/or data.
AUX	RJ45	100/1000BASE-T Ethernet with 802.3at compliant POE out capability	Auxiliary Ethernet port which can be used, for example, to connect and power a video camera or wireless access point. Data and Management Services.
SFP	SFP	Optical or Copper Gigabit Ethernet	Data and Management Services. Plug-in SFP module must be purchased separately.

Table 19 Ethernet interfaces PTP 78700 ODU

Port name	Connector	Interface	Description
Main PSU	38999 (J1)	POE input	Proprietary power over Ethernet (POE).
		100/1000BASE-T Ethernet	Management and/or data.
AUX	38999 (J1)	100/1000BASE-T Ethernet with 802.3at compliant POE out capability	Auxiliary Ethernet port which can be used, for example, to connect and power a video camera or wireless access point. Data and Management Services.

Port name	Connector	Interface	Description
SFP	SFP (J2)	Optical or Copper Gigabit Ethernet	Data and Management Services. Plug-in SFP module must be purchased separately.

The front of the Connectorized or Connectorized+Integrated ODU (Figure 24, Figure 25 and Figure 26) provides N type female connectors for RF cable interfaces to antennas with horizontal (H) and vertical (V) polarization.

Figure 24 PTP 45700 Connectorized ODU antenna interfaces

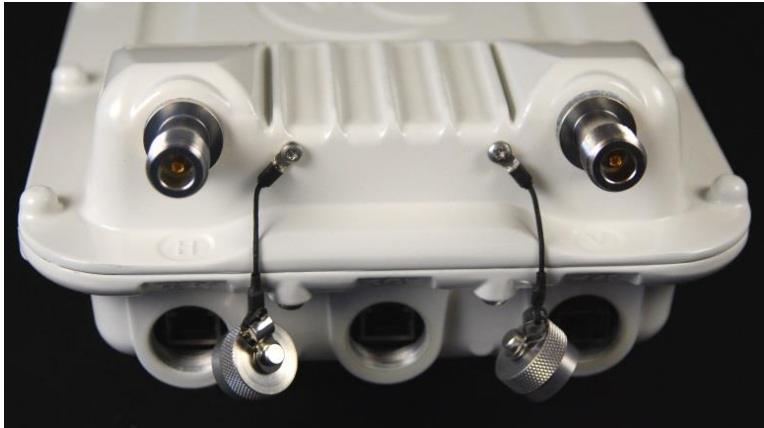


Figure 25 PTP 45700 Connectorized+Integrated ODU antenna interfaces



Figure 26 PTP 78700 Connectorized ODU antenna interfaces

ODU mechanical specifications

The PTP 700 ODU conforms to the specifications listed in [Table 20](#).

Table 20 ODU specifications

Category	Specification	
Dimensions	PTP 45700 Connectorized+Integrated	371 mm (14.6 in) x 430 mm (16.9 in) x 98 mm (3.9 in)
	PTP 45700 Connectorized	204 mm (8.0 in) x 318 mm (12.5 in) x 98 mm (3.9 in)
	PTP 45700 Beam Steering	581 mm (22.9 in) x 595 mm (23.4 in) x 84 mm (3.3 in)
	PTP 78700 Integrated	401 mm (15.7 in) x 459 mm (18.1 in) x 146 mm (5.7 in)
	PTP 78700 Connectorized	234 mm (9.2 in) x 348 mm (13.7 in) x 140 mm (5.5 in)
Weight	PTP 45700 Connectorized+Integrated	4.1 kg (9.0 lbs) excluding bracket
	PTP 45700 Connectorized	3.1 kg (6.8 lbs) including bracket
	PTP 45700 Beam Steering	9.1 kg (20.1 lbs) including bracket
	PTP 78700 Integrated	9.3 kg (20.4 lbs) including bracket
	PTP 78700 Connectorized	7.1 kg (15.8 lbs) including bracket
Temperature	-40°C (-40°F) to +60°C (140°F)	
Wind loading	PTP 45700 Connectorized+Integrated	200 mph (323 kph) maximum.

Category	Specification
	PTP 45700 Connectorized
	PTP 45700 Beam Steering
	PTP 78700 Integrated
	PTP 78700 Connectorized
	PTP 45700 Beam Steering 160 mph (257 kph) maximum.
	See ODU wind loading on page 3-13.
Humidity	100% condensing
Liquid and particle ingress	IP66, IP67
UV exposure	10 year operational life (UL746C test evidence)
Static discharge	See Electromagnetic compatibility (EMC) compliance on page 4-2

Power supply units (PSU)


AC+DC Enhanced Power Injector 56V

PSU description

The AC+DC Enhanced Power Injector 56V PSU (Figure 27) is an indoor unit that is connected to the ODU and network terminating equipment using Cat5e cable with RJ45 connectors. It supplies a single ODU, accepts both AC and DC input, and allows the ODU to support a device on the Aux port, such as a video camera or wireless access point. It also allows the ODU to provide DC power output.

The AC+DC Power Injector 56V is approved for use with the PTP 45700 and PTP 78700 frequency variants of the ODU.

Figure 27 AC+DC Enhanced Power Injector 56V

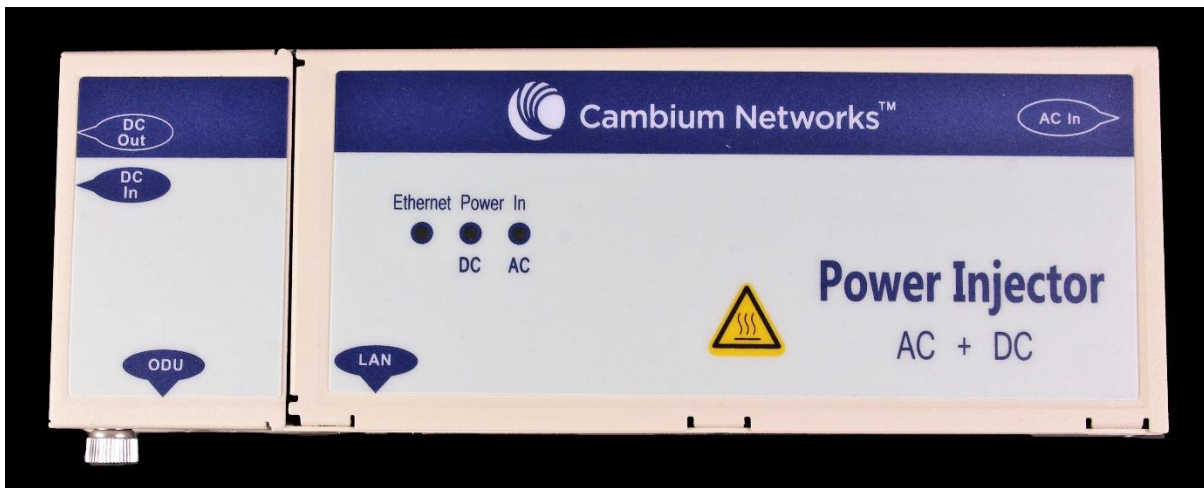

Warning Always use an appropriately rated and approved AC supply cord-set in accordance with the regulations of the country of use.



Attention The PSU ODU ports are designed to connect only to PTP 700 ODUs, PTP-SYNC units, or LPUs. Do not connect any other equipment, as damage may occur. Do not connect the PIDU Plus PTP 300/500/600 Series to the PTP 700 ODU or LPU.



Note Each of the ODU kits listed in Table 7 includes one PSU and one US or EU line cord as stated in the Cambium description.

PSU part numbers

Order PSUs and (for AC power) line cords from Cambium Networks (Table 21).

Table 21 Power supply component part numbers

Cambium description	Cambium part number
AC+DC Enhanced Power Injector 56V	C000065L002C, C000065L002D
US Line Cord Fig 8	N000065L003A
UK Line Cord Fig 8	N000065L004A
EU Line Cord Fig 8	N000065L005A
Australia Line Cord Fig 8	N000065L006A

AC+DC Enhanced Power Injector 56V interfaces

The AC+DC Enhanced Power Injector 56V interfaces are shown in [Figure 28](#) and described in [Table 22](#).

Figure 28 AC+DC Enhanced Power Injector 56V interfaces

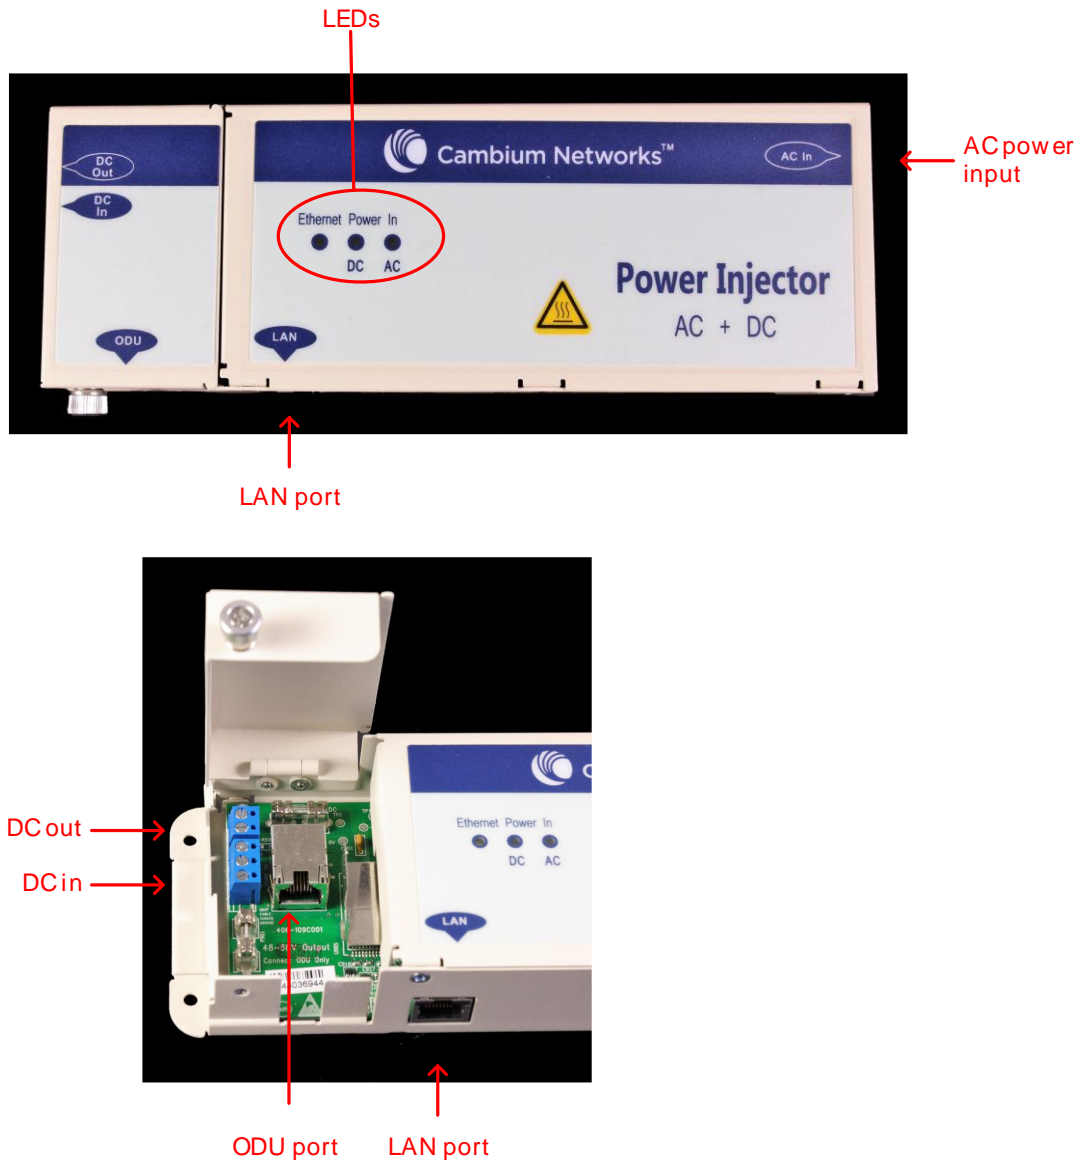


Table 22 AC+DC Enhanced Power Injector 56V interface functions

Interface	Function
AC power input	Main AC supply. 100-240V 47-63Hz 1.5A
DC In	Alternative DC power supply input.
DC Out	DC power output to a second PSU (for power supply redundancy).
ODU port	RJ45 socket for connecting Cat5e cable to ODU.
LAN port	RJ45 socket for connecting Cat5e cable to network.
DC Power In (green) LED	DC Power supply detection
AC Power In (green) LED	AC Power supply detection

Interface	Function
Ethernet (yellow) LED	Ethernet traffic detection

PSU specifications

The AC+DC Enhanced Power Injector 56V conforms to the specifications listed in [Table 23](#).

Table 23 AC+DC Enhanced Power Injector 56V specifications

Category	Specification
Dimensions	250 mm (9.75 in) x 40 mm (1.5 in) x 80 mm (3 in)
Weight	0.864 Kg (1.9 lbs)
Temperature	-40°C (-40°F) to +60°C (140°F)
Humidity	0 to 90% non-condensing
Waterproofing	Not waterproof
AC Input	90-264 V AC, 47-60 Hz
Alternative DC Input	37-60 V DC
DC Output Voltage	For mains input: 58 V, +2V, -0V For DC input: Output voltage at maximum rated output current, not more than 1.5 V below the DC input voltage. Maximum length of DC output cable: 3 meters.
AC Input connector	IEC-320-C8
DC Output current	1.7A
Efficiency	Better than 84%
Over Current Protection	Hiccup current limiting, trip point set between 120% to 150% of full load current
Hold up time	At least 20 milliseconds
Power factor	Better than 0.9

Further reading

For information about...	Refer to...
General description of TDD Synchronization	TDD synchronization on page 1-21

Antennas and antenna cabling

Antenna requirements

Each connectorized ODU requires one external antenna (normally dual-polarized), or if spatial diversity is required, each ODU requires two antennas.



Note To determine when to install connectorized units and to calculate their impact on link performance and regulatory limits, see [Planning for connectorized units](#) on page 3-30.

RF cable and connectors

RF cable of generic type LMR-400 is required for connecting the ODU to the antenna. N type male connectors are required for connecting the RF cables to the connectorized ODU. Two connectors are required per ODU. Use weatherproof connectors, preferably ones that are supplied with adhesive lined heat shrink sleeves that are fitted over the interface between the cable and connector. Order CNT-400 RF cable and N type male connectors from Cambium Networks ([Table 24](#)).

Table 24 RF cable and connector part numbers

Cambium description	Cambium part number
50 Ohm Braided Coaxial Cable - 75 meter	30010194001
50 Ohm Braided Coaxial Cable - 500 meter	30010195001
RF Connector, N, Male, Straight for CNT-400 Cable	09010091001



Note To select the correct connectors for the antenna end of the RF cable, refer to the antenna manufacturer's instructions.

Antenna accessories

Connectorized ODUs require the following additional components:

- Cable grounding kits: Order one cable grounding kit for each grounding point on the antenna cables. Refer to [Lightning protection unit \(LPU\) and grounding kit](#) on page 2-30 for specifications and part numbers.
- Self-amalgamating and PVC tape: Order these items to weatherproof the RF connectors.

- **Lightning arrestors:** When the connectorized ODU is mounted indoors, lightning arrestors (not PTP 700 LPU) are required for protecting the antenna RF cables at building entry. One arrestor is required per antenna cable. One example of a compatible lightning arrestor is the Polyphaser LSXL-ME or LSXL (not supplied by Cambium Networks).

RF Combiner Kit

The RF Combiner Kit includes two RF Combiners together with mounting brackets for a standard pole or tower standoff. Use one RF Combiner Kit for each end of a Hot Standby (1+1) or 2+0 link where two PTP 78700 Connectorized ODUs are connected to a shared dual-polarized antenna.


The RF Combiner is shown in [Figure 29](#).

Figure 29 **RF Combiner**



The assembly of two RF Combiners on the supplied brackets is shown in [Figure 30](#).

Figure 30 RF Combiner Kit assembled

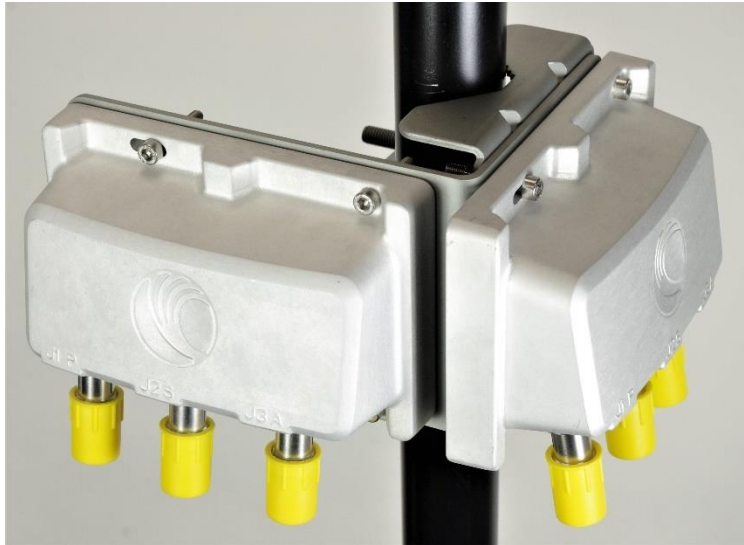

Order one kit for each end of the link.

Table 25 RF Combiner part numbers

Cambium description	Cambium part number
PTP 700 2-way RF Combiner Kit	N000070L123A

RF Combiner specifications

The table below shows the specification for a single RF Combiner.

Table 26 RF Combiner specifications

Category	Specification
Dimensions	150 mm (5.9 in) × 100 mm (3.9 in) × 55 mm (2.2 in)
Weight	0.75 kg (1.7 lbs)
Temperature	-40°C (-40°F) to 60°C (140°F)
Humidity	0 to 100%, condensing
Liquid and particle ingress	IP66, IP67
RF connector	N-type
Frequency range	4.4 GHz to 8.5 GHz
Typical insertion loss, 4.4 GHz to 6.8 GHz	J1P to J3A: 4.4 dB, J2S to J3A: 4.4 dB
Typical insertion loss, 6.8 GHz to 8.5 GHz	J1P to J3A: 4.7 dB, J2S to J3A: 4.7 dB
Minimum isolation	J1P to J2S: 24 dB

Ethernet cabling

Ethernet standards and cable lengths

All configurations require a copper Ethernet connection from the ODU (PSU port) to the PSU. Advanced configurations may also require one or both of the following:

- A copper Ethernet connection from the ODU (Aux port) to an auxiliary device.
- An optical or copper Ethernet connection from the ODU (SFP port) to network terminating equipment or a linked ODU.

[Table 27](#) and [Table 28](#) specify, for each type of PSU and power supply, the maximum permitted PSU drop cable length.

[Table 29](#) specifies, for Aux and copper SFP interfaces, the Ethernet standards supported and the maximum permitted drop cable lengths.



Note For optical SFP interfaces, refer to [SFP module kits](#) on page 2-33 for details of the Ethernet standards supported and maximum permitted cable lengths.

Table 27 PSU drop cable length restrictions for PTP 45700 ODU

Type of PSU installed	Power supply to PSU	Ethernet supported	Power output to auxiliary device	Maximum cable length (*1)
AC+DC Enhanced Power Injector 56V	AC mains	No (*2)	No	250 m (820 ft)
	56 V dc	No (*2)	No	250 m (820 ft)
	AC mains	100BASE-TX 1000BASE-T	Yes	100 m (330 ft)
	56 V dc	100BASE-TX 1000BASE-T	Yes	100 m (330 ft)

(*1) Maximum length of Cat 5E Ethernet cable from ODU to network terminating equipment via PSU.

(*2) Ethernet is provided via optical SFP interface.

Table 28 PSU drop cable length restrictions for PTP 78700 ODU

Type of PSU installed	Power supply to PSU	Ethernet supported	Power output to auxiliary device	Maximum cable length (*1)
AC+DC Enhanced Power Injector 56V	AC mains	No (*2)	No	150 m (490 ft)
	56 V dc	No (*2)	No	150 m (490 ft)
	AC mains	100BASE-TX 1000BASE-T	Yes	100 m (330 ft)
	56 V dc	100BASE-TX 1000BASE-T	Yes	100 m (330 ft)

(*1) Maximum length of Cat 5E Ethernet cable from ODU to network terminating equipment via PSU.

(*2) Ethernet is provided via optical SFP interface.

Table 29 Aux and copper SFP Ethernet standards and cable length restrictions

ODU drop cable	Power over Ethernet	Ethernet supported	Maximum cable length (*1)
Aux - auxiliary device	POE to auxiliary device	100BASE-TX 1000BASE-T	100 m (330 ft)
	None	100BASE-TX	100 m (330 ft)
SFP (copper) - linked device	None	100BASE-TX	100 m (330 ft)

(*1) Maximum length of Ethernet cable from the ODU to the linked device.

Outdoor copper Cat5e Ethernet cable

For copper Cat5e Ethernet connections from the ODU to the PSU, LPUs and other devices, use Cat5e cable that is gel-filled and shielded with copper-plated steel, for example Superior Essex EnduraGain OSP Armored Cat 5e. This is known as “drop cable” (Figure 31).



Attention Always use Cat5e cable that is gel-filled and shielded with copper-plated steel. Alternative types of drop cable are not supported by Cambium Networks for the PTP 700.

Order Superior Essex EnduraGain OSP Armored Cat 5e cable from Cambium Networks (Table 30). Other lengths of this cable are available from Superior Essex.

Figure 31 Outdoor drop cable

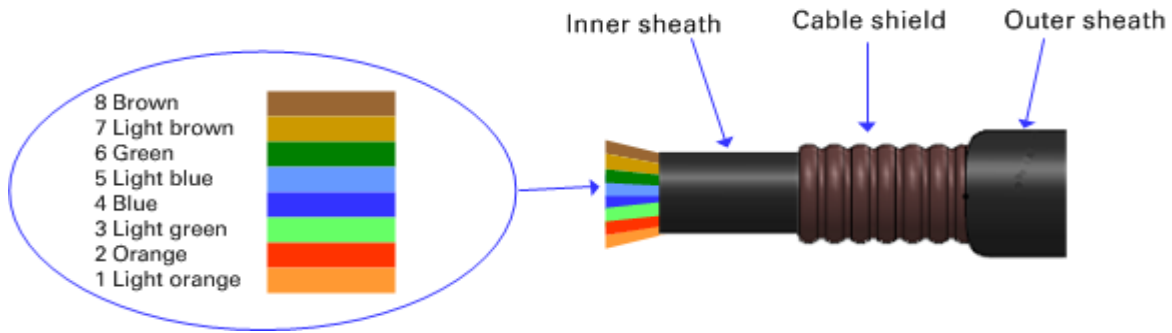


Table 30 Drop cable part numbers

Cambium description	Cambium part number
1000 ft Reel Outdoor Copper Clad CAT5e	WB3175
328 ft (100 m) Reel Outdoor Copper Clad CAT5e	WB3176

Cable grounding kit

Copper drop cable shields must be bonded to the grounding system in order to prevent lightning creating a potential difference between the structure and cable, which could cause arcing, resulting in fire risk and damage to equipment. Optical cables do not require grounding.

One grounding kit (Figure 32) is required for each grounding point on the PSU, Aux and copper SFP drop cables. Order cable grounding kits from Cambium Networks (Table 31).



Attention To provide adequate protection, all grounding cables must be a minimum size of 10 mm² csa (8AWG), preferably 16 mm² csa (6AWG), or 25 mm² csa (4AWG).

Figure 32 Cable grounding kit



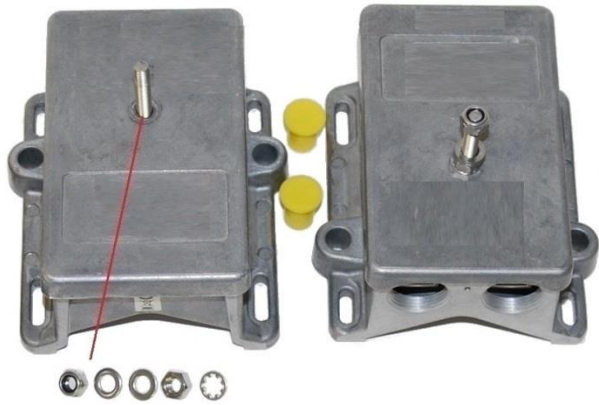



Table 31 Cable grounding kit part numbers


Cambium description	Cambium part number
Cable Grounding Kits For 1/4" And 3/8" Cable	01010419001

Lightning protection unit (LPU) and grounding kit

PTP 700 LPUs provide transient voltage surge suppression for PTP 700 installations. Each PSU or Aux drop cable requires two LPUs, one near the ODU and the other near the linked device, usually at the building entry point (Table 32).

Table 32 LPU and grounding kit contents

<p>Lightning protection units (LPUs) LPU grounding point nuts and washers</p> 	<p>ODU to top LPU drop cable (600 mm) EMC strain relief cable glands</p> 
<p>U-bolts, nuts and washers for mounting LPUs</p> 	<p>ODU to top LPU ground cable (M6-M6)</p> 

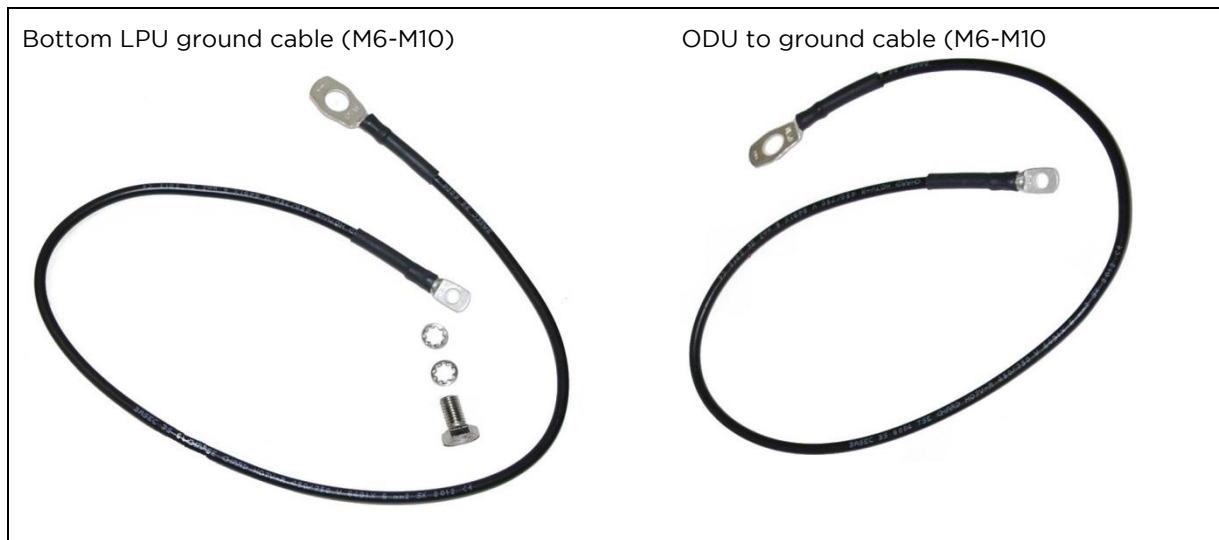

One LPU and grounding kit (Table 32) is required for the PSU drop cable connection to the ODU. If the ODU is to be connected to an auxiliary device, one additional LPU and grounding kit is required for the Aux drop cable. Order the kits from Cambium Networks (Table 33).

Table 33 LPU and grounding kit part number

Cambium description	Cambium part number
LPU and Grounding Kit (One Kit Per End)	C000065L007




Note PTP 700 LPUs are not suitable for installation on SFP copper Cat5e Ethernet interfaces. For SFP drop cables, obtain suitable surge protectors from a specialist supplier.

SFP optical Ethernet interfaces do not require surge protectors.

LPU for GPS drop cables

When a GPS receiver is the timing reference source for PTP-SYNC (optional), an LPU must be installed near the point at which the GPS drop cable enters the building. A single LPU from the LPU and Grounding Kit (C000065L007) (Table 32) is suitable. Alternatively, the single LPU kit for PTP 250/300/500 (Figure 33) could be used.

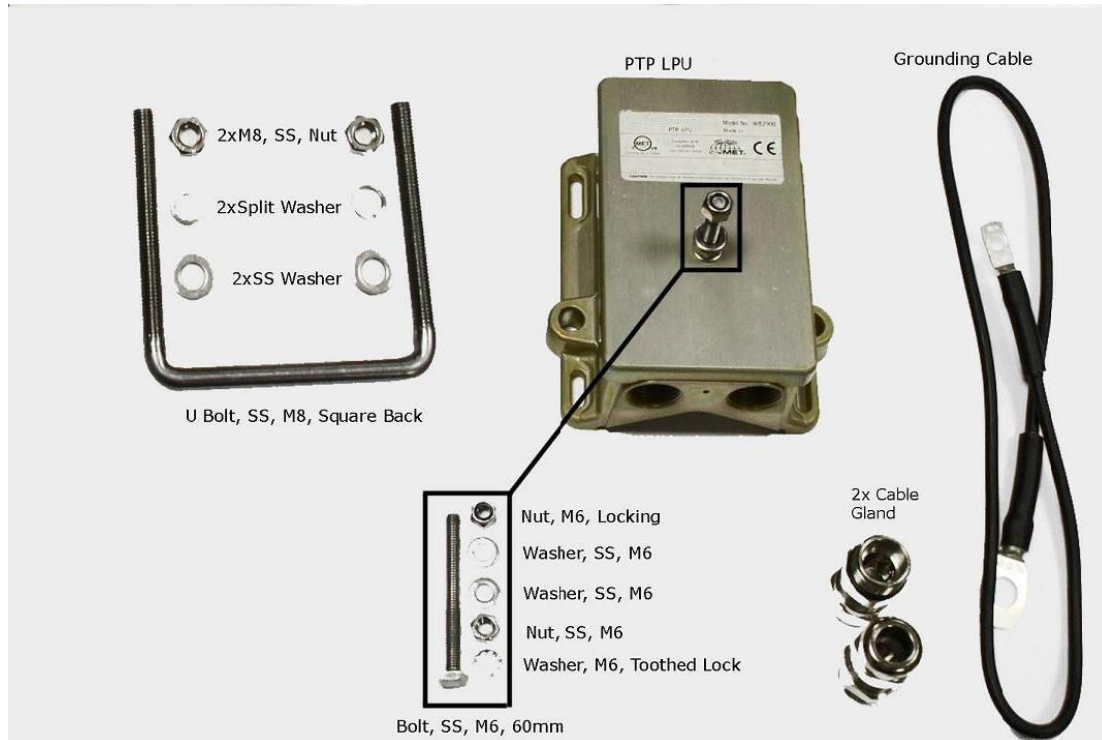Figure 33 LPU kit used for GPS receiver drop cables**Table 34** LPU and grounding kit part number – Use with GPS receiver drop cable only

Cambium description	Cambium part number
LPU End Kit PTP 250/300/500	WB2978

RJ45 connectors and spare glands

RJ45 connectors are required for plugging Cat5e cables into ODUs, LPUs, PSUs and other devices. Order RJ45 connectors and crimp tool from Cambium Networks ([Table 35](#)).



Note The RJ45 connectors and crimp tool listed in [Table 35](#) work with Superior Essex EnduraGain OSP Armored Cat 5e cable (as supplied by Cambium Networks). They may not work with other types of cable.

The ODU is supplied with one environmental sealing gland for the drop cable. However, this is not suitable when surge protection is required: EMC glands must be used instead. EMC strain relief cable glands (quantity 5) are included in the LPU and grounding kit ([Figure 34](#)). These are identified with a black sealing nut. If extra glands are required, order them from Cambium Networks (in packs of 10) ([Table 35](#)).

One long EMC strain relief gland ([Figure 37](#)) is included in each SFP module kit. This is longer than the standard cable gland as it must house an SFP module plugged into the ODU.

Figure 34 Cable gland**Table 35** RJ45 connector and spare gland part numbers

Cambium description	Cambium part number
Tyco/AMP, Mod Plug RJ45 Unscreened, 100 pack	WB3177
Tyco/AMP Crimp Tool	WB3211
RJ-45 Spare Grounding Gland - PG16 size (Qty. 10)	N000065L033

Cable hoisting grip

One or more grips are required for hoisting the drop cable up to the ODU without damaging the gland or RJ45 plug (Figure 35). They are not supplied by Cambium Networks.

Figure 35 Cable hoisting grip

Indoor Cat5e cable

To connect the PSU to network terminating equipment, use indoor Cat5e cable. The ODU network connection implements automatic MDI/MDI-X sensing and pair swapping, allowing connection to networking equipment that requires cross-over cables (MDI-X networks) or straight-through cables (MDI Networks).

SFP module kits

SFP module kits allow connection of a PTP 700 Series ODU to a network over a Gigabit Ethernet interface in one of the following full-duplex modes:

- Optical Gigabit Ethernet: 1000BASE-LX or 1000BASE-SX

- Copper Gigabit Ethernet: 100BASE-TX or 1000BASE-T
- Order SFP module kits from Cambium Networks ([Table 36](#)).

Table 36 SFP module kit part numbers

Cambium description	Cambium part number
Single Mode Optical SFP Interface per ODU	C000065L008A
Multi-mode Optical SFP Interface per ODU	C000065L009A
Gig-Ethernet SFP Interface per ODU	C000065L010A

To compare the capabilities of the two optical SFP modules, refer to [Table 37](#) and [Table 38](#).

Table 37 Single Mode Optical SFP Interface (part number C000065L008A)

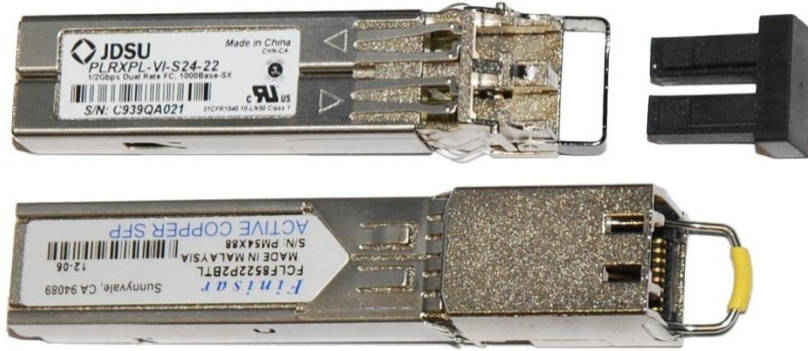
Core/ cladding (microns)	Mode	Bandwidth at 1310 nm (MHz/km)	Maximum length of optical interface	Insertion loss (dB)
62.5/125	Multi	500	550 m (1800 ft)	2.35
50/125	Multi	400	550 m (1800 ft)	2.35
50/125	Multi	500	550 m (1800 ft)	2.35
10/125	Single	N/A	5000 m (16400 ft)	4.57

Table 38 Multi-mode Optical SFP Interface (part number C000065L009A)

Core/ cladding (microns)	Mode	Bandwidth at 850 nm (MHz/km)	Maximum length of optical interface	Insertion loss (dB)
62.5/125	Multi	160	220 m (720 ft)	2.38
62.5/125	Multi	200	275 m (900 ft)	2.6
50/125	Multi	400	500 m (1640 ft)	3.37
50/125	Multi	500	550 m (1800 ft)	3.56

The upgrade kits contain the following components:

- Optical or copper SFP transceiver module ([Figure 36](#))
- Long EMC strain relief cable gland ([Figure 37](#))
- The *Ethernet SFP Module Installation Guide*
- License key instructions and unique Access Key


Figure 36 Optical or copper SFP transceiver module**Figure 37** Long cable gland

Note PTP 700 does not support the Synchronous Ethernet or 1588 Transparent Clock features using copper SFP transceivers.

Optical cable and connectors

Order an optical cable with LC connectors from a specialist fabricator, quoting the specification shown in [Figure 38](#). It must be the correct length to connect the ODU to the other device. LC connectors should be supplied with dust caps to prevent dust build up.

Figure 38 Optical optic cable and connector specification

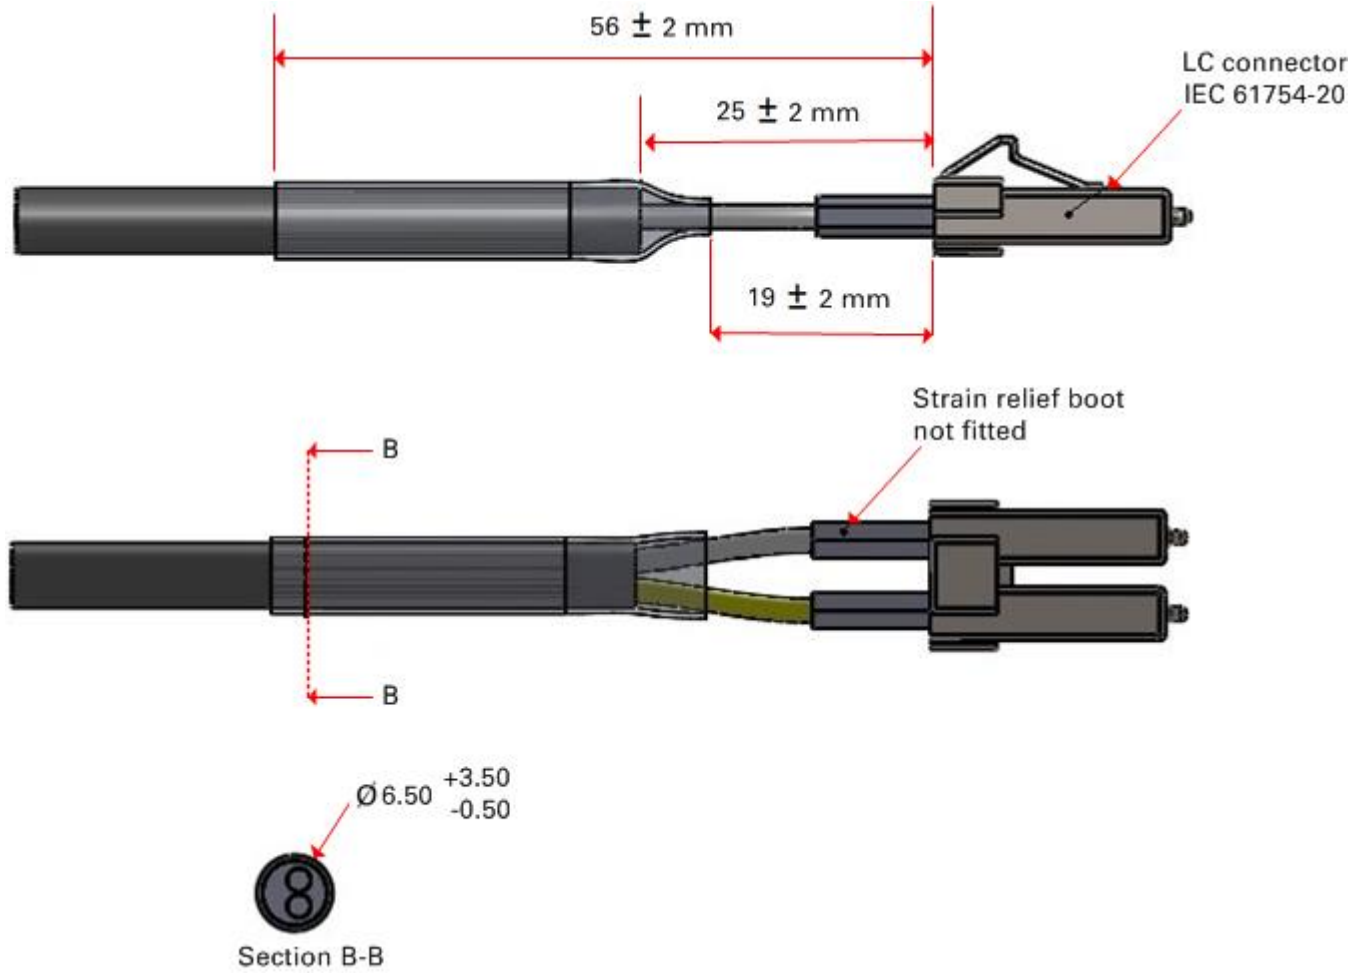

PTP-SYNC unit



Note The PTP-SYNC unit is not supported for TDD synchronization with PTP 78700 (7125-8500 MHz) ODUs. For these ODUs, use an alternative synchronization source.

PTP-SYNC unit description

The PTP-SYNC unit is an optional component, used to synchronize the ODU TDD frame with a network-wide reference. It measures the difference between the TDD frame timing and a 1 Hz timing reference, and signals this time difference to the ODU. For more information on this feature, refer to [TDD synchronization](#) on page 1-21.

The PTP-SYNC unit is a compact indoor unit mounted on a wall, shelf or (using an optional rack mounting adaptor) in a standard 19 inch rack ([Figure 40](#)).

The PTP-SYNC unit is connected in line in the drop cable between the AC+DC Power Injector 56V and the ODU, and is collocated with the AC+DC Power Injector 56V. The PTP-SYNC draws power from the drop cable, and does not require a separate power supply.



Attention The PTP-SYNC is compatible only with the AC+DC Power Injector 56V. PTP-SYNC is not compatible with standards-based power-over-Ethernet (PoE).

Figure 39 PTP-SYNC kit



Figure 40 PTP-SYNC rack mounting adapter

PTP-SYNC part numbers

Order PTP-SYNC kits and associated components from Cambium Networks ([Table 39](#)).

Table 39 PTP-SYNC component part numbers

Cambium description	Cambium part number
PTP-SYNC kit	WB3665
CMU/PTP-SYNC/NIDU 19inch Rack Mount Installation Kit	WB3486

The PTP-SYNC kit contains:

- 1 x PTP-SYNC unit
- 1 x M4 pan screw
- 2 x M4 washers
- 2 x M3 (6mm) torx drive screws
- 1 x lug for unit ground (cable not supplied)
- 1 x Cat5e cable (length 1 meter)
- Installation guide

If the 1 meter Cat5e cable supplied with the PTP-SYNC kit is not long enough, order a longer length of Cat5e cable, up to 2 meters long.

The PTP-SYNC rack mount kit contains:

- 1 x rack bracket
- 8 x M3 washers
- 8 x M3 screws
- 1 x rack mount blank plate
- 8 x M5 nuts
- 8 x M5 washers
- 2 x rack handles

PTP-SYNC unit interfaces

The PTP-SYNC front panel is illustrated in [Figure 41](#). The annotated interfaces are described in [Table 40](#) and [Table 41](#).

Figure 41 PTP-SYNC front panel

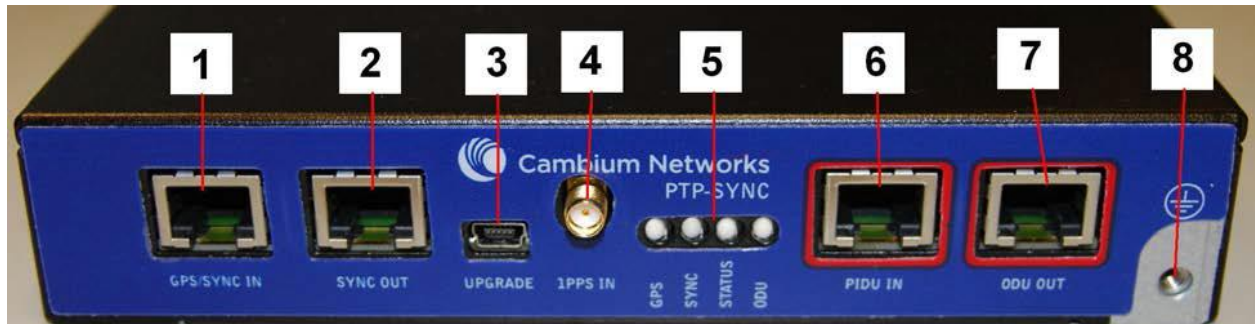


Table 40 PTP-SYNC interface functions

#	Description	Function
1	GPS/SYNC IN	Input from GPS receiver or from the daisy-chained SYNC OUT signal of another PTP-SYNC.
2	SYNC OUT	Output to daisy-chained PTP-SYNC units.
3	USB	Input for firmware upgrades. Contact Cambium for instructions.
4	1PPS IN	Coaxial alternative to GPS/SYNC IN. Peak input voltage must not exceed 5 V.
5	LED bank	LEDs and their functions are described in Table 41 .
6	PIDU IN	Input from PSU.
7	ODU OUT	Output to ODU.
8	Ground stud	For connecting to a ground point.

Table 41 PTP-SYNC LED functions

LED	Function
GPS	GPS satellite data detection.
SYNC	SYNC OUT port data detection.
STATUS	Power and satellite lock detection.
ODU	ODU signal detection.

For a full list of LED states and fault-finding actions, refer to [Testing PTP-SYNC](#) on page 8-15.

PTP-SYNC specifications

The PTP-SYNC unit conforms to the specifications listed in [Table 42](#), [Table 43](#) and [Table 44](#).

Table 42 PTP-SYNC unit physical specifications

Category	Specification
Dimensions	Width excluding ears 174 mm (6.69 in)
	Width including ears 196 mm (7.54 in)
	Height 31.5 mm (1.21 in)
	Depth 79 mm (3.04 in)
Weight	0.485 Kg (1.1 lbs)

Table 43 PTP-SYNC unit environmental specifications

Category	Specification
Temperature	-40°C (-40°F) to +60°C (140°F) Suitable for use indoors, or outdoors within a weatherproofed cabinet.
Humidity	0 to 95% non-condensing
Waterproofing	Not waterproof

Table 44 PTP-SYNC unit electrical specifications

Category	Specification
Power supply	Integrated with PSU
Power consumption	1.5 W max (extra power is required to supply a GPS receiver)

There are two timing inputs to the PTP-SYNC unit: GPS/SYNC IN (RJ-45) (Table 45) and 1PPS IN (SMA) (Table 46).

Table 45 PTP-SYNC unit timing specifications - GPS/SYNC IN (RJ-45)

Category	Specification
Signal type	Differential 1 Hz signal
Common mode range	-7 V to +7 V, relative to GPS/SYNC IN pin 2 (ground)
Maximum differential voltage	35 V
Threshold	30.4 V
Impedance	90 ohms to 110 ohms
Pulse width	1 μ s to 500 ms
Polarity	Reference edge is when pin 3 (PPSA) is positive with respect to pin 6 (PPSB)

Table 46 PTP-SYNC unit timing specifications - 1PPS IN (SMA)

Category	Specification
Signal type	1 Hz signal
Pulse	Positive pulse, reference edge is rising edge
Maximum voltage	5 V
Threshold	0.4 V to 0.6 V
Input impedance	45 ohms to 55 ohms
Pulse width	1 μ s to 500ms

The pinouts of the PTP-SYNC unit GPS/SYNC IN port are specified in [Table 47](#).

Table 47 GPS/SYNC IN port pinouts

Pin no.	Connector pinout signal name	Signal description
Pin 1	12VGPS	12 V output to GPS receiver module, 250 mA max
Pin 2	GND	Ground
Pin 3	GPS_1PPSA	1 Hz pulse input
Pin 4	GPS_RXDA	GPS receive data
Pin 5	GPS_RXDB	GPS receive data
Pin 6	GPS_1PPSB	1 Hz pulse input
Pin 7	GPS_TXDA	GPS transmit data
Pin 8	GPS_TXDB	GPS transmit data



Note The GPS_1PPS, GPS_RXD and GPS_TXD signals conform to International Telecommunication Union (ITU) recommendation V.11 (RS422)

Signal polarities

A 1 PPS timing datum is detected when GPS_1PPSA goes positive relative to GPS_1PPSB. A serial data start bit is detected when GPS_RXDA (or GPS_TXDA) goes positive relative to GPS_RXDB (or GPS_TXDB).

GPS receivers

Trimble Acutime™ GG GPS receiver for PTP-SYNC



Note The PTP-SYNC unit is not supported for TDD synchronization with PTP 78700 (7125-8500 MHz) ODUs. For these ODUs, use an alternative synchronization source.


The GPS receiver ([Figure 42](#)) is an optional timing reference source for PTP-SYNC. It provides a 1 Hz signal, accurately synchronized in frequency and phase across the network.

Figure 42 GPS receiver



The GPS receiver is supplied with a GPS adapter cable kit ([Figure 43](#)). This avoids the need to fit a 12 way circular connector to the GPS drop cable. The kit contains one adapter cable (GPS receiver circular connector to RJ45 socket) and one RJ45 plug housing.

Figure 43 GPS adapter cable kit

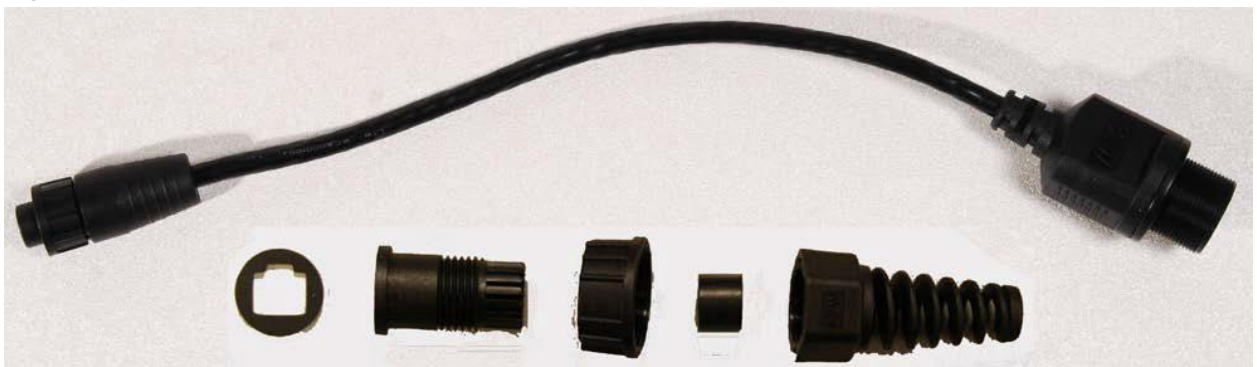

GPS receiver part numbers

Order GPS receivers and associated components from Cambium Networks ([Table 48](#)).

Table 48 GPS receiver component part numbers

Cambium description	Cambium part number
Trimble Acutime™GG GPS receiver	WB4141
PTP-SYNC <-> Trimble Adapter Cable (*1)	WB3961
1000 ft Reel Outdoor Copper Clad CAT5E (*2)	WB3175
328 ft (100 m) Reel Outdoor Copper Clad CAT5E (*2)	WB3176
Tyco/AMP, Mod Plug RJ45 Unscreened, 100 pack (*3)	WB3177
Tyco/AMP Crimp Tool (*3)	WB3211
Cable Grounding Kits For 1/4" And 3/8" Cable (*4)	01010419001
LPU End Kit PTP 250/300/500 (*5)	WB2978D

(*1) This adapter cable is included with the GPS receiver (part number WB4141).

(*2) Other lengths of this EnduraGain OSP Armored Cat 5e drop cable are available from Superior Essex.

(*3) The RJ45 connectors and crimp tool only work with Superior Essex EnduraGain OSP Armored Cat 5e cable.

(*4) One grounding kit is required per drop cable grounding point.

(*5) One LPU kit is required per GPS receiver.

Twelve way circular connector

As an alternative to the GPS adapter cable, the drop cable can be connected directly to the GPS unit via a 12 way circular connector, using the components and tools listed in [Table 49](#).

Table 49 Recommended outdoor connectors for Trimble GPS receiver

Item	Manufacturer	Part number
12 way circular connector	Deutsch	IMC26-2212X
Size 22 crimp socket	Deutsch	6862-201-22278
Crimp tool	Daniels Manufacturing Corp	MH860
Positioner	Daniels Manufacturing Corp	86-5
Insertion / extraction tool	Deutsch	6757-201-2201
Adaptor	Deutsch	IMC2AD
Self amalgamating tape		

Chapter 3: System planning

This chapter provides information to help the user to plan a PTP 700 link.

The following topics are described in this chapter:

- [Typical deployment](#) on page 3-2 contains diagrams illustrating typical PTP 700 site deployments.
- [Site planning](#) on page 3-10 describes factors to be considered when planning the proposed link end sites, including grounding, lightning protection and equipment location.
- [Radio spectrum planning](#) on page 3-20 describes how to plan PTP 700 links to conform to the regulatory restrictions that apply in the country of operation.
- [Link planning](#) on page 3-24 describes factors to be taken into account when planning links, such as range, path loss and throughput.
- [Planning for connectorized units](#) on page 3-30 describes factors to be taken into account when planning to use connectorized ODUs with external antennas in PTP 700 links.
- [Configuration options for TDD synchronization](#) on page 3-36 describes the different configuration options that may be used for implementing TDD synchronization in the PTP 700 Series.
- [Data network planning](#) on page 3-47 describes factors to be considered when planning PTP 700 data networks. This section describes various services provided for Ethernet traffic; these are: Data Service, Management Service, Local Management Service, Protection Service, TD-90 Service.
- [Network management planning](#) on page 3-57 describes how to plan for PTP 700 links to be managed remotely using SNMP.
- [Security planning](#) on page 3-68 describes how to plan for PTP 700 links to operate in secure mode.
- [System threshold, output power and link loss](#) on page 3-82 contains tables that specify the system threshold (dBm), output power (dBm) and maximum link loss (dB) per channel bandwidth and modulation mode.
- [Data throughput capacity tables](#) on page 3-112 contains tables and graphs to support calculation of the data rate capacity that can be provided by PTP 700 configurations.

Typical deployment

This section contains diagrams illustrating typical PTP 700 site deployments.

ODU with POE interface to PSU

In the basic configuration, there is only one Ethernet interface, a copper Cat5e power over Ethernet (POE) from the PSU to the ODU (PSU port), as shown in the following diagrams: mast or tower installation (Figure 44), wall installation (Figure 45) and roof installation (Figure 46).

Figure 44 Mast or tower installation

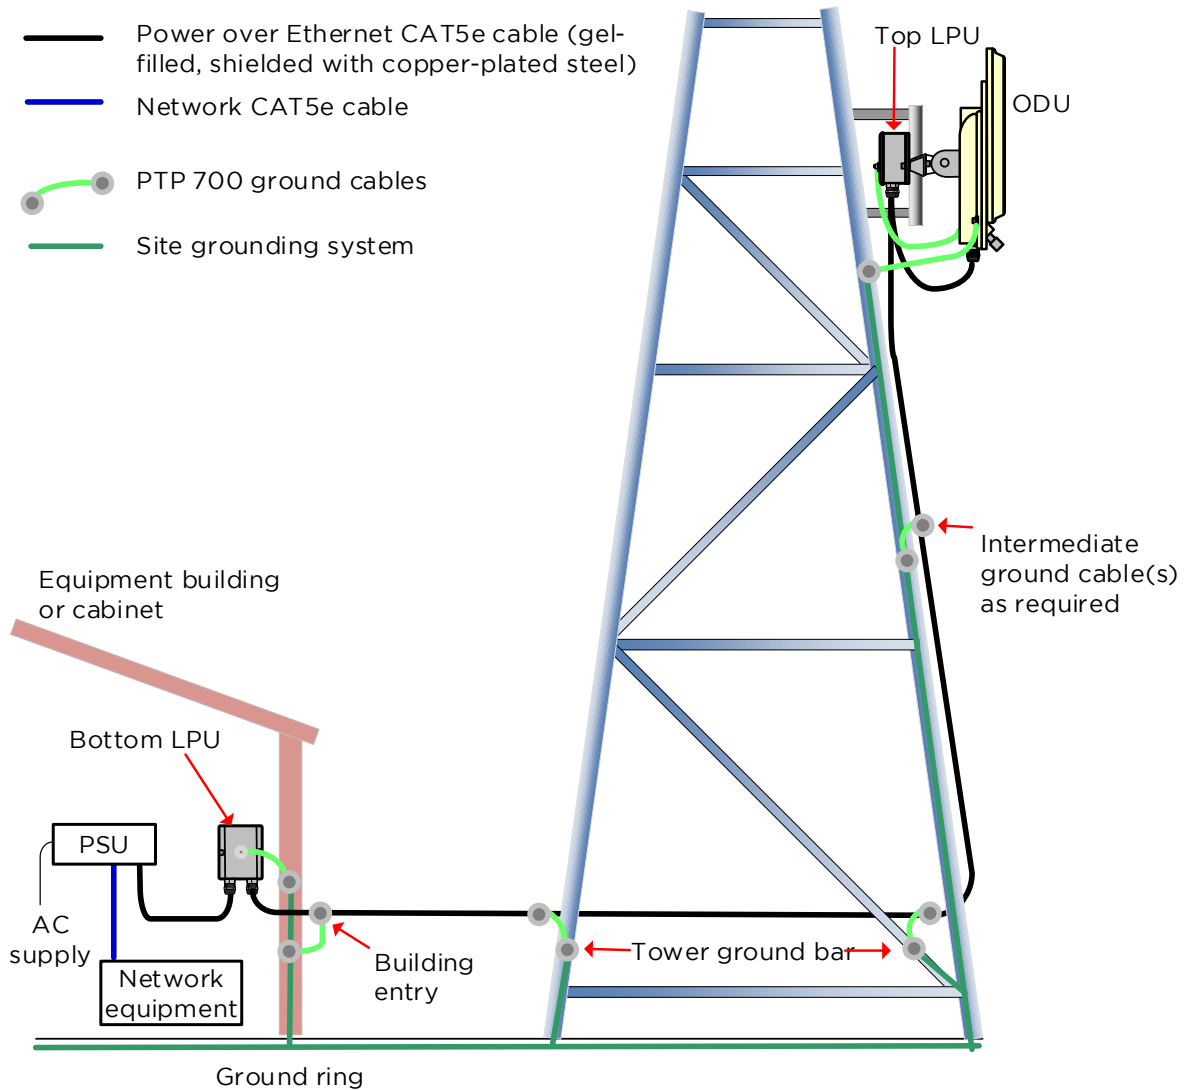


Figure 45 Wall installation


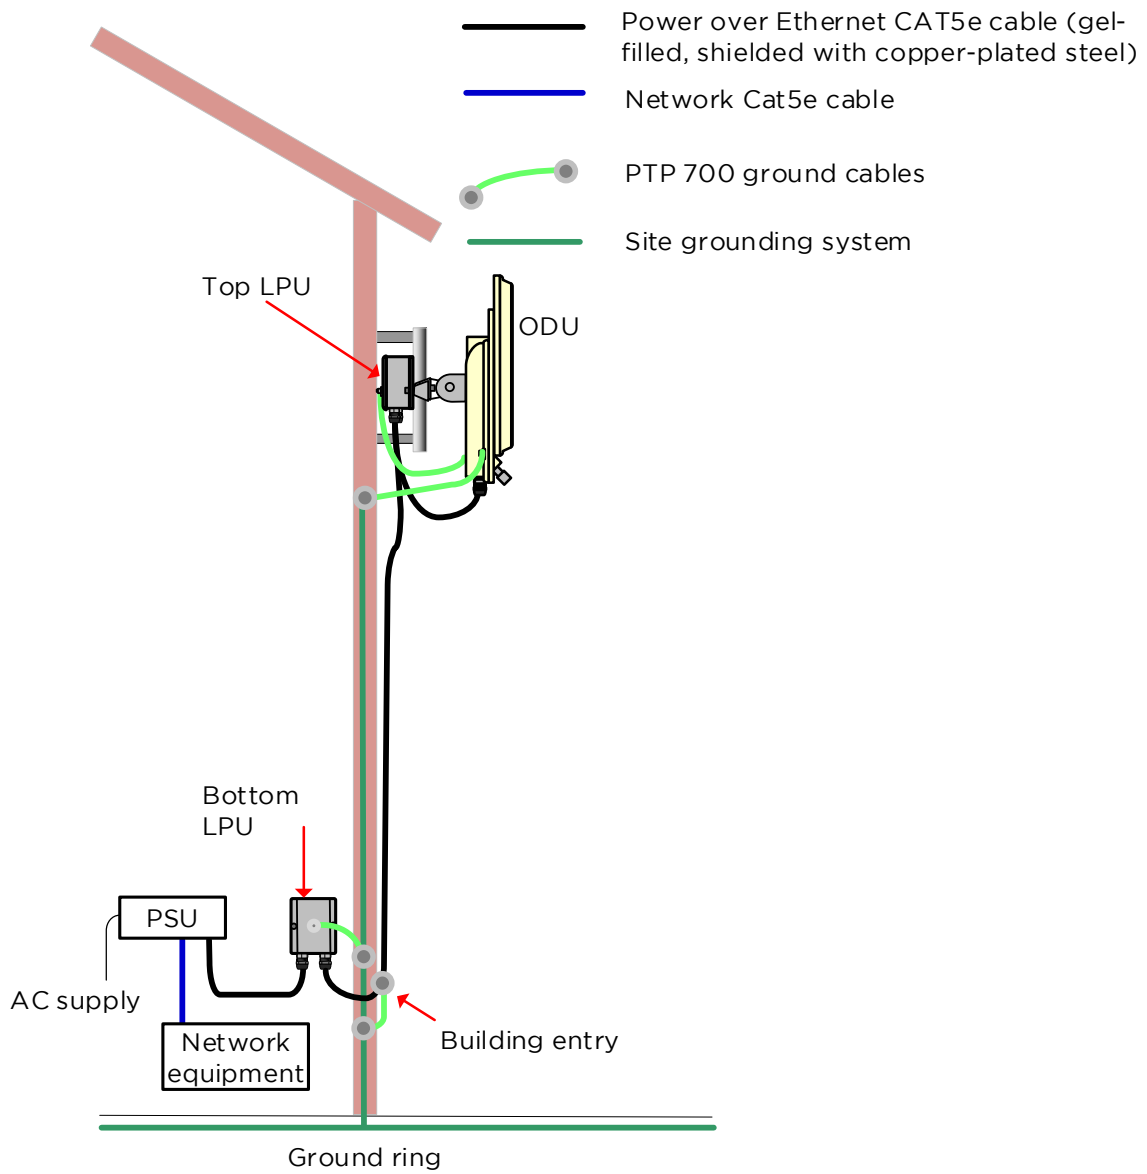


Figure 46 Roof installation

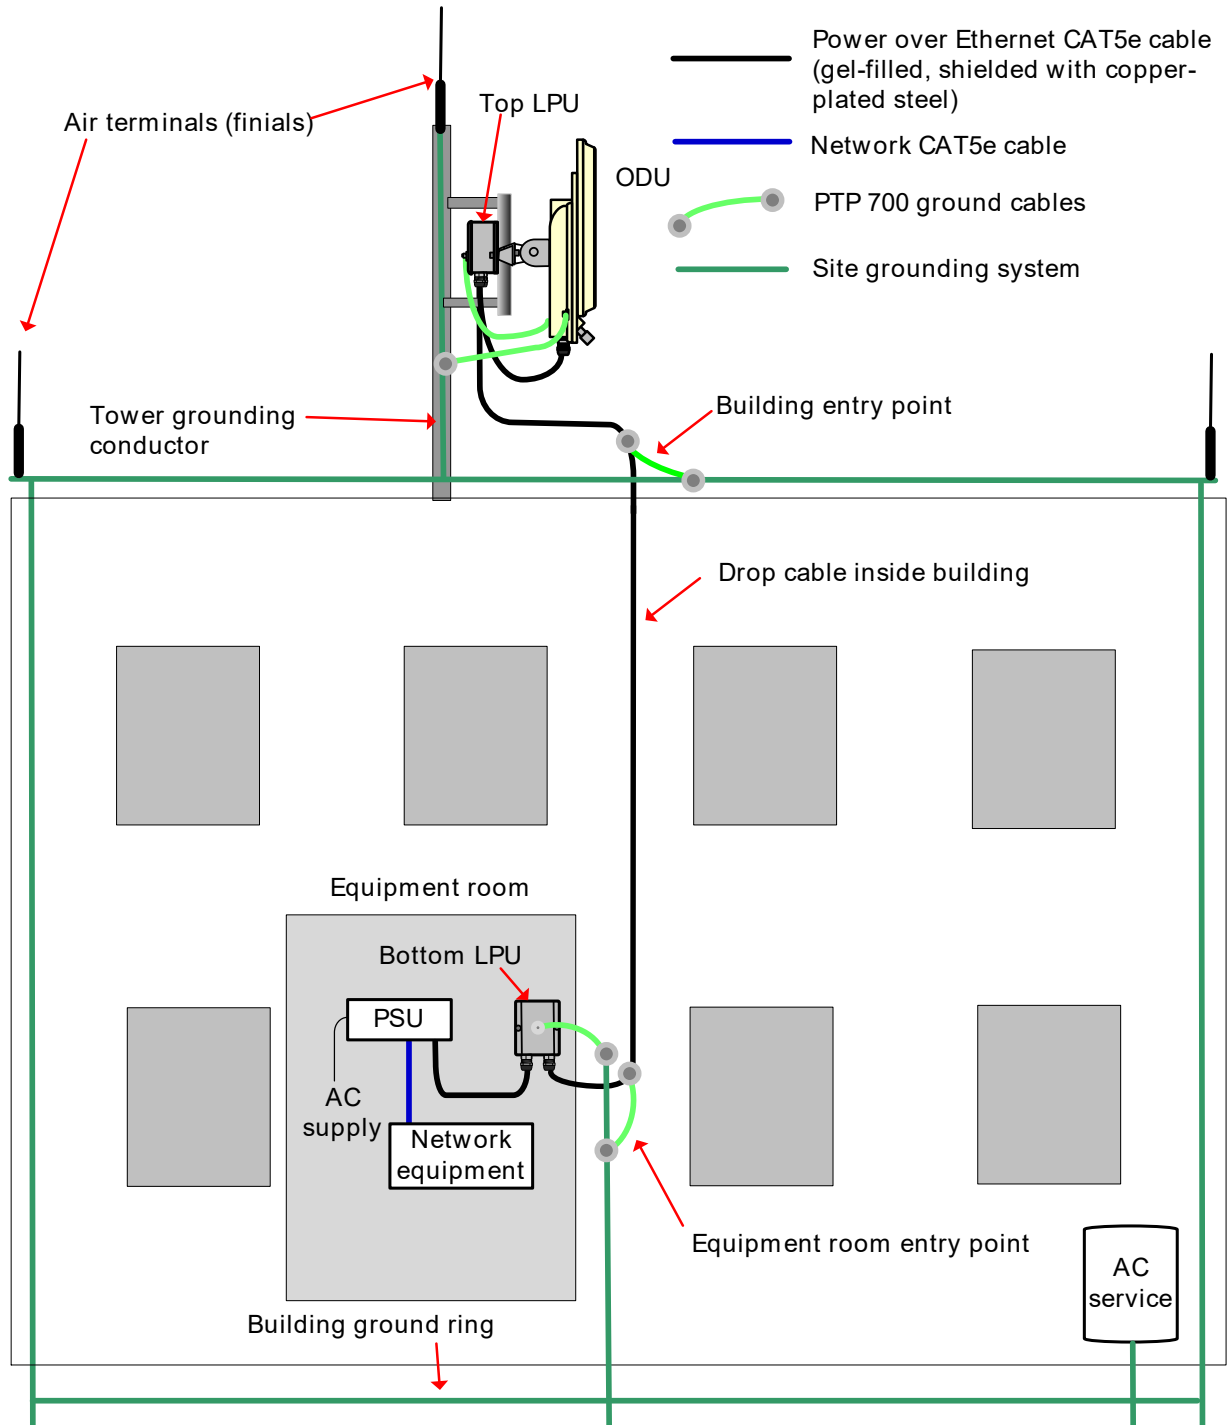

SFP and Aux Ethernet interfaces

There may be one or two additional Ethernet interfaces connected to the ODU: one to the SFP port (copper or optical) and one to the Aux port, as shown in the following diagrams:

- ODU with copper SFP and PSU interfaces - [Figure 47](#)
- ODU with optical SFP and PSU interfaces - [Figure 48](#)
- ODU with Aux and PSU interfaces - [Figure 49](#)

Figure 47 ODU with copper SFP and PSU interfaces

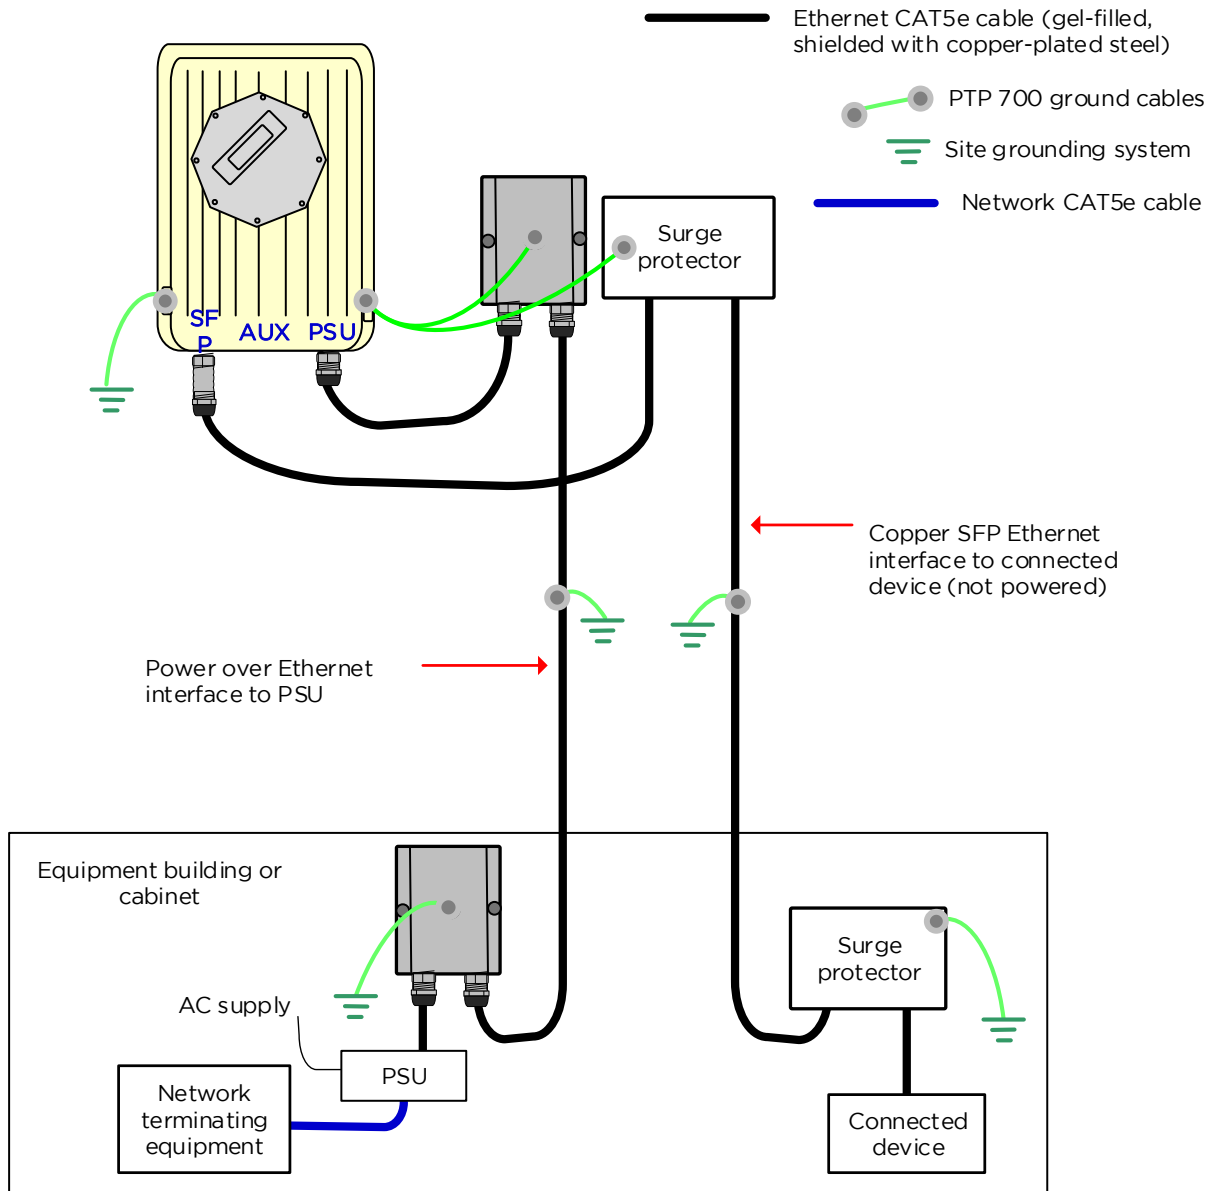


Figure 48 ODU with optical SFP and PSU interfaces


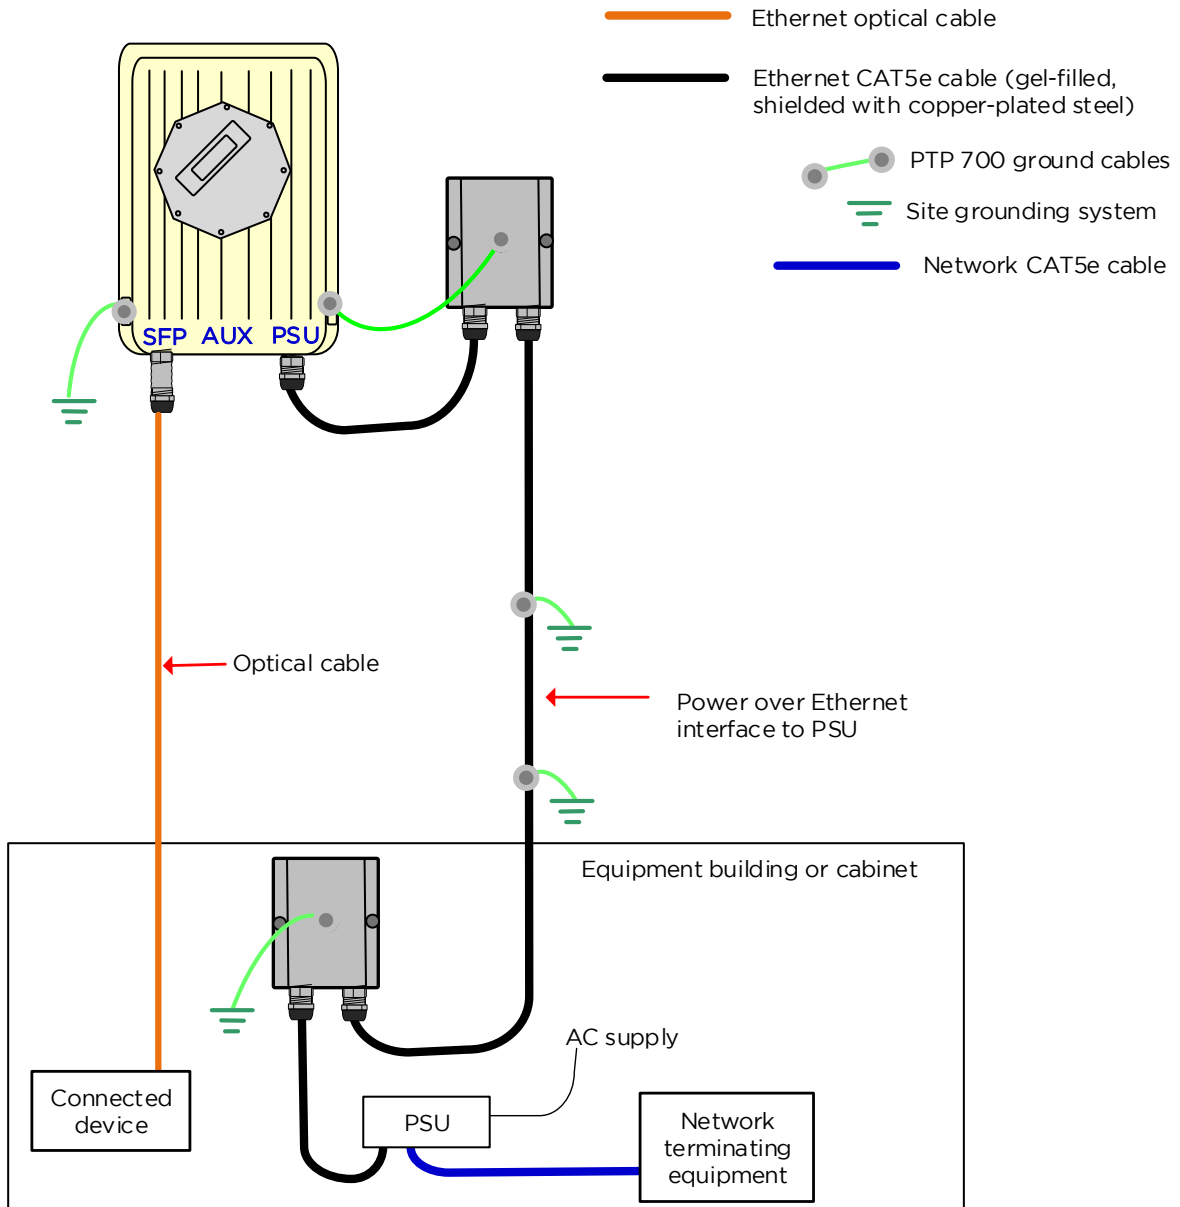


Figure 49 ODU with Aux and PSU interfaces

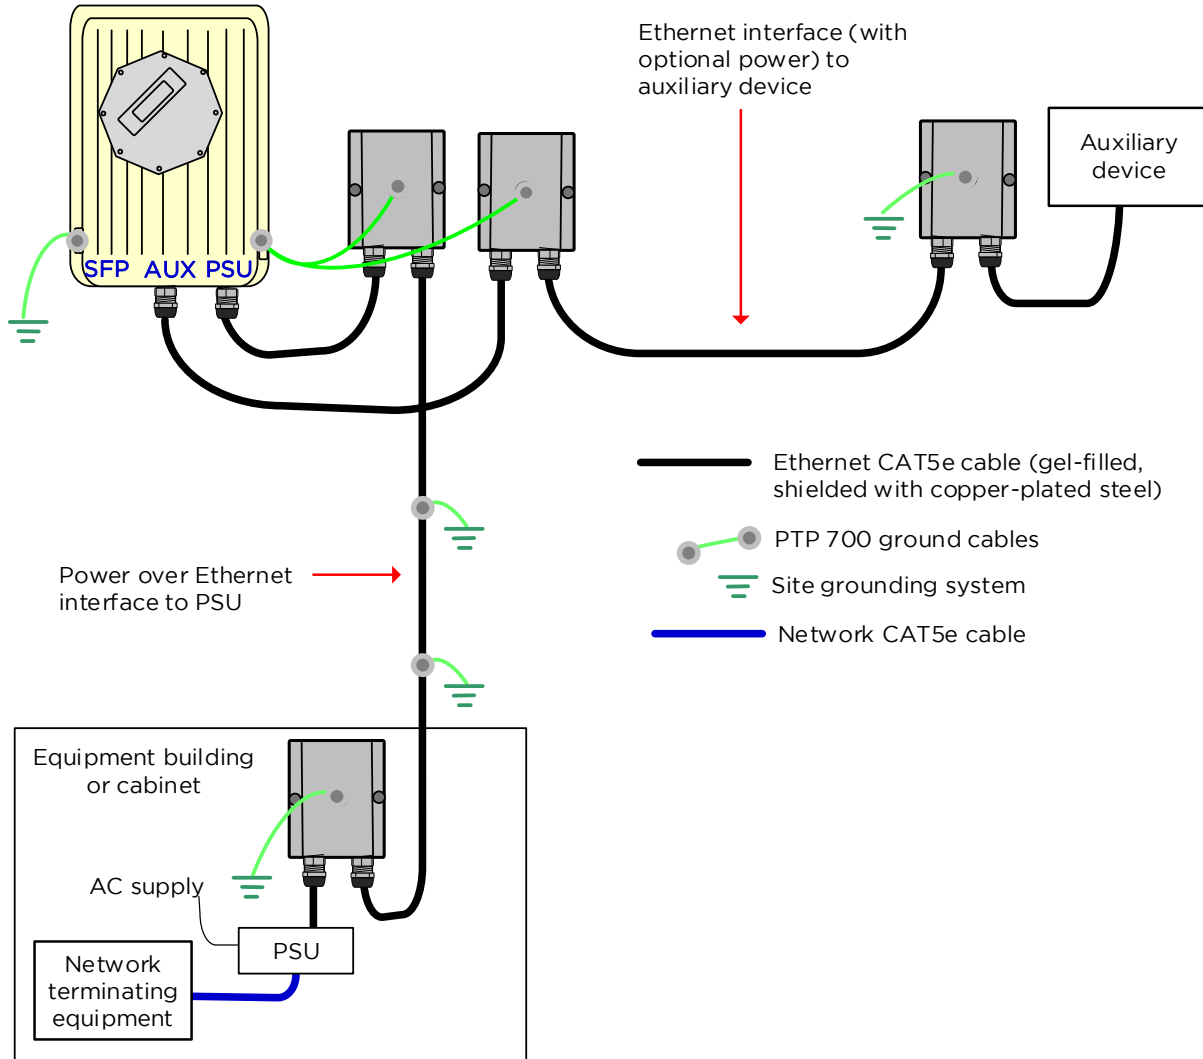

GPS receiver interfaces

If a GPS receiver is deployed for PTP-SYNC, it may be mounted on the wall of the equipment building (Figure 50) (preferred option), or on a metal tower or mast (Figure 51).

Figure 50 GPS receiver wall installation


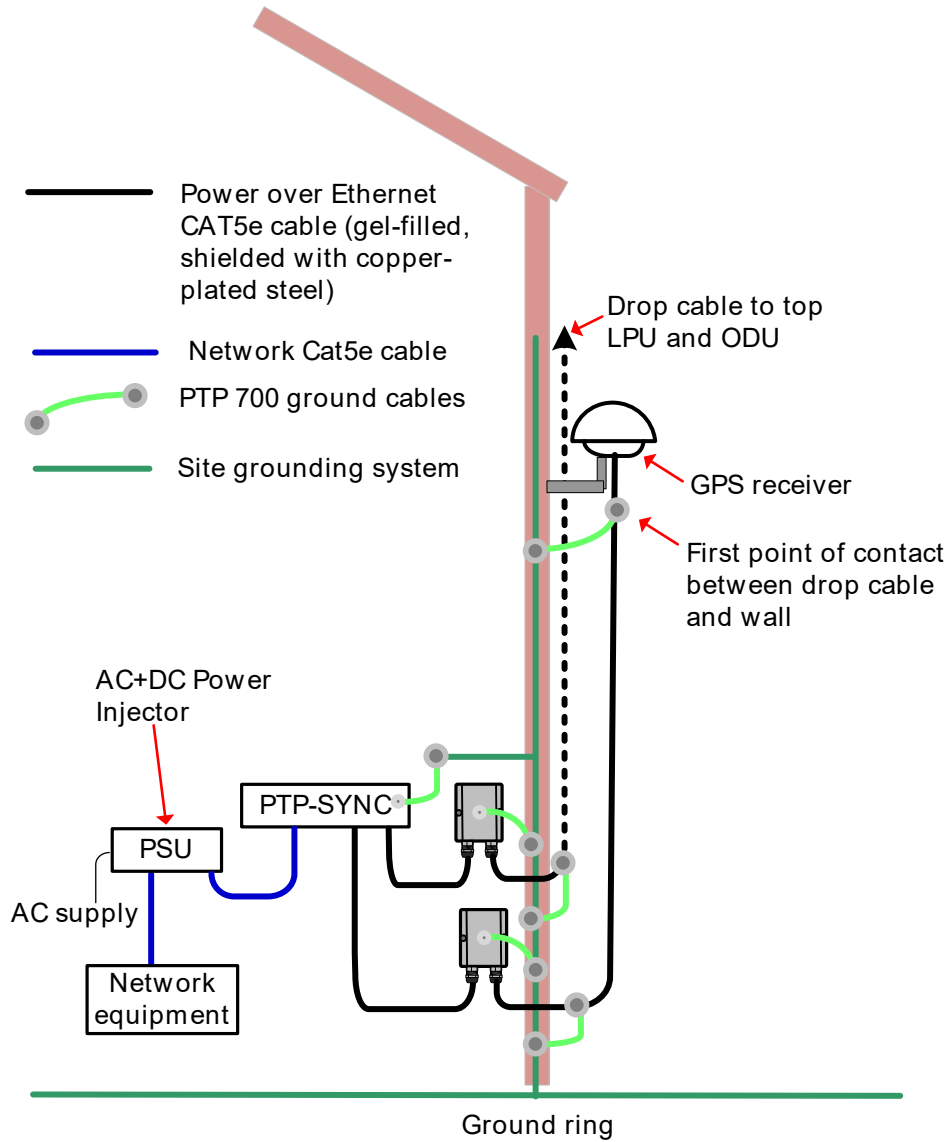


Figure 51 GPS receiver tower or mast installation

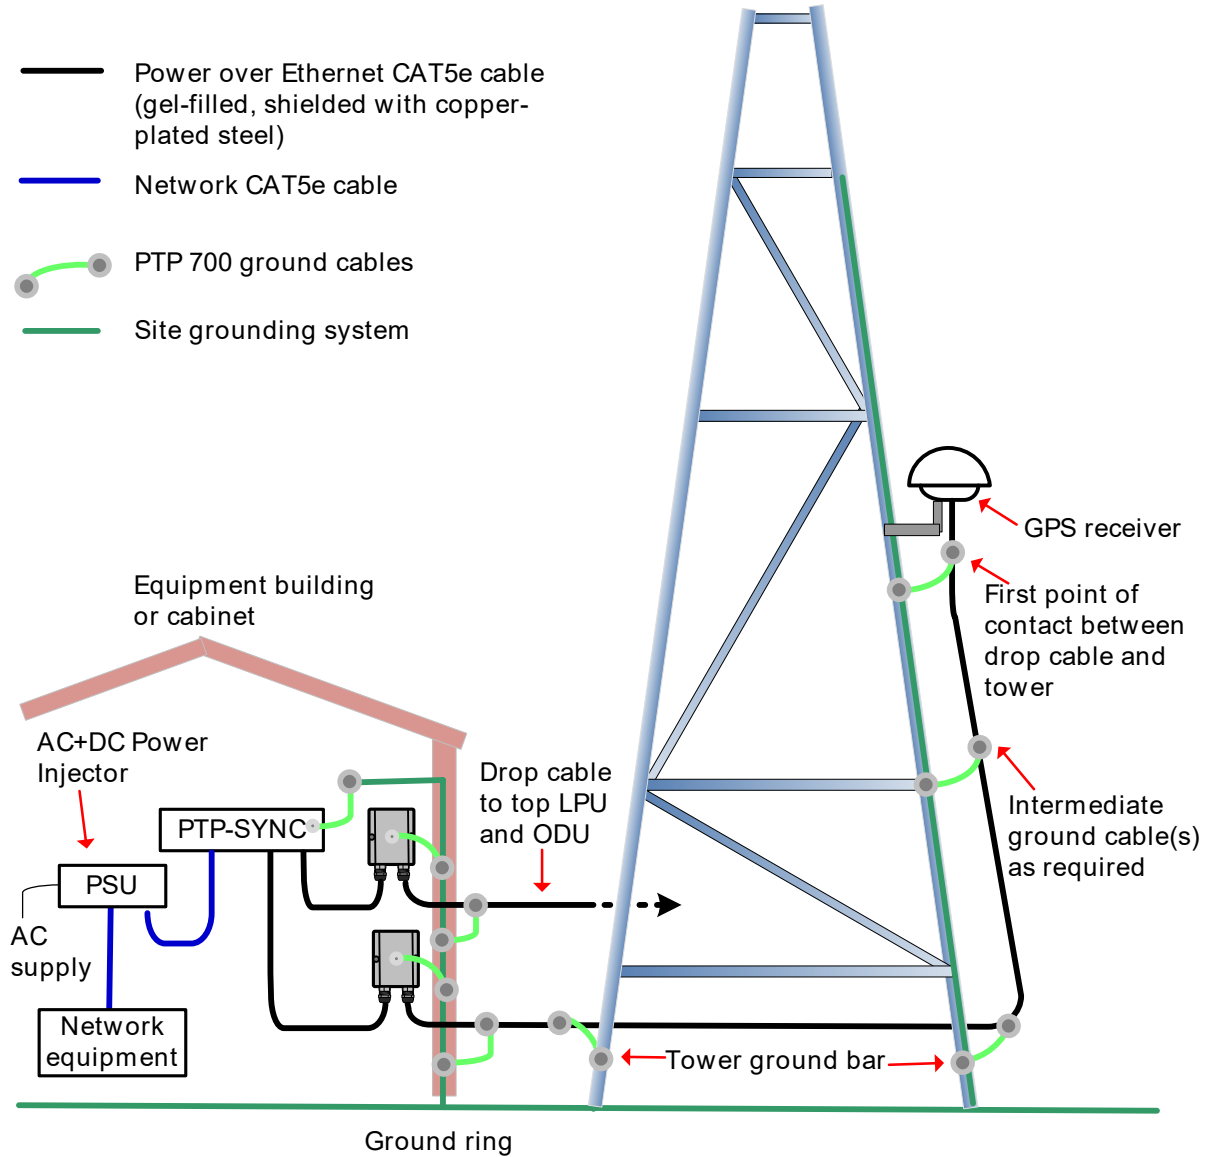

Site planning

This section describes factors to be considered when planning the proposed link end sites, including grounding, lightning protection and equipment location for the ODU, PSU, PTP-SYNC unit (if installed) and GPS receivers (if installed).

Grounding and lightning protection



Warning Electro-magnetic discharge (lightning) damage is not covered under warranty. The recommendations in this guide, when followed correctly, give the user the best protection from the harmful effects of EMD. However, 100% protection is neither implied nor possible.

Structures, equipment and people must be protected against power surges (typically caused by lightning) by conducting the surge current to ground via a separate preferential solid path. The actual degree of protection required depends on local conditions and applicable local regulations. To adequately protect a PTP 700 installation, both ground bonding and transient voltage surge suppression are required.


Full details of lightning protection methods and requirements can be found in the international standards IEC 61024-1 and IEC 61312-1, the U.S. National Electric Code ANSI/NFPA No. 70-1984 or section 54 of the Canadian Electric Code.



Note International and national standards take precedence over the requirements in this guide.

Lightning protection zones

Use the rolling sphere method ([Figure 52](#)) to determine where it is safe to mount equipment. An imaginary sphere, typically 50 meters in radius, is rolled over the structure. Where the sphere rests against the ground and a strike termination device (such as a finial or ground bar), all the space under the sphere is considered to be in the zone of protection (Zone B). Similarly, where the sphere rests on two finials, the space under the sphere is considered to be in the zone of protection.

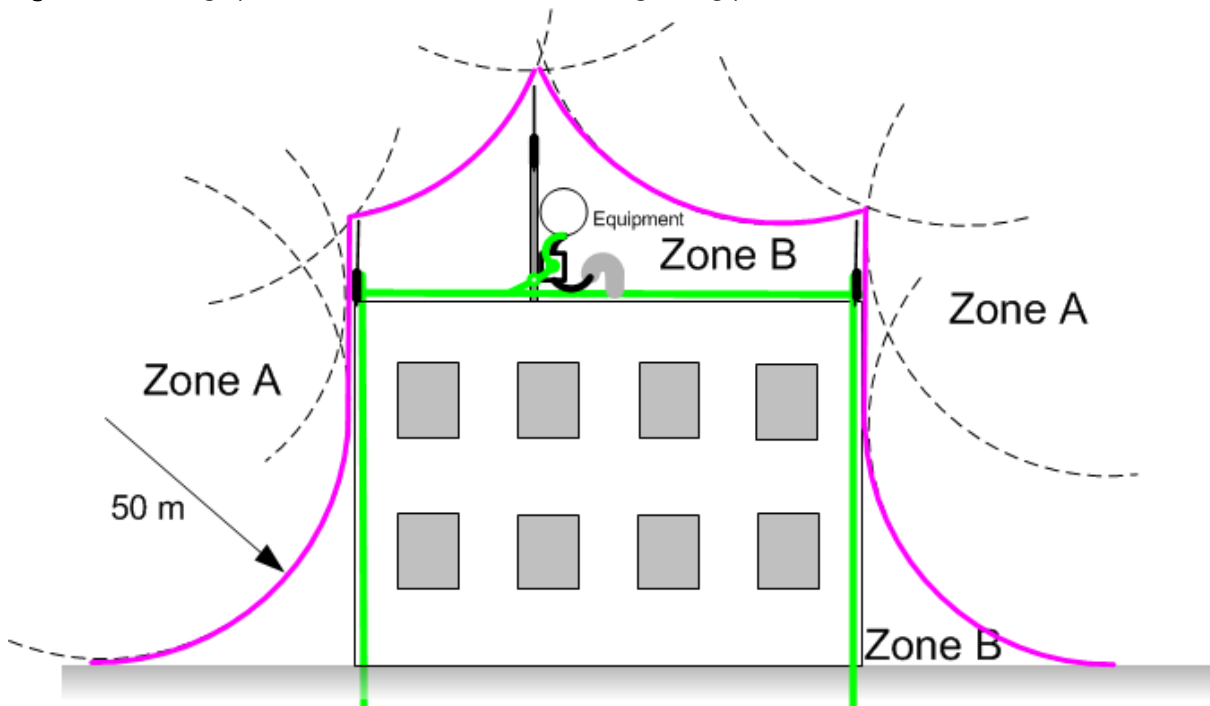Figure 52 Rolling sphere method to determine the lightning protection zones

Zone A: In this zone a direct lightning strike is possible. Do not mount equipment in this zone.

Zone B: In this zone, direct EMD (lightning) effects are still possible, but mounting in this zone significantly reduces the possibility of a direct strike. Mount equipment in this zone.



Warning Never mount equipment in Zone A. Mounting in Zone A may put equipment, structures and life at risk.

Site grounding system

Confirm that the site has a correctly installed grounding system on a common ground ring with access points for grounding PTP 700 equipment.

If the outdoor equipment is to be installed on the roof of a high building (Figure 46), confirm that the following additional requirements are met:

- A grounding conductor is installed around the roof perimeter to form the main roof perimeter lightning protection ring.
- Air terminals are installed along the length of the main roof perimeter lightning protection ring, typically every 6.1m (20ft).
- The main roof perimeter lightning protection ring contains at least two down conductors connected to the grounding electrode system. The down conductors should be physically separated from one another, as far as practical.

ODU and external antenna location

Find a location for the ODU (and external antenna for connectorized units) that meets the following requirements:

- The equipment is high enough to achieve the best radio path.
- People can be kept a safe distance away from the equipment when it is radiating. The safe separation distances are defined in [Calculated distances](#) on page 4-4.
- The equipment is lower than the top of the supporting structure (tower, mast or building) or its lightning air terminal.
- If the ODU is connectorized, select a mounting position that gives it maximum protection from the elements, but still allows easy access for connecting and weatherproofing the cables. To minimize cable losses, select a position where the antenna cable lengths can be minimized. If diverse or two external antennas are being deployed, it is not necessary to mount the ODU at the midpoint of the antennas.

ODU ambient temperature limits

Select a location where the ODU can operate within safe ambient temperature limits.

The ODU must be mounted in a Restricted Access Location (as defined in EN 60950-1) if the operating ambient temperature may exceed 40°C, including solar radiation.

If the ambient temperature never exceeds 40°C, the temperature of the external metal case parts of the ODU will not exceed the touch temperature limit of 70°C.

If the ambient temperature never exceeds 60°C, the temperature of the external metal case parts of the ODU will not exceed the touch temperature limit of 90°C.



Note A restricted access location is defined (in EN 60950-1) as one where access may only be gained by use of a tool or lock and key, or other means of security, and access is controlled by the authority responsible for the location. Access must only be gained by persons who have been instructed about the reasons for the restrictions applied to the location and about any precautions that must be taken. Examples of permissible restricted access locations are a lockable equipment room or a lockable cabinet.

ODU wind loading

Ensure that the ODU and the structure on which it is mounted are capable of withstanding the prevalent wind speeds at a proposed PTP 700 site. Wind speed statistics should be available from national meteorological offices.

The ODU and its mounting bracket are capable of withstanding wind speeds of up to 325 kph (200 mph), with the exception of the Beam Steering ODU, which is capable of withstanding 257 kph (160 mph).

Wind blowing on the ODU will subject the mounting structure to significant lateral force. The magnitude of the force depends on both wind strength and the variant of the ODU. Wind loading is estimated using the following formulae:

- Force (in newtons) = $0.5 \times \rho \times V^2 \times A \times C_d$
 - “ ρ ” is the density of air = 1.225 kg/m³,
 - “V” is the wind speed in meters per second,
 - “A” is the projected surface area of the ODU in square meters, and
 - “ C_d ” is the drag coefficient = 1.385.

The drag coefficient has been measured when the cover plate or antenna is perpendicular to the air flow.

Applying this formula to the PTP 700 ODUs at different wind speeds, the resulting wind loadings are shown in [Table 50](#)

Table 50 ODU wind loading (newtons)

Type of ODU	Max surface area (square meters)	Wind speed (kilometers per hour)				
		225	250	275	300	325
Connectorized+Integrated	0.160	530 N	655 N	792 N	943 N	1106 N
Connectorized	0.062	205 N	254 N	307 N	365 N	429 N
Beam Steering	0.346	1147 N	1415 N	-	-	-

Equivalent results in US customary units are shown in [Table 51](#).

Table 51 ODU wind loading (pounds force)

Type of ODU	Max surface area (square feet)	Wind speed (miles per hour)				
		140	155	170	185	200
Connectorized+Integrated	1.72	120 lb	147 lb	176 lb	209 lb	244 lb
Connectorized	0.67	46 lb	57 lb	68 lb	81 lb	95 lb
Beam Steering	3.724	258 lb	317 lb	-	-	-

If an external antenna is installed, add the wind loading of the antenna to that of the ODU. The antenna manufacturer should be able to quote wind loading.

Hazardous locations

Check that the ODUs will not be exposed to hazardous gases, as defined by HAZLOC (USA) and ATEX (Europe) regulations.

PSU DC power supply

If using the DC input on the AC+DC Power Injector 56V, ensure that the DC power supply meets the following requirements:

- The voltage and polarity must be correct and must be applied to the correct PSU terminals.
- The power source must be rated as Safety Extra Low Voltage (SELV).
- The power source must be rated to supply at least 1.5A continuously.
- The power source cannot provide more than the Energy Hazard Limit as defined by IEC/EN/UL60950-1, Clause 2.5, Limited Power (The Energy Hazard Limit is 240VA).

PSU AC power supply

Always use an appropriately rated and approved AC supply cord-set in accordance with the regulations of the country of use.

PSU location

Find a location for the PSU (AC+DC Enhanced Power Injector 56V) that meets the following requirements:

- The AC+DC Enhanced Power Injector 56V can be mounted on a wall or other flat surface.
- The PSU is kept dry, with no possibility of condensation, flooding or rising damp.
- The PSU is located in an environment where it is not likely to exceed its operational temperature rating, allowing for natural convection cooling.
- The PSU can be connected to the ODU drop cable and network terminating equipment.
- The PSU can be connected to a compatible power supply. AC+DC Enhanced Power Injector 56V: the use of DC supplies of less than 55V will reduce the usable distance between the PSU and ODU.

PTP-SYNC location

If PTP-SYNC is to be installed, consider the following factors when selecting a site:

- Indoor location with no possibility of condensation.
- Accessibility for viewing status indicators.
- The maximum cable length between the PSU and the PTP-SYNC is 2 m (6 ft).

GPS receiver location

Mount the GPS receiver for PTP-SYNC at a location that meets the following requirements:

- It must be possible to protect the installation as described in [Grounding and lightning protection](#) on page 3-10.
- It must have an un-interrupted view of at least half of the sky. For a receiver mounted on a wall there must be no other significant obstructions in the view of the sky.
- It must be mounted at least 1 m (3 ft), preferably 2 m (6 ft), away from other GPS receiving equipment.
- It must not be sited in the field of radiation of co-located radio communications equipment and should be positioned at a distance of at least 3 m (10 ft) away.

Mount the GPS receiver on the wall of the equipment building, if there is a suitable location on the wall that can meet these requirements. Failing that, mount it on a metal tower or mast.



Attention The GPS receiver is not approved for operation in locations where gas hazards exist, as defined by HAZLOC (USA) and ATEX (Europe).

Mounting the GPS receiver module on the equipment building

If mounting the GPS receiver for PTP-SYNC on the equipment building ([Figure 50](#)), select a position on the wall that meets the following requirements:

- It must be below the roof height of the equipment building or below the height of any roof-mounted equipment (such as air conditioning plant).
- It must be below the lightning air terminals.
- It must not project more than 600mm (24 inches) from the wall of the building.

If these requirements cannot all be met, then the module must be mounted on a metal tower or mast.

Mounting the GPS receiver module on a metal tower or mast

If mounting the GPS receiver module on a metal tower or mast ([Figure 51](#)), select a position that meets the following requirements:

- It must not be mounted any higher than is necessary to receive an adequate signal from four GPS satellites.
- It must be protected by a nearby lightning air terminal that projects farther out from the tower than the GPS receiver module.

Drop cable grounding points

To estimate how many grounding kits are required for each drop cable, refer to the site installation diagrams ([Figure 44](#), [Figure 45](#) and [Figure 46](#)) and use the following criteria:

- The drop cable shield must be grounded near the ODU at the first point of contact between the drop cable and the mast, tower or building.
- The drop cable shield must be grounded at the building entry point.

For mast or tower installations ([Figure 44](#)), use the following additional criteria:

- The drop cable shield must be grounded at the bottom of the tower, near the vertical to horizontal transition point. This ground cable must be bonded to the tower or tower ground bus bar (TGB), if installed.
- If the tower is greater than 61 m (200 ft) in height, the drop cable shield must be grounded at the tower midpoint, and at additional points as necessary to reduce the distance between ground cables to 61 m (200 ft) or less.
- In high lightning-prone geographical areas, the drop cable shield must be grounded at spacing between 15 to 22 m (50 to 75 ft). This is especially important on towers taller than 45 m (150 ft).

For roof installations (Figure 46), use the following additional criteria:

- The drop cable shield must be bonded to the building grounding system at its top entry point (usually on the roof).
- The drop cable shield must be bonded to the building grounding system at the entry point to the equipment room.

LPU location

Find a location for the top LPU that meets the following requirements:

- There is room to mount the LPU, either on the ODU mounting bracket or on the mounting pole below the ODU.
- The drop cable length between the ODU and top LPU must not exceed 600 mm.
- There is access to a metal grounding point to allow the ODU and top LPU to be bonded in the following ways: top LPU to ODU; ODU to grounding system.

Find a location for the bottom LPU that meets the following requirements:

- The bottom LPU can be connected to the drop cable from the ODU.
- The bottom LPU is within 600 mm (24 in) of the point at which the drop cable enters the building, enclosure or equipment room within a larger building.
- The bottom LPU can be bonded to the grounding system.

Multiple LPUs

If two or three drop cables are connected to the ODU, the PSU and Aux drop cables each require their own top LPU, and the copper SFP drop cable requires a top surge protector, not a PTP 700 LPU (Figure 53). Optical cables do not require LPUs or ground cables (Figure 54).

The copper SFP drop cable requires a bottom surge protector, not a PTP 700 LPU (Figure 55).

The Aux drop cable may require an LPU near the auxiliary device.

Figure 53 ODU with PSU, Aux and copper SFP interfaces

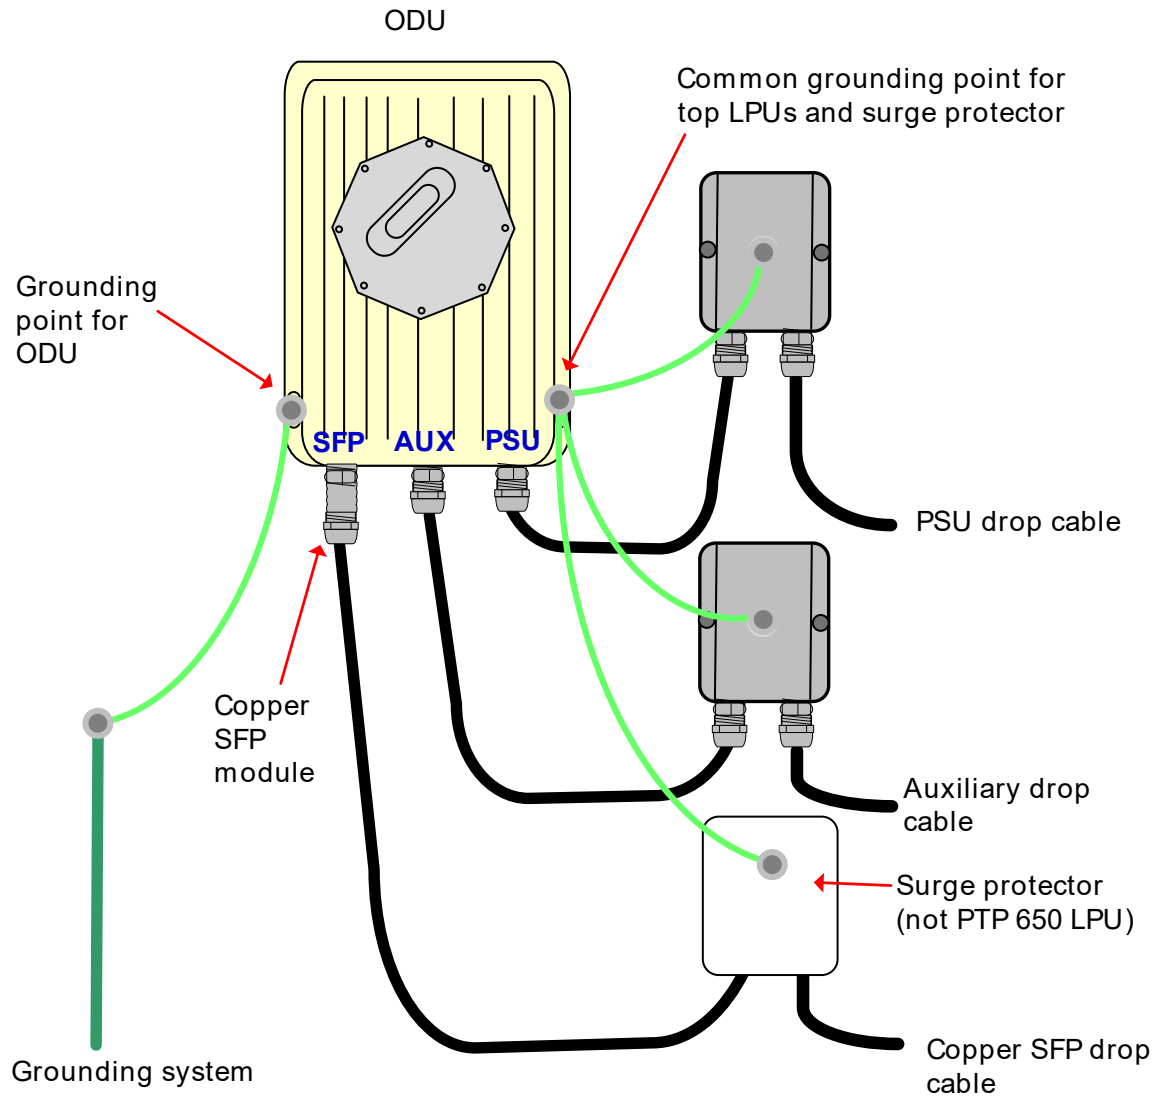


Figure 54 ODU with PSU, Aux and optical SFP interfaces


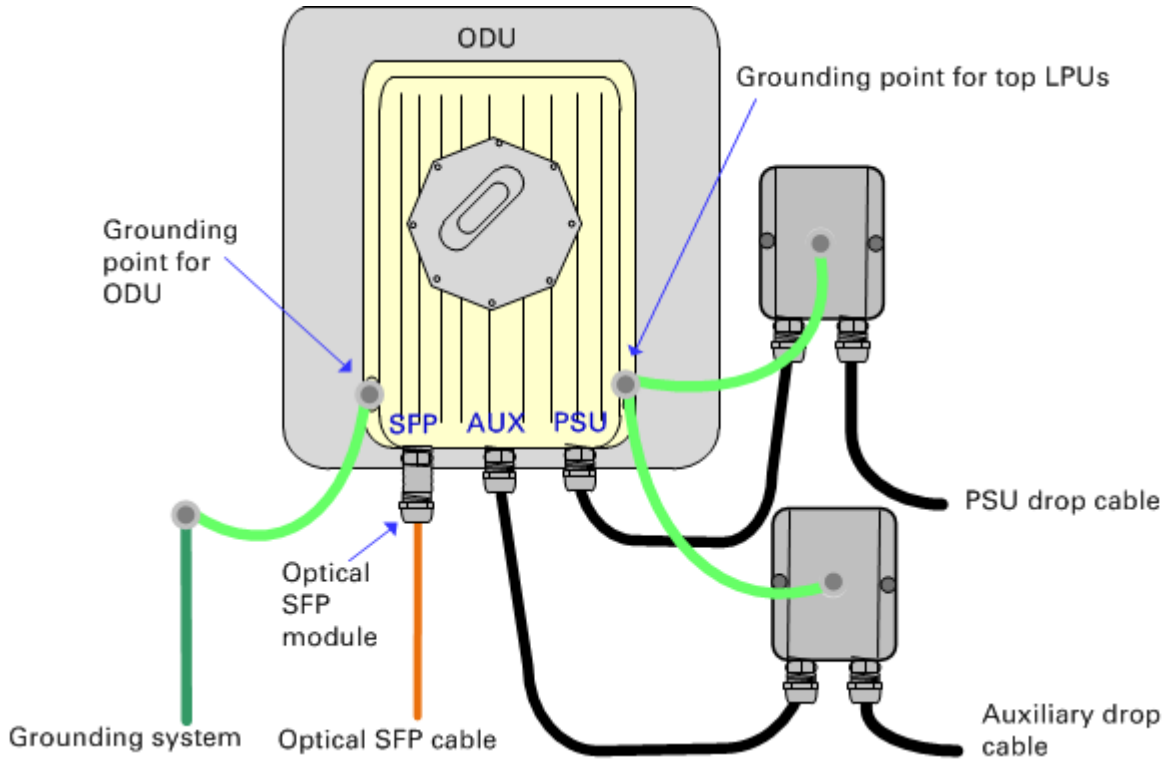


Figure 55 Bottom LPU and surge protector

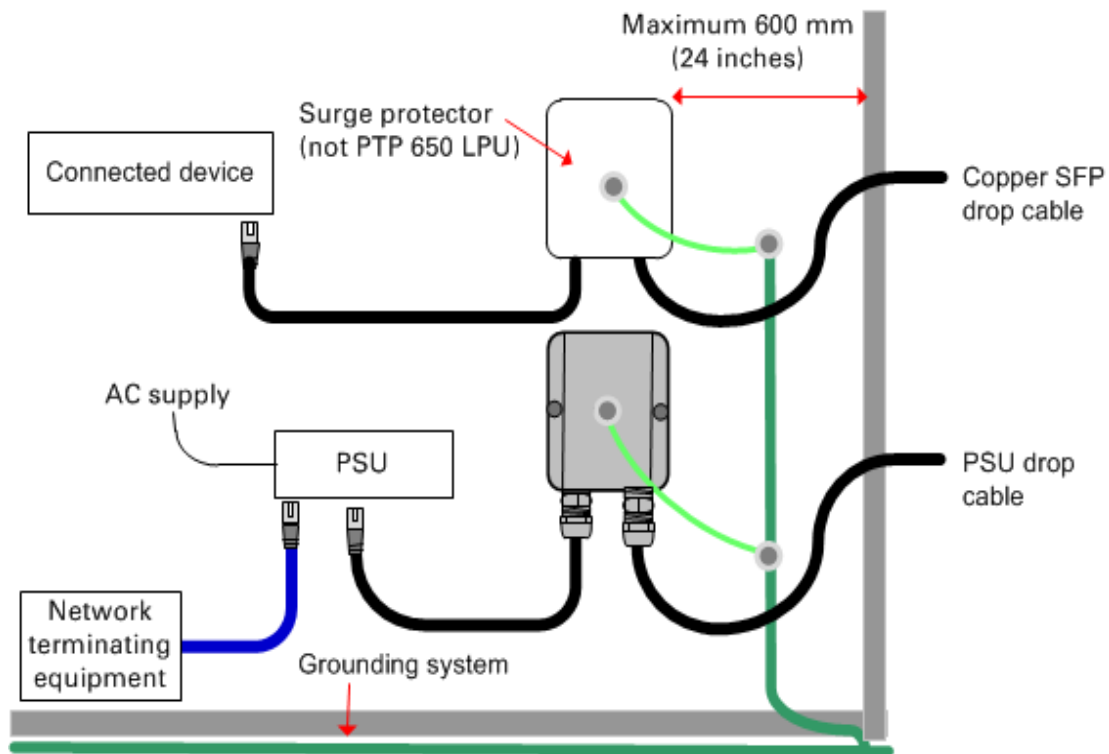

Hot Standby

ODUs used in a Hot Standby link are installed in pairs. Neighbouring ODU's should normally be located close together and installed on the same grounded metal structure. In this case, the Protection Link can be made using suitable outdoor Ethernet cable of the same type as the drop cable, and LPUs are not needed.

If it is not possible to locate neighboring ODUs close together on the same structure, use only fiber interconnections with the optical SFP interface for the Protection Link.

Radio spectrum planning

This section describes how to plan PTP 700 links to conform to the regulatory restrictions that apply in the country of operation.



Attention It is the responsibility of the user to ensure that the PTP product is operated in accordance with local regulatory limits.



Note Contact the applicable radio regulator to find out whether or not registration of the PTP 700 link is required.

General wireless specifications

Table 52 lists the wireless specifications that apply to all PTP 700 frequency bands.

Table 53 lists the wireless specifications that are specific to a single frequency band.

Table 52 PTP 700 wireless specifications (all variants)

Item	Specification
Channel selection	Manual selection (fixed frequency). Dynamic frequency selection (DFS or DFS with DSO) is available in radar avoidance regions.
Manual power control	To avoid interference to other users of the band, maximum power can be set lower than the default power limit.
Integrated antenna type	22 dBi Flat plate antenna (PTP 45700 Connectorized+Integrated) 21 dBi Electronically steerable flat plate antenna (PTP 45700 Beam Steering). 26 dBi Flat plate antenna (PTP 78700 Connectorized+Integrated)
Duplex schemes	Symmetric fixed, asymmetric fixed, adaptive TDD. The adaptive TDD option is not available in an ODU with the Lite capacity license.
Range	Line-of-Sight: 250 km (156 miles). Non-Line-of-Sight: 10 km (6 miles).
Over-the-air encryption	AES 128-bit or 256-bit.
Weather sensitivity	Sensitivity at higher modes may be reduced by adjusting the Adaptive Modulation Threshold.

Item	Specification
Error Correction	FEC

Table 53 PTP 45700 wireless specifications (per frequency band)

Item	4.7 GHz	4.9 GHz	5.1 GHz	5.2 GHz	5.4 GHz	5.8 GHz
RF band (MHz)	4400-5000	4900-4990	5150-5250	5250-5350	5470-5725	5725-5875
Channel bandwidth (MHz)	5, 10, 15, 20, 30, 40, 45	5, 10, 15, 20	5, 10, 15, 20, 30, 40, 45	5, 10, 15, 20, 30, 40, 45	5, 10, 15, 20, 30, 40, 45	5, 10, 15, 20, 30, 40, 45
Typical receiver noise	7.5 dB	7.5 dB	7.5 dB	7.8 dB	7.8 dB	8.1 dB
Typical antenna gain (integrated)	22.0 dBi	22.0 dBi	22.0 dBi	22.0 dBi	22.0 dBi	22.0 dBi
Antenna beamwidth (integrated)	8°	8°	8°	8°	8°	8°

Table 54 PTP 78700 wireless specifications

Item	
RF band (MHz)	7125-8500
Channel bandwidth (MHz)	5, 10, 15, 20, 30, 40, 45
Typical receiver noise figure	8.5 dB
Typical antenna gain (integrated)	26.0 dBi
Antenna beamwidth (integrated)	6°

Regulatory limits

Many countries impose EIRP limits (Allowed EIRP) on products operating in the bands used by the PTP 700 Series. For example, in the 5.4 GHz and 5.8 GHz bands, these limits are calculated as follows:

- In the 5.4 GHz band (5470 MHz to 5725 MHz), the EIRP must not exceed the lesser of 30 dBm or $(17 + 10 \times \text{Log Channel width in MHz})$ dBm.
- In the 5.8 GHz band (5725 MHz to 5875 MHz), the EIRP must not exceed the lesser of 36 dBm or $(23 + 10 \times \text{Log Channel width in MHz})$ dBm.

Some countries (for example the USA) impose conducted power limits on products operating in the 5.8 GHz band.

Conforming to the limits

Ensure the link is configured to conform to local regulatory requirements by installing license keys for the correct country. When using connectorized ODUs with external antennas, ensure that the antenna gain and feeder loss is configured correctly in the ODU.

Available spectrum

The available spectrum for operation depends on the regulatory band. When configured with the appropriate license key, the unit will only allow operation on those channels which are permitted by the regulations.

Certain regulations have allocated certain channels as unavailable for use:

- ETSI has allocated part of the 5.4 GHz band to weather radar.
- UK and some other European countries have allocated part of the 5.8 GHz band to Road Transport and Traffic Telematics (RTTT) systems.

The number and identity of channels barred by the license key and regulatory band is dependent on the channel bandwidth and channel raster selected.

Barred channels are indicated by a “No Entry” symbol displayed on the Spectrum Expert and Spectrum Management web pages ([Spectrum Expert page in radar avoidance mode on page 7-44](#)).

Channel bandwidth

Select the required channel bandwidth for the link. The selection depends upon the regulatory band selected.

The wider the channel bandwidth, the greater the capacity. As narrower channel bandwidths take up less spectrum, selecting a narrow channel bandwidth may be a better choice when operating in locations where the spectrum is very busy.

Both ends of the link must be configured to operate on the same channel bandwidth.



Note PTP 700 supports only the 20 and 40 MHz channel bandwidth in the HCMP topology.

Frequency selection

PTP topology in regions without mandatory radar detection

In regions that do not mandate DFS, choose **DSO** or **Fixed Frequency**:

- **Dynamic Spectrum Optimization (DSO)**: In this mode, the unit monitors the spectrum looking for the channel with the lowest level of interference. Statistical techniques are used to select the most appropriate transmit and receive channels. The unit can be configured such that it operates in DSO mode, but does not operate on selected channels. This allows a frequency plan to be implemented in cases where multiple links are installed in close proximity.

- **Fixed Frequency:** In this mode, the unit must be configured with a single fixed transmit frequency and a single fixed receive frequency. These may be set to the same value or to different values. This mode should only be considered in exceptional circumstances, for example where it is known that there are no sources of interference on the selected channels.

PTP topology in regions with mandatory radar detection

In regions that mandate DFS, the unit first ensures that there is no radar activity on a given channel for a period of 60 seconds before radiating on that channel. Once a channel has been selected for operation, the unit will continually monitor for radar activity on the operating channel. If detected, it will immediately cease radiating and attempt to find a new channel. In DFS regions, choose **DFS** or **DFS with DSO**:

- **Dynamic Frequency Selection (DFS):** Once a channel is selected, the unit will only attempt to find an alternative channel if radar activity has been detected on the operating channel.
- **DFS with DSO:** In addition to switching channels on detection of radar, the unit will also switch to a channel which has a significantly lower level of interference than the current channel of operation. Before radiating on the newly selected channel, the unit must again ensure that there is no radar activity on the new channel for a period of 60 seconds. This mode therefore provides the benefit of switching to a channel with lower interference but at the expense of an outage of approximately 60 to 120 seconds. For this reason, the threshold for switching channels is greater than when DSO is operating in a non-radar region.

Frequency selection for HCMP topology

In the HCMP topology, choose Fixed Frequency or Dynamic Spectrum Optimization (DSO):

- **Fixed Frequency:** The ODUs are configured with a common fixed frequency.
- **Dynamic Spectrum Optimization (DSO):** In the HCMP topology, only the Symmetric mode of DSO is supported. The Master ODU selects the optimum channel considering co-channel and adjacent channel interference measured in the uplink direction, together with co-channel and adjacent channel interference measured in the downlink direction and reported by each of the Slave ODUs.

HCMP topology cannot be used at present in Regulatory Bands that require DFS (radar detection).

Frequency selection for PTP links used in 2+0 configuration

For PTP links used as part of a 2+0 protection scheme, choose Fixed Frequency or Dynamic Spectrum Optimization (DSO):

- **Fixed Frequency:** The Primary and Secondary links must be configured on different fixed frequencies.
- **Dynamic Spectrum Optimization (DSO):** Use channel barring so that the Primary and Secondary links have access to a different subset of the available channels. This ensures that the links will never operate on the same frequency.

Link planning

This section describes factors to be taken into account when planning links, such as range, obstacles path loss and throughput. LINKPlanner is recommended.

LINKPlanner

The Cambium LINKPlanner software and user guide may be downloaded from the support website (see [Contacting Cambium Networks](#) on page 1).

LINKPlanner imports path profiles and predicts data rates and reliability over the path. It allows the system designer to try different antenna heights and RF power settings. It outputs an installation report that defines the parameters to be used for configuration, alignment and operation. Use the installation report to compare predicted and actual link performance.

Range and obstacles

Calculate the range of the link and identify any obstacles that may affect radio performance.

Perform a survey to identify all the obstructions (such as trees or buildings) in the path and to assess the risk of interference. This information is necessary in order to achieve an accurate link feasibility assessment.

The PTP 700 Series is designed to operate in Non-Line-of-Sight (NLoS) and Line-of-Sight (LoS) environments. An NLOS environment is one in which there is no optical line-of-sight, that is, there are obstructions between the antennas.

The PTP 700 Series will operate at ranges from 100 m (330 ft) to 250 km (156 miles), within four ranging modes: 0-40 km (0-25 miles), 0-100 km (0-62 miles), 0-200 km (0-125 miles), and 0-250 km (0-156 miles). Operation of the system will depend on obstacles in the path between the units. Operation at 40 km (25 miles) or above will require a near line-of-sight path. Operation at 100 m (330 ft) could be achieved with one unit totally obscured from the other unit, but with the penalty of transmitting at higher power in a non-optimal direction, thereby increasing interference in the band.



Note The maximum range for the HCMP topology is 100 km, limited by the round-trip time allowed in the TDD frame. The maximum range achieved for a link in the HCMP topology tends to be lower than in the PTP topology because the Master ODU is normally installed with a sector or omni-directional antenna.

LoS links in radar regions

When planning an LoS link to operate in a radar detection region, ensure that receiver signal level is low enough to allow the PTP 700 to detect radar signals:

- With integrated antennas, the recommended minimum LoS operating range is 110 meters (360 ft) for 5.2 GHz or 5.4 GHz, and 185 meters (610 ft) for 5.8 GHz. Shorter operating ranges will lead to excessive receiver signal levels.

- With higher gain connectorized antennas, ensure the predicted receiver signal level (from LINKPlanner) is below -53 dBm (for 5.2 GHz or 5.4 GHz) or below -58 dBm (for 5.8 GHz).

LINKPlanner for synchronized networks

TDD synchronization should be planned using LINKPlanner. This will provide the necessary TDD frame parameter values which are required to complete a synchronized installation. Please refer to the *LINKPlanner User Guide*.

Path loss

Path loss is the amount of attenuation the radio signal undergoes between the two ends of the link. The path loss is the sum of the attenuation of the path if there were no obstacles in the way (Free Space Path Loss), the attenuation caused by obstacles (Excess Path Loss) and a margin to allow for possible fading of the radio signal (Fade Margin). The following calculation needs to be performed to judge whether a particular link can be installed:

$$L_{free_space} + L_{excess} + L_{fade} + L_{seasonal} < L_{capability}$$

Where:

Is:

L_{free_space} Free Space Path Loss (dB)

L_{excess} Excess Path Loss (dB)

L_{fade} Fade Margin Required (dB)

$L_{seasonal}$ Seasonal Fading (dB)

$L_{capability}$ Equipment Capability (dB)

Adaptive modulation

Adaptive modulation ensures that the highest throughput that can be achieved instantaneously will be obtained, taking account of propagation and interference. When the link has been installed, web pages provide information about the link loss currently measured by the equipment, both instantaneously and averaged. The averaged value will require maximum seasonal fading to be added, and then the radio reliability of the link can be computed. For minimum error rates on TDM links, the maximum modulation mode should be limited to 64QAM 0.75.

For details of the system threshold, output power and link loss for each frequency band in all modulation modes for all available channel bandwidths, refer to [System threshold, output power and link loss](#) on page 3-82.

Calculating data rate capacity

The data capacity of a PTP or HCMP link is defined as the maximum end-to-end Ethernet throughput (including Ethernet headers) that it can support, assumed Ethernet frames of 1518 octets.

Data capacity is determined by the following factors:

- Wireless topology (PTP or HCMP)
- TDD Synchronization
- Licensed data throughput capability (ODU license: Full or Lite)
- Link Symmetry
- Link Mode Optimization (IP or TDM)
- Modulation Mode
- Channel Bandwidth
- Link Range
- TDD Frame Configuration Mode (Standard or Expert)
- Expert Mode configuration for HCMP

Calculation procedure for PTP topology without TDD synchronization

To calculate the data rate capacity of an unsynchronized PTP 700 link, proceed as follows:

- 1 Use the tables in [Data capacity in PTP topology](#) on page 3-112 to look up the data throughput capacity rates (Tx, Rx and Both) for the required combination of:
 - Link Symmetry
 - Link Mode Optimization
 - Modulation Mode
 - Channel Bandwidth
 - Capacity License (Full or Lite)
- 2 The tables contain data rates for links of zero range. Use the range adjustment graphs to look up the Throughput Factor that must be applied to adjust the data rates for the actual range of the link.
- 3 Multiply the data rates by the Throughput Factor to give the throughput capacity of the link.



Note The data rates for adaptive symmetry apply to the most asymmetric case where the link has significant offered traffic in one direction only. The data rates for adaptive symmetry with bidirectional offered traffic are the same as those for link symmetry 1:1 with link optimization IP.

Calculation example for PTP topology without TDD synchronization

Suppose that the link characteristics are:

- PTP 700 variant = Lite
- Link Symmetry = 1:1
- Link Mode Optimization = TDM
- Modulation Mode = 64QAM 0.92 Dual
- Channel Bandwidth = 10 MHz
- Link Range = 60 km

The calculation procedure for this example is as follows:

- 1 Use [Table 141](#) to look up the data throughput capacity rates:
Tx = 21 Mbits/s
Rx = 21 Mbits/s
Aggregated = 42 Mbits/s
- 2 Use [Figure 81](#) to look up the Throughput Factor for 1:1, TDM, 10 MHz, Lite and Link Range 60 km. The factor is 0.86.
- 3 Multiply the rates from Step 1 by the Throughput Factor from Step 2 to give the throughput capacity of the link:
Tx = 18.1 Mbits/s
Rx = 18.1 Mbits/s
Aggregated = 36.1 Mbits/s

Calculation procedure for PTP topology with TDD synchronization

The capacity of a PTP link with TDD synchronization can be determined from the following attributes:

- Channel Bandwidth
- Master-Slave Burst Duration
- Slave-Master Burst Duration
- TDD Frame Duration
- Modulation Mode

Proceed as follows:

- 1 Use [Table 153](#) to look up the number of time slots per TDD frame for the required combination of:
 - Channel Bandwidth
 - Burst Duration
- 2 Use [Table 159](#) to look up the one-way data capacity per time slot for the required combination of:
 - TDD Frame Duration
 - Modulation Mode
- 3 The one-way link capacity is the capacity per time slot from Step 2 multiplied by the number of time slots per frame from Step 1. The aggregate (two-way) capacity is the sum of two one-way capacities.

Calculation procedure for PTP topology with long frame duration

The capacity of a synchronized PTP link with Long Frame Duration enabled can be determined from the following attributes:

- Channel Bandwidth

- Burst Duration
- TDD Frame Duration
- Modulation Mode

Proceed as follows:

- 1 Use [Table 154](#) to look up the number of time slots per TDD frame for the required combination of:
 - Channel Bandwidth
 - Burst Duration

The number of time slots in a Hot Standby link is exactly one less than the equivalent unprotected link.
- 2 Use [Table 159](#) to look up the one-way data capacity per time slot for the required combination of:
 - TDD Frame Duration
 - Modulation Mode
- 3 The one-way link capacity is the capacity per time slot from Step 2 multiplied by the number of time slots from Step 1. The aggregate (two-way) capacity is the sum of two one-way capacities.

Calculation procedure for HCMP topology with standard TDD frame

To calculate the data rate capacity of a PTP 700 link with Standard TDD Frame Configuration Mode, with or without TDD synchronization, proceed as follows:

- 1 Use [Table 156](#), [Table 157](#) or [Table 158](#) to look up the TDD frame duration for the required combination of:
 - Channel bandwidth
 - Maximum link range
 - Maximum number of Slaves
- 2 Use [Table 159](#) to look up the one-way data capacity per time slot for the required combination of:
 - TDD frame duration
 - Modulation mode
- 3 The one-way capacity for a single Slave is the capacity per time slot multiplied by the number of time slots. The aggregate (two-way) capacity for one Slave is the sum of two one-way capacities. The aggregate capacity for the Master is the capacity for one Slave multiplied by the number of Slaves.



Note The capacity of a link in the HCMP topology depends on the maximum link range configured in the ODU but does not depend on the range of the individual link. The number of Slaves is the maximum number that can be supported by the Master, and not the number presently connected.

Calculation example for HCMP topology with standard TDD frame

Suppose that:

- Channel Bandwidth = 40 MHz
- TDD synchronization = Disabled
- Link Symmetry = 2:1 Symmetry
- Maximum number of Slaves = 3
- Maximum Range = 15 km
- Modulation mode = 256QAM 0.81 dual.

The calculation procedure for this example is as follows:

- 1 Look up the TDD Frame Duration in [Table 157](#)

Frame Duration = 3145 Qs

- 2 Look up the time slot capacity in [Table 159](#)

Time slot capacity = 35.32 Mbit/s

- 3 Calculate the capacity of the link

The capacity for the link is 70.64 Mbit/s from Master to Slave, and 35.32 Mbit/s from Slave to Master.

The aggregate capacity for one link is 70.64 Mbit/s + 35.32 Mbit/s = 105.96 Mbit/s.

The aggregate capacity of the HCMP sector with three links is 3×105.96 Mbit/s, or 317.88 Mbit/s.

Calculation procedure for HCMP topology with expert mode TDD frame

To calculate the data rate capacity of a PTP 700 link with Standard TDD Frame Configuration Mode, with or without TDD synchronization, proceed as follows:

- 1 Find the number of time slots and TDD frame duration from the ODU configuration.
- 2 Use [Table 159](#) to look up the one-way data capacity per time slot for the required combination of:
 - TDD frame duration
 - Modulation Mode
- 3 The one-way capacity for a single Slave is the capacity per time slot multiplied by the number of time slots used by that Slave. The aggregate (two-way) capacity for one Slave is the sum of two one-way capacities. The aggregate capacity for the Master is the capacity for all of the available time slots.

Planning for connectorized units

This section describes factors to be considered when planning to use connectorized ODUs with external antennas in PTP 700 links.

When to install connectorized units

Antenna gain in PTP topology

Most radio links can be successfully deployed with the integrated antenna in the Integrated ODU, the Connectorized+Integrated ODU, or the Beam Steering ODU. However, the integrated antenna may not have sufficient antenna gain in some areas, for example:

- Where the path is heavily obscured by dense woodland on an NLOS link.
- Where long LOS links (>23 km or >14 miles) are required.
- Where there are known to be high levels of interference.

LINKPlanner can be used to identify these areas of marginal performance.

In these areas, use the Connectorized ODU or the Connectorized+Integrated ODU with external antennas.

Spatial diversity in PTP topology

Spatial diversity requires separate antennas for horizontal and vertical polarization at one or both ends of the link. The separate antennas are necessarily connectorized.

HCMP topology

The Master ODU in an HCMP sector will normally be installed with a connectorized antenna with sector or omni-directional coverage.

Slave ODUs in an HCMP sector will normally be installed using the integrated antenna in the Integrated ODU or the Connectorized+Integrated ODU, but might be installed using a connectorized antenna, for example:

- Where the path is heavily obscured by dense woodland on an NLOS link.
- Where there are known to be high levels of interference.

Choosing external antennas

When selecting external antennas, consider the following factors:

- The required antenna gain.
- Ease of mounting and alignment.
- Antenna polarization:
 - For a simple installation process, select one dual-polarization antenna (as the integrated antenna) at each end.

- To achieve spatial diversity in a unprotected (1+0) link, select two single-polarization antennas at one end. Spatial diversity provides additional fade margin on very long LOS links where there is evidence of correlation of the fading characteristics on Vertical and Horizontal polarizations.
- To achieve spatial diversity in a protected link, select two dual-polarization antennas at one end. Spatial diversity provides additional fade margin on very long LOS links where there is evidence of correlation of the fading characteristics on Vertical and Horizontal polarizations.



Note Enter the antenna gain and cable loss into the Installation Wizard, if the country selected has an EIRP limit, the corresponding maximum transmit power will be calculated automatically by the unit.

Protected links with shared antenna




Consider how RF Combiners will be mounted and connected between Primary and Secondary ODUs and the shared antenna.

Link configurations for protection and spatial diversity

Unprotected links

Select one of the following PTP 700 end configurations for unprotected (1+0) links:




Table 55 Supported end configurations, unprotected links

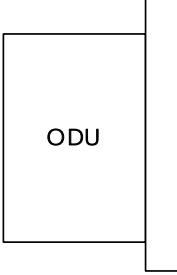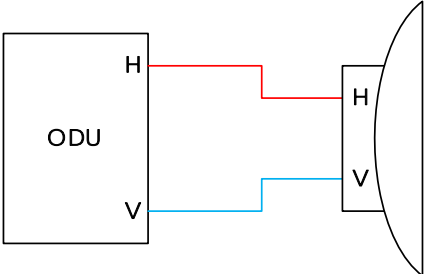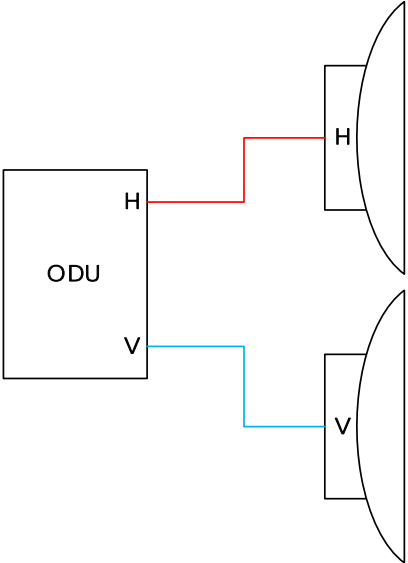Configuration	Schematic
A Integrated	
B Connectorized, one dual-polarized antenna	
C Connectorized, two single-polarized antennas, spatial diversity	


Protected links

Select one of the following PTP 700 end configurations for protected (Hot Standby 1+1 and 2+0) links:

Table 56 Supported end configurations, protected links

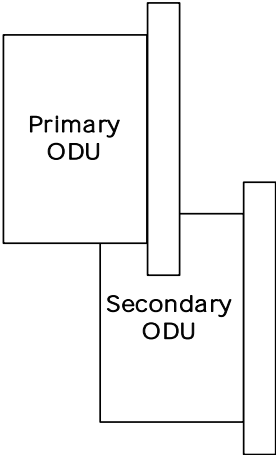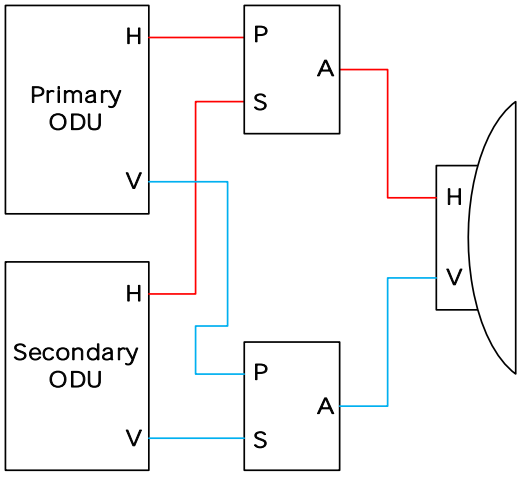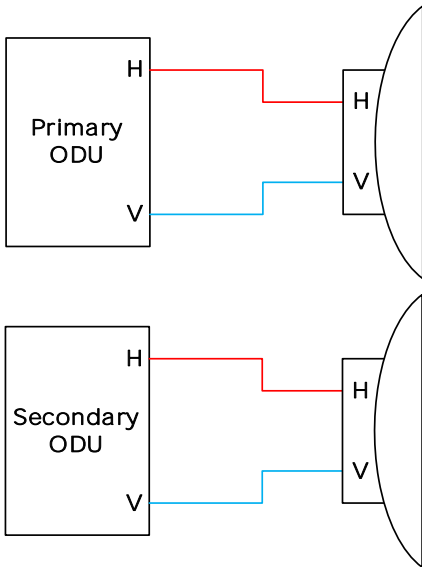Configuration	Schematic
<p>D Integrated</p>	
<p>E Connectorized, one dual-polarized antenna, using the RF Combiner Kit</p>	
<p>F Connectorized, two dual-polarized antennas</p>	

G Connectorized, two dual-polarized antennas, spatial diversity

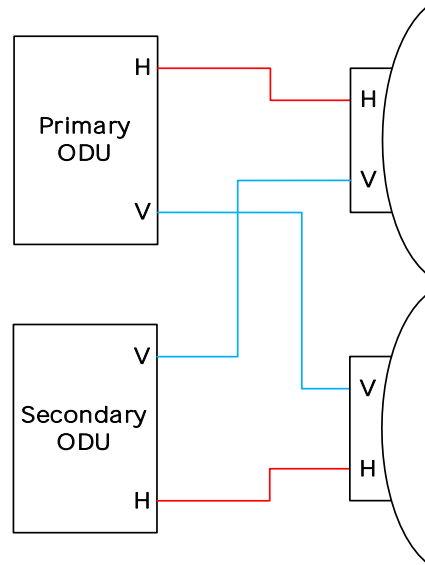


Note Configuration E incurs the additional RF losses of the RF Combiners and connecting cables. These losses can sensibly be offset by increasing the gain (and size) of the shared antenna.

End configurations for spatial diversity

There is no need to use the same configuration at both ends of a link with spatial diversity. It is sufficient (and sometimes preferable) to provide separate antennas at one end only. This approach differs from conventional licensed microwave links where separate antennas are needed at both ends. See Figure 56 below for an example where a shared antenna is used at the left of the figure and separate antennas are used at the right of the figure.

Figure 56 Protected spatial diversity link with separate antennas at one end

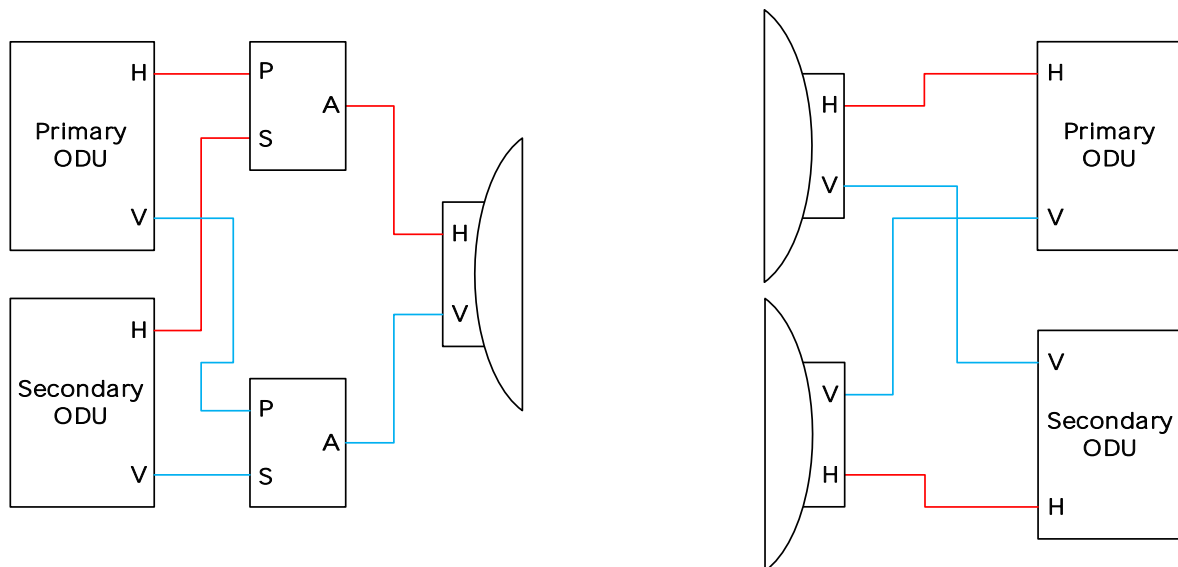

Further reading

For information about...	Refer to...
Hot Standby operation	Hot Standby (1+1) link protection on page 1-9
2+0 operation	2+0 link protection on page 1-11
Spatial diversity	Spatial diversity on page 1-15

Configuration options for TDD synchronization

This section describes the different configuration options that may be used for implementing TDD synchronization in the PTP 700 Series. Schematic diagrams are included.

Using PTP-SYNC with PTP 45700



Note The PTP-SYNC unit is not supported for TDD synchronization with PTP 78700 ODUs. For these ODUs, use an alternative synchronization source.

The PTP 700 supports the following TDD synchronization configurations using PTP-SYNC:

- [Single PTP link or HCMP sector configuration with PTP-SYNC](#) on page 3-36.
- [Cluster with PTP-SYNC and GPS receiver](#) on page 3-37.
- [Cluster with PTP-SYNC and no GPS receiver](#) on page 3-38.




Attention The PTP-SYNC is compatible only with the AC+DC Power Injector 56V. PTP-SYNC is not compatible with standards-based power-over-Ethernet (PoE).

Single PTP link or HCMP sector configuration with PTP-SYNC

Each PTP link or HCMP sector requires one PTP-SYNC unit connected to the Master ODU and one compatible GPS receiver. Use this configuration where a site contains only one TDD master ODU. The GPS receiver and LPU can be replaced by an alternative compatible 1 Hz timing reference ([Figure 57](#)).

The wireless configuration settings are:

- Master Slave Mode = **Master**.
- TDD Synchronization Mode = **Enabled**.
- TDD Sync Device = **PTPSYNC**.
- Cluster Master Slave = **Cluster Master**.
- PTP Sync Site Reference = **GPS/IPPS External**.

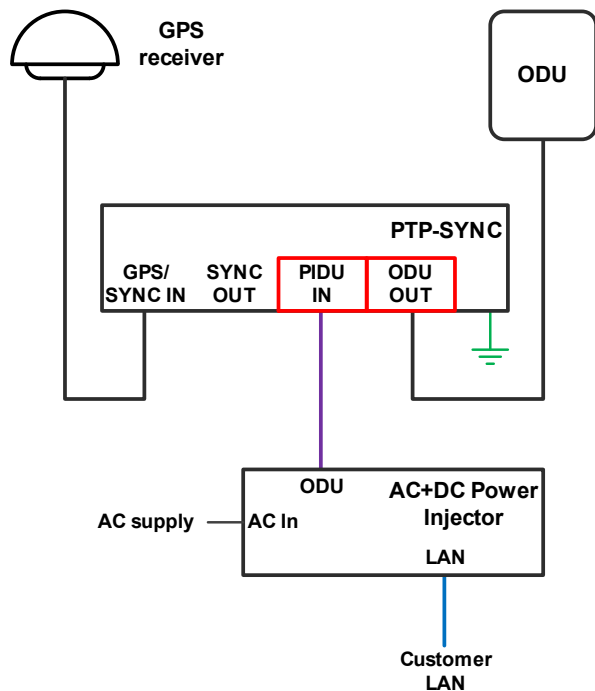Figure 57 TDD synchronization configuration – single link or sector with PTP-SYNC


- Outdoor CAT5e cable, gel-filled, shielded with copper-plated steel.
- CAT5e cable, foil or braid screened, with screened connectors.
- CAT5e cable, unscreened or screened.
- Ground cable.

Cluster with PTP-SYNC and GPS receiver

Each PTP link or HCMP sector requires one PTP-SYNC unit. Each site requires one compatible GPS receiver. Collocated PTP-SYNC units are connected together in a daisy-chain. Between two and ten PTP-SYNCS may be chained in this way. Use this configuration where a site contains collocated TDD Master ODUs in an extended network and where multiple sites have TDD master ODUs (Figure 58).

The wireless configuration settings are:

- Master Slave Mode = **Master** (all ODUs in cluster).
- TDD Synchronization Mode = **Enabled**.
- TDD Sync Device = **PTPSYNC** (all ODUs in cluster).
- Cluster Master Slave = **Cluster Master** (first ODU) and **Cluster Slave** (others).
- PTP Sync Site Reference = **GPS/IPPS External** (all ODUs in cluster).

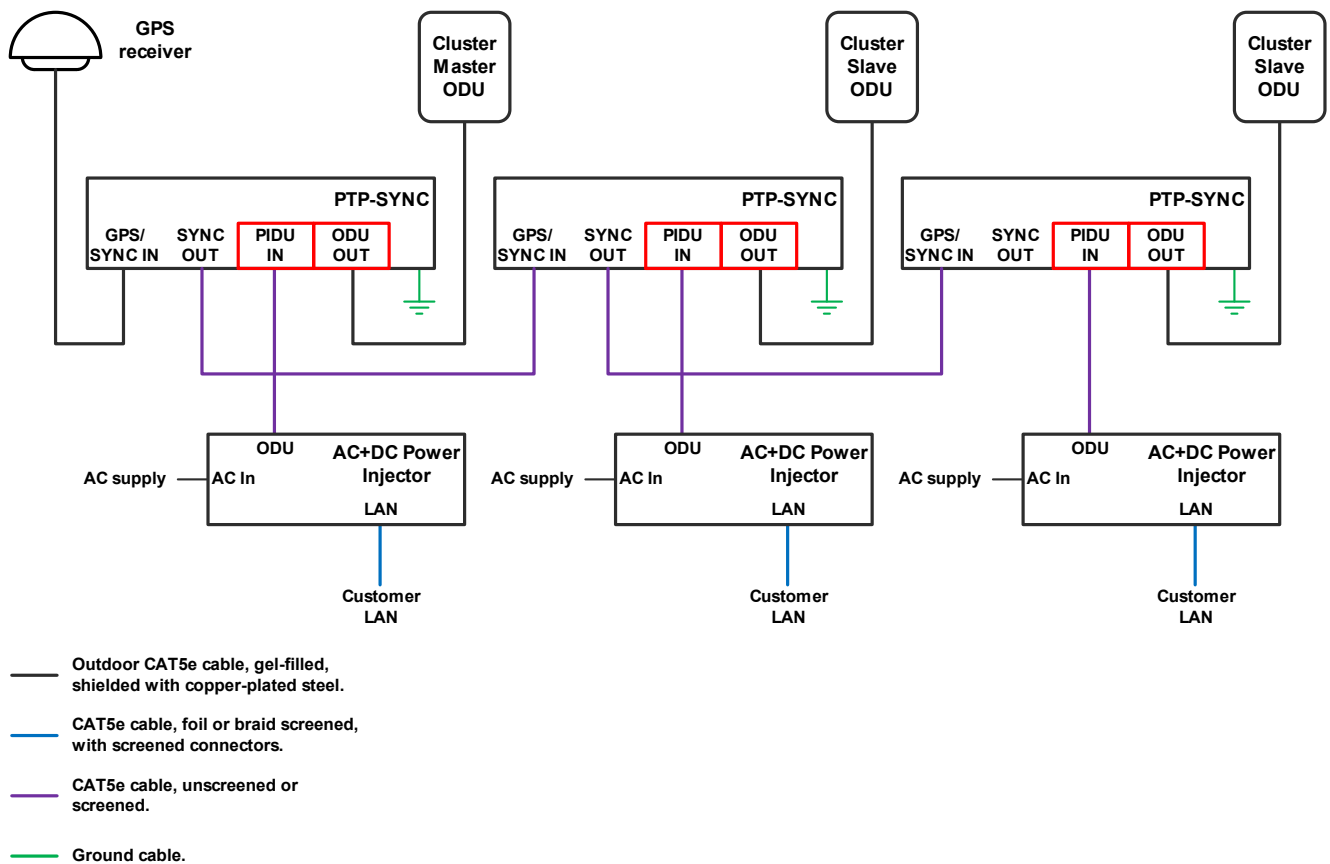
Figure 58 TDD synchronization configuration – cluster with PTP-SYNC and GPS

Cluster with PTP-SYNC and no GPS receiver

Each PTP link or HCMP sector requires one PTP-SYNC unit. PTP-SYNC units are connected together in a daisy-chain. Between two and ten PTP-SYNCS may be chained in this way. One ODU is designated as a cluster master. Use this configuration where all Master ODUs are colocated at a single site. As this configuration does not require a GPS receiver, it provides additional flexibility, particularly in applications requiring rapid deployment (Figure 59).

The wireless configuration settings are:

- Master Slave Mode = **Master** (all ODUs in cluster).
- TDD Synchronization Mode = **Enabled**.
- TDD Sync Device = **PTPSYNC** (all ODUs in cluster).
- Cluster Master Slave = **Cluster Master** (first ODU) and **Cluster Slave** (others).
- PTP Sync Site Reference = **Internal** (all ODUs in cluster).

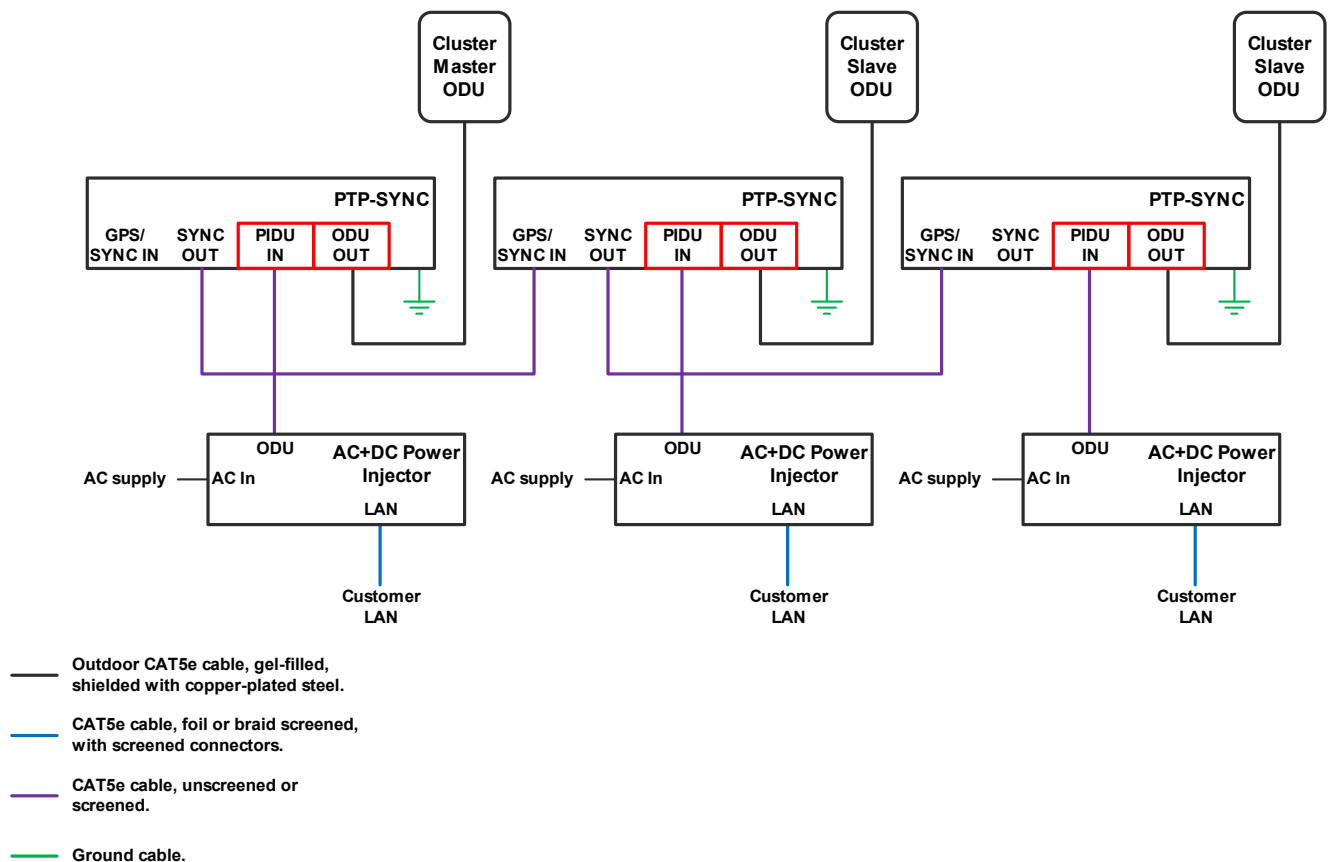Figure 59 TDD synchronization configuration – cluster with PTP-SYNC and no GPS

Using a direct connection between ODUs

Two PTP 700 Master ODUs may be synchronized in a standalone configuration using a direct cable connection between wired Ethernet ports. There is no option in this case to synchronize with a GPS receiver, and so no possibility of network-wide synchronization. This option may be useful in an isolated Hot Standby (1+1) link, an isolated 2+0 link, or at the centre point of a relay of two links using the same mast.

Aux Port to Aux Port

Configure one ODU to provide a free-running reference with the following settings:

- Master Slave Mode = **Master** (all ODUs in cluster).
- TDD Synchronization Mode = **Enabled**.
- TDD Sync Device = **Cambium Sync Injector**.
- Cambium Sync Input Port = **Internal**.
- Cambium Sync Output Port = **Aux**.
- TDD Holdover Mode = **Best Effort**.
- TDD Holdover Duration = **0 minutes**.

Configure a second ODU to synchronize with the first ODU with the following settings:

- Master Slave Mode = **Master** (all ODUs in cluster).

- TDD Synchronization Mode = **Enabled**.
- TDD Sync Device = **Cambium Sync Injector**.
- Cambium Sync Input Port = **Aux**.
- Cambium Sync Output Port = **None**.
- TDD Holdover Mode = **Best Effort**.
- TDD Holdover Duration = **0 minutes**.

TDD burst durations in PTP topology

Table 57 and Table 59 list the available TDD burst durations in TDD synchronization and PTP topology, with and without Long Frame Duration. Long Frame Duration is automatically enabled in Hot Standby (1+1) links.

Table 58 to Table 63 list the supported combinations of TDD burst durations in TDD synchronization and PTP topology, with and without Long Frame Duration. Long Frame Duration is automatically enabled in Hot Standby (1+1) links. These combinations provide all of the possible symmetrical burst durations and all of the asymmetrical burst durations where the smaller burst is the minimum allowed.

Table 57 Supported TDD burst durations in TDD synchronization, Long Frame Duration = Disabled

Channel Bandwidth	Supported burst durations
5 MHz	1088 μ s
10 MHz	1088 μ s, 2176 μ s
15 MHz	726 μ s, 1453 μ s, 2176 μ s
20 MHz	544 μ s, 1088 μ s, 1632 μ s, 2176 μ s
30 MHz	726 μ s, 1088 μ s, 1453 μ s, 2176 μ s
40 MHz	544 μ s, 816 μ s, 1088 μ s, 1632 μ s, 2176 μ s
45 MHz	484 μ s, 726 μ s, 970 μ s, 1453 μ s, 1937 μ s

Table 58 Supported combinations of TDD burst durations, Long Frame Duration = Disabled

Channel Bandwidth	Master-Slave Burst Duration	Slave-Master Burst Duration
5 MHz	1088 μ s	1088 μ s
10 MHz	1088 μ s	1088 μ s
	2176 μ s	2176 μ s
	1088 μ s	2176 μ s
	2176 μ s	1088 μ s
15 MHz	726 μ s	726 μ s

Channel Bandwidth	Master-Slave Burst Duration	Slave-Master Burst Duration
	1453 μ s	1453 μ s
	2176 μ s	2176 μ s
	726 μ s	1453 μ s, 2176 μ s
	2176 μ s, 1453 μ s,	726 μ s
20 MHz	544 μ s	544 μ s
	1088 μ s	1088 μ s
	1632 μ s	1632 μ s
	2176 μ s	2176 μ s
	544 μ s	1088 μ s, 1632 μ s, 2176 μ s
	1088 μ s, 1632 μ s, 2176 μ s	544 μ s
30 MHz	726 μ s	726 μ s
	1088 μ s	1088 μ s
	1453 μ s	1453 μ s
	2176 μ s	2176 μ s
	726 μ s	1088 μ s, 1453 μ s, 2176 μ s
	1088 μ s, 1453 μ s, 2176 μ s	726 μ s
40 MHz	544 μ s	544 μ s
	816 μ s	816 μ s
	1088 μ s	1088 μ s
	1632 μ s	1632 μ s
	2176 μ s	2176 μ s
	544 μ s	816 μ s, 1088 μ s, 1632 μ s, 2176 μ s
	816 μ s, 1088 μ s, 1632 μ s, 2176 μ s	544 μ s
45 MHz	484 μ s	484 μ s
	726 μ s	726 μ s
	970 μ s	970 μ s
	1453 μ s	1453 μ s
	1937 μ s	1937 μ s

Channel Bandwidth	Master-Slave Burst Duration	Slave-Master Burst Duration
	484 μ s	726 μ s, 970 μ s, 1453 μ s, 1937 μ s
	726 μ s, 970 μ s, 1453 μ s, 1937 μ s	484 μ s

Table 59 Supported TDD burst durations in TDD synchronization, Long Frame Duration = Enabled

Channel Bandwidth	Supported burst durations
20 MHz	1088 μ s, 1632 μ s, 2176 μ s, 2720 μ s, 3264 μ s, 3808 μ s, 4352 μ s, 4896 μ s, 5440 μ s, 5984 μ s, 6528 μ s
30 MHz	726 μ s, 1088 μ s, 1451 μ s, 1814 μ s, 2176 μ s, 2539 μ s, 2902 μ s, 3264 μ s, 3627 μ s, 3990 μ s, 4352 μ s, 4715 μ s, 5078 μ s, 5440 μ s
40 MHz	532 μ s, 798 μ s, 1064 μ s, 1330 μ s, 1596 μ s, 1862 μ s, 2128 μ s, 2394 μ s, 2660 μ s, 2926 μ s, 3192 μ s, 3458 μ s, 3724 μ s, 3990 μ s
45 MHz	486 μ s, 728 μ s, 971 μ s, 1214 μ s, 1456 μ s, 1699 μ s, 1942 μ s, 2184 μ s, 2427 μ s, 2670 μ s, 2912 μ s, 3155 μ s, 3398 μ s, 3640 μ s

Table 60 Supported combinations of TDD burst durations, 20 MHz, Long Frame Duration = Enabled

Master-Slave Burst Duration	Slave-Master Burst Duration
1088 μ s	1088 μ s
1632 μ s	1632 μ s
2176 μ s	2176 μ s
2720 μ s	2720 μ s
3264 μ s	3264 μ s
3808 μ s	3808 μ s
4352 μ s	4352 μ s
4896 μ s	4896 μ s
5440 μ s	5440 μ s
5984 μ s	5984 μ s
6528 μ s	6528 μ s
1088 μ s	1632 μ s, 2176 μ s, 2720 μ s, 3264 μ s, 3808 μ s, 4352 μ s, 4896 μ s, 5440 μ s, 5984 μ s, 6528 μ s
1632 μ s, 2176 μ s, 2720 μ s, 3264 μ s, 3808 μ s, 4352 μ s, 4896 μ s, 5440 μ s, 5984 μ s, 6528 μ s	1088 μ s

Table 61 Supported combinations of TDD burst durations, 30 MHz, Long Frame Duration = Enabled

Master-Slave Burst Duration	Slave-Master Burst Duration
726 μ s	726 μ s
1088 μ s	1088 μ s
1451 μ s	1451 μ s
1814 μ s	1814 μ s
2176 μ s	2176 μ s
2539 μ s	2539 μ s
2902 μ s	2902 μ s
3264 μ s	3264 μ s
3627 μ s	3627 μ s
3990 μ s	3990 μ s
4352 μ s	4352 μ s
4715 μ s	4715 μ s
5078 μ s	5078 μ s
5440 μ s	5440 μ s
726 μ s	1088 μ s, 1451 μ s, 1814 μ s, 2176 μ s, 2539 μ s, 2902 μ s, 3264 μ s, 3627 μ s, 3990 μ s, 4352 μ s, 4715 μ s, 5078 μ s, 5440 μ s
1088 μ s, 1451 μ s, 1814 μ s, 2176 μ s, 2539 μ s, 2902 μ s, 3264 μ s, 3627 μ s, 3990 μ s, 4352 μ s, 4715 μ s, 5078 μ s, 5440 μ s	726 μ s

Table 62 Supported combinations of TDD burst durations, 40 MHz, Long Frame Duration = Enabled

Master-Slave Burst Duration	Slave-Master Burst Duration
532 μ s	532 μ s
798 μ s	798 μ s
1064 μ s	1064 μ s
1330 μ s	1330 μ s
1596 μ s	1596 μ s
1862 μ s	1862 μ s
2128 μ s	2128 μ s

Master-Slave Burst Duration	Slave-Master Burst Duration
2394 μ s	2394 μ s
2660 μ s	2660 μ s
2926 μ s	2926 μ s
3192 μ s	3192 μ s
3458 μ s	3458 μ s
3724 μ s	3724 μ s
3990 μ s	3990 μ s
532 μ s	798 μ s, 1064 μ s, 1330 μ s, 1596 μ s, 1862 μ s, 2128 μ s, 2394 μ s, 2660 μ s, 2926 μ s, 3192 μ s, 3458 μ s, 3724 μ s, 3990 μ s
798 μ s, 1064 μ s, 1330 μ s, 1596 μ s, 1862 μ s, 2128 μ s, 2394 μ s, 2660 μ s, 2926 μ s, 3192 μ s, 3458 μ s, 3724 μ s, 3990 μ s	532 μ s

Table 63 Supported combinations of TDD burst durations, 45 MHz, Long Frame Duration = Enabled

Master-Slave Burst Duration	Slave-Master Burst Duration
486 μ s	486 μ s
728 μ s	728 μ s
971 μ s	971 μ s
1214 μ s	1214 μ s
1456 μ s	1456 μ s
1699 μ s	1699 μ s
1942 μ s	1942 μ s
2184 μ s	2184 μ s
2427 μ s	2427 μ s
2670 μ s	2670 μ s
2912 μ s	2912 μ s
3155 μ s	3155 μ s
3398 μ s	3398 μ s
3640 μ s	3640 μ s

Master-Slave Burst Duration	Slave-Master Burst Duration
486 μ s	728 μ s, 971 μ s, 1214 μ s, 1456 μ s, 1699 μ s, 1942 μ s, 2184 μ s, 2427 μ s, 2670 μ s, 2912 μ s, 3155 μ s, 3398 μ s, 3640 μ s
728 μ s, 971 μ s, 1214 μ s, 1456 μ s, 1699 μ s, 1942 μ s, 2184 μ s, 2427 μ s, 2670 μ s, 2912 μ s, 3155 μ s, 3398 μ s, 3640 μ s	486 μ s

TDD frame durations

Table 64 and Table 65 list the available TDD frame durations in TDD synchronization and PTP topology, with and without Long Frame Duration.

Table 64 Supported TDD frame durations in TDD synchronization

Channel bandwidth	Supported frame durations
5 MHz to 30 MHz	1140 μ s, 1196 μ s, 1250 μ s, 1299 μ s, 1309 μ s, 1370 μ s, 1439 μ s, 1504 μ s, 1575 μ s, 1623 μ s, 1650 μ s, 1730 μ s, 1805 μ s, 1859 μ s, 1908 μ s, 2000 μ s, 2079 μ s, 2179 μ s, 2283 μ s, 2392 μ s, 2500 μ s, 2618 μ s, 2747 μ s, 2882 μ s, 3012 μ s, 3145 μ s, 3311 μ s, 3460 μ s, 3610 μ s, 3817 μ s, 4000 μ s, 4184 μ s, 4367 μ s, 4566 μ s, 4785 μ s, 5000 μ s, 5236 μ s, 5495 μ s, 5714 μ s, 6024 μ s, 6410 μ s
40 MHz	1299 μ s, 1370 μ s, 1623 μ s, 2000 μ s, 2283 μ s, 2747 μ s, 4000 μ s, 4184 μ s, 4566 μ s, 5495 μ s, 6024 μ s
45 MHz	1250 μ s, 1370 μ s, 1575 μ s, 1859 μ s, 1908 μ s, 2000 μ s, 2079 μ s, 2500 μ s, 2618 μ s, 3311 μ s, 3460 μ s, 3817 μ s, 4000 μ s, 4367 μ s, 4566 μ s, 5000 μ s, 5236 μ s

Table 65 Additional supported TDD frame durations in TDD synchronization, Long Frame Duration

Channel bandwidth	Supported frame durations
20 MHz	6849 μ s, 7143 μ s, 8065 μ s, 8547 μ s, 9259 μ s, 9524 μ s, 10000 μ s, 10526 μ s, 10989 μ s, 11628 μ s, 12195 μ s, 13514 μ s, 14286 μ s
30 MHz	6849 μ s, 7143 μ s, 8065 μ s, 8547 μ s, 9259 μ s, 9524 μ s, 10000 μ s, 10526 μ s, 10989 μ s, 11628 μ s, 12195 μ s, 13514 μ s
40 MHz	6849 μ s, 7143 μ s, 8065 μ s, 8547 μ s, 9259 μ s, 9524 μ s, 10000 μ s
45 MHz	7143 μ s, 8547 μ s, 9259 μ s

TDD frame design for standalone synchronization

Two PTP 700 Master ODUs may be synchronized in a standalone configuration using a direct cable connection between wired Ethernet ports. There is no option in this case to synchronize with a GPS receiver, and so no possibility of network-wide synchronization. This option may be useful in an isolated Hot Standby (1+1) link or an isolated 2+0 link.

Select the TDD Frame parameters for standalone synchronized operation as follows:

- 1 Select the symmetric or asymmetric TDD burst duration for Master-Slave and Slave-Master directions from the options in [TDD burst durations in PTP topology](#) on page 3-40.
- 2 Determine the TDD frame duration for the link using LINKPlanner, selecting the standalone synchronization option. This will identify the shortest frame duration that accommodates the round trip delay for this link without considering other links in the same network. The recommended frame duration optimizes the capacity and efficiency of the link.
- 3 Set Slave Receive To Transmit Gap to the minimum value of:
 - PTP 45700 2+0: 39 μ s
 - PTP 45700 Hot Standby (1+1): 46 μ s
 - PTP 78700 2+0: 99 μ s
 - PTP 78700 Hot Standby (1+1): 106 μ s
- 4 Set TDD Frame Offset to 0. The link is not synchronized with a network-wide reference, so the offset is unimportant.

TDD frame design for network-wide synchronization

A network with multiple links may be synchronized with each Master ODU locked to the same network-wide reference. This requires the use of PTP-SYNC, with the associated GPS receiver.

Select the TDD Frame parameters for network-wide synchronized operation as follows:

- 1 Select the symmetric or asymmetric TDD burst duration for the network as Phase 1 and Phase 2 in the TDD frame. The options are listed in [TDD burst durations in PTP topology](#) on page 3-40.
- 2 In LINKPlanner, create a plan including all of the links in the network, selecting one of the network-wide synchronization options for each link.
- 3 In LINKPlanner, assign Phase 1 to either the Master-Slave or Slave-Master direction for each link.
- 4 Determine the common TDD frame duration for the network using the TDD Sync panel in LINKPlanner. LINKPlanner will identify the shortest frame duration that accommodates the round trip delay for the longest link and the furthest same-phase interference within the network. The recommended frame duration optimizes the overall capacity and efficiency of the network.
- 5 Determine the Slave Receive To Transmit Gap and TDD Frame Offset for each link in the network from the TDD Sync panel in LINKPlanner.
- 6 Configure PTP 700 links using the parameters provided by LINKPlanner.

Data network planning

This section describes factors to be considered when planning PTP 700 data networks.

Ethernet bridging

Table 66 summarizes Ethernet bridging specifications for PTP 700.

Table 66 PTP 700 Ethernet bridging specifications

Ethernet Bridging	Specification
Protocol	IEEE802.1; IEEE802.1p; IEEE802.3 compatible
QoS	PTP topology: Eight wireless interface priority queues based on these standards: IEEE 802.1p, IEEE 802.1Q, IEEE 802.1ah, IEEE 802.1ad, DSCP IPv4, DSCP IPv6, MPLS TC, DSCP in PPP Session Stage HCMP topology: Four wireless interface priority queues based on these standards: IEEE 802.1p, IEEE 802.1Q, IEEE 802.1ah, IEEE 802.1ad, DSCP IPv4, DSCP IPv6, MPLS TC, DSCP in PPP Session Stage
Interfaces	100BASE-TX, 1000BASE-T, 1000BASE-SX, 1000BASE-LX MDI/MDIX auto crossover supported
Max Ethernet frame size	9600 bytes
Service classes for traffic	PTP topology: Eight classes HCMP topology: Four classes

Practical Ethernet rates depend on network configuration and higher layer protocols. Over the air throughput is capped to the rate of the Ethernet interface at the receiving end of the link.

Layer two control protocols

PTP 700 identifies layer two control protocols (L2CPs) from the Ethernet destination address of bridged frames. The QoS classification can be separately configured for these protocols.

Table 67 Destination address in layer two control protocols

Destination address	Protocol
01-80-c2-00-00-00 to 01-80-c2-00-00-0f	IEEE 802.1 bridge protocols
01-80-c2-00-00-20 to 01-80-c2-00-00-2f	IEEE 802.1 Multiple Registration Protocol (MRP)
01-80-c2-00-00-30 to 01-80-c2-00-00-3f	IEEE 802.1ag, Connectivity Fault Management (CFM)
01-19-a7-00-00-00 to 01-19-a7-00-00-ff	Ring Automatic Protection Switching (R-APS)

Destination address	Protocol
00-e0-2b-00-00-04	Ethernet Automatic Protection Switching (EAPS)

Ethernet port allocation

Services

PTP 700 supports five distinct virtual circuits or services for Ethernet traffic, namely:

- Data Service
- Management Service, configured as:
 - In-Band Management
 - Out-of-Band Management
- Local Management Service
- Protection Service
- TD-90 Service

The Data, Out-of-Band Management, Local Management, Protection and TD-90 Services are carried in isolated virtual circuits. Ethernet frames in one service never cross over to another service. In-Band Management shares the same virtual circuit as the Data Service.

Port allocation rules

Decide how the three ODU Ethernet ports will be allocated to the services described above, based on the following rules.

No port can be allocated to more than one service, except that the Data Service and Management Service can share ports, in which case the combined service is described as Data with In-Band Management.

- Map **TD-90 Service** to **SFP Port** to enable the TD-90 SNMP Proxy function. The TD-90 cannot be used at an HCMP Master.
- In a Hot Standby link, map **Protection Service** to **Aux Port** or **SFP Port**.
- In a protected (Hot Standby 1+1 or 2+0) link, map the **Data Service** to exactly one of the remaining unused wired Ethernet ports. This will normally be the Main PSU port but need not be so.
- In an unprotected link, map the **Data Service** to at least one of the remaining unused wired Ethernet ports.
- Map the **Management Service** to **In-Band**, or to any combination of the remaining unused Ethernet ports. If the Management Service is mapped to **In-Band**, it shares all of the ports selected for the Data Service. The Management Service can be disabled by mapping to **None**.
- Map the **Local Management Service** to any combination of the remaining unused Ethernet ports. The Local Management Service can be disabled by mapping to **None**.

The LAN Configuration page ensures that the Management Agent can always be reached using either the **Management Service** or the **Local Management Service**.

Mapping of ports and services

The rules described above allow for the following 21 distinct combinations of services:

Table 68 Combinations of services for one ODU

Service combination	Figure
TD-90 + Data + Local Management	Figure 60
TD-90 + Data + Out-of-Band Management	Figure 61
TD-90 + Data with In-Band	
TD-90 + Data with In-Band + Local Management	Figure 62
TD-90 + Data with In-Band + Data with In-Band	
Protection + Data + Local Management	Figure 63
Protection + Data + Out-of-Band Management	Figure 64
Protection + Data with In-Band	
Protection + Data with In-Band + Local Management	
Data + Local Management	
Data + Local Management + Local Management	
Data + Out-of-Band Management	
Data + Out-of-Band Management + Out-of-Band Management	
Data + Out-of-Band Management + Local Management	Figure 65
Data + Data + Out-of-Band Management	
Data + Data + Local Management	
Data with In-Band	
Data with In-Band + Local Management	Figure 66
Data with In-Band + Local Management + Local Management	
Data with In-Band + Data with In-Band	
Data with In-Band + Data with In-Band + Local Management	
Data with In-Band + Data with In-Band + Data with In-Band	

[Figure 60](#) to [Figure 66](#) illustrate the internal routing of Ethernet traffic in selected examples of the service combinations listed in [Table 68](#).

Figure 60 Ports and Services: TD-90 + Data + Local

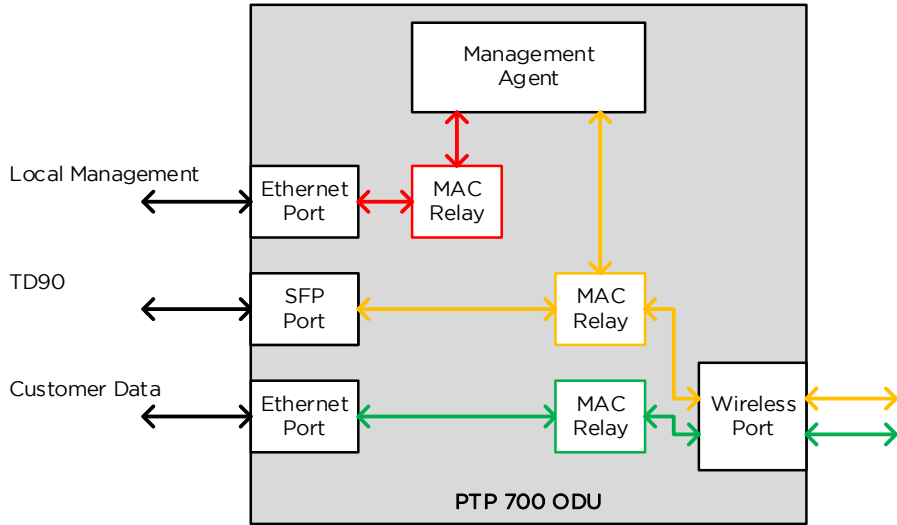


Figure 61 Ports and Services: TD-90 + Data + Out-of-Band

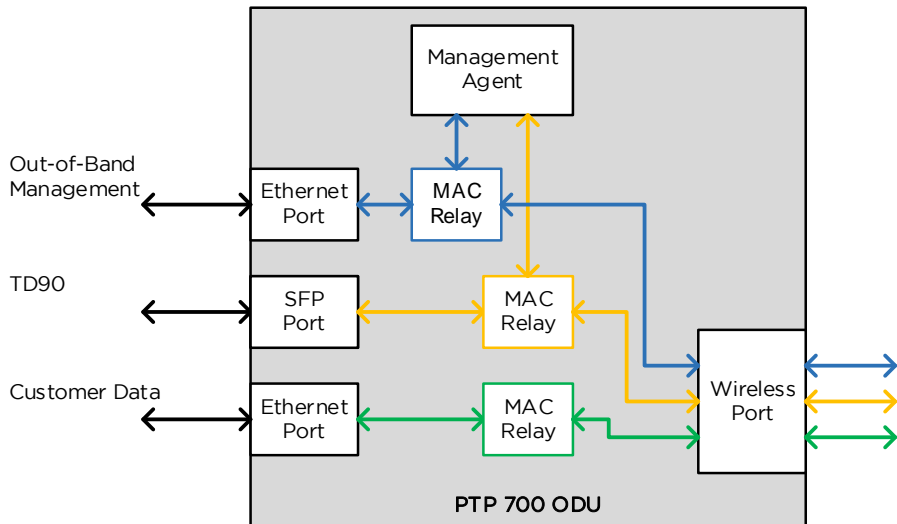


Figure 62 Ports and Services: TD-90 + Data with In-Band + Local

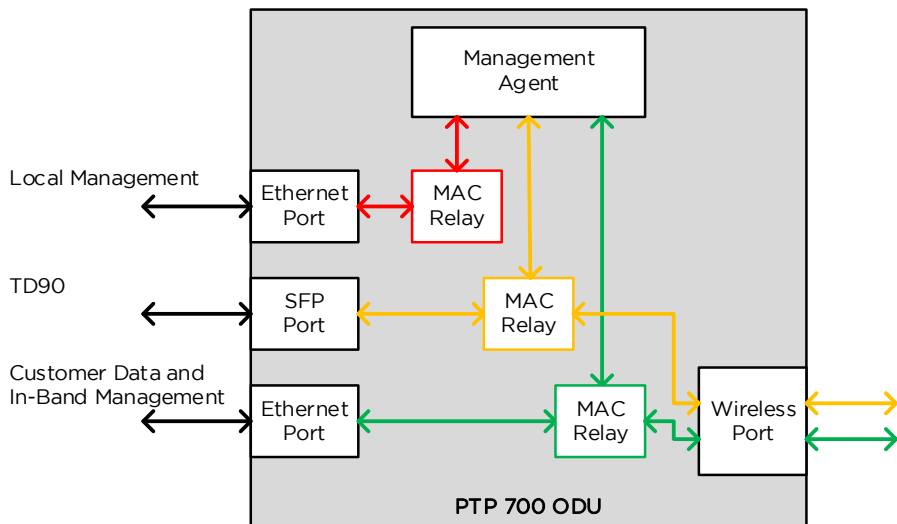


Figure 63 Ports and Services: Protection + Data + Local

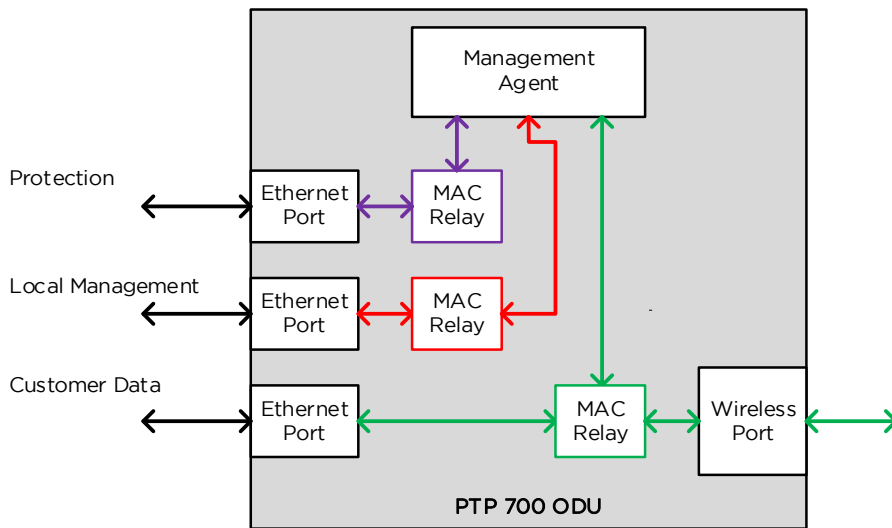


Figure 64 Ports and Services: Protection + Data + Out-of-Band

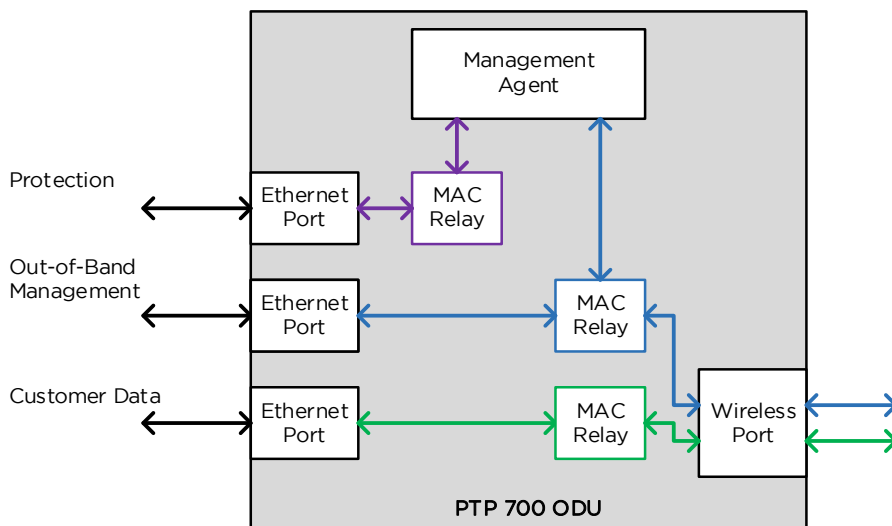


Figure 65 Ports and Services: Data + Out-of-Band + Local


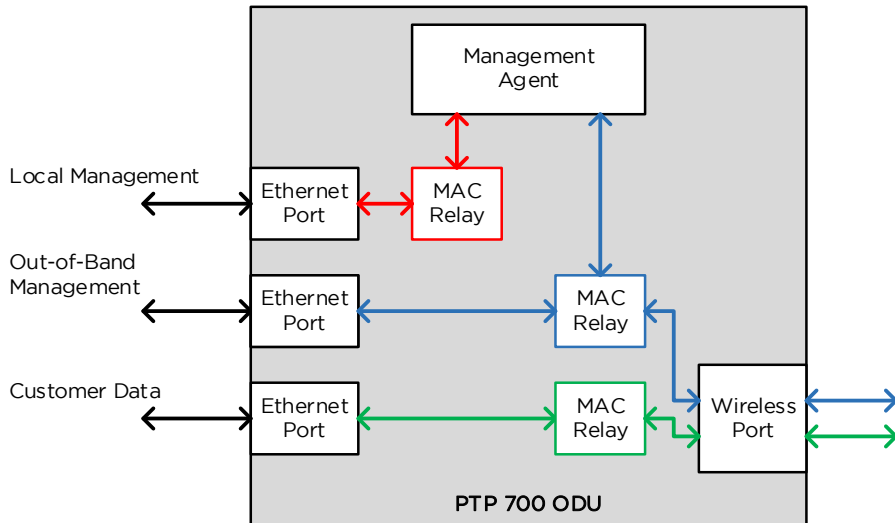


Figure 66 Ports and Services: Data with In-Band + Local



Use a compatible combination of services at both ends of the link

PTP 700 supports flexible allocation of ports to services, and this allocation may be different at the two ends of the link. However, the management service configuration must be compatible between the two ends of the link. Ensure that both ends of the link are configured for In-Band management, or both ends are configured for Out-of-Band Management, or the management services is disabled at both ends.

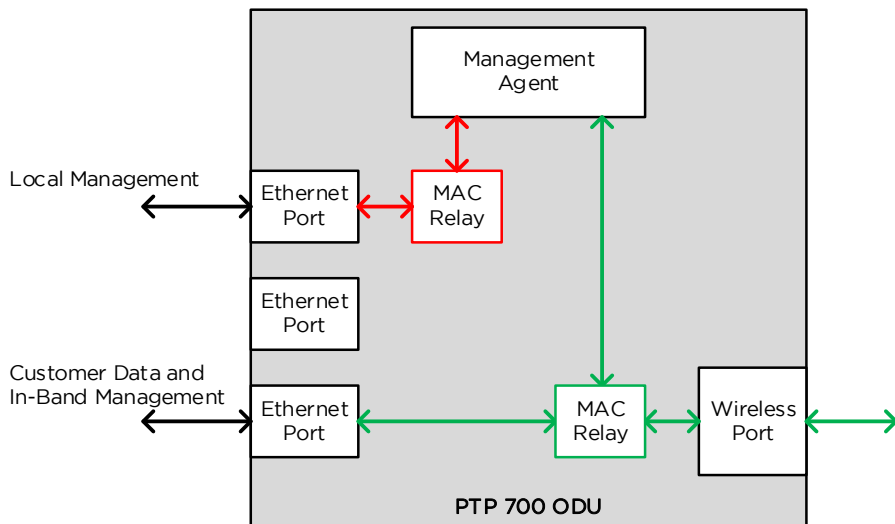

Warning Do not mix In-band and Out-of-Band management in the same link.

Additional port allocation rules

The three Ethernet ports are generally interchangeable, except for some specific additional rules listed below:

- If the system is to be used in a Synchronous Ethernet hierarchy, ensure that the upstream timing source is connected to the Main PSU or Fiber SFP ports (downstream devices can be connected to any port)
- If the system is operating as an IEEE 1588-2008 Transparent Clock, ensure the data path does not traverse the Copper SFP port.



Note The Main PSU port is always used to supply power to the ODU, even when it is not allocated to a data or management service.



Note The procedure for configuring these ports at the web interface is described in [LAN Configuration](#) page on page 6-60.



Note Transparent Clock is not supported over the SFP port with Copper connectivity.

VLAN membership

Decide if the IP interface of the ODU management agent will be connected in a VLAN. If so, decide if this is a standard (IEEE 802.1Q) VLAN or provider bridged (IEEE 802.1ad) VLAN, and select the VLAN ID for this VLAN.

Use of a separate management VLAN is strongly recommended. Use of the management VLAN helps to ensure that the ODU management agent cannot be accessed by customers.

If the system is to operate as an IEEE 1588-2008 Transparent Clock, decide if residence time corrections should be made to:

- All 1588 event frames, regardless of VLAN membership, or
- Only 1588 event frames in a specific customer bridged VLAN, or
- Only 1588 event frames in a specific provider bridged VLAN

Priority for management traffic

Choose the Ethernet and IP (DSCP) priority for management traffic generated within the ODU management agent. The priority should be selected so as to be consistent with existing policy on priority of management traffic in the network. Use of a high priority is strongly recommended to ensure that management traffic is not discarded if the link is overloaded.

Ensure that the priority assigned to management traffic is consistent with the quality of service scheme configured for bridged Ethernet traffic. If QoS for bridged traffic is based on the IP/MPLS scheme, set the DSCP management priority to map to a high priority queue. If QoS for bridged traffic is based on the Ethernet scheme, set the VLAN management priority to map to a high priority queue.

IP interface for NMS

Select the IP version for the IP interface of the ODU management agent. PTP 700 can operate in IPv4 mode, IPv6 mode, or in a dual IPv4/IPv6 mode. Choose one IPv4 address and/or one IPv6 address for the IP interface of the ODU management agent. The IP address or addresses must be unique and valid for the connected network segment and VLAN.

Find out the correct subnet mask (IPv4) or prefix length (IPv6) and gateway IP address for this network segment and VLAN.

Ensure that the design of the data network permits bidirectional routing of IP datagrams between network management systems and the ODUs. For example, ensure that the gateway IP address identifies a router or other gateway that provides access to the rest of the data network.

IP interface for integrated TD-90 management

The IPv4 interface in the TD-90 Service is configured automatically.

Quality of service for bridged Ethernet traffic

Decide how quality of service will be configured in PTP 700 to minimize frame loss and latency for high priority traffic. Wireless links often have lower data capacity than wired links or network equipment like switches and routers, and quality of service configuration is most critical at network bottlenecks.

In the PTP topology, PTP 700 provides eight queues for traffic waiting for transmission over the wireless link. Q0 is the lowest priority queue and Q7 is the highest priority queue. Traffic is scheduled using strict priority; in other words, traffic in a given queue is transmitted when all higher-priority queues are empty.

In the HCMP topology the general arrangement is similar but the ODU provides four queues for traffic awaiting transmission in each of the wireless links.

Layer 2 control protocols

Select the transmission queue for each of the recognised layer 2 control protocols (L2CP). These protocols are essential to correct operation of the Ethernet network, and are normally mapped to a high priority queue. Ethernet frames that match one of the recognized L2CPs are not subject to the Ethernet and IP/MPLS classification described below.

Priority schemes

Select the priority scheme based on Ethernet priority or IP/MPLS priority to match QoS policy in the rest of the data network. Ethernet priority is also known as Layer 2 or link layer priority. IP/MPLS priority is also known as Layer 3 or network layer priority.

Ethernet priority scheme

Ethernet priority is encoded in a VLAN tag. Use the Ethernet priority scheme if the network carries traffic in customer or service provider VLANs, and the priority in the VLAN tag has been set to indicate the priority of each type of traffic. Select a suitable mapping from the Ethernet priority to the eight PTP 700 queues.

An advantage of Ethernet priority is that any VLAN-tagged frame can be marked with a priority, regardless of the higher-layer protocols contained within the frame. A disadvantage of Ethernet priority is that the priority in the frame must be regenerated whenever traffic passes through a router.

IP/MPLS priority scheme

IP priority is determined by the DSCP value encoded in the ToS field in IPv4 and Traffic Class in IPv6. PTP 700 can locate the DSCP value in IP headers encapsulated within VLAN tags and/or PPP and PPPoE headers. The DSCP field provides 64 levels of priority. PTP 700 selects a suitable mapping from these DSCP values to the eight (PTP) or four (HCMP) PTP 700 queues.

The advantages of IP priority are that priority in the IP header is normally propagated transparently through a router, also the DSCP field supports a large number of distinct priority code points. A disadvantage of DSCP is that frames receive a single default classification if they contain a network layer protocol other than IPv4 or IPv6. This is controlled by the user setting the Unknown Network Layer Protocol queue value in the same QoS Configuration page under IP/MPLS QoS.

MPLS priority is encoded in the traffic class (TC) field in the outermost MPLS label. Select a suitable mapping from MPLS TC to the eight (PTP) or four (HCMP) PTP 700 queues.

Integrated management of TD-90

In the Integrated deployment scenario for the TD-90 antenna positioner, the IP interfaces for the PTP 700 and TD-90 are configured automatically, assuming an isolated Ethernet link.

Ensure that the connection between the PTP 700 and TD-90 is a dedicated point-to-point wired Ethernet cable. These interfaces should not be connected to a bridged management network.

“Daisy-chaining” PTP 700 links

When connecting two or more PTP 700 links together in a network (daisy-chaining), do not install direct copper Cat5e connections between the PSUs. Each PSU must be connected to the network terminating equipment using the LAN port. To daisy-chain PTP 700 links, install each ODU-to-ODU link using one of the following solutions:

- A copper Cat5e connection between the Aux ports of two ODUs. For details of the Ethernet standards supported and maximum permitted cable lengths, see [Ethernet standards and cable lengths](#) on page 2-27.
- A copper Cat5e connection between the Aux port of one ODU and the SFP port of the next ODU (using a copper SFP module). For details of the Ethernet standards supported and maximum permitted cable lengths, see [Ethernet standards and cable lengths](#) on page 2-27.
- Optical connections between the ODUs (SFP ports) using optical SFP modules at each ODU. For details of the Ethernet standards supported and maximum permitted cable lengths, see [SFP module kits](#) on page 2-33.

Green Ethernet switches

Do not connect PTP 700 units to Ethernet networking products that control the level of the transmitted Ethernet signal based on the measured length of the Ethernet link, for example Green Ethernet products manufactured by D-Link Corporation. The Ethernet interfaces in these networking products do not work correctly when connected directly to the PTP 700 PSU.

Network management planning

Planning for cnMaestro

When configured for management using cnMaestro, the PTP 700 ODU creates an outgoing HTTPS connection to the server from the IP interface of the management agent. To use the cnMaestro Cloud server, ensure that the management network allows outgoing connections to the public Internet. This normally involves the use of a security firewall to protect the management network from incoming connections. To use the On-Premises server, ensure that the server is reachable from the PTP 700 management network.

PTP 700 ODUs are authenticated to the cnMaestro server as part of the Onboarding process to prevent them from being claimed by other operators. To use the ODU's MAC Addresses for device authentication, ensure that the device is included in the list of PTP 700 device addresses on the server. To use Cambium ID for device authentication, ensure that the Cambium ID is known for the network, and ensure that a suitable Onboarding Key is configured on the server and issued to the installer.

To use a Fully Qualified Domain Name (FQDN) for the server address, ensure that the DNS feature is enabled and configured in the PTP 700. The FQDN (and thus DNS) is always used for the cnMaestro Cloud server.

The ODU contains the following third-party trusted root CA certificates:

- Amazon Root CA 1
- Amazon Root CA 2
- Comodo
- Digicert
- GeoTrust
- GoDaddy
- Let's Encrypt
- Verisign

Standard templates in the simplified web interface

PTP 700 provides four standard configuration templates. Standard configuration templates are applied by an operator with the Installer user-role using the simplified Installation Wizard in the web-based management interface. The standard configuration templates are pre-configured and optimized to address likely deployment use-cases.

[Table 69](#) lists the predefined configuration that is applied in each of the four standard installation templates in the simplified web interface. Attributes shown as "Input" will be configured by the Installer user in the simplified Installation Wizard. The remaining configuration will be reset to default values.



Note Security parameters are not modified by applying a standard template.

Table 69 PTP 700 Standard Templates

Category	Attribute	Most Robust	Best Range	Best Performance	HCMP
Wireless	Topology	PTP	PTP	PTP	HCMP
	Master Slave Mode	Configure	Configure	Configure	Configure
	Protection Mode	Disabled	Disabled	Disabled	Disabled
	Link Name	Configure	Configure	Configure	-
	Site Name	Configure	Configure	Configure	Configure
Network	IP Version	IPv4	IPv4	IPv4	IPv4
	IPv4 address	Configure	Configure	Configure	Configure
	Subnet Mask	Configure	Configure	Configure	Configure
	Gateway IP Address	Configure	Configure	Configure	Configure
	DNS Resolver	Disabled	Disabled	Disabled	Disabled
Mapping services	TD90 Service	None	None	None	None
	Data Service	Main PSU Port	Main PSU Port	Main PSU Port	Main PSU Port
	Management Service	In-Band	In-Band	In-Band	In-Band
	Local Management Service	None	None	None	None
Management Configuration	cnMaestro	Disabled	Disabled	Disabled	Disabled
Wireless	Access Method	Group Access	Group Access	Group Access	Group Access
	Group ID	Configure	Configure	Configure	Configure
	Max number of Slaves	--	-	-	8
	TDD Frame Configuration Mode	-	-	-	Standard Mode

Category	Attribute	Most Robust	Best Range	Best Performance	HCMP
	HCMP Link Symmetry	-	-	-	1 to 1
	HCMP Maximum Link Range	-	-	-	30 km
	ATPC HCMP Master Tx Power	-	-	-	29 dBm
	Dual Payload	Disabled	Enabled	Enabled	Enabled
	Max Modulation Mode	16QAM 0.63	256QAM 0.81	256QAM 0.81	256QAM 0.81
	Min Modulation Mode	BPSK	BPSK	BPSK	BPSK
	Link Optimization	IP Traffic	IP Traffic	IP Traffic	IP Traffic
	TDD Synchronization Mode	Disabled	Disabled	Disabled	Disabled
	Long Frame Duration	Disabled	Disabled	Disabled	Disabled
	Regulatory Band	95	95	95	95
	Channel Raster	5 MHz	5 MHz	5 MHz	10 MHz
	Channel Bandwidth	10 MHz	30 MHz	40 MHz	40 MHz
	Link Symmetry	Adaptive	Adaptive	Adaptive	Adaptive
	Spectrum Management Control	DSO	DSO	DSO	DSO
	Extended Spectrum Scanning	Disabled	Disabled	Disabled	Disabled
	Lower Centre Frequency	4405.0 MHz	4415.0 MHz	4420.0 MHz	4420.0 MHz
	Tx Color Code	A	A	A	A
	Rx Color Code	A	A	A	A
	Max Tx Power	Configure	Configure	Configure	Configure
	ATPC Peer Rx Max Power	-35	-35	-35	-35

Category	Attribute	Most Robust	Best Range	Best Performance	HCMP
	ATPC HCMP Master Target Rx Power	-52	-52	-52	-52
	Installation Mode	Configure	Configure	Configure	Configure
	Ranging Mode	100 km	100 km	40 km	-
	Antenna Gain	23 dBi	23 dBi	23 dBi	23 dBi
	Cable loss	0 dB	0 dB	0 dB	0 dB
Spectrum Expert	Asymmetric DSO	Enabled	Enabled	Enabled	Enabled
Management	SNMPv2	Enabled	Enabled	Enabled	Enabled
	Telnet	Disabled	Disabled	Disabled	Disabled
	Access Control	Disabled	Disabled	Disabled	Disabled
	SNMP Control of HTTP	Disabled	Disabled	Disabled	Disabled
	TFTP	Disabled	Disabled	Disabled	Disabled
	Debug Access	Disabled	Disabled	Disabled	Disabled
	XSFP	Enabled	Enabled	Enabled	Enabled
	RADIUS Client	Disabled	Disabled	Disabled	Disabled
User accounts	Identity User Accounts	Enabled	Enabled	Enabled	Enabled
Web properties	Distance Units	Metric	Metric	Metric	Metric
SNMP	SNMP Version	v1/2c	v1/2c	v1/2c	v1/2c

Custom templates in the simplified web interface

PTP 700 provides up to eight user-defined custom configuration templates. Custom configuration templates are applied by an operator with the Installer user-role using the Simplified Installation Wizard in the web-based management interface.

The custom configuration templates are created, imported, exported, and deleted by operators with the Security Officer or System Administrator user-roles using the Template Manager page in the web-based management interface.

Each configuration template captures the complete non-volatile configuration of the PTP 700 ODU, with the following exceptions:

- License Key

- Equipment configuration
 - Unit Name
 - Site Name
- Security configuration
- Antenna configuration
 - Antenna Type
 - Antenna Selection
- Web properties
- Selected editable controls

The editable controls are as follows:

- Master Slave Mode
- Target MAC Address
- Link Name
- Group ID
- Maximum Transmit Power
- Installation Mode
- IP Configuration

To create a new custom template, configure the ODU exactly as required for the particular application, select the editable controls that should be individually-configured by an Installer user in the simplified Installation Wizard, and create the template using a meaningful template name.

Custom templates can be exported from a PTP 700 ODU to a management PC, and then imported into other PTP 700 ODUs. By this means, it is possible to install the identical templates across an inventory of PTP 700 ODUs. Alternatively, it is possible to create different custom templates for each ODU.

Planning for SNMP operation

This section describes how to plan for PTP 700 links to be managed remotely using SNMP.

Supported MIBs

Ensure that the following MIBs are loaded on the network management system.

- RFC-1493. BRIDGE-MIB
- RFC-2233. IF-MIB
- RFC-3411. SNMP-FRAMEWORK-MIB
- RFC-3412. SNMP-MPD-MIB
- RFC-3413. SNMP-TARGET-MIB
- RFC-3414. SNMP-USER-BASED-SM-MIB
- RFC-3415. SNMP-VIEW-BASED-ACM-MIB
- RFC-3418. SNMPv2-MIB
- RFC-3826. SNMP-USM-AES-MIB

- RFC-4293 IP-MIB
- PTP 700 Series proprietary MIB



Note The proprietary MIBs are provided in the PTP 700 Series software download files in the support website (see [Contacting Cambium Networks](#) on page 1).

Supported notifications

The supported notifications are as follows:

- Cold start
- Wireless Link Up/Down
- Channel Change
- DFS Impulse Interference
- Authentication Failure
- Main PSU Port Up Down
- Aux Port Up Down
- SFP Port Up Down

Supported diagnostic alarms

PTP 700 supports the diagnostic alarms listed in [Table 229](#).

The web-based interface may be used to enable or disable generation of each supported SNMP notification or diagnostic alarm.

Enabling SNMP

Enable the SNMP interface for use by configuring the following attributes in the SNMP Configuration page:

- SNMP State (default disabled)
- SNMP Version (default SNMPv1/2c)
- SNMP Port Number (default 161)

SNMP Configuration Mode

Configuration attributes accessed using the SNMP Configuration Mode

The following configuration management attributes can be accessed via the SNMP interface using the SNMP Configuration Mode:

Table 70 Attributes accessed in SNMP Configuration Mode

Category	Attributes
Quality of Service	ethernetPriorityQueueMapping iPDS CPPriorityQueueMapping l2CPPriorityQueueMapping mPLSTCPriorityQueueMapping oOBPriorityQueueMapping unknownNetworkPriorityQueueMapping
Wireless Topology	wirelessTopology hotStandbyPreference masterSlaveMode protectionMode
Interface Configuration	auxPortAllocation auxPortAutoMdx auxPortAutoNegAdvertisement auxPortAutoNegotiation auxPortForcedConfiguration auxPortPowerOverEthernetOutput auxPortSSMTx dataPortPauseFrames dataPortWirelessDownAlert dNSPrimaryServer dNSResolver dNSServerInternetAddress dNSServerPortNumber dSCPManagementPriority ethernetLoopbackMode gatewayIPAddress IPv4Address IPv6Address IPv6GatewayAddress IPv6PrefixLength iPVersion mainPSUPortAllocation mainPSUPortAutoMdx mainPSUPortAutoNegAdvertisement mainPSUPortAutoNegotiation mainPSUPortForcedConfiguration mainPSUPortQLRxOverwrite mainPSUPortSSMTx managementNetworkAccessEnabled managementPortWirelessDownAlert sFPPortAllocation sFPPortAutoMdx sFPPortAutoNegAdvertisement sFPPortAutoNegotiation sFPPortForcedConfiguration sFPPortQLRxOverwrite sFPPortSSMTx subnetMask syncEEquipmentClock

Category	Attributes
	syncESlavePort syncETracking transparentClock transparentClockPort transparentClockVID transparentClockVLAN useVLANForManagementInterfaces vLANManagementPriority vLANManagementVID
Wireless Configuration	accessMethod antennaGain antennaSelection cableLoss channelBandwidth connectorizedAntennaType distanceUnits dualPayload extendedSpectrumScanning fixedRxFrequencyKHz fixedTxFrequencyKHz groupID hCMPMaximumLinkRange installationMode linkModeOptimization linkName linkSymmetry longFrameDuration lowerCenterFrequencyKHz masterReceivePowerThreshold maximumReceiveModulationMode maximumTransmitPower minmumDataModulationMode rangingMode regulatoryBand slaveScan spectrumManagementControl spectrumManagementControlRadar targetMACAddress targetRange tDDSSynchronizationMode transmitterChannels transmitterChannelsControl upperCenterFrequencyKHz userConfiguredMaxModulationMode

Category	Attributes
TDD Synchronization	cambiumSyncConfigurePort cambiumSyncOutputPort clusterMasterSlave maxBurstDuration pTPSyncSiteReference slaveReceiveToTransmitGap tDDFrameDuration tDDFrameOffset tDDHoldoverDuration tDDHoldoverMode tDDSyncDevice
TDD Frame	downlinkSlotsLimit downlinkSlotsRequest downlinkTimeslots dynamicAllocation hCMLinkSymmetry maximumNumberOfSlaves tDDFrameConfigurationMode uplinkSlotsLimit uplinkSlotsRequest uplinkTimeslots

Transactional model

The SNMP Configuration Mode uses a transactional model to commit changes to multiple attributes in a single action, applying context-sensitive validation equivalent to validation in the web-based interface.

Attributes that are hidden in the web-based interface on the basis of the configuration of preceding attributes are silently ignored without validation if the same configuration is applied in the SNMP Configuration Mode. For example, a change to `IPv6Address` is applied if `IPVersion` is set to `IPv6`, but ignored if `IPVersion` is set to `IPv4`.

The steps in making configuration changes using the Configuration Mode are shown in [Figure 67](#).

To abandon changes at any point without committing, SET SNMP Configuration Mode = Disabled.




Note Attributes accessed using SNMP Configuration Mode ([Table 69](#)) can only be changed using the configuration mode; any attempt to change these attributes using SNMP will be rejected if the configuration mode is disabled.

Read-write attributes that are not accessed using SNMP Configuration Mode can only be changed when SNMP Configuration Mode is disabled.



Note Attribute values that have been changed using SET messages while SNMP Configuration Mode is Enabled will not be apparent in a GET response for that attribute until after changes have been committed.

Figure 67 Flow chart for SNMP Configuration Mode

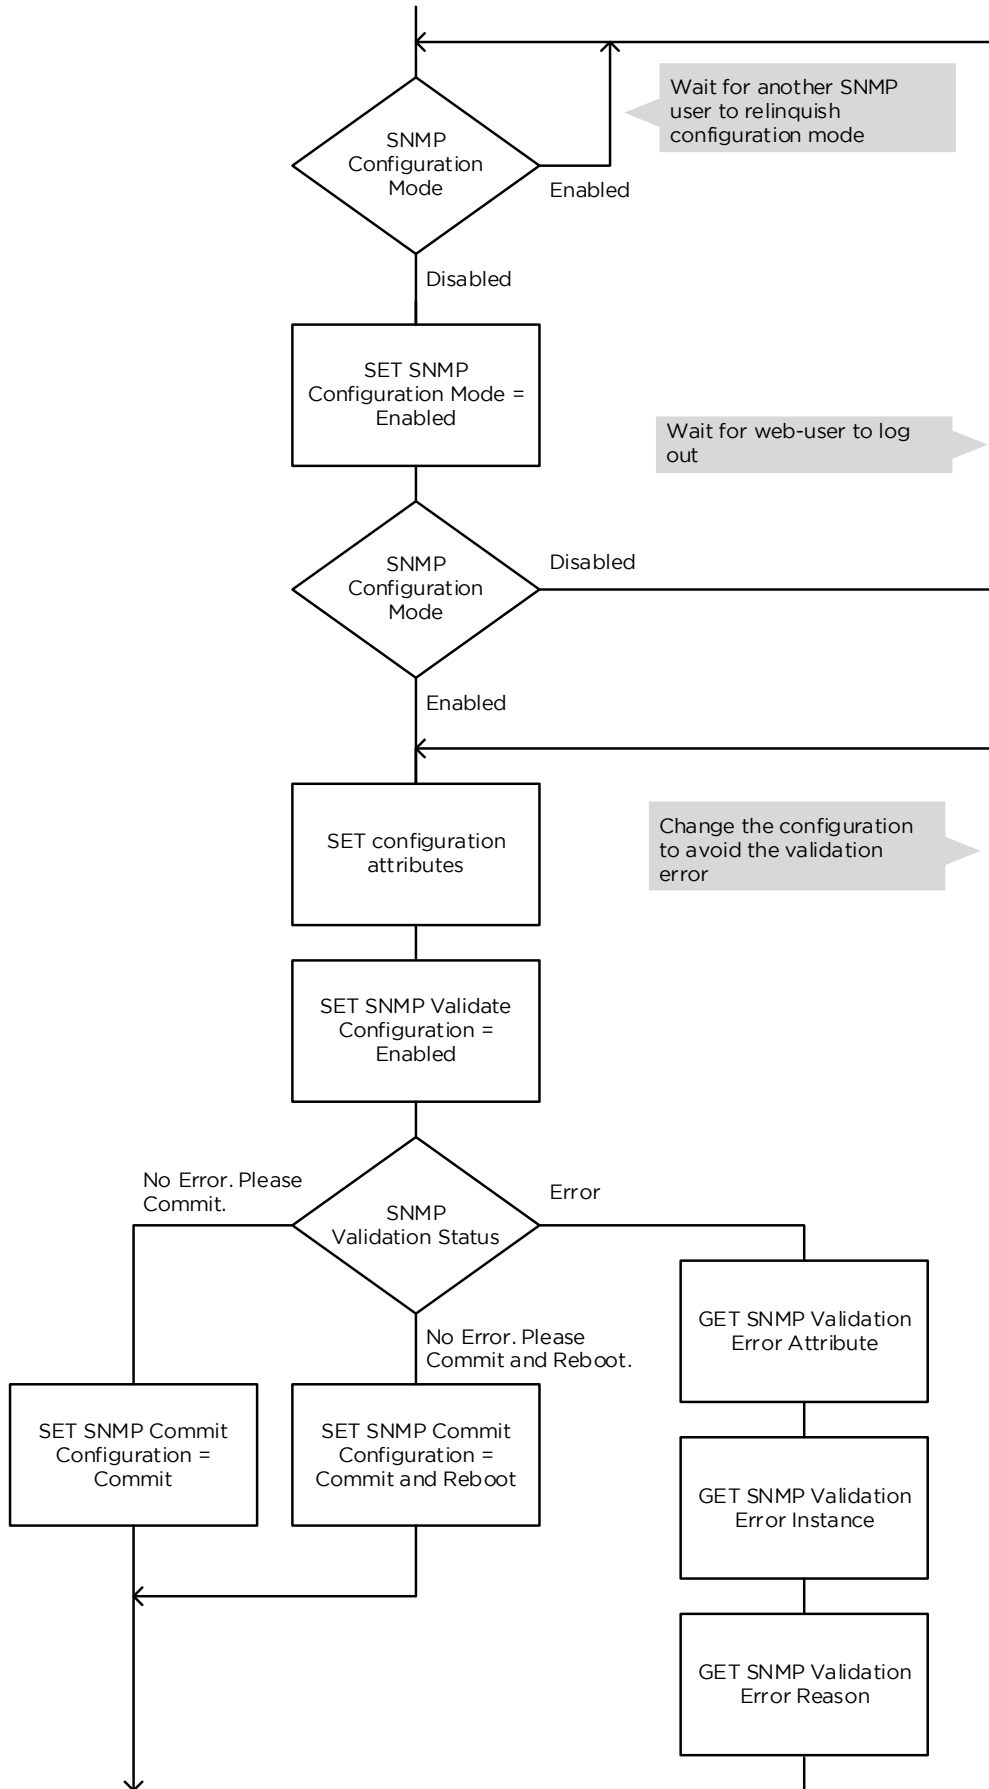

Further reading

For information about...	Refer to...
Planning for SNMPv3 security	Planning for SNMPv3 operation on page 3-73

Planning for Domain Name Service (DNS)

The PTP 700 Management Agent supports use of an external DNS server to resolve the Domain Name configured for network management servers to IPv4 or IPv6 addresses. PTP 700 allows one or two DNS servers to be configured.

To use DNS, establish the network address of the DNS server or servers as follows:

- DNS Server 1 IPv4 or IPv6 address
- DNS Server 1 Port Number (default 53)
- DNS Server 2 IPv4 or IPv6 address
- DNS Server 2 Port Number (default 53)

Select DNS Server 1 or DNS Server 2 as the Primary Server.

Establish some or all of the following server addresses as Fully Qualified Domain Names (FQDN):

- cnMaestro Server
- RADIUS Server
- SMTP Server
- SNMP Trap
- SNTP Server
- Syslog Server
- TFTP Server

The FQDN must comply with the following:

- Not longer than 63 characters
- Must contain some structure (at least one ".")
- Must consist of only the characters "0".."9", "a".."z", "A".."Z", "\$", hyphen, underscore, dot/stop, plus, exclamation, star, single quote, left parenthesis, right parenthesis

Hot Standby links

The four ODUs in a Hot Standby link are managed separately, through four unique IP addresses. The Primary ODU is not a proxy for managing the corresponding Secondary ODU.

Security planning

This section describes how to plan for PTP 700 links to operate in secure mode.

License key digital signature

The License Key used to enable individually-licensed ODU capabilities is signed with one, two or three digital signatures as follows:

- One signature
 - DSA algorithm with 1024-bit key size
- Two signatures
 - DSA algorithm with 2048-bit key size
 - DSA algorithm with 1024-bit key size
- Three signatures
 - Edwards Curve DSA (EdDSA) algorithm based on the Ed25519 curve
 - DSA algorithm with 2048-bit key size
 - DSA algorithm with 1024-bit key size

For the highest levels of security, ensure that License Keys have the EdDSA signature. If necessary, re-generate the License Key using the Cambium Networks support web site to obtain a key signed with the EdDSA algorithm.

The signatures are encoded in the following license key fields:

- EdDSA: /ZQ
- 2048-bit DSA: /Q
- 1024-bit DSA: /K

See [Figure 68](#) for an example of a License Key with signatures for all three algorithms.

Figure 68 Example License Key with EdDSA signature

```

/A 5800B8
/C other
/I 1
/P 1
/R 8 /R 35 /R 61 /R 62 /R 81
/H M2XF5UCQSLWOCQ63ALLV2CHSTM=====
/ZE 0
/ZQ 25BZ5EZZT3KZ4GXPLRZJXMMBUARPHPPFTT4VBDFZPHB6ZGXYHTTADNOLBDHYHTPVYNIXRF
J4IJESLBJ2XZQH3GG4HP4ABLB4XKC4SCY=
/Q K5S24QV2S4KMNAND3Z5GSVESFL7V47LI60GEC3AXQTULIR3PEHURWNTDT3EEOT2XREHEJAM
44JPF0INJ4BFTUVJUA4EQBCFUXSF63AQ=
/K BNPDGAABHXVPP3NBWUNV3ZDOB3RLTMLZ6MTKZ5JJVT7MYTUBIP4N6XENYEHKXHH/

```

The ODU validates the License Key using the most secure signature algorithm present.

Planning for SNTP operation



Note PTP 700 does not have a battery-powered clock, so the set time is lost each time the ODU is powered down. To avoid the need to manually set the time after each reboot, synchronize the ODU to an SNTP or cnMaestro server.

Before starting to configure Simple Network Time Protocol (SNTP):

- Identify the time zone and daylight saving requirements that apply to the system.
- If SNTP server synchronization is required, identify the details of one or two SNTP servers: FQDN or IP address, port number and server key.
- Establish if the NTP server is configured for authenticated operation. If NTP is authenticated, determine if authentication is based on MD5 or SHA-1, and identify the associated server keys.

Using the Security Wizard

Basic wireless encryption can be configured without using the Security Wizard, by using only the System Configuration page and optionally the Authorization Control page. For other security features, use the Security Wizard.

Plan to use the Security Wizard for the following:

- To configure the Key of Keys. The Key of Keys is used to encrypt non-volatile Sensitive Security Parameters (SSPs) for storage in the ODU. The Key of Keys is erased by the Zeroize SSPs action, meaning that stored SSPs cannot later be accessed, even by an attacker with internal access to the ODU memory.
- To configure Entropy. Entropy is an externally-generated random number used as a seed in many of the cryptographic methods implemented within the ODU. Generate Entropy in an approved random number generator and install in the ODU to enhance security in wireless encryption and HTTPS/TLS.
- To install user-supplied certificates and configure HTTPS/TLS for the web-based management interface.
- To install optional user-supplied device certificates for TLS-RSA. User-supplied device certificates provide enhanced security for TLS-RSA.
- To configure an optional banner providing warnings and notices to be read by the user before logging in to the ODU.



Note The Key of Keys attribute must be configured using the Security Wizard. It cannot be updated after the Security Wizard is submitted, except by first zeroizing SSPs.

Table 71 Security Wizard attributes

Item	Description	Quantity required
Key of Keys	An encryption key generated using a cryptographic key generator. The key length is dictated by the installed license key. License keys with AES-128 will require a key of keys of 128-bits. License keys with AES-256 will require a key of keys of 256-bits. The key output should be in ASCII hexadecimal characters.	Two per link. For greater security, each link end should be allocated a unique Key of Keys.
Entropy Configure	This must be of size 512 bits (128 hexadecimal characters), output from a random number generator.	Two per link. For greater security, each link end should be allocated a unique Entropy Configure.
User Defined Security Banner	The banner provides warnings and notices to be read by the user before logging in to the ODU. Use text that is appropriate to the network security policy.	Normally one per link. This depends upon network policy.

Planning for wireless encryption

AES license

Ensure that both ODUs have an AES license that allows the required key size for wireless encryption. The 128-bit AES license allows 128-bit encryption. The 256-bit AES license allows 128-bit and 256-bit encryption.

TLS-RSA can be used without an AES license, but this option supports only authentication and authorization, but not encryption.

Encryption algorithms

Select one of the three supported Encryption Algorithms:

- TLS-RSA
- TLS-PSK 128-bit
- TLS-PSK 256-bit

Configure the same algorithm at both ends of the link.

TLS-RSA provides authentication and authorization in any ODU. This option additionally provides encryption if both ODUs have an AES license.

TLS-PSK 128-bit provides authentication, authorization and encryption using a 128-bit pre-shared key. TLS-PSK 128-bit requires the 128-bit or 256-bit AES license.

TLS-PSK 256-bit provides authentication, authorization and encryption using a 256-bit pre-shared key. TLS-PSK 256-bit requires the 256-bit AES license.

TLS-RSA

Determine TLS Minimum Security Level. This is the smallest key size that will be allowed in a link between Master and Slave. For example, if the Master has TLS Minimum Security Level of 128-bit AES and the Slave has no AES license then the link cannot be established.

In a network where all links must be encrypted, set TLS Minimum Security Level to TLS RSA 128-bit or TLS RSA 256-bit to prevent inadvertent connection of unencrypted links.

Select Factory-installed or User-supplied device certificates. Factory-installed certificates are convenient because they can be used without needing to generate any additional cryptographic material. Generate and install User-supplied certificates where the additional security of 2048-bit key size is required, or where there is an operational requirement to be able to zeroize the private key in the event that the ODU may be compromised.

For Group Access, select Whitelist or Blacklist operation. The selection of Whitelist and Blacklist is independent of the selection of Factory or User-provided certificates.



Note The default combination of Blacklist and Factory certificates offers limited benefits in a deployed network, because the system will authorize any genuine PTP 700 ODU. Use the Whitelist and/or User-supplied certificates to ensure that access is allowed only for trusted ODUs.

A disadvantage of TLS-RSA is that the Whitelist must be updated if new hardware is introduced to the network. This may require access to both ends of the link. Consider using TLS-PSK if it is important to replace hardware without needing access to both ends of the link.

TLS-RSA is not available if Access Method is configured for Link Name Access.

Install User-supplied device certificates using the Security Wizard.

Table 72 User-supplied device certificates for wireless encryption

Item	Description	Quantity required
Device Private Key and Public Certificates	<p>An RSA private key of size 2048 bits, generated in either PKCS#1 or PKCS#8 format, unencrypted, and encoded in the ASN.1 DER format.</p> <p>An X.509 certificate containing a 2048-bit RSA public key, signed using SHA2-256, generated in PKCS#1 format, unencrypted, and encoded in the ASN.1 DER format.</p> <p>The public key certificate must have Common Name equal to the MAC address of the ODU as a string of 12 hexadecimal characters without punctuation. The hexadecimal characters can be upper or lower case.</p> <p>The public key certificate must form a valid pair with the private key.</p>	<p>Two pairs per link.</p> <p>These items are unique to the MAC address.</p>

Item	Description	Quantity required
Root CA Public Certificate	The self-signed public key certificate for the Root CA that signed the Device Certificate in the remote ODU. The Root CA must form a certificate chain with the Device Certificate without intermediate certificates.	Normally one per network.

TLS-PSK

Select the key size for the pre-shared key. This must be supported by AES licenses at each end of the link.

TLS-PSK can be used with Access Method of Link Access, Link Name Access and Group Access.

Ensure that the following cryptographic material is available.

Table 73 Pre-shared Key for wireless encryption

Item	Description	Quantity required
Wireless Link Encryption Key for AES	An encryption key generated using a cryptographic key generator. The key length is dictated by the selected AES encryption algorithm (128 or 256 bits).	One per link. The same encryption key is required at each link end.

Hot Standby

In a PTP link with Hot Standby, the Primary Master ODU does not connect to the Secondary Slave ODU (or the Secondary Master with the Primary Slave) and so encryption in the Primary and Secondary links can and should be configured independently.

When TLS-PSK is used, configure a PSK for the Primary link and a different PSK for the Secondary link.

Planning for HTTPS/TLS operation

Before starting to configure HTTPS/TLS operation, ensure that the cryptographic material listed in [Table 74](#) is available.

Table 74 HTTPS/TLS security material

Item	Description	Quantity required
TLS Private Key and Public Certificates	<p>An RSA private key of size 2048 bits, generated in either PKCS#1 or PKCS#8 format, unencrypted, and encoded in the ASN.1 DER format.</p> <p>An X.509 certificate containing a 2048-bit RSA public key, signed using SHA2-256, generated in PKCS#1 format, unencrypted, and encoded in the ASN.1 DER format.</p> <p>The public key certificate must have either:</p> <ul style="list-style-type: none"> • Common Name as a text string equal to the IPv4 or IPv6 address of the ODU. • Subject Alternative Name as an octet string to the IPv4 or IPv6 address of the ODU. <p>The public key certificate must form a valid pair with the private key.</p>	Two pairs per link. These items are unique to IP address.

Planning for protocols and ports

Determine the protocols that will be enabled at the Management Agent, and the port numbers to be used.

Table 75 Protocol and port settings

Item	Description	Quantity required
Port numbers for HTTP, HTTPS and Telnet	Port numbers allocated by the network.	As allocated by network.

Planning for SNMPv3 operation

SNMP security mode

Decide how SNMPv3 security will be configured.

MIB-based security management uses standard SNMPv3 MIBs to configure the user-based security model and the view-based access control model. This approach provides considerable flexibility, allowing a network operator to tailor views and security levels appropriate for different types of user. MIB-based security management may allow a network operator to take advantage of built-in security management capabilities of existing network managers.

Web-based security management allows an operator to configure users, security levels, privacy and authentication protocols, and passphrases using the PTP 700 web-based management interface. The capabilities supported are somewhat less flexible than those supported using the MIB-based security management, but will be sufficient in many applications. Selection of web-based management for SNMPv3 security disables the MIB-based security management. PTP 700 does not support concurrent use of MIB-based and web-based management of SNMPv3 security.

Web-based management of SNMPv3 security

Initial configuration of SNMPv3 security is available only to HTTP or HTTPS/TLS user accounts with security role of Security Officer.

Identify the minimum security role of HTTP or HTTPS/TLS user accounts that will be permitted access for web-based management of SNMPv3 security. The following roles are available:

- System Administrator
- Security Officer

Identify the format used for SNMP Engine ID. The following formats are available:

- MAC address (default)
- IPv4 address
- Text string
- IPv6 address

If SNMP Engine ID will be based on a text string, identify the text string required by the network management system. This is often based on some identifier that survives replacement of the PTP hardware.

Identify the user names and security roles of initial SNMPv3 users. Two security roles are available:

- Read Only
- System Administrator

Identify the security level for each of the security roles. Three security levels are available: (a) No authentication, no privacy; (b) Authentication, no privacy; (c) Authentication, privacy.

If authentication is required, identify the protocol. Two authentication protocols are available: MD5 or SHA.

If privacy will be used, identify the protocol. Two privacy protocols are available: DES or AES (an AES 128-bit or 256-bit capability upgrade must be purchased).

If authentication or authentication and privacy protocols are required, identify passphrases for each protocol for each SNMP user. It is considered good practice to use different passphrases for authentication and privacy. Passphrases must have length between 8 and 32 characters, and may contain any of the characters listed in [Table 76](#).

Table 76 Permitted character set for SNMPv3 passphrases

Character	Code	Character	Code
<space>	32	;	59
!	33	<	60
"	34	=	61
#	35	>	62
\$	36	?	63
%	37	@	64
&	38	A..Z	65..90
'	39	[91

Character	Code	Character	Code
(40	\	92
)	41]	93
*	42	^	94
+	43	_	95
,	44	`	96
-	45	a..z	97..122
.	46	{	123
/	47		124
0..9	48..57	}	125
:	58	~	126

Identify up to two SNMP users that will be configured to receive notifications (traps). Identify the Internet address (IPv4 or IPv6) and UDP port number of the associated SNMP manager.

SNMPv3 default configuration (MIB-based)

When SNMPv3 MIB-based Security Mode is enabled, the default configuration for the `usmUserTable` table is based on one initial user and four template users as listed in [Table 77](#).

Table 77 Default SNMPv3 users

Object	Entry 1
Name	initial
SecurityName	initial
AuthProtocol	usmHMACMD5AuthProtocol
PrivProtocol	usmDESPrivProtocol
StorageType	nonVolatile

Object	Entry 2	Entry 3
Name	templateMD5_DES	templateSHA_DES
SecurityName	templateMD5_DES	templateSHA_DES
AuthProtocol	usmHMACMD5AuthProtocol	usmHMACSAHAuthProtocol
PrivProtocol	usmDESPrivProtocol	usmDESPrivProtocol
StorageType	nonVolatile	nonVolatile

Object	Entry 4	Entry 5
Name	templateMD5_AES	templateSHA_AES
SecurityName	templateMD5_AES	templateSHA_AES
AuthProtocol	usmHMACMD5AuthProtocol	usmHMACSHAAuthProtocol
PrivProtocol	usmAESPrivProtocol	usmAESPrivProtocol
StorageType	nonVolatile	nonVolatile

VACM default configuration

The default user `initial` is assigned to VACM group `initial` in the `vacmSecurityToGroupTable` table. The template users are not assigned to a group.

PTP 700 creates default view trees and access as shown in [Table 78](#) and [Table 79](#).

Table 78 Default VACM view trees

Object	Entry 1	Entry 2
ViewName	internet	restricted
Subtree	1.3.6.1	1.3.6.1
Mask	""	""
Type	included	included
StorageType	nonVolatile	nonvolatile

Table 79 Default data fill for access table

Object	Entry 1	Entry 2
GroupName	initial	initial
ContextPrefix	""	""
SecurityLevel	authNoPriv	noAuthNoPriv
ContextMatch	exact	exact
ReadViewName	internet	restricted
WriteViewName	internet	""
NotifyViewName	internet	restricted
StorageType	nonVolatile	nonVolatile

Planning for RADIUS operation

Configure RADIUS where remote authentication is required for users of the web-based interface. Remote authentication has the following advantages:

- Control of passwords can be centralized.
- Management of user accounts can be more sophisticated. For example; users can be prompted by a network manager to change passwords at regular intervals. As another example, passwords can be checked for inclusion of dictionary words and phrases.
- Passwords can be updated without reconfiguring multiple network elements.
- User accounts can be disabled without reconfiguring multiple network elements.

Remote authentication has one significant disadvantage in a wireless link product such as PTP 700. If the wireless link is down, a unit on the remote side of the broken link may be prevented from contacting a RADIUS Server, with the result that users are unable to access the web-based interface.

One useful strategy would be to combine RADIUS authentication for normal operation with a single locally-authenticated user account for emergency use.

PTP 700 provides a choice of the following authentication methods:

- CHAP
- MS-CHAPv2

Ensure that the authentication method selected in PTP 700 is supported by the RADIUS server.



Note The RADIUS feature is disabled in FIPS 140-3 approved mode.

RADIUS attributes

If the standard RADIUS attribute session-timeout (Type 27) is present in a RADIUS response, PTP 700 sets a maximum session length for the authenticated user. If the attribute is absent, the maximum session length is infinite.

If the standard RADIUS attribute idle-timeout (Type 28) is present in a RADIUS response, PTP 700 overrides the Auto Logout Timer with this value in the authenticated session.

If the vendor-specific RADIUS attribute auth-role is present in a RADIUS response, PTP 700 selects the role for the authenticated user according to auth-role. The supported values of auth-role are as follows:

- 0: Invalid role. The user is not admitted.
- 1: Read Only
- 2: System Administrator
- 3: Security Officer
- 4: Installer

If the vendor-specific auth-role attribute is absent, but the standard service-type (Type 6) attribute is present, PTP 700 selects the role for the authenticated user according to service-type. The supported values of service-type are as follows:

- Login(1): Read Only
- Administrative(6): System Administrator
- NAS Prompt(7): Read Only

If the auth-role and service-type attributes are absent, PTP 700 selects the Read Only role.

The auth-role vendor-specific attribute is defined in [Table 80](#).

Table 80 Definition of auth-role vendor-specific attribute

Field	Length	Value	Notes
Type	1	26	Vendor-specific attribute.
Length	1	12	Overall length of the attribute.
Vendor ID	4	17713	The same IANA code used for the SNMP enterprise MIB.
Vendor Type	1	1	auth-role
Vendor Length	1	4	Length of the attribute specific part.
Attribute-Specific	4	0..3	Integer type (32-bit unsigned). Supported values: invalid-role(0), readonly-role(1), system-admin-role(2), security-officer-role(3), installer-role(4).

Planning for Single Sign-On (SSO) Operation

SSO simplifies access to PTP devices by allowing users to authenticate once with an Identity Provider (IDP) and gain access to multiple applications without re-entering credentials. This centralized authentication method enhances security and user convenience.

SSO must be configured when there is a need for centralized control over access to the web interface. With SSO, authentication is handled outside the radio by a centralized entity. This has the following advantages:

- **Centralized Authentication Control:** Consider using methods like usernames/passwords, fingerprint scans, or One-Time Passwords (OTP) for a more streamlined authentication process.
- **Multifactor Authentication (MFA):** Setting up MFA could add a layer of security.
- **Simplified User Management:** Adding or removing users might become easier without the need to reconfigure multiple network elements.
- **Flexible Authentication Methods:** Changing authentication methods and MFA settings could be more straightforward without requiring device reconfiguration.

During SSO, PTP products use SAML2 for communication with the IDP via the browser. Ensure that the IDP supports SAML2 to enable seamless integration.

Configuration requirements

1. **Entity IDs:** Ensure both SP and IDP are aware of each other's entity IDs.
2. **HTTP-POST Response URL:** Configure the IDP to send its response to the specified URL.
3. **Authentication Request URL:** Configure PTP devices with the URL for the IDP to redirect authentication requests.

IDPs usually allow users to export their metadata. IDP information needed for configuring the PTP device can be obtained from this metadata. Typically, the IDP also needs to recognize the PTP device. PTP information required for configuring the IDP can be obtained from the **SSO Configuration** page.

Assertions

The Authentication Statement contained in Assertions may have the attributes **AuthnInstant** and **SessionNotOnOrAfter**. If present, the difference between these two attributes determines the session expiry period. After this period, the user must re-login. If these attributes are not present, the Web Absolute Timeout determines the session length.

User role mapping

- Configure a table through the SSO configuration page in PTP devices to map IDP User Roles to SP User Roles.
- Configure the attribute name containing the IDP User Role value in the SSO configuration page.

Important considerations

- User roles in PTP devices are mutually exclusive (for example Security Officer, Administrator, Installer, Read Only).
- Ensure the IDP sends mutually exclusive user roles in assertions to avoid mapping issues.

Internally-generated random keys

In networks that carry sensitive data, random security keys are in an approved external system. This is the only approach that guarantees the highest level of entropy. Random keys are required for the following security parameters:

- Key of keys
- Entropy
- TLS-PSK in the Security Wizard
- TLS-PSK in the Configuration page

PTP 700 provides an alternative option to generate random keys within the ODU. This method cannot match the entropy of the best external random number generators but offers a useful option where ultimate security is not needed.

Integrated management of TD-90

In the Integrated deployment scenario for the TD-90 antenna positioner, the TD-90 is connected directly to the PTP 700 SFP Port. The PTP 700 and TD-90 communicate without encryption or authentication, using SNMPv1 or SNMPv2c.

Ensure that the connection between PTP 700 and TD-90 is a dedicated point-to-point wired Ethernet cable.



Warning When using integrated management of the TD-90, do not interconnect the TD-90 and PTP 700 via a bridged management network.

Planning for FIPS 140-3 operation

If the link is to operate in FIPS 140-3 secure mode, ensure that the following cryptographic material is generated using a FIPS-approved cryptographic generator:

- Key of Keys
- Entropy Configure
- TLS Private Key and Public Certificates, RSA 2048-bit key size, signed using the SHA2-256 Secure Hash Algorithm.
- For TLS-RSA:
 - Device Private Key and Public Certificates RSA 2048-bit key size, signed using the SHA2-256 Secure Hash Algorithm.
 - Root CA Certificate for Device Certificates.
- For TLS-PSK:
 - Wireless Link Pre-shared Key for AES

Internal generation of random numbers is not available in the FIPS-approved mode.

Ensure that the web browsers used are enabled for HTTPS/TLS operation using FIPS-approved cipher specifications.

Ensure that following attributes of user accounts for the web-based management interface have been configured to match the operator's network security policy:

- Auto Logout Period.
- Web Absolute Timeout.
- Maximum Number of Login Attempts.
- Login Attempt Lockout.
- Minimum Password Change Period.
- Password Expiry Period.
- Webpage Session Control

Ensure that the following are configured:

- User account passwords compliant with the network security policy, and minimum length 15 characters.

Ensure that the License Key has the EdDSA signature.



Attention Configure all the above correctly to ensure that PTP 700 is operating in compliance with the FIPS 140-3 validation.

Further reading

For information about...	Refer to...
Generating security material for the HTTPS/TLS interface	Planning for HTTPS/TLS operation on page 3-72

System threshold, output power and link loss

Use the following tables to look up the system threshold (dBm), output power (dBm) and maximum link loss (dB) per channel bandwidth and modulation mode:

Platform variant	Band	Mode	System threshold and output power (dBm)	Maximum link loss (dB)
PTP 45700 Connectorized+ Integrated	4.7 GHz	IP	Table 81	Table 82
		TDM	Table 83	Table 84
	4.9 GHz	IP	Table 85	Table 86
		TDM	Table 87	Table 88
	5.1 GHz and 5.2 GHz	IP	Table 89	Table 90
		TDM	Table 91	Table 92
	5.4 GHz	IP	Table 93	Table 94
		TDM	Table 95	Table 96
	5.8 GHz	IP	Table 97	Table 98
		TDM	Table 99	Table 100
PTP 45700 Connectorized PTP 45700 Beam Steering	4.7 GHz	IP	Table 101	Table 102
		TDM	Table 103	Table 104
	4.9 GHz	IP	Table 105	Table 106
		TDM	Table 107	Table 108
	5.1 GHz and 5.2 GHz	IP	Table 109	Table 110
		TDM	Table 111	Table 112
	5.4 GHz	IP	Table 113	Table 114
		TDM	Table 115	Table 116
	5.8 GHz	IP	Table 117	Table 118
		TDM	Table 119	Table 120
PTP 78700	7.2 GHz	IP	Table 121	Table 122
		TDM	Table 123	Table 124
	7.8 GHz	IP	Table 125	Table 126
		TDM	Table 127	Table 128
	8.4 GHz	IP	Table 129	Table 130
		TDM	Table 131	Table 132



Note Maximum link loss has been calculated assuming use of the integrated antenna in PTP 45700 Connectorized+Integrated ODUs and PTP 78700 Integrated ODUs



Note For the discontinued Connectorized ODUs Cambium part number C045070B003A and C045070B009A use the tables for Connectorized+Integrated ODUs.

Connectorized+Integrated ODUs

Table 81 4.7 GHz IP mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.5	-92.0	-90.2	-89.0	-87.2	-86.0	-85.5	28
QPSK 0.63 single	-90.0	-88.5	-86.7	-85.5	-83.7	-82.5	-82.0	27
QPSK 0.87 single	-86.0	-84.5	-82.7	-81.5	-79.7	-78.5	-77.9	26
16QAM 0.63 single	-84.1	-82.6	-80.8	-79.5	-77.8	-76.5	-76.0	25
16QAM 0.63 dual	-81.0	-79.5	-77.8	-76.5	-74.8	-73.5	-73.0	25
16QAM 0.87 single	-79.4	-77.9	-76.1	-74.8	-73.1	-71.8	-71.3	24
16QAM 0.87 dual	-76.3	-74.8	-73.0	-71.8	-70.0	-68.8	-68.3	24
64QAM 0.75 single	-76.4	-74.9	-73.1	-71.9	-70.1	-68.9	-68.4	23
64QAM 0.75 dual	-73.3	-71.8	-70.0	-68.8	-67.0	-65.8	-65.3	23
64QAM 0.92 single	-72.6	-71.1	-69.4	-68.1	-66.3	-65.1	-64.6	23
64 QAM 0.92 dual	-69.4	-67.9	-66.1	-64.8	-63.1	-61.8	-61.3	23
256QAM 0.81 single	-69.4	-67.9	-66.1	-64.8	-63.1	-61.8	-61.3	23
256QAM 0.81 dual	-65.8	-64.3	-62.5	-61.3	-59.5	-58.3	-57.8	23

Table 82 4.7 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	166.7	165.2	163.4	162.2	160.4	159.2	158.7
QPSK 0.63 single	162.2	160.7	158.9	157.7	155.9	154.7	154.2
QPSK 0.87 single	157.2	155.7	153.9	152.7	150.9	149.7	149.1
16QAM 0.63 single	154.3	152.8	151.0	149.7	148.0	146.7	146.2
16QAM 0.63 dual	149.8	148.2	146.5	145.2	143.5	142.2	141.7
16QAM 0.87 single	148.6	147.1	145.3	144.0	142.3	141.0	140.5
16QAM 0.87 dual	145.5	144.0	142.2	141.0	139.2	138.0	137.5
64QAM 0.75 single	144.6	143.1	141.3	140.1	138.3	137.1	136.6
64QAM 0.75 dual	141.5	140.0	138.2	137.0	135.2	134.0	133.5
64QAM 0.92 single	140.8	139.3	137.6	136.3	134.5	133.3	132.8
64 QAM 0.92 dual	137.6	136.1	134.3	133.0	131.3	130.0	129.5
256QAM 0.81 single	137.6	136.1	134.3	133.0	131.3	130.0	129.5
256QAM 0.81 dual	134.0	132.5	130.7	129.5	127.7	126.5	126.0

Table 83 4.7 GHz TDM mode: System threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.5	-92.0	-90.2	-89.0	-87.2	-86.0	-85.5	26
QPSK 0.63 single	-87.0	-85.5	-83.7	-82.5	-80.7	-79.5	-79.0	25
QPSK 0.87 single	-83.0	-81.4	-79.7	-78.4	-76.7	-75.4	-74.9	24
16QAM 0.63 single	-81.0	-79.5	-77.7	-76.5	-74.7	-73.5	-73.0	23
16QAM 0.63 dual	-78.0	-76.5	-74.7	-73.4	-71.7	-70.4	-69.9	23
16QAM 0.87 single	-76.2	-74.7	-72.9	-71.7	-69.9	-68.7	-68.2	23
16QAM 0.87 dual	-73.1	-71.6	-69.8	-68.6	-66.8	-65.6	-65.0	23
64QAM 0.75 single	-73.1	-71.6	-69.8	-68.6	-66.8	-65.6	-65.1	23
64QAM 0.75 dual	-69.9	-68.4	-66.6	-65.3	-63.6	-62.3	-61.8	23
64QAM 0.92 single	-70.8	-69.3	-67.5	-66.3	-64.5	-63.3	-62.8	23
64 QAM 0.92 dual	-67.4	-65.9	-64.1	-62.9	-61.1	-59.9	-59.4	23
256QAM 0.81 single	-69.4	-67.9	-66.1	-64.8	-63.1	-61.8	-61.3	23
256QAM 0.81 dual	-65.8	-64.3	-62.5	-61.3	-59.5	-58.3	-57.8	23

Table 84 4.7 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	164.7	163.2	161.4	160.2	158.4	157.2	156.7
QPSK 0.63 single	157.2	155.7	153.9	152.7	150.9	149.7	149.2
QPSK 0.87 single	152.2	150.6	148.9	147.6	145.9	144.6	144.1
16QAM 0.63 single	149.2	147.7	145.9	144.7	142.9	141.7	141.2
16QAM 0.63 dual	144.7	143.2	141.4	140.2	138.4	137.1	136.6
16QAM 0.87 single	144.4	142.9	141.1	139.9	138.1	136.9	136.4
16QAM 0.87 dual	141.3	139.8	138.0	136.8	135.0	133.8	133.2
64QAM 0.75 single	141.3	139.8	138.0	136.8	135.0	133.8	133.3
64QAM 0.75 dual	138.1	136.6	134.8	133.5	131.8	130.5	130.0
64QAM 0.92 single	139.0	137.5	135.7	134.5	132.7	131.5	131.0
64 QAM 0.92 dual	135.6	134.1	132.3	131.1	129.3	128.1	127.6
256QAM 0.81 single	137.6	136.1	134.3	133.0	131.3	130.0	129.5
256QAM 0.81 dual	134.0	132.5	130.7	129.5	127.7	126.5	126.0

Table 85 4.9 GHz IP mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.6	-92.1	-90.3	-89.1	-87.3	-86.1	-85.6	28
QPSK 0.63 single	-90.1	-88.6	-86.8	-85.6	-83.8	-82.6	-82.1	27
QPSK 0.87 single	-86.1	-84.6	-82.8	-81.6	-79.8	-78.6	-78.0	26
16QAM 0.63 single	-84.2	-82.7	-80.9	-79.6	-77.9	-76.6	-76.1	25
16QAM 0.63 dual	-81.1	-79.6	-77.9	-76.6	-74.9	-73.6	-73.1	25
16QAM 0.87 single	-79.5	-78.0	-76.2	-74.9	-73.2	-71.9	-71.4	24
16QAM 0.87 dual	-76.4	-74.9	-73.1	-71.9	-70.1	-68.9	-68.4	24
64QAM 0.75 single	-76.5	-75.0	-73.2	-72.0	-70.2	-69.0	-68.5	23
64QAM 0.75 dual	-73.4	-71.9	-70.1	-68.9	-67.1	-65.9	-65.4	23
64QAM 0.92 single	-72.7	-71.2	-69.5	-68.2	-66.4	-65.2	-64.7	23
64 QAM 0.92 dual	-69.5	-68.0	-66.2	-64.9	-63.2	-61.9	-61.4	23
256QAM 0.81 single	-69.5	-68.0	-66.2	-64.9	-63.2	-61.9	-61.4	23
256QAM 0.81 dual	-65.9	-64.4	-62.6	-61.4	-59.6	-58.4	-57.9	23

Table 86 4.9 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	167.0	165.5	163.7	162.5	160.7	159.5	159.0
QPSK 0.63 single	162.5	161.0	159.2	158.0	156.2	155.0	154.5
QPSK 0.87 single	157.5	156.0	154.2	153.0	151.2	150.0	149.4
16QAM 0.63 single	154.6	153.1	151.3	150.0	148.3	147.0	146.5
16QAM 0.63 dual	150.1	148.5	146.8	145.5	143.8	142.5	142.0
16QAM 0.87 single	148.9	147.4	145.6	144.3	142.6	141.3	140.8
16QAM 0.87 dual	145.8	144.3	142.5	141.3	139.5	138.3	137.8
64QAM 0.75 single	144.9	143.4	141.6	140.4	138.6	137.4	136.9
64QAM 0.75 dual	141.8	140.3	138.5	137.3	135.5	134.3	133.8
64QAM 0.92 single	141.1	139.6	137.9	136.6	134.8	133.6	133.1
64 QAM 0.92 dual	137.9	136.4	134.6	133.3	131.6	130.3	129.8
256QAM 0.81 single	137.9	136.4	134.6	133.3	131.6	130.3	129.8
256QAM 0.81 dual	134.3	132.8	131.0	129.8	128.0	126.8	126.3

Table 87 4.9 GHz TDM mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.6	-92.1	-90.3	-89.1	-87.3	-86.1	-85.6	26
QPSK 0.63 single	-87.1	-85.6	-83.8	-82.6	-80.8	-79.6	-79.1	25
QPSK 0.87 single	-83.1	-81.5	-79.8	-78.5	-76.8	-75.5	-75.0	24
16QAM 0.63 single	-81.1	-79.6	-77.8	-76.6	-74.8	-73.6	-73.1	23
16QAM 0.63 dual	-78.1	-76.6	-74.8	-73.5	-71.8	-70.5	-70.0	23
16QAM 0.87 single	-76.3	-74.8	-73.0	-71.8	-70.0	-68.8	-68.3	23
16QAM 0.87 dual	-73.2	-71.7	-69.9	-68.7	-66.9	-65.7	-65.1	23
64QAM 0.75 single	-73.2	-71.7	-69.9	-68.7	-66.9	-65.7	-65.2	23
64QAM 0.75 dual	-70.0	-68.5	-66.7	-65.4	-63.7	-62.4	-61.9	23
64QAM 0.92 single	-70.9	-69.4	-67.6	-66.4	-64.6	-63.4	-62.9	23
64 QAM 0.92 dual	-67.5	-66.0	-64.2	-63.0	-61.2	-60.0	-59.5	23
256QAM 0.81 single	-69.5	-68.0	-66.2	-64.9	-63.2	-61.9	-61.4	23
256QAM 0.81 dual	-65.9	-64.4	-62.6	-61.4	-59.6	-58.4	-57.9	23

Table 88 4.9 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	165.0	163.5	161.7	160.5	158.7	157.5	157.0
QPSK 0.63 single	157.5	156.0	154.2	153.0	151.2	150.0	149.5
QPSK 0.87 single	152.5	150.9	149.2	147.9	146.2	144.9	144.4
16QAM 0.63 single	149.5	148.0	146.2	145.0	143.2	142.0	141.5
16QAM 0.63 dual	145.0	143.5	141.7	140.5	138.7	137.4	136.9
16QAM 0.87 single	144.7	143.2	141.4	140.2	138.4	137.2	136.7
16QAM 0.87 dual	141.6	140.1	138.3	137.1	135.3	134.1	133.5
64QAM 0.75 single	141.6	140.1	138.3	137.1	135.3	134.1	133.6
64QAM 0.75 dual	138.4	136.9	135.1	133.8	132.1	130.8	130.3
64QAM 0.92 single	139.3	137.8	136.0	134.8	133.0	131.8	131.3
64 QAM 0.92 dual	135.9	134.4	132.6	131.4	129.6	128.4	127.9
256QAM 0.81 single	137.9	136.4	134.6	133.3	131.6	130.3	129.8
256QAM 0.81 dual	134.3	132.8	131.0	129.8	128.0	126.8	126.3

Table 89 5.1/5.2 GHz IP mode: system threshold per channel bandwidth and o/p power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.6	-92.1	-90.3	-89.1	-87.3	-86.1	-85.6	28
QPSK 0.63 single	-90.1	-88.6	-86.8	-85.6	-83.8	-82.6	-82.1	27
QPSK 0.87 single	-86.1	-84.6	-82.8	-81.6	-79.8	-78.6	-78.0	26
16QAM 0.63 single	-84.2	-82.7	-80.9	-79.7	-77.9	-76.6	-76.1	25
16QAM 0.63 dual	-81.1	-79.6	-77.9	-76.6	-74.9	-73.6	-73.1	25
16QAM 0.87 single	-79.5	-78.0	-76.2	-75.0	-73.2	-72.0	-71.4	24
16QAM 0.87 dual	-76.4	-74.9	-73.2	-71.9	-70.1	-68.9	-68.4	24
64QAM 0.75 single	-76.6	-75.0	-73.3	-72.0	-70.3	-69.0	-68.5	23
64QAM 0.75 dual	-73.5	-71.9	-70.2	-68.9	-67.2	-65.9	-65.4	23
64QAM 0.92 single	-72.8	-71.3	-69.5	-68.3	-66.5	-65.3	-64.8	23
64 QAM 0.92 dual	-69.6	-68.1	-66.3	-65.1	-63.3	-62.1	-61.5	23
256QAM 0.81 single	-69.6	-68.1	-66.4	-65.1	-63.3	-62.1	-61.6	23
256QAM 0.81 dual	-66.2	-64.7	-62.9	-61.6	-59.9	-58.6	-58.1	23

Table 90 5.1/5.2 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	168.2	166.7	164.9	163.7	161.9	160.7	160.2
QPSK 0.63 single	163.7	162.2	160.4	159.2	157.4	156.2	155.7
QPSK 0.87 single	158.7	157.2	155.4	154.2	152.4	151.2	150.6
16QAM 0.63 single	155.8	154.3	152.5	151.3	149.5	148.2	147.7
16QAM 0.63 dual	151.3	149.7	148.0	146.7	145.0	143.7	143.2
16QAM 0.87 single	150.1	148.6	146.8	145.6	143.8	142.6	142.0
16QAM 0.87 dual	147.0	145.5	143.8	142.5	140.7	139.5	139.0
64QAM 0.75 single	146.2	144.6	142.9	141.6	139.9	138.6	138.1
64QAM 0.75 dual	143.1	141.5	139.8	138.5	136.8	135.5	135.0
64QAM 0.92 single	142.4	140.9	139.1	137.9	136.1	134.9	134.4
64 QAM 0.92 dual	139.2	137.7	135.9	134.7	132.9	131.7	131.1
256QAM 0.81 single	139.2	137.7	136.0	134.7	132.9	131.7	131.2
256QAM 0.81 dual	135.8	134.3	132.5	131.2	129.5	128.2	127.7

Table 91 5.1/5.2 GHz TDM mode: system threshold per channel bandwidth and o/p pwr (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.6	-92.1	-90.3	-89.1	-87.3	-86.1	-85.6	26
QPSK 0.63 single	-87.1	-85.6	-83.8	-82.6	-80.8	-79.6	-79.1	25
QPSK 0.87 single	-83.1	-81.6	-79.8	-78.5	-76.8	-75.5	-75.0	24
16QAM 0.63 single	-81.1	-79.6	-77.9	-76.6	-74.8	-73.6	-73.1	23
16QAM 0.63 dual	-78.1	-76.6	-74.8	-73.6	-71.8	-70.6	-70.0	23
16QAM 0.87 single	-76.3	-74.8	-73.1	-71.8	-70.1	-68.8	-68.3	23
16QAM 0.87 dual	-73.2	-71.7	-70.0	-68.7	-67.0	-65.7	-65.2	23
64QAM 0.75 single	-73.3	-71.8	-70.0	-68.7	-67.0	-65.7	-65.2	23
64QAM 0.75 dual	-70.1	-68.6	-66.8	-65.5	-63.8	-62.5	-62.0	23
64QAM 0.92 single	-71.0	-69.5	-67.8	-66.5	-64.7	-63.5	-63.0	23
64 QAM 0.92 dual	-67.7	-66.2	-64.4	-63.2	-61.4	-60.2	-59.6	23
256QAM 0.81 single	-69.6	-68.1	-66.4	-65.1	-63.3	-62.1	-61.6	23
256QAM 0.81 dual	-66.2	-64.7	-62.9	-61.6	-59.9	-58.6	-58.1	23

Table 92 5.1/5.2 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	166.2	164.7	162.9	161.7	159.9	158.7	158.2
QPSK 0.63 single	158.7	157.2	155.4	154.2	152.4	151.2	150.7
QPSK 0.87 single	153.7	152.2	150.4	149.1	147.4	146.1	145.6
16QAM 0.63 single	150.7	149.2	147.5	146.2	144.4	143.2	142.7
16QAM 0.63 dual	146.2	144.7	142.9	141.7	139.9	138.7	138.2
16QAM 0.87 single	145.9	144.4	142.7	141.4	139.7	138.4	137.9
16QAM 0.87 dual	142.8	141.3	139.6	138.3	136.6	135.3	134.8
64QAM 0.75 single	142.9	141.4	139.6	138.3	136.6	135.3	134.8
64QAM 0.75 dual	139.7	138.2	136.4	135.1	133.4	132.1	131.6
64QAM 0.92 single	140.6	139.1	137.4	136.1	134.3	133.1	132.6
64 QAM 0.92 dual	137.3	135.8	134.0	132.8	131.0	129.8	129.2
256QAM 0.81 single	139.2	137.7	136.0	134.7	132.9	131.7	131.2
256QAM 0.81 dual	135.8	134.3	132.5	131.2	129.5	128.2	127.7

Table 93 5.4 GHz IP mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.6	-91.6	-89.8	-88.6	-86.8	-85.6	-85.1	28
QPSK 0.63 single	-90.1	-88.1	-86.3	-85.1	-83.3	-82.1	-81.6	27
QPSK 0.87 single	-86.1	-84.1	-82.3	-81.1	-79.3	-78.1	-77.5	26
16QAM 0.63 single	-84.2	-82.2	-80.4	-79.2	-77.4	-76.1	-75.6	25
16QAM 0.63 dual	-81.1	-79.1	-77.4	-76.1	-74.4	-73.1	-72.6	25
16QAM 0.87 single	-79.5	-77.5	-75.7	-74.5	-72.7	-71.5	-70.9	24
16QAM 0.87 dual	-76.4	-74.4	-72.7	-71.4	-69.6	-68.4	-67.9	24
64QAM 0.75 single	-76.6	-74.5	-72.8	-71.5	-69.8	-68.5	-68.0	23
64QAM 0.75 dual	-73.5	-71.4	-69.7	-68.4	-66.7	-65.4	-64.9	23
64QAM 0.92 single	-72.8	-70.8	-69.0	-67.8	-66.0	-64.8	-64.3	23
64 QAM 0.92 dual	-69.6	-67.6	-65.8	-64.6	-62.8	-61.6	-61.0	23
256QAM 0.81 single	-69.6	-67.6	-65.9	-64.6	-62.8	-61.6	-61.1	23
256QAM 0.81 dual	-66.2	-64.2	-62.4	-61.1	-59.4	-58.1	-57.6	23

Table 94 5.4 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	169.0	167.0	165.2	164.0	162.2	161.0	160.5
QPSK 0.63 single	164.5	162.5	160.7	159.5	157.7	156.5	156.0
QPSK 0.87 single	159.5	157.5	155.7	154.5	152.7	151.5	150.9
16QAM 0.63 single	156.6	154.6	152.8	151.6	149.8	148.5	148.0
16QAM 0.63 dual	152.1	150.0	148.3	147.0	145.3	144.0	143.5
16QAM 0.87 single	150.9	148.9	147.1	145.9	144.1	142.9	142.3
16QAM 0.87 dual	147.8	145.8	144.1	142.8	141.0	139.8	139.3
64QAM 0.75 single	147.0	144.9	143.2	141.9	140.2	138.9	138.4
64QAM 0.75 dual	143.9	141.8	140.1	138.8	137.1	135.8	135.3
64QAM 0.92 single	143.2	141.2	139.4	138.2	136.4	135.2	134.7
64 QAM 0.92 dual	140.0	138.0	136.2	135.0	133.2	132.0	131.4
256QAM 0.81 single	140.0	138.0	136.3	135.0	133.2	132.0	131.5
256QAM 0.81 dual	136.6	134.6	132.8	131.5	129.8	128.5	128.0

Table 95 5.4 GHz TDM mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.6	-91.6	-89.8	-88.6	-86.8	-85.6	-85.1	26
QPSK 0.63 single	-87.1	-85.1	-83.3	-82.1	-80.3	-79.1	-78.6	25
QPSK 0.87 single	-83.1	-81.1	-79.3	-78.0	-76.3	-75.0	-74.5	24
16QAM 0.63 single	-81.1	-79.1	-77.4	-76.1	-74.3	-73.1	-72.6	23
16QAM 0.63 dual	-78.1	-76.1	-74.3	-73.1	-71.3	-70.1	-69.5	23
16QAM 0.87 single	-76.3	-74.3	-72.6	-71.3	-69.6	-68.3	-67.8	23
16QAM 0.87 dual	-73.2	-71.2	-69.5	-68.2	-66.5	-65.2	-64.7	23
64QAM 0.75 single	-73.3	-71.3	-69.5	-68.2	-66.5	-65.2	-64.7	23
64QAM 0.75 dual	-70.1	-68.1	-66.3	-65.0	-63.3	-62.0	-61.5	23
64QAM 0.92 single	-71.0	-69.0	-67.3	-66.0	-64.2	-63.0	-62.5	23
64 QAM 0.92 dual	-67.7	-65.7	-63.9	-62.7	-60.9	-59.7	-59.1	23
256QAM 0.81 single	-69.6	-67.6	-65.9	-64.6	-62.8	-61.6	-61.1	23
256QAM 0.81 dual	-66.2	-64.2	-62.4	-61.1	-59.4	-58.1	-57.6	23

Table 96 5.4 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	167.0	165.0	163.2	162.0	160.2	159.0	158.5
QPSK 0.63 single	159.5	157.5	155.7	154.5	152.7	151.5	151.0
QPSK 0.87 single	154.5	152.5	150.7	149.4	147.7	146.4	145.9
16QAM 0.63 single	151.5	149.5	147.8	146.5	144.7	143.5	143.0
16QAM 0.63 dual	147.0	145.0	143.2	142.0	140.2	139.0	138.5
16QAM 0.87 single	146.7	144.7	143.0	141.7	140.0	138.7	138.2
16QAM 0.87 dual	143.6	141.6	139.9	138.6	136.9	135.6	135.1
64QAM 0.75 single	143.7	141.7	139.9	138.6	136.9	135.6	135.1
64QAM 0.75 dual	140.5	138.5	136.7	135.4	133.7	132.4	131.9
64QAM 0.92 single	141.4	139.4	137.7	136.4	134.6	133.4	132.9
64 QAM 0.92 dual	138.1	136.1	134.3	133.1	131.3	130.1	129.5
256QAM 0.81 single	140.0	138.0	136.3	135.0	133.2	132.0	131.5
256QAM 0.81 dual	136.6	134.6	132.8	131.5	129.8	128.5	128.0

Table 97 5.8 GHz IP mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.1	-91.1	-89.3	-88.1	-86.3	-85.1	-84.6	28
QPSK 0.63 single	-89.6	-87.6	-85.8	-84.6	-82.8	-81.6	-81.1	27
QPSK 0.87 single	-85.6	-83.6	-81.8	-80.6	-78.8	-77.6	-77.0	26
16QAM 0.63 single	-83.7	-81.7	-79.9	-78.6	-76.9	-75.6	-75.1	25
16QAM 0.63 dual	-80.6	-78.6	-76.9	-75.6	-73.9	-72.6	-72.1	25
16QAM 0.87 single	-78.9	-76.9	-75.2	-73.9	-72.2	-70.9	-70.4	24
16QAM 0.87 dual	-75.9	-73.9	-72.1	-70.9	-69.1	-67.8	-67.3	24
64QAM 0.75 single	-76.0	-74.0	-72.2	-71.0	-69.2	-67.9	-67.4	23
64QAM 0.75 dual	-72.9	-70.8	-69.1	-67.8	-66.1	-64.8	-64.3	23
64QAM 0.92 single	-72.1	-70.1	-68.4	-67.1	-65.4	-64.1	-63.6	23
64 QAM 0.92 dual	-68.8	-66.8	-65.1	-63.8	-62.1	-60.8	-60.3	23
256QAM 0.81 single	-68.8	-66.8	-65.0	-63.7	-62.0	-60.7	-60.2	23
256QAM 0.81 dual	-65.1	-63.1	-61.3	-60.1	-58.3	-57.1	-56.6	23

Table 98 5.8 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	168.7	166.7	164.9	163.7	161.9	160.7	160.2
QPSK 0.63 single	164.2	162.2	160.4	159.2	157.4	156.2	155.7
QPSK 0.87 single	159.2	157.2	155.4	154.2	152.4	151.2	150.6
16QAM 0.63 single	156.3	154.3	152.5	151.2	149.5	148.2	147.7
16QAM 0.63 dual	151.7	149.7	148.0	146.7	145.0	143.7	143.2
16QAM 0.87 single	150.5	148.5	146.8	145.5	143.8	142.5	142.0
16QAM 0.87 dual	147.5	145.5	143.7	142.5	140.7	139.4	138.9
64QAM 0.75 single	146.6	144.6	142.8	141.6	139.8	138.5	138.0
64QAM 0.75 dual	143.5	141.4	139.7	138.4	136.7	135.4	134.9
64QAM 0.92 single	142.7	140.7	139.0	137.7	136.0	134.7	134.2
64 QAM 0.92 dual	139.4	137.4	135.7	134.4	132.7	131.4	130.9
256QAM 0.81 single	139.4	137.4	135.6	134.3	132.6	131.3	130.8
256QAM 0.81 dual	135.7	133.7	131.9	130.7	128.9	127.7	127.2

Table 99 5.8 GHz TDM mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-93.1	-91.1	-89.3	-88.1	-86.3	-85.1	-84.6	26
QPSK 0.63 single	-86.6	-84.6	-82.8	-81.6	-79.8	-78.6	-78.0	25
QPSK 0.87 single	-82.5	-80.5	-78.8	-77.5	-75.8	-74.5	-74.0	24
16QAM 0.63 single	-80.6	-78.6	-76.8	-75.6	-73.8	-72.6	-72.1	23
16QAM 0.63 dual	-77.6	-75.5	-73.8	-72.5	-70.8	-69.5	-69.0	23
16QAM 0.87 single	-75.8	-73.8	-72.0	-70.7	-69.0	-67.7	-67.2	23
16QAM 0.87 dual	-72.6	-70.6	-68.9	-67.6	-65.9	-64.6	-64.1	23
64QAM 0.75 single	-72.6	-70.6	-68.8	-67.6	-65.8	-64.6	-64.1	23
64QAM 0.75 dual	-69.3	-67.3	-65.6	-64.3	-62.6	-61.3	-60.8	23
64QAM 0.92 single	-70.3	-68.3	-66.5	-65.2	-63.5	-62.2	-61.7	23
64 QAM 0.92 dual	-66.8	-64.8	-63.0	-61.8	-60.0	-58.8	-58.3	23
256QAM 0.81 single	-68.8	-66.8	-65.0	-63.7	-62.0	-60.7	-60.2	23
256QAM 0.81 dual	-65.1	-63.1	-61.3	-60.1	-58.3	-57.1	-56.6	23

Table 100 5.8 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	166.7	164.7	162.9	161.7	159.9	158.7	158.2
QPSK 0.63 single	159.2	157.2	155.4	154.2	152.4	151.2	150.6
QPSK 0.87 single	154.1	152.1	150.4	149.1	147.4	146.1	145.6
16QAM 0.63 single	151.2	149.2	147.4	146.2	144.4	143.2	142.7
16QAM 0.63 dual	146.7	144.7	142.9	141.6	139.9	138.6	138.1
16QAM 0.87 single	146.4	144.4	142.6	141.3	139.6	138.3	137.8
16QAM 0.87 dual	143.2	141.2	139.5	138.2	136.5	135.2	134.7
64QAM 0.75 single	143.2	141.2	139.4	138.2	136.4	135.2	134.7
64QAM 0.75 dual	139.9	137.9	136.2	134.9	133.2	131.9	131.4
64QAM 0.92 single	140.9	138.9	137.1	135.8	134.1	132.8	132.3
64 QAM 0.92 dual	137.4	135.4	133.6	132.4	130.6	129.4	128.9
256QAM 0.81 single	139.4	137.4	135.6	134.3	132.6	131.3	130.8
256QAM 0.81 dual	135.7	133.7	131.9	130.7	128.9	127.7	127.2

Connectorized and Beam Steering ODU's

Table 101 4.7 GHz IP mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.0	-93.5	-91.7	-90.5	-88.7	-87.5	-87.0	29
QPSK 0.63 single	-91.5	-90.0	-88.2	-87.0	-85.2	-84.0	-83.5	28
QPSK 0.87 single	-87.5	-86.0	-84.2	-83.0	-81.2	-80.0	-79.4	27
16QAM 0.63 single	-85.6	-84.1	-82.3	-81.0	-79.3	-78.0	-77.5	26
16QAM 0.63 dual	-81.1	-79.5	-77.8	-76.5	-74.8	-73.5	-73.0	26
16QAM 0.87 single	-80.9	-79.4	-77.6	-76.3	-74.6	-73.3	-72.8	25
16QAM 0.87 dual	-77.8	-76.3	-74.5	-73.3	-71.5	-70.3	-69.8	25
64QAM 0.75 single	-77.9	-76.4	-74.6	-73.4	-71.6	-70.4	-69.9	24
64QAM 0.75 dual	-74.8	-73.3	-71.5	-70.3	-68.5	-67.3	-66.8	24
64QAM 0.92 single	-74.1	-72.6	-70.9	-69.6	-67.8	-66.6	-66.1	24
64 QAM 0.92 dual	-70.9	-69.4	-67.6	-66.3	-64.6	-63.3	-62.8	24
256QAM 0.81 single	-70.9	-69.4	-67.6	-66.3	-64.6	-63.3	-62.8	24
256QAM 0.81 dual	-67.3	-65.8	-64.0	-62.8	-61.0	-59.8	-59.3	24

Table 102 4.7 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	169.2	167.7	165.9	164.7	162.9	161.7	161.2
QPSK 0.63 single	164.7	163.2	161.4	160.2	158.4	157.2	156.7
QPSK 0.87 single	159.7	158.2	156.4	155.2	153.4	152.2	151.6
16QAM 0.63 single	156.8	155.3	153.5	152.2	150.5	149.2	148.7
16QAM 0.63 dual	152.3	150.7	149.0	147.7	146.0	144.7	144.2
16QAM 0.87 single	151.1	149.6	147.8	146.5	144.8	143.5	143.0
16QAM 0.87 dual	148.0	146.5	144.7	143.5	141.7	140.5	140.0
64QAM 0.75 single	147.1	145.6	143.8	142.6	140.8	139.6	139.1
64QAM 0.75 dual	144.0	142.5	140.7	139.5	137.7	136.5	136.0
64QAM 0.92 single	143.3	141.8	140.1	138.8	137.0	135.8	135.3
64 QAM 0.92 dual	140.1	138.6	136.8	135.5	133.8	132.5	132.0
256QAM 0.81 single	140.1	138.6	136.8	135.5	133.8	132.5	132.0
256QAM 0.81 dual	136.5	135.0	133.2	132.0	130.2	129.0	128.5

Table 103 4.7 GHz TDM mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.0	-93.5	-91.7	-90.5	-88.7	-87.5	-87.0	27
QPSK 0.63 single	-88.5	-87.0	-85.2	-84.0	-82.2	-81.0	-80.5	26
QPSK 0.87 single	-84.5	-82.9	-81.2	-79.9	-78.2	-76.9	-76.4	25
16QAM 0.63 single	-82.5	-81.0	-79.2	-78.0	-76.2	-75.0	-74.5	24
16QAM 0.63 dual	-78.0	-76.5	-74.7	-73.5	-71.7	-70.4	-69.9	24
16QAM 0.87 single	-77.7	-76.2	-74.4	-73.2	-71.4	-70.2	-69.7	24
16QAM 0.87 dual	-74.6	-73.1	-71.3	-70.1	-68.3	-67.1	-66.5	24
64QAM 0.75 single	-74.6	-73.1	-71.3	-70.1	-68.3	-67.1	-66.6	24
64QAM 0.75 dual	-71.4	-69.9	-68.1	-66.8	-65.1	-63.8	-63.3	24
64QAM 0.92 single	-72.3	-70.8	-69.0	-67.8	-66.0	-64.8	-64.3	24
64 QAM 0.92 dual	-68.9	-67.4	-65.6	-64.4	-62.6	-61.4	-60.9	24
256QAM 0.81 single	-70.9	-69.4	-67.6	-66.3	-64.6	-63.3	-62.8	24
256QAM 0.81 dual	-67.3	-65.8	-64.0	-62.8	-61.0	-59.8	-59.3	24

Table 104 4.7 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	167.2	165.7	163.9	162.7	160.9	159.7	159.2
QPSK 0.63 single	159.7	158.2	156.4	155.2	153.4	152.2	151.7
QPSK 0.87 single	154.7	153.1	151.4	150.1	148.4	147.1	146.6
16QAM 0.63 single	151.7	150.2	148.4	147.2	145.4	144.2	143.7
16QAM 0.63 dual	147.2	145.7	143.9	142.7	140.9	139.6	139.1
16QAM 0.87 single	146.9	145.4	143.6	142.4	140.6	139.4	138.9
16QAM 0.87 dual	143.8	142.3	140.5	139.3	137.5	136.3	135.7
64QAM 0.75 single	143.8	142.3	140.5	139.3	137.5	136.3	135.8
64QAM 0.75 dual	140.6	139.1	137.3	136.0	134.3	133.0	132.5
64QAM 0.92 single	141.5	140.0	138.2	137.0	135.2	134.0	133.5
64 QAM 0.92 dual	138.1	136.6	134.8	133.6	131.8	130.6	130.1
256QAM 0.81 single	140.1	138.6	136.8	135.5	133.8	132.5	132.0
256QAM 0.81 dual	136.5	135.0	133.2	132.0	130.2	129.0	128.5

Table 105 4.9 GHz IP mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.1	-93.6	-91.8	-90.6	-88.8	-87.6	-87.1	29
QPSK 0.63 single	-91.6	-90.1	-88.3	-87.1	-85.3	-84.1	-83.6	28
QPSK 0.87 single	-87.6	-86.1	-84.3	-83.1	-81.3	-80.1	-79.5	27
16QAM 0.63 single	-85.7	-84.2	-82.4	-81.1	-79.4	-78.1	-77.6	26
16QAM 0.63 dual	-81.2	-79.6	-77.9	-76.6	-74.9	-73.6	-73.1	26
16QAM 0.87 single	-81.0	-79.5	-77.7	-76.4	-74.7	-73.4	-72.9	25
16QAM 0.87 dual	-77.9	-76.4	-74.6	-73.4	-71.6	-70.4	-69.9	25
64QAM 0.75 single	-78.0	-76.5	-74.7	-73.5	-71.7	-70.5	-70.0	24
64QAM 0.75 dual	-74.9	-73.4	-71.6	-70.4	-68.6	-67.4	-66.9	24
64QAM 0.92 single	-74.2	-72.7	-71.0	-69.7	-67.9	-66.7	-66.2	24
64 QAM 0.92 dual	-71.0	-69.5	-67.7	-66.4	-64.7	-63.4	-62.9	24
256QAM 0.81 single	-71.0	-69.5	-67.7	-66.4	-64.7	-63.4	-62.9	24
256QAM 0.81 dual	-67.4	-65.9	-64.1	-62.9	-61.1	-59.9	-59.4	24

Table 106 4.9 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	169.5	168.0	166.2	165.0	163.2	162.0	161.5
QPSK 0.63 single	165.0	163.5	161.7	160.5	158.7	157.5	157.0
QPSK 0.87 single	160.0	158.5	156.7	155.5	153.7	152.5	151.9
16QAM 0.63 single	157.1	155.6	153.8	152.5	150.8	149.5	149.0
16QAM 0.63 dual	152.6	151.0	149.3	148.0	146.3	145.0	144.5
16QAM 0.87 single	151.4	149.9	148.1	146.8	145.1	143.8	143.3
16QAM 0.87 dual	148.3	146.8	145.0	143.8	142.0	140.8	140.3
64QAM 0.75 single	147.4	145.9	144.1	142.9	141.1	139.9	139.4
64QAM 0.75 dual	144.3	142.8	141.0	139.8	138.0	136.8	136.3
64QAM 0.92 single	143.6	142.1	140.4	139.1	137.3	136.1	135.6
64 QAM 0.92 dual	140.4	138.9	137.1	135.8	134.1	132.8	132.3
256QAM 0.81 single	140.4	138.9	137.1	135.8	134.1	132.8	132.3
256QAM 0.81 dual	136.8	135.3	133.5	132.3	130.5	129.3	128.8

Table 107 4.9 GHz TDM mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.1	-93.6	-91.8	-90.6	-88.8	-87.6	-87.1	27
QPSK 0.63 single	-88.6	-87.1	-85.3	-84.1	-82.3	-81.1	-80.6	26
QPSK 0.87 single	-84.6	-83.0	-81.3	-80.0	-78.3	-77.0	-76.5	25
16QAM 0.63 single	-82.6	-81.1	-79.3	-78.1	-76.3	-75.1	-74.6	24
16QAM 0.63 dual	-78.1	-76.6	-74.8	-73.6	-71.8	-70.5	-70.0	24
16QAM 0.87 single	-77.8	-76.3	-74.5	-73.3	-71.5	-70.3	-69.8	24
16QAM 0.87 dual	-74.7	-73.2	-71.4	-70.2	-68.4	-67.2	-66.6	24
64QAM 0.75 single	-74.7	-73.2	-71.4	-70.2	-68.4	-67.2	-66.7	24
64QAM 0.75 dual	-71.5	-70.0	-68.2	-66.9	-65.2	-63.9	-63.4	24
64QAM 0.92 single	-72.4	-70.9	-69.1	-67.9	-66.1	-64.9	-64.4	24
64 QAM 0.92 dual	-69.0	-67.5	-65.7	-64.5	-62.7	-61.5	-61.0	24
256QAM 0.81 single	-71.0	-69.5	-67.7	-66.4	-64.7	-63.4	-62.9	24
256QAM 0.81 dual	-67.4	-65.9	-64.1	-62.9	-61.1	-59.9	-59.4	24

Table 108 4.9 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	167.5	166.0	164.2	163.0	161.2	160.0	159.5
QPSK 0.63 single	160.0	158.5	156.7	155.5	153.7	152.5	152.0
QPSK 0.87 single	155.0	153.4	151.7	150.4	148.7	147.4	146.9
16QAM 0.63 single	152.0	150.5	148.7	147.5	145.7	144.5	144.0
16QAM 0.63 dual	147.5	146.0	144.2	143.0	141.2	139.9	139.4
16QAM 0.87 single	147.2	145.7	143.9	142.7	140.9	139.7	139.2
16QAM 0.87 dual	144.1	142.6	140.8	139.6	137.8	136.6	136.0
64QAM 0.75 single	144.1	142.6	140.8	139.6	137.8	136.6	136.1
64QAM 0.75 dual	140.9	139.4	137.6	136.3	134.6	133.3	132.8
64QAM 0.92 single	141.8	140.3	138.5	137.3	135.5	134.3	133.8
64 QAM 0.92 dual	138.4	136.9	135.1	133.9	132.1	130.9	130.4
256QAM 0.81 single	140.4	138.9	137.1	135.8	134.1	132.8	132.3
256QAM 0.81 dual	136.8	135.3	133.5	132.3	130.5	129.3	128.8

Table 109 5.1/5.2 GHz IP mode: system threshold per channel bandwidth and o/p power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.1	-93.6	-91.8	-90.6	-88.8	-87.6	-87.1	29
QPSK 0.63 single	-91.6	-90.1	-88.3	-87.1	-85.3	-84.1	-83.6	28
QPSK 0.87 single	-87.6	-86.1	-84.3	-83.1	-81.3	-80.1	-79.5	27
16QAM 0.63 single	-85.7	-84.2	-82.4	-81.2	-79.4	-78.1	-77.6	26
16QAM 0.63 dual	-81.2	-79.6	-77.9	-76.6	-74.9	-73.6	-73.1	26
16QAM 0.87 single	-81.0	-79.5	-77.7	-76.5	-74.7	-73.5	-72.9	25
16QAM 0.87 dual	-77.9	-76.4	-74.7	-73.4	-71.6	-70.4	-69.9	25
64QAM 0.75 single	-78.1	-76.5	-74.8	-73.5	-71.8	-70.5	-70.0	24
64QAM 0.75 dual	-75.0	-73.4	-71.7	-70.4	-68.7	-67.4	-66.9	24
64QAM 0.92 single	-74.3	-72.8	-71.0	-69.8	-68.0	-66.8	-66.3	24
64 QAM 0.92 dual	-71.1	-69.6	-67.8	-66.6	-64.8	-63.6	-63.0	24
256QAM 0.81 single	-71.1	-69.6	-67.9	-66.6	-64.8	-63.6	-63.1	24
256QAM 0.81 dual	-67.7	-66.2	-64.4	-63.1	-61.4	-60.1	-59.6	24

Table 110 5.1/5.2 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	170.7	169.2	167.4	166.2	164.4	163.2	162.7
QPSK 0.63 single	166.2	164.7	162.9	161.7	159.9	158.7	158.2
QPSK 0.87 single	161.2	159.7	157.9	156.7	154.9	153.7	153.1
16QAM 0.63 single	158.3	156.8	155.0	153.8	152.0	150.7	150.2
16QAM 0.63 dual	153.8	152.2	150.5	149.2	147.5	146.2	145.7
16QAM 0.87 single	152.6	151.1	149.3	148.1	146.3	145.1	144.5
16QAM 0.87 dual	149.5	148.0	146.3	145.0	143.2	142.0	141.5
64QAM 0.75 single	148.7	147.1	145.4	144.1	142.4	141.1	140.6
64QAM 0.75 dual	145.6	144.0	142.3	141.0	139.3	138.0	137.5
64QAM 0.92 single	144.9	143.4	141.6	140.4	138.6	137.4	136.9
64 QAM 0.92 dual	141.7	140.2	138.4	137.2	135.4	134.2	133.6
256QAM 0.81 single	141.7	140.2	138.5	137.2	135.4	134.2	133.7
256QAM 0.81 dual	138.3	136.8	135.0	133.7	132.0	130.7	130.2

Table 111 5.1/5.2 GHz TDM mode: system threshold per channel bandwidth and o/p pwr (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.1	-93.6	-91.8	-90.6	-88.8	-87.6	-87.1	27
QPSK 0.63 single	-88.6	-87.1	-85.3	-84.1	-82.3	-81.1	-80.6	26
QPSK 0.87 single	-84.6	-83.1	-81.3	-80.0	-78.3	-77.0	-76.5	25
16QAM 0.63 single	-82.6	-81.1	-79.4	-78.1	-76.3	-75.1	-74.6	24
16QAM 0.63 dual	-78.1	-76.6	-74.8	-73.6	-71.8	-70.6	-70.1	24
16QAM 0.87 single	-77.8	-76.3	-74.6	-73.3	-71.6	-70.3	-69.8	24
16QAM 0.87 dual	-74.7	-73.2	-71.5	-70.2	-68.5	-67.2	-66.7	24
64QAM 0.75 single	-74.8	-73.3	-71.5	-70.2	-68.5	-67.2	-66.7	24
64QAM 0.75 dual	-71.6	-70.1	-68.3	-67.0	-65.3	-64.0	-63.5	24
64QAM 0.92 single	-72.5	-71.0	-69.3	-68.0	-66.2	-65.0	-64.5	24
64 QAM 0.92 dual	-69.2	-67.7	-65.9	-64.7	-62.9	-61.7	-61.1	24
256QAM 0.81 single	-71.1	-69.6	-67.9	-66.6	-64.8	-63.6	-63.1	24
256QAM 0.81 dual	-67.7	-66.2	-64.4	-63.1	-61.4	-60.1	-59.6	24

Table 112 5.1/5.2 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	168.7	167.2	165.4	164.2	162.4	161.2	160.7
QPSK 0.63 single	161.2	159.7	157.9	156.7	154.9	153.7	153.2
QPSK 0.87 single	156.2	154.7	152.9	151.6	149.9	148.6	148.1
16QAM 0.63 single	153.2	151.7	150.0	148.7	146.9	145.7	145.2
16QAM 0.63 dual	148.7	147.2	145.4	144.2	142.4	141.2	140.7
16QAM 0.87 single	148.4	146.9	145.2	143.9	142.2	140.9	140.4
16QAM 0.87 dual	145.3	143.8	142.1	140.8	139.1	137.8	137.3
64QAM 0.75 single	145.4	143.9	142.1	140.8	139.1	137.8	137.3
64QAM 0.75 dual	142.2	140.7	138.9	137.6	135.9	134.6	134.1
64QAM 0.92 single	143.1	141.6	139.9	138.6	136.8	135.6	135.1
64 QAM 0.92 dual	139.8	138.3	136.5	135.3	133.5	132.3	131.7
256QAM 0.81 single	141.7	140.2	138.5	137.2	135.4	134.2	133.7
256QAM 0.81 dual	138.3	136.8	135.0	133.7	132.0	130.7	130.2

Table 113 5.4 GHz IP mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.1	-93.1	-91.3	-90.1	-88.3	-87.1	-86.6	29
QPSK 0.63 single	-91.6	-89.6	-87.8	-86.6	-84.8	-83.6	-83.1	28
QPSK 0.87 single	-87.6	-85.6	-83.8	-82.6	-80.8	-79.6	-79.0	27
16QAM 0.63 single	-85.7	-83.7	-81.9	-80.7	-78.9	-77.6	-77.1	26
16QAM 0.63 dual	-81.2	-79.1	-77.4	-76.1	-74.4	-73.1	-72.6	26
16QAM 0.87 single	-81.0	-79.0	-77.2	-76.0	-74.2	-73.0	-72.4	25
16QAM 0.87 dual	-77.9	-75.9	-74.2	-72.9	-71.1	-69.9	-69.4	25
64QAM 0.75 single	-78.1	-76.0	-74.3	-73.0	-71.3	-70.0	-69.5	24
64QAM 0.75 dual	-75.0	-72.9	-71.2	-69.9	-68.2	-66.9	-66.4	24
64QAM 0.92 single	-74.3	-72.3	-70.5	-69.3	-67.5	-66.3	-65.8	24
64 QAM 0.92 dual	-71.1	-69.1	-67.3	-66.1	-64.3	-63.1	-62.5	24
256QAM 0.81 single	-71.1	-69.1	-67.4	-66.1	-64.3	-63.1	-62.6	24
256QAM 0.81 dual	-67.7	-65.7	-63.9	-62.6	-60.9	-59.6	-59.1	24

Table 114 5.4 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	171.5	169.5	167.7	166.5	164.7	163.5	163.0
QPSK 0.63 single	167.0	165.0	163.2	162.0	160.2	159.0	158.5
QPSK 0.87 single	162.0	160.0	158.2	157.0	155.2	154.0	153.4
16QAM 0.63 single	159.1	157.1	155.3	154.1	152.3	151.0	150.5
16QAM 0.63 dual	154.6	152.5	150.8	149.5	147.8	146.5	146.0
16QAM 0.87 single	153.4	151.4	149.6	148.4	146.6	145.4	144.8
16QAM 0.87 dual	150.3	148.3	146.6	145.3	143.5	142.3	141.8
64QAM 0.75 single	149.5	147.4	145.7	144.4	142.7	141.4	140.9
64QAM 0.75 dual	146.4	144.3	142.6	141.3	139.6	138.3	137.8
64QAM 0.92 single	145.7	143.7	141.9	140.7	138.9	137.7	137.2
64 QAM 0.92 dual	142.5	140.5	138.7	137.5	135.7	134.5	133.9
256QAM 0.81 single	142.5	140.5	138.8	137.5	135.7	134.5	134.0
256QAM 0.81 dual	139.1	137.1	135.3	134.0	132.3	131.0	130.5

Table 115 5.4 GHz TDM mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.1	-93.1	-91.3	-90.1	-88.3	-87.1	-86.6	27
QPSK 0.63 single	-88.6	-86.6	-84.8	-83.6	-81.8	-80.6	-80.1	26
QPSK 0.87 single	-84.6	-82.6	-80.8	-79.5	-77.8	-76.5	-76.0	25
16QAM 0.63 single	-82.6	-80.6	-78.9	-77.6	-75.8	-74.6	-74.1	24
16QAM 0.63 dual	-78.1	-76.1	-74.3	-73.1	-71.3	-70.1	-69.6	24
16QAM 0.87 single	-77.8	-75.8	-74.1	-72.8	-71.1	-69.8	-69.3	24
16QAM 0.87 dual	-74.7	-72.7	-71.0	-69.7	-68.0	-66.7	-66.2	24
64QAM 0.75 single	-74.8	-72.8	-71.0	-69.7	-68.0	-66.7	-66.2	24
64QAM 0.75 dual	-71.6	-69.6	-67.8	-66.5	-64.8	-63.5	-63.0	24
64QAM 0.92 single	-72.5	-70.5	-68.8	-67.5	-65.7	-64.5	-64.0	24
64 QAM 0.92 dual	-69.2	-67.2	-65.4	-64.2	-62.4	-61.2	-60.6	24
256QAM 0.81 single	-71.1	-69.1	-67.4	-66.1	-64.3	-63.1	-62.6	24
256QAM 0.81 dual	-67.7	-65.7	-63.9	-62.6	-60.9	-59.6	-59.1	24

Table 116 5.4 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	169.5	167.5	165.7	164.5	162.7	161.5	161.0
QPSK 0.63 single	162.0	160.0	158.2	157.0	155.2	154.0	153.5
QPSK 0.87 single	157.0	155.0	153.2	151.9	150.2	148.9	148.4
16QAM 0.63 single	154.0	152.0	150.3	149.0	147.2	146.0	145.5
16QAM 0.63 dual	149.5	147.5	145.7	144.5	142.7	141.5	141.0
16QAM 0.87 single	149.2	147.2	145.5	144.2	142.5	141.2	140.7
16QAM 0.87 dual	146.1	144.1	142.4	141.1	139.4	138.1	137.6
64QAM 0.75 single	146.2	144.2	142.4	141.1	139.4	138.1	137.6
64QAM 0.75 dual	143.0	141.0	139.2	137.9	136.2	134.9	134.4
64QAM 0.92 single	143.9	141.9	140.2	138.9	137.1	135.9	135.4
64 QAM 0.92 dual	140.6	138.6	136.8	135.6	133.8	132.6	132.0
256QAM 0.81 single	142.5	140.5	138.8	137.5	135.7	134.5	134.0
256QAM 0.81 dual	139.1	137.1	135.3	134.0	132.3	131.0	130.5

Table 117 5.8 GHz IP mode: system threshold per channel bandwidth and output power (P) (dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-94.6	-92.6	-90.8	-89.6	-87.8	-86.6	-86.1	29
QPSK 0.63 single	-91.1	-89.1	-87.3	-86.1	-84.3	-83.1	-82.6	28
QPSK 0.87 single	-87.1	-85.1	-83.3	-82.1	-80.3	-79.1	-78.5	27
16QAM 0.63 single	-85.2	-83.2	-81.4	-80.1	-78.4	-77.1	-76.6	26
16QAM 0.63 dual	-80.6	-78.6	-76.9	-75.6	-73.9	-72.6	-72.1	26
16QAM 0.87 single	-80.4	-78.4	-76.7	-75.4	-73.7	-72.4	-71.9	25
16QAM 0.87 dual	-77.4	-75.4	-73.6	-72.4	-70.6	-69.3	-68.8	25
64QAM 0.75 single	-77.5	-75.5	-73.7	-72.5	-70.7	-69.4	-68.9	24
64QAM 0.75 dual	-74.4	-72.3	-70.6	-69.3	-67.6	-66.3	-65.8	24
64QAM 0.92 single	-73.6	-71.6	-69.9	-68.6	-66.9	-65.6	-65.1	24
64 QAM 0.92 dual	-70.3	-68.3	-66.6	-65.3	-63.6	-62.3	-61.8	24
256QAM 0.81 single	-70.3	-68.3	-66.5	-65.2	-63.5	-62.2	-61.7	24
256QAM 0.81 dual	-66.6	-64.6	-62.8	-61.6	-59.8	-58.6	-58.1	24

Table 118 5.8 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	171.2	169.2	167.4	166.2	164.4	163.2	162.7
QPSK 0.63 single	166.7	164.7	162.9	161.7	159.9	158.7	158.2
QPSK 0.87 single	161.7	159.7	157.9	156.7	154.9	153.7	153.1
16QAM 0.63 single	158.8	156.8	155.0	153.7	152.0	150.7	150.2
16QAM 0.63 dual	154.2	152.2	150.5	149.2	147.5	146.2	145.7
16QAM 0.87 single	153.0	151.0	149.3	148.0	146.3	145.0	144.5
16QAM 0.87 dual	150.0	148.0	146.2	145.0	143.2	141.9	141.4
64QAM 0.75 single	149.1	147.1	145.3	144.1	142.3	141.0	140.5
64QAM 0.75 dual	146.0	143.9	142.2	140.9	139.2	137.9	137.4
64QAM 0.92 single	145.2	143.2	141.5	140.2	138.5	137.2	136.7
64 QAM 0.92 dual	141.9	139.9	138.2	136.9	135.2	133.9	133.4
256QAM 0.81 single	141.9	139.9	138.1	136.8	135.1	133.8	133.3
256QAM 0.81 dual	138.2	136.2	134.4	133.2	131.4	130.2	129.7

Table 119 5.8 GHz TDM mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-94.6	-92.6	-90.8	-89.6	-87.8	-86.6	-86.1	27
QPSK 0.63 single	-88.1	-86.1	-84.3	-83.1	-81.3	-80.1	-79.5	26
QPSK 0.87 single	-84.0	-82.0	-80.3	-79.0	-77.3	-76.0	-75.5	25
16QAM 0.63 single	-82.1	-80.1	-78.3	-77.1	-75.3	-74.1	-73.6	24
16QAM 0.63 dual	-77.6	-75.6	-73.8	-72.5	-70.8	-69.5	-69.0	24
16QAM 0.87 single	-77.3	-75.3	-73.5	-72.2	-70.5	-69.2	-68.7	24
16QAM 0.87 dual	-74.1	-72.1	-70.4	-69.1	-67.4	-66.1	-65.6	24
64QAM 0.75 single	-74.1	-72.1	-70.3	-69.1	-67.3	-66.1	-65.6	24
64QAM 0.75 dual	-70.8	-68.8	-67.1	-65.8	-64.1	-62.8	-62.3	24
64QAM 0.92 single	-71.8	-69.8	-68.0	-66.7	-65.0	-63.7	-63.2	24
64 QAM 0.92 dual	-68.3	-66.3	-64.5	-63.3	-61.5	-60.3	-59.8	24
256QAM 0.81 single	-70.3	-68.3	-66.5	-65.2	-63.5	-62.2	-61.7	24
256QAM 0.81 dual	-66.6	-64.6	-62.8	-61.6	-59.8	-58.6	-58.1	24

Table 120 5.8 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	169.2	167.2	165.4	164.2	162.4	161.2	160.7
QPSK 0.63 single	161.7	159.7	157.9	156.7	154.9	153.7	153.1
QPSK 0.87 single	156.6	154.6	152.9	151.6	149.9	148.6	148.1
16QAM 0.63 single	153.7	151.7	149.9	148.7	146.9	145.7	145.2
16QAM 0.63 dual	149.2	147.2	145.4	144.1	142.4	141.1	140.6
16QAM 0.87 single	148.9	146.9	145.1	143.8	142.1	140.8	140.3
16QAM 0.87 dual	145.7	143.7	142.0	140.7	139.0	137.7	137.2
64QAM 0.75 single	145.7	143.7	141.9	140.7	138.9	137.7	137.2
64QAM 0.75 dual	142.4	140.4	138.7	137.4	135.7	134.4	133.9
64QAM 0.92 single	143.4	141.4	139.6	138.3	136.6	135.3	134.8
64 QAM 0.92 dual	139.9	137.9	136.1	134.9	133.1	131.9	131.4
256QAM 0.81 single	141.9	139.9	138.1	136.8	135.1	133.8	133.3
256QAM 0.81 dual	138.2	136.2	134.4	133.2	131.4	130.2	129.7

Table 121 7.2 GHz IP mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-94.3	-92.7	-91.0	-89.7	-88.0	-86.7	-86.2	30
QPSK 0.63 single	-90.7	-89.2	-87.5	-86.2	-84.4	-83.2	-82.7	29
QPSK 0.87 single	-86.7	-85.2	-83.4	-82.1	-80.4	-79.1	-78.6	28
16QAM 0.63 single	-84.8	-83.3	-81.5	-80.2	-78.5	-77.2	-76.7	27
16QAM 0.63 dual	-81.8	-80.2	-78.5	-77.2	-75.5	-74.2	-73.7	27
16QAM 0.87 single	-80.0	-78.5	-76.8	-75.5	-73.8	-72.5	-72.0	26
16QAM 0.87 dual	-77.0	-75.5	-73.8	-72.5	-70.7	-69.5	-69.0	26
64QAM 0.75 single	-77.3	-75.7	-74.0	-72.7	-71.0	-69.7	-69.2	25
64QAM 0.75 dual	-74.2	-72.7	-71.0	-69.7	-68.0	-66.7	-66.2	25
64QAM 0.92 single	-73.5	-72.0	-70.2	-69.0	-67.2	-66.0	-65.5	25
64 QAM 0.92 dual	-70.5	-69.0	-67.2	-66.0	-64.2	-63.0	-62.5	25
256QAM 0.81 single	-70.3	-68.8	-67.1	-65.8	-64.0	-62.8	-62.3	25
256QAM 0.81 dual	-67.3	-65.8	-64.0	-62.8	-61.0	-59.8	-59.3	25

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
256QAM 0.94 single	-64.9	-63.4	-61.6	-60.4	-58.6	-57.4	-56.8	25
256QAM 0.94 dual	-61.9	-60.4	-58.6	-57.4	-55.6	-54.4	-53.8	25

Table 122 7.2 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	176.3	174.7	173.0	171.7	170.0	168.7	168.2
QPSK 0.63 single	171.7	170.2	168.5	167.2	165.4	164.2	163.7
QPSK 0.87 single	166.7	165.2	163.4	162.1	160.4	159.1	158.6
16QAM 0.63 single	163.8	162.3	160.5	159.2	157.5	156.2	155.7
16QAM 0.63 dual	160.8	159.2	157.5	156.2	154.5	153.2	152.7
16QAM 0.87 single	158.0	156.5	154.8	153.5	151.8	150.5	150.0
16QAM 0.87 dual	155.0	153.5	151.8	150.5	148.7	147.5	147.0
64QAM 0.75 single	154.3	152.7	151.0	149.7	148.0	146.7	146.2
64QAM 0.75 dual	151.2	149.7	148.0	146.7	145.0	143.7	143.2
64QAM 0.92 single	150.5	149.0	147.2	146.0	144.2	143.0	142.5
64 QAM 0.92 dual	147.5	146.0	144.2	143.0	141.2	140.0	139.5
256QAM 0.81 single	147.3	145.8	144.1	142.8	141.0	139.8	139.3
256QAM 0.81 dual	144.3	142.8	141.0	139.8	138.0	136.8	136.3
256QAM 0.94 single	141.9	140.4	138.6	137.4	135.6	134.4	133.8
256QAM 0.94 dual	138.9	137.4	135.6	134.4	132.6	131.4	130.8

Table 123 7.2 GHz TDM mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-94.3	-92.8	-91.0	-89.8	-88.0	-86.8	-86.3	28
QPSK 0.63 single	-87.7	-86.2	-84.5	-83.2	-81.5	-80.2	-79.7	27
QPSK 0.87 single	-83.7	-82.2	-80.4	-79.2	-77.4	-76.2	-75.7	26
16QAM 0.63 single	-81.8	-80.3	-78.6	-77.3	-75.5	-74.3	-73.8	25
16QAM 0.63 dual	-78.8	-77.3	-75.5	-74.3	-72.5	-71.3	-70.8	25
16QAM 0.87 single	-77.0	-75.5	-73.8	-72.5	-70.8	-69.5	-69.0	25
16QAM 0.87 dual	-74.0	-72.5	-70.8	-69.5	-67.7	-66.5	-66.0	25

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
64QAM 0.75 single	-74.0	-72.5	-70.7	-69.4	-67.7	-66.4	-65.9	25
64QAM 0.75 dual	-71.0	-69.4	-67.7	-66.4	-64.7	-63.4	-62.9	25
64QAM 0.92 single	-71.7	-70.2	-68.5	-67.2	-65.4	-64.2	-63.7	25
64 QAM 0.92 dual	-68.7	-67.2	-65.4	-64.2	-62.4	-61.2	-60.7	25
256QAM 0.81 single	-70.3	-68.8	-67.1	-65.8	-64.0	-62.8	-62.3	25
256QAM 0.81 dual	-67.3	-65.8	-64.0	-62.8	-61.0	-59.8	-59.3	25
256QAM 0.94 single	-64.9	-63.4	-61.6	-60.4	-58.6	-57.4	-56.8	25
256QAM 0.94 dual	-61.9	-60.4	-58.6	-57.4	-55.6	-54.4	-53.8	25

Table 124 7.2 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	174.3	172.8	171.0	169.8	168.0	166.8	166.3
QPSK 0.63 single	166.7	165.2	163.5	162.2	160.5	159.2	158.7
QPSK 0.87 single	161.7	160.2	158.4	157.2	155.4	154.2	153.7
16QAM 0.63 single	158.8	157.3	155.6	154.3	152.5	151.3	150.8
16QAM 0.63 dual	155.8	154.3	152.5	151.3	149.5	148.3	147.8
16QAM 0.87 single	154.0	152.5	150.8	149.5	147.8	146.5	146.0
16QAM 0.87 dual	151.0	149.5	147.8	146.5	144.7	143.5	143.0
64QAM 0.75 single	151.0	149.5	147.7	146.4	144.7	143.4	142.9
64QAM 0.75 dual	148.0	146.4	144.7	143.4	141.7	140.4	139.9
64QAM 0.92 single	148.7	147.2	145.5	144.2	142.4	141.2	140.7
64 QAM 0.92 dual	145.7	144.2	142.4	141.2	139.4	138.2	137.7
256QAM 0.81 single	147.3	145.8	144.1	142.8	141.0	139.8	139.3
256QAM 0.81 dual	144.3	142.8	141.0	139.8	138.0	136.8	136.3
256QAM 0.94 single	141.9	140.4	138.6	137.4	135.6	134.4	133.8
256QAM 0.94 dual	138.9	137.4	135.6	134.4	132.6	131.4	130.8

Table 125 7.8 GHz IP mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.3	-93.7	-92.0	-90.7	-89.0	-87.7	-87.2	30
QPSK 0.63 single	-91.7	-90.2	-88.5	-87.2	-85.4	-84.2	-83.7	29
QPSK 0.87 single	-87.7	-86.2	-84.4	-83.1	-81.4	-80.1	-79.6	28
16QAM 0.63 single	-85.8	-84.3	-82.5	-81.2	-79.5	-78.2	-77.7	27
16QAM 0.63 dual	-82.8	-81.2	-79.5	-78.2	-76.5	-75.2	-74.7	27
16QAM 0.87 single	-81.0	-79.5	-77.8	-76.5	-74.8	-73.5	-73.0	26
16QAM 0.87 dual	-78.0	-76.5	-74.8	-73.5	-71.7	-70.5	-70.0	26
64QAM 0.75 single	-78.3	-76.7	-75.0	-73.7	-72.0	-70.7	-70.2	25
64QAM 0.75 dual	-75.2	-73.7	-72.0	-70.7	-69.0	-67.7	-67.2	25
64QAM 0.92 single	-74.5	-73.0	-71.2	-70.0	-68.2	-67.0	-66.5	25
64 QAM 0.92 dual	-71.5	-70.0	-68.2	-67.0	-65.2	-64.0	-63.5	25
256QAM 0.81 single	-71.3	-69.8	-68.1	-66.8	-65.0	-63.8	-63.3	25
256QAM 0.81 dual	-68.3	-66.8	-65.0	-63.8	-62.0	-60.8	-60.3	25
256QAM 0.94 single	-65.9	-64.4	-62.6	-61.4	-59.6	-58.4	-57.8	25
256QAM 0.94 dual	-62.9	-61.4	-59.6	-58.4	-56.6	-55.4	-54.8	25

Table 126 7.8 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	177.3	175.7	174.0	172.7	171.0	169.7	168.2
QPSK 0.63 single	172.7	171.2	169.5	168.2	166.4	165.2	163.7
QPSK 0.87 single	167.7	166.2	164.4	163.1	161.4	160.1	158.6
16QAM 0.63 single	164.8	163.3	161.5	160.2	158.5	157.2	155.7
16QAM 0.63 dual	161.8	160.2	158.5	157.2	155.5	154.2	152.7
16QAM 0.87 single	159.0	157.5	155.8	154.5	152.8	151.5	150.0
16QAM 0.87 dual	156.0	154.5	152.8	151.5	149.7	148.5	147.0
64QAM 0.75 single	155.3	153.7	152.0	150.7	149.0	147.7	146.2
64QAM 0.75 dual	152.2	150.7	149.0	147.7	146.0	144.7	143.2
64QAM 0.92 single	151.5	150.0	148.2	147.0	145.2	144.0	142.5
64 QAM 0.92 dual	148.5	147.0	145.2	144.0	142.2	141.0	139.5

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
256QAM 0.81 single	148.3	146.8	145.1	143.8	142.0	140.8	139.3
256QAM 0.81 dual	145.3	143.8	142.0	140.8	139.0	137.8	136.3
256QAM 0.94 single	142.9	141.4	139.6	138.4	136.6	135.4	133.8
256QAM 0.94 dual	139.9	138.4	136.6	135.4	133.6	132.4	130.8

Table 127 7.8 GHz TDM mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-95.3	-93.8	-92.0	-90.8	-89.0	-87.8	-87.3	28
QPSK 0.63 single	-88.7	-87.2	-85.5	-84.2	-82.5	-81.2	-80.7	27
QPSK 0.87 single	-84.7	-83.2	-81.4	-80.2	-78.4	-77.2	-76.7	26
16QAM 0.63 single	-82.8	-81.3	-79.6	-78.3	-76.5	-75.3	-74.8	25
16QAM 0.63 dual	-79.8	-78.3	-76.5	-75.3	-73.5	-72.3	-71.8	25
16QAM 0.87 single	-78.0	-76.5	-74.8	-73.5	-71.8	-70.5	-70.0	25
16QAM 0.87 dual	-75.0	-73.5	-71.8	-70.5	-68.7	-67.5	-67.0	25
64QAM 0.75 single	-75.0	-73.5	-71.7	-70.4	-68.7	-67.4	-66.9	25
64QAM 0.75 dual	-72.0	-70.4	-68.7	-67.4	-65.7	-64.4	-63.9	25
64QAM 0.92 single	-72.7	-71.2	-69.5	-68.2	-66.4	-65.2	-64.7	25
64 QAM 0.92 dual	-69.7	-68.2	-66.4	-65.2	-63.4	-62.2	-61.7	25
256QAM 0.81 single	-71.3	-69.8	-68.1	-66.8	-65.0	-63.8	-63.3	25
256QAM 0.81 dual	-68.3	-66.8	-65.0	-63.8	-62.0	-60.8	-60.3	25
256QAM 0.94 single	-65.9	-64.4	-62.6	-61.4	-59.6	-58.4	-57.8	25
256QAM 0.94 dual	-62.9	-61.4	-59.6	-58.4	-56.6	-55.4	-54.8	25

Table 128 7.8 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	175.3	173.8	172.0	170.8	169.0	167.8	166.3
QPSK 0.63 single	167.7	166.2	164.5	163.2	161.5	160.2	158.7
QPSK 0.87 single	162.7	161.2	159.4	158.2	156.4	155.2	153.7
16QAM 0.63 single	159.8	158.3	156.6	155.3	153.5	152.3	150.8
16QAM 0.63 dual	156.8	155.3	153.5	152.3	150.5	149.3	147.8
16QAM 0.87 single	155.0	153.5	151.8	150.5	148.8	147.5	146.0

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
16QAM 0.87 dual	152.0	150.5	148.8	147.5	145.7	144.5	143.0
64QAM 0.75 single	152.0	150.5	148.7	147.4	145.7	144.4	142.9
64QAM 0.75 dual	149.0	147.4	145.7	144.4	142.7	141.4	139.9
64QAM 0.92 single	149.7	148.2	146.5	145.2	143.4	142.2	140.7
64 QAM 0.92 dual	146.7	145.2	143.4	142.2	140.4	139.2	137.7
256QAM 0.81 single	148.3	146.8	145.1	143.8	142.0	140.8	139.3
256QAM 0.81 dual	145.3	143.8	142.0	140.8	139.0	137.8	136.3
256QAM 0.94 single	142.9	141.4	139.6	138.4	136.6	135.4	133.8
256QAM 0.94 dual	139.9	138.4	136.6	135.4	133.6	132.4	130.8

Table 129 8.4 GHz IP mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-94.3	-92.7	-91.0	-89.7	-88.0	-86.7	-86.2	30
QPSK 0.63 single	-90.7	-89.2	-87.5	-86.2	-84.4	-83.2	-82.7	29
QPSK 0.87 single	-86.7	-85.2	-83.4	-82.1	-80.4	-79.1	-78.6	28
16QAM 0.63 single	-84.8	-83.3	-81.5	-80.2	-78.5	-77.2	-76.7	27
16QAM 0.63 dual	-81.8	-80.2	-78.5	-77.2	-75.5	-74.2	-73.7	27
16QAM 0.87 single	-80.0	-78.5	-76.8	-75.5	-73.8	-72.5	-72.0	26
16QAM 0.87 dual	-77.0	-75.5	-73.8	-72.5	-70.7	-69.5	-69.0	26
64QAM 0.75 single	-77.3	-75.7	-74.0	-72.7	-71.0	-69.7	-69.2	25
64QAM 0.75 dual	-74.2	-72.7	-71.0	-69.7	-68.0	-66.7	-66.2	25
64QAM 0.92 single	-73.5	-72.0	-70.2	-69.0	-67.2	-66.0	-65.5	25
64 QAM 0.92 dual	-70.5	-69.0	-67.2	-66.0	-64.2	-63.0	-62.5	25
256QAM 0.81 single	-70.3	-68.8	-67.1	-65.8	-64.0	-62.8	-62.3	25
256QAM 0.81 dual	-67.3	-65.8	-64.0	-62.8	-61.0	-59.8	-59.3	25
256QAM 0.94 single	-64.9	-63.4	-61.6	-60.4	-58.6	-57.4	-56.8	25
256QAM 0.94 dual	-61.9	-60.4	-58.6	-57.4	-55.6	-54.4	-53.8	25

Table 130 8.4 GHz IP mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	176.3	174.7	173.0	171.7	170.0	168.7	168.2
QPSK 0.63 single	171.7	170.2	168.5	167.2	165.4	164.2	163.7
QPSK 0.87 single	166.7	165.2	163.4	162.1	160.4	159.1	158.6
16QAM 0.63 single	163.8	162.3	160.5	159.2	157.5	156.2	155.7
16QAM 0.63 dual	160.8	159.2	157.5	156.2	154.5	153.2	152.7
16QAM 0.87 single	158.0	156.5	154.8	153.5	151.8	150.5	150.0
16QAM 0.87 dual	155.0	153.5	151.8	150.5	148.7	147.5	147.0
64QAM 0.75 single	154.3	152.7	151.0	149.7	148.0	146.7	146.2
64QAM 0.75 dual	151.2	149.7	148.0	146.7	145.0	143.7	143.2
64QAM 0.92 single	150.5	149.0	147.2	146.0	144.2	143.0	142.5
64 QAM 0.92 dual	147.5	146.0	144.2	143.0	141.2	140.0	139.5
256QAM 0.81 single	147.3	145.8	144.1	142.8	141.0	139.8	139.3
256QAM 0.81 dual	144.3	142.8	141.0	139.8	138.0	136.8	136.3
256QAM 0.94 single	141.9	140.4	138.6	137.4	135.6	134.4	133.8
256QAM 0.94 dual	138.9	137.4	135.6	134.4	132.6	131.4	130.8

Table 131 8.4 GHz TDM mode: system threshold per channel bandwidth and output power (P)(dBm)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
BPSK 0.63 single	-94.3	-92.8	-91.0	-89.8	-88.0	-86.8	-86.3	28
QPSK 0.63 single	-87.7	-86.2	-84.5	-83.2	-81.5	-80.2	-79.7	27
QPSK 0.87 single	-83.7	-82.2	-80.4	-79.2	-77.4	-76.2	-75.7	26
16QAM 0.63 single	-81.8	-80.3	-78.6	-77.3	-75.5	-74.3	-73.8	25
16QAM 0.63 dual	-78.8	-77.3	-75.5	-74.3	-72.5	-71.3	-70.8	25
16QAM 0.87 single	-77.0	-75.5	-73.8	-72.5	-70.8	-69.5	-69.0	25
16QAM 0.87 dual	-74.0	-72.5	-70.8	-69.5	-67.7	-66.5	-66.0	25
64QAM 0.75 single	-74.0	-72.5	-70.7	-69.4	-67.7	-66.4	-65.9	25
64QAM 0.75 dual	-71.0	-69.4	-67.7	-66.4	-64.7	-63.4	-62.9	25
64QAM 0.92 single	-71.7	-70.2	-68.5	-67.2	-65.4	-64.2	-63.7	25
64 QAM 0.92 dual	-68.7	-67.2	-65.4	-64.2	-62.4	-61.2	-60.7	25

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz	P (all bands)
256QAM 0.81 single	-70.3	-68.8	-67.1	-65.8	-64.0	-62.8	-62.3	25
256QAM 0.81 dual	-67.3	-65.8	-64.0	-62.8	-61.0	-59.8	-59.3	25
256QAM 0.94 single	-64.9	-63.4	-61.6	-60.4	-58.6	-57.4	-56.8	25
256QAM 0.94 dual	-61.9	-60.4	-58.6	-57.4	-55.6	-54.4	-53.8	25

Table 132 8.4 GHz TDM mode: maximum link loss per channel bandwidth (dB)

Modulation mode	5 MHz	10 MHz	15 MHz	20 MHz	30 MHz	40 MHz	45 MHz
BPSK 0.63 single	174.3	172.8	171.0	169.8	168.0	166.8	166.3
QPSK 0.63 single	166.7	165.2	163.5	162.2	160.5	159.2	158.7
QPSK 0.87 single	161.7	160.2	158.4	157.2	155.4	154.2	153.7
16QAM 0.63 single	158.8	157.3	155.6	154.3	152.5	151.3	150.8
16QAM 0.63 dual	155.8	154.3	152.5	151.3	149.5	148.3	147.8
16QAM 0.87 single	154.0	152.5	150.8	149.5	147.8	146.5	146.0
16QAM 0.87 dual	151.0	149.5	147.8	146.5	144.7	143.5	143.0
64QAM 0.75 single	151.0	149.5	147.7	146.4	144.7	143.4	142.9
64QAM 0.75 dual	148.0	146.4	144.7	143.4	141.7	140.4	139.9
64QAM 0.92 single	148.7	147.2	145.5	144.2	142.4	141.2	140.7
64 QAM 0.92 dual	145.7	144.2	142.4	141.2	139.4	138.2	137.7
256QAM 0.81 single	147.3	145.8	144.1	142.8	141.0	139.8	139.3
256QAM 0.81 dual	144.3	142.8	141.0	139.8	138.0	136.8	136.3
256QAM 0.94 single	141.9	140.4	138.6	137.4	135.6	134.4	133.8
256QAM 0.94 dual	138.9	137.4	135.6	134.4	132.6	131.4	130.8

Data throughput capacity tables

Data capacity in PTP topology

Use the following tables to look up the data throughput rates (Mbit/s) that are achieved when two PTP 700 ODUs are linked and the link distance (range) is 0 km:

PTP 700 variant	Link symmetry	Link optimization	PTP 45700	PTP 78700	
Full	1:1	IP	Table 133	Table 146	
		TDM	Table 134	Table 147	
	2:1	IP	Table 135	Table 148	
		TDM	Table 136	Table 149	
	3:1	IP	Table 137	Table 150	
	5:1	IP	Table 138	Table 151	
	Adaptive	IP	Table 139	Table 152	
	Lite	1:1	IP	Table 140	-
			TDM	Table 141	-
		2:1	IP	Table 142	-
TDM			Table 143	-	
3:1		IP	Table 144	-	
5:1		IP	Table 145	-	

Use the following range adjustment graphs to look up the link range and find the throughput factor that must be applied to adjust the 0 km data throughput rates:

Link symmetry	Link optimization	Bandwidth			
		45 MHz	40 MHz	30 MHz	20 MHz
1:1	IP	Figure 69	Figure 70	Figure 71	Figure 72
	TDM	Figure 76	Figure 77	Figure 78	Figure 79
2:1	IP	Figure 83	Figure 84	Figure 85	Figure 86
	TDM	Figure 89	Figure 90	Figure 91	Figure 92
3:1	IP	Figure 95	Figure 96	Figure 97	Figure 98
5:1	IP	Figure 101	Figure 102	Figure 103	-
Adaptive	IP	Figure 104	Figure 105	Figure 106	Figure 107

Link symmetry	Link optimization	Bandwidth		
		15 MHz	10 MHz	5 MHz
1:1	IP	Figure 73	Figure 74	Figure 75
	TDM	Figure 80	Figure 81	Figure 82
2:1	IP	Figure 87	Figure 88	-
	TDM	Figure 93	Figure 94	-
3:1	IP	Figure 99	Figure 100	-
5:1	IP	-	-	-
Adaptive	IP	Figure 108	Figure 109	-



Note Throughput for link symmetry 5:1, 3:1 and 2:1 are the same as 1:5, 1:3, and 1:2; but the Tx and Rx data rates are interchanged.

Table 133 PTP 45700 throughput at zero link range (Mbit/s), Full, symmetry 1:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	225.56	225.56	451.11	205.84	205.84	411.68
64QAM 0.92 dual	190.04	190.04	380.07	173.42	173.42	346.85
64QAM 0.75 dual	155.29	155.29	310.59	141.72	141.72	283.44
16QAM 0.87 dual	120.81	120.81	241.63	110.25	110.25	220.51
16QAM 0.63 dual	86.85	86.85	173.70	79.26	79.26	158.52
256QAM 0.81 single	112.78	112.78	225.55	102.92	102.92	205.83
64QAM 0.92 single	95.02	95.02	190.03	86.71	86.71	173.42
64QAM 0.75 single	77.65	77.65	155.29	70.86	70.86	141.72
16QAM 0.87 single	60.40	60.40	120.81	55.12	55.12	110.25
16QAM 0.63 single	43.42	43.42	86.85	39.63	39.63	79.25
QPSK 0.87 single	30.20	30.20	60.40	27.56	27.56	55.12
QPSK 0.63 single	21.71	21.71	43.42	19.81	19.81	39.62
BPSK 0.63 single	10.85	10.85	21.71	9.90	9.90	19.81

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	150.76	150.76	301.53	99.80	99.80	199.59
64QAM 0.92 dual	127.02	127.02	254.04	84.08	84.08	168.16
64QAM 0.75 dual	103.80	103.80	207.60	68.71	68.71	137.42
16QAM 0.87 dual	80.75	80.75	161.51	53.45	53.45	106.91
16QAM 0.63 dual	58.05	58.05	116.10	38.43	38.43	76.85
256QAM 0.81 single	75.38	75.38	150.76	49.90	49.90	99.79
64QAM 0.92 single	63.51	63.51	127.02	42.04	42.04	84.08
64QAM 0.75 single	51.90	51.90	103.80	34.35	34.35	68.71
16QAM 0.87 single	40.37	40.37	80.75	26.73	26.73	53.45
16QAM 0.63 single	29.02	29.02	58.05	19.21	19.21	38.42
QPSK 0.87 single	20.19	20.19	40.37	13.36	13.36	26.72
QPSK 0.63 single	14.51	14.51	29.02	9.60	9.60	19.21
BPSK 0.63 single	7.25	7.25	14.51	4.80	4.80	9.60

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	75.19	75.19	150.38	49.98	49.98	99.96
64QAM 0.92 dual	63.35	63.35	126.70	42.11	42.11	84.22
64QAM 0.75 dual	51.77	51.77	103.54	34.41	34.41	68.82
16QAM 0.87 dual	40.27	40.27	80.55	26.77	26.77	53.54
16QAM 0.63 dual	28.95	28.95	57.90	19.24	19.24	38.49
256QAM 0.81 single	37.59	37.59	75.19	24.99	24.99	49.98
64QAM 0.92 single	31.67	31.67	63.35	21.05	21.05	42.11
64QAM 0.75 single	25.88	25.88	51.77	17.20	17.20	34.41
16QAM 0.87 single	20.14	20.14	40.27	13.38	13.38	26.77
16QAM 0.63 single	14.47	14.47	28.95	9.62	9.62	19.24
QPSK 0.87 single	10.07	10.07	20.13	6.69	6.69	13.38
QPSK 0.63 single	7.24	7.24	14.47	4.81	4.81	9.62
BPSK 0.63 single	3.62	3.62	7.23	2.40	2.40	4.81

Modulation mode	5 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	24.14	24.14	48.28
64QAM 0.92 dual	20.34	20.34	40.68
64QAM 0.75 dual	16.62	16.62	33.24
16QAM 0.87 dual	12.93	12.93	25.86
16QAM 0.63 dual	9.29	9.29	18.59
256QAM 0.81 single	12.07	12.07	24.14
64QAM 0.92 single	10.17	10.17	20.34
64QAM 0.75 single	8.31	8.31	16.62
16QAM 0.87 single	6.46	6.46	12.93
16QAM 0.63 single	4.65	4.65	9.29
QPSK 0.87 single	3.23	3.23	6.46
QPSK 0.63 single	2.32	2.32	4.64
BPSK 0.63 single	1.16	1.16	2.32

Table 134 PTP 45700 throughput at zero link range (Mbit/s), Full, symmetry 1:1, optimization TDM

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	198.33	198.33	396.66	184.65	184.65	369.29
64QAM 0.92 dual	167.10	167.10	334.20	155.57	155.57	311.14
64QAM 0.75 dual	136.55	136.55	273.10	127.13	127.13	254.26
16QAM 0.87 dual	106.23	106.23	212.46	98.90	98.90	197.80
16QAM 0.63 dual	76.37	76.37	152.73	71.10	71.10	142.20
256QAM 0.81 single	99.16	99.16	198.33	92.32	92.32	184.64
64QAM 0.92 single	83.55	83.55	167.09	77.78	77.78	155.57
64QAM 0.75 single	68.27	68.27	136.55	63.56	63.56	127.13
16QAM 0.87 single	53.11	53.11	106.23	49.45	49.45	98.90
16QAM 0.63 single	38.18	38.18	76.36	35.55	35.55	71.09
QPSK 0.87 single	26.55	26.55	53.11	24.72	24.72	49.45
QPSK 0.63 single	19.09	19.09	38.18	17.77	17.77	35.54
BPSK 0.63 single	9.54	9.54	19.09	8.88	8.88	17.77

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	139.97	139.97	279.95	95.52	95.52	191.04
64QAM 0.92 dual	117.93	117.93	235.86	80.48	80.48	160.96
64QAM 0.75 dual	96.37	96.37	192.74	65.77	65.77	131.53
16QAM 0.87 dual	74.97	74.97	149.95	51.16	51.16	102.33
16QAM 0.63 dual	53.90	53.90	107.79	36.78	36.78	73.56
256QAM 0.81 single	69.99	69.99	139.97	47.76	47.76	95.52
64QAM 0.92 single	58.96	58.96	117.93	40.24	40.24	80.48
64QAM 0.75 single	48.19	48.19	96.37	32.88	32.88	65.76
16QAM 0.87 single	37.49	37.49	74.97	25.58	25.58	51.16
16QAM 0.63 single	26.95	26.95	53.89	18.39	18.39	36.78
QPSK 0.87 single	18.74	18.74	37.48	12.79	12.79	25.58
QPSK 0.63 single	13.47	13.47	26.94	9.19	9.19	18.39
BPSK 0.63 single	6.73	6.73	13.47	4.59	4.59	9.19

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	72.60	72.60	145.19	48.96	48.96	97.92
64QAM 0.92 dual	61.16	61.16	122.33	41.25	41.25	82.50
64QAM 0.75 dual	49.98	49.98	99.96	33.71	33.71	67.42
16QAM 0.87 dual	38.88	38.88	77.77	26.22	26.22	52.45
16QAM 0.63 dual	27.95	27.95	55.90	18.85	18.85	37.70
256QAM 0.81 single	36.30	36.30	72.59	24.48	24.48	48.96
64QAM 0.92 single	30.58	30.58	61.16	20.62	20.62	41.25
64QAM 0.75 single	24.99	24.99	49.98	16.85	16.85	33.71
16QAM 0.87 single	19.44	19.44	38.88	13.11	13.11	26.22
16QAM 0.63 single	13.97	13.97	27.95	9.42	9.42	18.85
QPSK 0.87 single	9.72	9.72	19.44	6.55	6.55	13.11
QPSK 0.63 single	6.99	6.99	13.97	4.71	4.71	9.42
BPSK 0.63 single	3.49	3.49	6.98	2.35	2.35	4.71

Modulation mode	5 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	24.14	24.14	48.28
64QAM 0.92 dual	20.34	20.34	40.68
64QAM 0.75 dual	16.62	16.62	33.24
16QAM 0.87 dual	12.93	12.93	25.86
16QAM 0.63 dual	9.29	9.29	18.59
256QAM 0.81 single	12.07	12.07	24.14
64QAM 0.92 single	10.17	10.17	20.34
64QAM 0.75 single	8.31	8.31	16.62
16QAM 0.87 single	6.46	6.46	12.93
16QAM 0.63 single	4.65	4.65	9.29
QPSK 0.87 single	3.23	3.23	6.46
QPSK 0.63 single	2.32	2.32	4.64
BPSK 0.63 single	1.16	1.16	2.32

Table 135 PTP 45700 throughput at zero link range (Mbit/s), Full, symmetry 2:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	298.95	149.47	448.42	272.96	136.48	409.44
64QAM 0.92 dual	251.87	125.94	377.81	229.98	114.99	344.96
64QAM 0.75 dual	205.83	102.91	308.74	187.93	93.97	281.90
16QAM 0.87 dual	160.13	80.06	240.19	146.21	73.10	219.31
16QAM 0.63 dual	115.11	57.55	172.67	105.10	52.55	157.65
256QAM 0.81 single	149.47	74.73	224.21	136.48	68.24	204.72
64QAM 0.92 single	125.93	62.97	188.90	114.99	57.49	172.48
64QAM 0.75 single	102.91	51.46	154.37	93.97	46.98	140.95
16QAM 0.87 single	80.06	40.03	120.09	73.10	36.55	109.65
16QAM 0.63 single	57.55	28.78	86.33	52.55	26.27	78.82
QPSK 0.87 single	40.03	20.01	60.04	36.55	18.27	54.82
QPSK 0.63 single	28.77	14.39	43.16	26.27	13.14	39.41
BPSK 0.63 single	14.38	7.19	21.58	13.13	6.57	19.70

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	199.99	99.99	299.98	133.06	66.53	199.59
64QAM 0.92 dual	168.50	84.25	252.74	112.11	56.05	168.16
64QAM 0.75 dual	137.69	68.85	206.54	91.61	45.81	137.42
16QAM 0.87 dual	107.12	53.56	160.68	71.27	35.63	106.91
16QAM 0.63 dual	77.01	38.50	115.51	51.24	25.62	76.85
256QAM 0.81 single	99.99	50.00	149.99	66.53	33.26	99.79
64QAM 0.92 single	84.25	42.12	126.37	56.05	28.03	84.08
64QAM 0.75 single	68.85	34.42	103.27	45.81	22.90	68.71
16QAM 0.87 single	53.56	26.78	80.34	35.63	17.82	53.45
16QAM 0.63 single	38.50	19.25	57.75	25.62	12.81	38.42
QPSK 0.87 single	26.78	13.39	40.16	17.82	8.91	26.72
QPSK 0.63 single	19.25	9.62	28.87	12.81	6.40	19.21
BPSK 0.63 single	9.62	4.81	14.43	6.40	3.20	9.60

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	100.26	50.13	150.38	66.18	33.09	99.27
64QAM 0.92 dual	84.47	42.23	126.70	55.76	27.88	83.64
64QAM 0.75 dual	69.03	34.51	103.54	45.56	22.78	68.35
16QAM 0.87 dual	53.70	26.85	80.55	35.45	17.72	53.17
16QAM 0.63 dual	38.60	19.30	57.90	25.48	12.74	38.22
256QAM 0.81 single	50.13	25.06	75.19	33.09	16.54	49.63
64QAM 0.92 single	42.23	21.12	63.35	27.88	13.94	41.82
64QAM 0.75 single	34.51	17.26	51.77	22.78	11.39	34.17
16QAM 0.87 single	26.85	13.42	40.27	17.72	8.86	26.58
16QAM 0.63 single	19.30	9.65	28.95	12.74	6.37	19.11
QPSK 0.87 single	13.42	6.71	20.13	8.86	4.43	13.29
QPSK 0.63 single	9.65	4.82	14.47	6.37	3.18	9.55
BPSK 0.63 single	4.82	2.41	7.23	3.18	1.59	4.77

Table 136 Throughput at zero link range (Mbit/s), Full, symmetry 2:1, optimization TDM

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	277.05	138.52	415.57	256.25	128.12	384.37
64QAM 0.92 dual	233.42	116.71	350.13	215.89	107.95	323.84
64QAM 0.75 dual	190.75	95.37	286.12	176.43	88.21	264.64
16QAM 0.87 dual	148.39	74.20	222.59	137.25	68.63	205.88
16QAM 0.63 dual	106.68	53.34	160.02	98.67	49.33	148.00
256QAM 0.81 single	138.52	69.26	207.78	128.12	64.06	192.18
64QAM 0.92 single	116.71	58.35	175.06	107.94	53.97	161.92
64QAM 0.75 single	95.37	47.69	143.06	88.21	44.10	132.32
16QAM 0.87 single	74.20	37.10	111.29	68.62	34.31	102.94
16QAM 0.63 single	53.34	26.67	80.00	49.33	24.66	74.00
QPSK 0.87 single	37.10	18.55	55.64	34.31	17.15	51.46
QPSK 0.63 single	26.67	13.33	40.00	24.66	12.33	36.99
BPSK 0.63 single	13.33	6.66	20.00	12.33	6.16	18.49

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	192.13	96.07	288.20	130.15	65.07	195.22
64QAM 0.92 dual	161.88	80.94	242.81	109.65	54.83	164.48
64QAM 0.75 dual	132.28	66.14	198.42	89.61	44.80	134.41
16QAM 0.87 dual	102.91	51.45	154.37	69.71	34.85	104.57
16QAM 0.63 dual	73.98	36.99	110.97	50.11	25.06	75.17
256QAM 0.81 single	96.06	48.03	144.10	65.07	32.54	97.61
64QAM 0.92 single	80.94	40.47	121.40	54.83	27.41	82.24
64QAM 0.75 single	66.14	33.07	99.21	44.80	22.40	67.20
16QAM 0.87 single	51.45	25.73	77.18	34.85	17.43	52.28
16QAM 0.63 single	36.99	18.49	55.48	25.06	12.53	37.58
QPSK 0.87 single	25.73	12.86	38.59	17.43	8.71	26.14
QPSK 0.63 single	18.49	9.25	27.74	12.53	6.26	18.79
BPSK 0.63 single	9.24	4.62	13.87	6.26	3.13	9.39

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	98.49	49.25	147.74	66.18	33.09	99.27
64QAM 0.92 dual	82.98	41.49	124.48	55.76	27.88	83.64
64QAM 0.75 dual	67.81	33.91	101.72	45.56	22.78	68.35
16QAM 0.87 dual	52.76	26.38	79.13	35.45	17.72	53.17
16QAM 0.63 dual	37.92	18.96	56.89	25.48	12.74	38.22
256QAM 0.81 single	49.25	24.62	73.87	33.09	16.54	49.63
64QAM 0.92 single	41.49	20.74	62.24	27.88	13.94	41.82
64QAM 0.75 single	33.91	16.95	50.86	22.78	11.39	34.17
16QAM 0.87 single	26.38	13.19	39.56	17.72	8.86	26.58
16QAM 0.63 single	18.96	9.48	28.44	12.74	6.37	19.11
QPSK 0.87 single	13.19	6.59	19.78	8.86	4.43	13.29
QPSK 0.63 single	9.48	4.74	14.22	6.37	3.18	9.55
BPSK 0.63 single	4.74	2.37	7.11	3.18	1.59	4.77

Table 137 PTP 45700 throughput at zero link range (Mbit/s), Full, symmetry 3:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
	256QAM 0.81 dual	336.32	112.10	448.42	307.08	102.36
64QAM 0.92 dual	283.36	94.45	377.81	258.72	86.24	344.96
64QAM 0.75 dual	231.56	77.18	308.74	211.43	70.47	281.90
16QAM 0.87 dual	180.14	60.05	240.19	164.48	54.83	219.31
16QAM 0.63 dual	129.50	43.17	172.67	118.24	39.41	157.65
256QAM 0.81 single	168.16	56.05	224.21	153.54	51.18	204.72
64QAM 0.92 single	141.68	47.22	188.90	129.36	43.12	172.48
64QAM 0.75 single	115.78	38.59	154.37	105.71	35.24	140.95
16QAM 0.87 single	90.07	30.02	120.09	82.24	27.41	109.65
16QAM 0.63 single	64.75	21.58	86.33	59.12	19.70	78.82
QPSK 0.87 single	45.03	15.01	60.04	41.12	13.70	54.82
QPSK 0.63 single	32.37	10.79	43.16	29.56	9.85	39.41
BPSK 0.63 single	16.18	5.39	21.58	14.78	4.92	19.70

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
	256QAM 0.81 dual	224.42	74.80	299.22	148.04	49.34
64QAM 0.92 dual	189.08	63.02	252.10	124.73	41.57	166.30
64QAM 0.75 dual	154.51	51.50	206.01	101.92	33.97	135.90
16QAM 0.87 dual	120.20	40.07	160.27	79.29	26.43	105.72
16QAM 0.63 dual	86.41	28.80	115.21	57.00	19.00	76.00
256QAM 0.81 single	112.21	37.40	149.61	74.02	24.67	98.69
64QAM 0.92 single	94.54	31.51	126.05	62.36	20.79	83.15
64QAM 0.75 single	77.25	25.75	103.00	50.96	16.99	67.95
16QAM 0.87 single	60.10	20.03	80.13	39.65	13.21	52.86
16QAM 0.63 single	43.20	14.40	57.60	28.50	9.50	38.00
QPSK 0.87 single	30.05	10.01	40.06	19.82	6.61	26.43
QPSK 0.63 single	21.60	7.20	28.80	14.25	4.75	19.00
BPSK 0.63 single	10.80	3.60	14.40	7.12	2.37	9.50

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	111.79	37.26	149.05	74.97	24.99	99.96
64QAM 0.92 dual	94.19	31.39	125.58	63.16	21.05	84.22
64QAM 0.75 dual	76.97	25.65	102.62	51.62	17.20	68.82
16QAM 0.87 dual	59.88	19.96	79.83	40.15	13.38	53.54
16QAM 0.63 dual	43.04	14.35	57.39	28.87	9.62	38.49
256QAM 0.81 single	55.89	18.63	74.52	37.48	12.49	49.98
64QAM 0.92 single	47.09	15.70	62.79	31.58	10.53	42.11
64QAM 0.75 single	38.48	12.83	51.31	25.81	8.60	34.41
16QAM 0.87 single	29.94	9.98	39.91	20.08	6.69	26.77
16QAM 0.63 single	21.52	7.17	28.69	14.43	4.81	19.24
QPSK 0.87 single	14.97	4.99	19.95	10.04	3.34	13.38
QPSK 0.63 single	10.76	3.58	14.34	7.21	2.40	9.62
BPSK 0.63 single	5.38	1.79	7.17	3.61	1.20	4.81

Table 138 PTP 45700 throughput at zero link range (Mbit/s), Full, symmetry 5:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	373.69	74.74	448.42	333.94	66.79	400.73
64QAM 0.92 dual	314.84	62.97	377.81	281.35	56.27	337.62
64QAM 0.75 dual	257.28	51.46	308.74	229.92	45.98	275.90
16QAM 0.87 dual	200.16	40.03	240.19	178.87	35.77	214.64
16QAM 0.63 dual	143.89	28.78	172.67	128.58	25.72	154.30
256QAM 0.81 single	186.84	37.37	224.21	166.97	33.39	200.36
64QAM 0.92 single	157.42	31.48	188.90	140.67	28.13	168.81
64QAM 0.75 single	128.64	25.73	154.37	114.96	22.99	137.95
16QAM 0.87 single	100.08	20.01	120.09	89.43	17.88	107.32
16QAM 0.63 single	71.94	14.39	86.33	64.29	12.86	77.15
QPSK 0.87 single	50.04	10.01	60.04	44.71	8.94	53.65
QPSK 0.63 single	35.97	7.19	43.16	32.14	6.43	38.57
BPSK 0.63 single	17.98	3.59	21.58	16.07	3.21	19.28

Modulation mode	30 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	247.46	49.49	296.95
64QAM 0.92 dual	208.49	41.70	250.19
64QAM 0.75 dual	170.38	34.07	204.45
16QAM 0.87 dual	132.55	26.51	159.05
16QAM 0.63 dual	95.28	19.06	114.34
256QAM 0.81 single	123.73	24.74	148.47
64QAM 0.92 single	104.24	20.85	125.09
64QAM 0.75 single	85.19	17.04	102.22
16QAM 0.87 single	66.27	13.25	79.52
16QAM 0.63 single	47.64	9.53	57.17
QPSK 0.87 single	33.13	6.63	39.76
QPSK 0.63 single	23.82	4.76	28.58
BPSK 0.63 single	11.91	2.38	14.29

Table 139 PTP 45700 throughput at zero link range (Mbit/s), Full, symmetry adaptive, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	405.94	40.59	446.54	366.90	40.77	407.67
64QAM 0.92 dual	342.02	34.20	376.22	309.12	34.35	343.47
64QAM 0.75 dual	279.49	27.95	307.44	252.61	28.07	280.68
16QAM 0.87 dual	217.44	21.74	239.18	196.52	21.83	218.36
16QAM 0.63 dual	156.31	15.63	171.94	141.28	15.70	156.97
256QAM 0.81 single	202.97	20.30	223.26	183.45	20.38	203.83
64QAM 0.92 single	171.01	17.10	188.11	154.56	17.17	171.73
64QAM 0.75 single	139.75	13.97	153.72	126.30	14.03	140.34
16QAM 0.87 single	108.71	10.87	119.58	98.26	10.92	109.17
16QAM 0.63 single	78.15	7.81	85.97	70.64	7.85	78.48
QPSK 0.87 single	54.35	5.43	59.79	49.13	5.46	54.58
QPSK 0.63 single	39.07	3.91	42.98	35.32	3.92	39.24
BPSK 0.63 single	19.53	1.95	21.49	17.65	1.96	19.61

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	261.82	37.40	299.22	158.96	39.74	198.70
64QAM 0.92 dual	220.59	31.51	252.10	133.93	33.48	167.41
64QAM 0.75 dual	180.26	25.75	206.01	109.45	27.36	136.81
16QAM 0.87 dual	140.24	20.03	160.27	85.15	21.28	106.43
16QAM 0.63 dual	100.81	14.40	115.21	61.21	15.30	76.51
256QAM 0.81 single	130.91	18.70	149.61	79.48	19.87	99.35
64QAM 0.92 single	110.29	15.75	126.05	66.96	16.74	83.70
64QAM 0.75 single	90.13	12.87	103.00	54.72	13.68	68.40
16QAM 0.87 single	70.12	10.01	80.13	42.57	10.64	53.21
16QAM 0.63 single	50.40	7.20	57.60	30.60	7.65	38.25
QPSK 0.87 single	35.06	5.01	40.06	21.28	5.32	26.60
QPSK 0.63 single	25.20	3.60	28.80	15.30	3.82	19.12
BPSK 0.63 single	12.60	1.80	14.40	7.65	1.91	9.56

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	119.88	29.97	149.85	66.18	33.09	99.27
64QAM 0.92 dual	101.00	25.25	126.25	55.76	27.88	83.64
64QAM 0.75 dual	82.54	20.63	103.17	45.56	22.78	68.35
16QAM 0.87 dual	64.21	16.05	80.26	35.45	17.72	53.17
16QAM 0.63 dual	46.16	11.54	57.70	25.48	12.74	38.22
256QAM 0.81 single	59.94	14.98	74.92	33.09	16.54	49.63
64QAM 0.92 single	50.50	12.62	63.12	27.88	13.94	41.82
64QAM 0.75 single	41.27	10.32	51.58	22.78	11.39	34.17
16QAM 0.87 single	32.10	8.02	40.13	17.72	8.86	26.58
16QAM 0.63 single	23.08	5.77	28.85	12.74	6.37	19.11
QPSK 0.87 single	16.05	4.01	20.06	8.86	4.43	13.29
QPSK 0.63 single	11.54	2.88	14.42	6.37	3.18	9.55
BPSK 0.63 single	5.77	1.44	7.21	3.18	1.59	4.77

Table 140 PTP 45700 throughput at zero link range (Mbit/s), Lite, symmetry 1:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
	256QAM 0.81 dual	113.00	113.00	226.00	103.00	103.00
64QAM 0.92 dual	95.00	95.00	190.00	87.00	87.00	174.00
64QAM 0.75 dual	78.00	78.00	156.00	71.00	71.00	142.00
16QAM 0.87 dual	60.00	60.00	120.00	55.00	55.00	110.00
16QAM 0.63 dual	43.00	43.00	86.00	40.00	40.00	80.00
256QAM 0.81 single	56.00	56.00	112.00	52.00	52.00	104.00
64QAM 0.92 single	48.00	48.00	96.00	43.00	43.00	86.00
64QAM 0.75 single	39.00	39.00	78.00	35.00	35.00	70.00
16QAM 0.87 single	30.00	30.00	60.00	28.00	28.00	56.00
16QAM 0.63 single	22.00	22.00	44.00	20.00	20.00	40.00
QPSK 0.87 single	15.00	15.00	30.00	14.00	14.00	28.00
QPSK 0.63 single	11.00	11.00	22.00	10.00	10.00	20.00
BPSK 0.63 single	5.00	5.00	10.00	5.00	5.00	10.00

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
	256QAM 0.81 dual	75.00	75.00	150.00	50.00	50.00
64QAM 0.92 dual	64.00	64.00	128.00	42.00	42.00	84.00
64QAM 0.75 dual	52.00	52.00	104.00	34.00	34.00	68.00
16QAM 0.87 dual	40.00	40.00	80.00	27.00	27.00	54.00
16QAM 0.63 dual	29.00	29.00	58.00	19.00	19.00	38.00
256QAM 0.81 single	38.00	38.00	76.00	25.00	25.00	50.00
64QAM 0.92 single	32.00	32.00	64.00	21.00	21.00	42.00
64QAM 0.75 single	26.00	26.00	52.00	17.00	17.00	34.00
16QAM 0.87 single	20.00	20.00	40.00	13.00	13.00	26.00
16QAM 0.63 single	15.00	15.00	30.00	10.00	10.00	20.00
QPSK 0.87 single	10.00	10.00	20.00	7.00	7.00	14.00
QPSK 0.63 single	7.00	7.00	14.00	5.00	5.00	10.00
BPSK 0.63 single	5.00	5.00	10.00	4.80	4.80	9.60

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	38.00	38.00	76.00	25.00	25.00	50.00
64QAM 0.92 dual	32.00	32.00	64.00	21.00	21.00	42.00
64QAM 0.75 dual	26.00	26.00	52.00	17.00	17.00	34.00
16QAM 0.87 dual	20.00	20.00	40.00	13.00	13.00	26.00
16QAM 0.63 dual	14.00	14.00	28.00	10.00	10.00	20.00
256QAM 0.81 single	19.00	19.00	38.00	12.00	12.00	24.00
64QAM 0.92 single	16.00	16.00	32.00	11.00	11.00	22.00
64QAM 0.75 single	13.00	13.00	26.00	9.00	9.00	18.00
16QAM 0.87 single	10.00	10.00	20.00	7.00	7.00	14.00
16QAM 0.63 single	7.00	7.00	14.00	5.00	5.00	10.00
QPSK 0.87 single	5.00	5.00	10.00	5.00	5.00	10.00
QPSK 0.63 single	5.00	5.00	10.00	4.81	4.81	9.62
BPSK 0.63 single	3.62	3.62	7.23	2.40	2.40	4.81

Modulation mode	5 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	12.00	12.00	24.00
64QAM 0.92 dual	10.00	10.00	20.00
64QAM 0.75 dual	8.00	8.00	16.00
16QAM 0.87 dual	6.00	6.00	12.00
16QAM 0.63 dual	5.00	5.00	10.00
256QAM 0.81 single	6.00	6.00	12.00
64QAM 0.92 single	5.00	5.00	10.00
64QAM 0.75 single	5.00	5.00	10.00
16QAM 0.87 single	5.00	5.00	10.00
16QAM 0.63 single	4.65	4.65	9.30
QPSK 0.87 single	3.24	3.24	6.47
QPSK 0.63 single	2.33	2.33	4.65
BPSK 0.63 single	1.16	1.16	2.32

Table 141 PTP 45700 throughput at zero link range (Mbit/s), Lite, symmetry 1:1, optimization TDM

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	99.00	99.00	198.00	92.00	92.00	184.00
64QAM 0.92 dual	84.00	84.00	168.00	78.00	78.00	156.00
64QAM 0.75 dual	68.00	68.00	136.00	64.00	64.00	128.00
16QAM 0.87 dual	53.00	53.00	106.00	50.00	50.00	100.00
16QAM 0.63 dual	38.00	38.00	76.00	36.00	36.00	72.00
256QAM 0.81 single	50.00	50.00	100.00	46.00	46.00	92.00
64QAM 0.92 single	42.00	42.00	84.00	39.00	39.00	78.00
64QAM 0.75 single	34.00	34.00	68.00	32.00	32.00	64.00
16QAM 0.87 single	27.00	27.00	54.00	25.00	25.00	50.00
16QAM 0.63 single	19.00	19.00	38.00	18.00	18.00	36.00
QPSK 0.87 single	13.00	13.00	26.00	12.00	12.00	24.00
QPSK 0.63 single	10.00	10.00	20.00	9.00	9.00	18.00
BPSK 0.63 single	5.00	5.00	10.00	5.00	5.00	10.00

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	70.00	70.00	140.00	48.00	48.00	96.00
64QAM 0.92 dual	59.00	59.00	118.00	40.00	40.00	80.00
64QAM 0.75 dual	48.00	48.00	96.00	33.00	33.00	66.00
16QAM 0.87 dual	37.00	37.00	74.00	26.00	26.00	52.00
16QAM 0.63 dual	27.00	27.00	54.00	18.00	18.00	36.00
256QAM 0.81 single	35.00	35.00	70.00	24.00	24.00	48.00
64QAM 0.92 single	29.00	29.00	58.00	20.00	20.00	40.00
64QAM 0.75 single	24.00	24.00	48.00	16.00	16.00	32.00
16QAM 0.87 single	19.00	19.00	38.00	13.00	13.00	26.00
16QAM 0.63 single	13.00	13.00	26.00	9.00	9.00	18.00
QPSK 0.87 single	9.00	9.00	18.00	6.00	6.00	12.00
QPSK 0.63 single	7.00	7.00	14.00	5.00	5.00	10.00
BPSK 0.63 single	5.00	5.00	10.00	4.59	4.59	9.19

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	36.00	36.00	72.00	24.00	24.00	48.00
64QAM 0.92 dual	31.00	31.00	62.00	21.00	21.00	42.00
64QAM 0.75 dual	25.00	25.00	50.00	17.00	17.00	34.00
16QAM 0.87 dual	19.00	19.00	38.00	13.00	13.00	26.00
16QAM 0.63 dual	14.00	14.00	28.00	9.00	9.00	18.00
256QAM 0.81 single	18.00	18.00	36.00	12.00	12.00	24.00
64QAM 0.92 single	15.00	15.00	30.00	10.00	10.00	20.00
64QAM 0.75 single	12.00	12.00	24.00	8.00	8.00	16.00
16QAM 0.87 single	10.00	10.00	20.00	7.00	7.00	14.00
16QAM 0.63 single	7.00	7.00	14.00	5.00	5.00	10.00
QPSK 0.87 single	5.00	5.00	10.00	5.00	5.00	10.00
QPSK 0.63 single	5.00	5.00	10.00	4.71	4.71	9.42
BPSK 0.63 single	3.49	3.49	6.98	2.35	2.35	4.71

Modulation mode	5 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	12.00	12.00	24.00
64QAM 0.92 dual	10.00	10.00	20.00
64QAM 0.75 dual	8.00	8.00	16.00
16QAM 0.87 dual	6.00	6.00	12.00
16QAM 0.63 dual	5.00	5.00	10.00
256QAM 0.81 single	6.00	6.00	12.00
64QAM 0.92 single	5.00	5.00	10.00
64QAM 0.75 single	5.00	5.00	10.00
16QAM 0.87 single	5.00	5.00	10.00
16QAM 0.63 single	4.65	4.65	9.29
QPSK 0.87 single	3.23	3.23	6.46
QPSK 0.63 single	2.32	2.32	4.64
BPSK 0.63 single	1.16	1.16	2.32

Table 142 PTP 45700 throughput at zero link range (Mbit/s), Lite, symmetry 2:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	149.00	75.00	224.00	136.00	68.00	204.00
64QAM 0.92 dual	126.00	63.00	189.00	115.00	57.00	172.00
64QAM 0.75 dual	103.00	51.00	154.00	94.00	47.00	141.00
16QAM 0.87 dual	80.00	40.00	120.00	73.00	37.00	110.00
16QAM 0.63 dual	58.00	29.00	87.00	53.00	26.00	79.00
256QAM 0.81 single	75.00	37.00	112.00	68.00	34.00	102.00
64QAM 0.92 single	63.00	31.00	94.00	57.00	29.00	86.00
64QAM 0.75 single	51.00	26.00	77.00	47.00	23.00	70.00
16QAM 0.87 single	40.00	20.00	60.00	37.00	18.00	55.00
16QAM 0.63 single	29.00	14.00	43.00	26.00	13.00	39.00
QPSK 0.87 single	20.00	10.00	30.00	18.00	9.00	27.00
QPSK 0.63 single	14.00	7.00	21.00	13.00	7.00	20.00
BPSK 0.63 single	7.00	5.00	12.00	7.00	5.00	12.00

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	100.00	50.00	150.00	67.00	33.00	100.00
64QAM 0.92 dual	84.00	42.00	126.00	56.00	28.00	84.00
64QAM 0.75 dual	69.00	34.00	103.00	46.00	23.00	69.00
16QAM 0.87 dual	54.00	27.00	81.00	36.00	18.00	54.00
16QAM 0.63 dual	39.00	19.00	58.00	26.00	13.00	39.00
256QAM 0.81 single	50.00	25.00	75.00	33.00	17.00	50.00
64QAM 0.92 single	42.00	21.00	63.00	28.00	14.00	42.00
64QAM 0.75 single	34.00	17.00	51.00	23.00	11.00	34.00
16QAM 0.87 single	27.00	13.00	40.00	18.00	9.00	27.00
16QAM 0.63 single	19.00	10.00	29.00	13.00	6.00	19.00
QPSK 0.87 single	13.00	7.00	20.00	9.00	5.00	14.00
QPSK 0.63 single	10.00	5.00	15.00	6.00	5.00	11.00
BPSK 0.63 single	5.00	4.81	9.81	5.00	3.20	8.20

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	50.00	25.00	75.00	33.00	17.00	50.00
64QAM 0.92 dual	42.00	21.00	63.00	28.00	14.00	42.00
64QAM 0.75 dual	35.00	17.00	52.00	23.00	11.00	34.00
16QAM 0.87 dual	27.00	13.00	40.00	18.00	9.00	27.00
16QAM 0.63 dual	19.00	10.00	29.00	13.00	6.00	19.00
256QAM 0.81 single	25.00	13.00	38.00	17.00	8.00	25.00
64QAM 0.92 single	21.00	11.00	32.00	14.00	7.00	21.00
64QAM 0.75 single	17.00	9.00	26.00	11.00	6.00	17.00
16QAM 0.87 single	13.00	7.00	20.00	9.00	5.00	14.00
16QAM 0.63 single	10.00	5.00	15.00	6.00	5.00	11.00
QPSK 0.87 single	7.00	5.00	12.00	5.00	4.43	9.43
QPSK 0.63 single	5.00	4.82	9.82	5.00	3.18	8.18
BPSK 0.63 single	4.82	2.41	7.23	3.18	1.59	4.77

Table 143 PTP 45700 throughput at zero link range (Mbit/s), Lite, symmetry 2:1, optimization TDM

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	139.00	69.00	208.00	128.00	64.00	192.00
64QAM 0.92 dual	117.00	58.00	175.00	108.00	54.00	162.00
64QAM 0.75 dual	95.00	48.00	143.00	88.00	44.00	132.00
16QAM 0.87 dual	74.00	37.00	111.00	69.00	34.00	103.00
16QAM 0.63 dual	53.00	27.00	80.00	49.00	25.00	74.00
256QAM 0.81 single	69.00	35.00	104.00	64.00	32.00	96.00
64QAM 0.92 single	58.00	29.00	87.00	54.00	27.00	81.00
64QAM 0.75 single	48.00	24.00	72.00	44.00	22.00	66.00
16QAM 0.87 single	37.00	19.00	56.00	34.00	17.00	51.00
16QAM 0.63 single	27.00	13.00	40.00	25.00	12.00	37.00
QPSK 0.87 single	19.00	9.00	28.00	17.00	9.00	26.00
QPSK 0.63 single	13.00	7.00	20.00	12.00	6.00	18.00
BPSK 0.63 single	7.00	5.00	12.00	6.00	5.00	11.00

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	96.00	48.00	144.00	65.00	33.00	98.00
64QAM 0.92 dual	81.00	40.00	121.00	55.00	27.00	82.00
64QAM 0.75 dual	66.00	33.00	99.00	45.00	22.00	67.00
16QAM 0.87 dual	51.00	26.00	77.00	35.00	17.00	52.00
16QAM 0.63 dual	37.00	18.00	55.00	25.00	13.00	38.00
256QAM 0.81 single	48.00	24.00	72.00	33.00	16.00	49.00
64QAM 0.92 single	40.00	20.00	60.00	27.00	14.00	41.00
64QAM 0.75 single	33.00	17.00	50.00	22.00	11.00	33.00
16QAM 0.87 single	26.00	13.00	39.00	17.00	9.00	26.00
16QAM 0.63 single	18.00	9.00	27.00	13.00	6.00	19.00
QPSK 0.87 single	13.00	6.00	19.00	9.00	5.00	14.00
QPSK 0.63 single	9.00	5.00	14.00	6.00	5.00	11.00
BPSK 0.63 single	5.00	4.62	9.62	5.00	3.13	8.13

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	49.00	25.00	74.00	33.00	17.00	50.00
64QAM 0.92 dual	41.00	21.00	62.00	28.00	14.00	42.00
64QAM 0.75 dual	34.00	17.00	51.00	23.00	11.00	34.00
16QAM 0.87 dual	26.00	13.00	39.00	18.00	9.00	27.00
16QAM 0.63 dual	19.00	9.00	28.00	13.00	6.00	19.00
256QAM 0.81 single	25.00	12.00	37.00	17.00	8.00	25.00
64QAM 0.92 single	21.00	10.00	31.00	14.00	7.00	21.00
64QAM 0.75 single	17.00	8.00	25.00	11.00	6.00	17.00
16QAM 0.87 single	13.00	7.00	20.00	9.00	5.00	14.00
16QAM 0.63 single	9.00	5.00	14.00	6.00	5.00	11.00
QPSK 0.87 single	7.00	5.00	12.00	5.00	4.43	9.43
QPSK 0.63 single	5.00	4.74	9.74	5.00	3.18	8.18
BPSK 0.63 single	4.74	2.37	7.11	3.18	1.59	4.77

Table 144 PTP 45700 throughput at zero link range (Mbit/s), Lite, symmetry 3:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	168.00	56.00	224.00	154.00	51.00	205.00
64QAM 0.92 dual	142.00	47.00	189.00	129.00	43.00	172.00
64QAM 0.75 dual	116.00	39.00	155.00	106.00	35.00	141.00
16QAM 0.87 dual	90.00	30.00	120.00	82.00	27.00	109.00
16QAM 0.63 dual	65.00	22.00	87.00	59.00	20.00	79.00
256QAM 0.81 single	84.00	28.00	112.00	77.00	26.00	103.00
64QAM 0.92 single	71.00	24.00	95.00	65.00	22.00	87.00
64QAM 0.75 single	58.00	19.00	77.00	53.00	18.00	71.00
16QAM 0.87 single	45.00	15.00	60.00	41.00	14.00	55.00
16QAM 0.63 single	32.00	11.00	43.00	30.00	10.00	40.00
QPSK 0.87 single	23.00	8.00	31.00	21.00	7.00	28.00
QPSK 0.63 single	16.00	5.00	21.00	15.00	5.00	20.00
BPSK 0.63 single	8.00	5.00	13.00	7.00	4.92	11.92

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	112.00	37.00	149.00	74.00	25.00	99.00
64QAM 0.92 dual	95.00	32.00	127.00	62.00	21.00	83.00
64QAM 0.75 dual	77.00	26.00	103.00	51.00	17.00	68.00
16QAM 0.87 dual	60.00	20.00	80.00	40.00	13.00	53.00
16QAM 0.63 dual	43.00	14.00	57.00	29.00	9.00	38.00
256QAM 0.81 single	56.00	19.00	75.00	37.00	12.00	49.00
64QAM 0.92 single	47.00	16.00	63.00	31.00	10.00	41.00
64QAM 0.75 single	39.00	13.00	52.00	25.00	8.00	33.00
16QAM 0.87 single	30.00	10.00	40.00	20.00	7.00	27.00
16QAM 0.63 single	22.00	7.00	29.00	14.00	5.00	19.00
QPSK 0.87 single	15.00	5.00	20.00	10.00	5.00	15.00
QPSK 0.63 single	11.00	5.00	16.00	7.00	4.75	11.75
BPSK 0.63 single	5.00	3.60	8.60	5.00	2.37	7.37

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	56.00	19.00	75.00	37.00	12.00	49.00
64QAM 0.92 dual	47.00	16.00	63.00	32.00	11.00	43.00
64QAM 0.75 dual	38.00	13.00	51.00	26.00	9.00	35.00
16QAM 0.87 dual	30.00	10.00	40.00	20.00	7.00	27.00
16QAM 0.63 dual	22.00	7.00	29.00	14.00	5.00	19.00
256QAM 0.81 single	28.00	9.00	37.00	19.00	6.00	25.00
64QAM 0.92 single	24.00	8.00	32.00	16.00	5.00	21.00
64QAM 0.75 single	19.00	6.00	25.00	13.00	5.00	18.00
16QAM 0.87 single	15.00	5.00	20.00	10.00	5.00	15.00
16QAM 0.63 single	11.00	5.00	16.00	7.00	4.81	11.81
QPSK 0.87 single	7.00	4.99	11.99	5.00	3.34	8.34
QPSK 0.63 single	5.00	3.58	8.58	5.00	2.40	7.40
BPSK 0.63 single	5.00	1.79	6.79	3.61	1.20	4.81

Table 145 PTP 45700 throughput at zero link range (Mbit/s), Lite, symmetry 5:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	187.00	37.00	224.00	167.00	33.00	200.00
64QAM 0.92 dual	157.00	31.00	188.00	141.00	28.00	169.00
64QAM 0.75 dual	129.00	26.00	155.00	115.00	23.00	138.00
16QAM 0.87 dual	100.00	20.00	120.00	89.00	18.00	107.00
16QAM 0.63 dual	72.00	14.00	86.00	64.00	13.00	77.00
256QAM 0.81 single	93.00	19.00	112.00	83.00	17.00	100.00
64QAM 0.92 single	79.00	16.00	95.00	70.00	14.00	84.00
64QAM 0.75 single	64.00	13.00	77.00	57.00	11.00	68.00
16QAM 0.87 single	50.00	10.00	60.00	45.00	9.00	54.00
16QAM 0.63 single	36.00	7.00	43.00	32.00	6.00	38.00
QPSK 0.87 single	25.00	5.00	30.00	22.00	5.00	27.00
QPSK 0.63 single	18.00	5.00	23.00	16.00	5.00	21.00
BPSK 0.63 single	9.00	3.59	12.59	8.00	3.21	11.21

Modulation mode	30 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 dual	124.00	25.00	149.00
64QAM 0.92 dual	104.00	21.00	125.00
64QAM 0.75 dual	85.00	17.00	102.00
16QAM 0.87 dual	66.00	13.00	79.00
16QAM 0.63 dual	48.00	10.00	58.00
256QAM 0.81 single	62.00	12.00	74.00
64QAM 0.92 single	52.00	10.00	62.00
64QAM 0.75 single	43.00	9.00	52.00
16QAM 0.87 single	33.00	7.00	40.00
16QAM 0.63 single	24.00	5.00	29.00
QPSK 0.87 single	17.00	5.00	22.00
QPSK 0.63 single	12.00	4.76	16.76
BPSK 0.63 single	6.00	2.38	8.38

Table 146 PTP 78700 throughput at zero link range (Mbit/s), symmetry 1:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	251.85	251.85	503.70	230.29	230.29	460.57
256QAM 0.81 dual	218.89	218.89	437.78	200.15	200.15	400.30
64QAM 0.92 dual	184.42	184.42	368.84	168.63	168.63	337.26
64QAM 0.75 dual	150.71	150.71	301.41	137.80	137.80	275.61
16QAM 0.87 dual	117.24	117.24	234.49	107.21	107.21	214.41
16QAM 0.63 dual	84.28	84.28	168.57	77.07	77.07	154.14
256QAM 0.94 single	125.92	125.92	251.85	115.14	115.14	230.28
256QAM 0.81 single	109.44	109.44	218.89	100.07	100.07	200.15
64QAM 0.92 single	92.21	92.21	184.42	84.31	84.31	168.63
64QAM 0.75 single	75.35	75.35	150.71	68.90	68.90	137.80
16QAM 0.87 single	58.62	58.62	117.24	53.60	53.60	107.20
16QAM 0.63 single	42.14	42.14	84.28	38.53	38.53	77.07
QPSK 0.87 single	29.31	29.31	58.62	26.80	26.80	53.60
QPSK 0.63 single	21.07	21.07	42.14	19.27	19.27	38.53
BPSK 0.63 single	10.53	10.53	21.07	9.63	9.63	19.26

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	168.88	168.88	337.76	110.84	110.84	221.68
256QAM 0.81 dual	146.78	146.78	293.56	96.34	96.34	192.67
64QAM 0.92 dual	123.67	123.67	247.33	81.17	81.17	162.33
64QAM 0.75 dual	101.06	101.06	202.12	66.33	66.33	132.66
16QAM 0.87 dual	78.62	78.62	157.24	51.60	51.60	103.20
16QAM 0.63 dual	56.52	56.52	113.04	37.09	37.09	74.19
256QAM 0.94 single	84.44	84.44	168.88	55.42	55.42	110.84
256QAM 0.81 single	73.39	73.39	146.78	48.17	48.17	96.34
64QAM 0.92 single	61.83	61.83	123.66	40.58	40.58	81.16
64QAM 0.75 single	50.53	50.53	101.06	33.16	33.16	66.33
16QAM 0.87 single	39.31	39.31	78.62	25.80	25.80	51.60
16QAM 0.63 single	28.26	28.26	56.52	18.55	18.55	37.09

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
QPSK 0.87 single	19.65	19.65	39.31	12.90	12.90	25.80
QPSK 0.63 single	14.13	14.13	28.26	9.27	9.27	18.55
BPSK 0.63 single	7.06	7.06	14.13	4.64	4.64	9.27

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	84.23	84.23	168.47	55.99	55.99	111.99
256QAM 0.81 dual	73.21	73.21	146.42	48.67	48.67	97.33
64QAM 0.92 dual	61.68	61.68	123.36	41.00	41.00	82.01
64QAM 0.75 dual	50.41	50.41	100.81	33.51	33.51	67.01
16QAM 0.87 dual	39.21	39.21	78.43	26.07	26.07	52.13
16QAM 0.63 dual	28.19	28.19	56.38	18.74	18.74	37.48
256QAM 0.94 single	42.12	42.12	84.23	28.00	28.00	55.99
256QAM 0.81 single	36.61	36.61	73.21	24.33	24.33	48.67
64QAM 0.92 single	30.84	30.84	61.68	20.50	20.50	41.00
64QAM 0.75 single	25.20	25.20	50.41	16.75	16.75	33.51
16QAM 0.87 single	19.61	19.61	39.21	13.03	13.03	26.07
16QAM 0.63 single	14.09	14.09	28.19	9.37	9.37	18.74
QPSK 0.87 single	9.80	9.80	19.61	6.52	6.52	13.03
QPSK 0.63 single	7.05	7.05	14.09	4.68	4.68	9.37
BPSK 0.63 single	3.52	3.52	7.05	2.34	2.34	4.68

Modulation mode	5 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	26.40	26.40	52.80
256QAM 0.81 dual	22.95	22.95	45.89
64QAM 0.92 dual	19.33	19.33	38.67
64QAM 0.75 dual	15.80	15.80	31.60
16QAM 0.87 dual	12.29	12.29	24.58
16QAM 0.63 dual	8.84	8.84	17.67
256QAM 0.94 single	13.20	13.20	26.40
256QAM 0.81 single	11.47	11.47	22.95

Modulation mode	5 MHz (Tx/Rx/Aggregate)		
64QAM 0.92 single	9.67	9.67	19.33
64QAM 0.75 single	7.90	7.90	15.80
16QAM 0.87 single	6.15	6.15	12.29
16QAM 0.63 single	4.42	4.42	8.84
QPSK 0.87 single	3.07	3.07	6.15
QPSK 0.63 single	2.21	2.21	4.42
BPSK 0.63 single	1.10	1.10	2.21

Table 147 PTP 78700 throughput at zero link range (Mbit/s), symmetry 1:1, optimization TDM

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	187.93	187.93	375.85	176.45	176.45	352.89
256QAM 0.81 dual	163.33	163.33	326.67	153.36	153.36	306.71
64QAM 0.92 dual	137.61	137.61	275.22	129.21	129.21	258.41
64QAM 0.75 dual	112.46	112.46	224.91	105.59	105.59	211.17
16QAM 0.87 dual	87.49	87.49	174.97	82.14	82.14	164.28
16QAM 0.63 dual	62.89	62.89	125.78	59.05	59.05	118.10
256QAM 0.94 single	93.96	93.96	187.93	88.22	88.22	176.45
256QAM 0.81 single	81.67	81.67	163.33	76.68	76.68	153.35
64QAM 0.92 single	68.81	68.81	137.61	64.60	64.60	129.20
64QAM 0.75 single	56.23	56.23	112.46	52.79	52.79	105.59
16QAM 0.87 single	43.74	43.74	87.48	41.07	41.07	82.14
16QAM 0.63 single	31.45	31.45	62.89	29.52	29.52	59.05
QPSK 0.87 single	21.87	21.87	43.74	20.53	20.53	41.07
QPSK 0.63 single	15.72	15.72	31.44	14.76	14.76	29.52
BPSK 0.63 single	7.86	7.86	15.72	7.38	7.38	14.76

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	139.90	139.90	279.79	99.62	99.62	199.25
256QAM 0.81 dual	121.59	121.59	243.18	86.59	86.59	173.17
64QAM 0.92 dual	102.44	102.44	204.88	72.95	72.95	145.90

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
64QAM 0.75 dual	83.71	83.71	167.43	59.61	59.61	119.23
16QAM 0.87 dual	65.13	65.13	130.25	46.38	46.38	92.76
16QAM 0.63 dual	46.82	46.82	93.64	33.34	33.34	66.68
256QAM 0.94 single	69.95	69.95	139.90	49.81	49.81	99.62
256QAM 0.81 single	60.79	60.79	121.59	43.29	43.29	86.59
64QAM 0.92 single	51.22	51.22	102.44	36.48	36.48	72.95
64QAM 0.75 single	41.86	41.86	83.71	29.81	29.81	59.61
16QAM 0.87 single	32.56	32.56	65.13	23.19	23.19	46.38
16QAM 0.63 single	23.41	23.41	46.82	16.67	16.67	33.34
QPSK 0.87 single	16.28	16.28	32.56	11.59	11.59	23.19
QPSK 0.63 single	11.70	11.70	23.41	8.33	8.33	16.67
BPSK 0.63 single	5.85	5.85	11.70	4.17	4.17	8.33

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	77.45	77.45	154.91	53.51	53.51	107.01
256QAM 0.81 dual	67.32	67.32	134.63	46.50	46.50	93.01
64QAM 0.92 dual	56.72	56.72	113.43	39.18	39.18	78.36
64QAM 0.75 dual	46.35	46.35	92.70	32.02	32.02	64.03
16QAM 0.87 dual	36.06	36.06	72.11	24.91	24.91	49.82
16QAM 0.63 dual	25.92	25.92	51.84	17.91	17.91	35.81
256QAM 0.94 single	38.73	38.73	77.45	26.75	26.75	53.50
256QAM 0.81 single	33.66	33.66	67.32	23.25	23.25	46.50
64QAM 0.92 single	28.36	28.36	56.72	19.59	19.59	39.18
64QAM 0.75 single	23.17	23.17	46.35	16.01	16.01	32.02
16QAM 0.87 single	18.03	18.03	36.06	12.45	12.45	24.91
16QAM 0.63 single	12.96	12.96	25.92	8.95	8.95	17.91
QPSK 0.87 single	9.01	9.01	18.03	6.23	6.23	12.45
QPSK 0.63 single	6.48	6.48	12.96	4.48	4.48	8.95
BPSK 0.63 single	3.24	3.24	6.48	2.24	2.24	4.48

Modulation mode	5 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	26.40	26.40	52.80
256QAM 0.81 dual	22.95	22.95	45.89
64QAM 0.92 dual	19.33	19.33	38.67
64QAM 0.75 dual	15.80	15.80	31.60
16QAM 0.87 dual	12.29	12.29	24.58
16QAM 0.63 dual	8.84	8.84	17.67
256QAM 0.94 single	13.20	13.20	26.40
256QAM 0.81 single	11.47	11.47	22.95
64QAM 0.92 single	9.67	9.67	19.33
64QAM 0.75 single	7.90	7.90	15.80
16QAM 0.87 single	6.15	6.15	12.29
16QAM 0.63 single	4.42	4.42	8.84
QPSK 0.87 single	3.07	3.07	6.15
QPSK 0.63 single	2.21	2.21	4.42
BPSK 0.63 single	1.10	1.10	2.21

Table 148 PTP 78700 throughput at zero link range (Mbit/s), symmetry 2:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	330.62	165.31	495.93	302.65	151.33	453.98
256QAM 0.81 dual	287.35	143.67	431.02	263.04	131.52	394.57
64QAM 0.92 dual	242.10	121.05	363.15	221.62	110.81	332.43
64QAM 0.75 dual	197.84	98.92	296.76	181.11	90.55	271.66
16QAM 0.87 dual	153.91	76.96	230.87	140.89	70.45	211.34
16QAM 0.63 dual	110.65	55.32	165.97	101.29	50.64	151.93
256QAM 0.94 single	165.31	82.65	247.96	151.32	75.66	226.99
256QAM 0.81 single	143.67	71.84	215.51	131.52	65.76	197.28
64QAM 0.92 single	121.05	60.52	181.57	110.81	55.40	166.21
64QAM 0.75 single	98.92	49.46	148.38	90.55	45.28	135.83
16QAM 0.87 single	76.96	38.48	115.43	70.45	35.22	105.67
16QAM 0.63 single	55.32	27.66	82.98	50.64	25.32	75.96

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
QPSK 0.87 single	38.48	19.24	57.71	35.22	17.61	52.83
QPSK 0.63 single	27.66	13.83	41.49	25.32	12.66	37.98
BPSK 0.63 single	13.83	6.91	20.74	12.66	6.33	18.99

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	222.11	111.05	333.16	147.79	73.89	221.68
256QAM 0.81 dual	193.04	96.52	289.56	128.45	64.22	192.67
64QAM 0.92 dual	162.64	81.32	243.96	108.22	54.11	162.33
64QAM 0.75 dual	132.91	66.45	199.36	88.44	44.22	132.66
16QAM 0.87 dual	103.40	51.70	155.10	68.80	34.40	103.20
16QAM 0.63 dual	74.33	37.17	111.50	49.46	24.73	74.19
256QAM 0.94 single	111.05	55.53	166.58	73.89	36.95	110.84
256QAM 0.81 single	96.52	48.26	144.78	64.22	32.11	96.34
64QAM 0.92 single	81.32	40.66	121.98	54.11	27.05	81.16
64QAM 0.75 single	66.45	33.23	99.68	44.22	22.11	66.33
16QAM 0.87 single	51.70	25.85	77.55	34.40	17.20	51.60
16QAM 0.63 single	37.16	18.58	55.75	24.73	12.36	37.09
QPSK 0.87 single	25.85	12.92	38.77	17.20	8.60	25.80
QPSK 0.63 single	18.58	9.29	27.87	12.36	6.18	18.55
BPSK 0.63 single	9.29	4.64	13.93	6.18	3.09	9.27

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	112.31	56.16	168.47	73.52	36.76	110.28
256QAM 0.81 dual	97.61	48.81	146.42	63.90	31.95	95.85
64QAM 0.92 dual	82.24	41.12	123.36	53.84	26.92	80.75
64QAM 0.75 dual	67.21	33.60	100.81	43.99	22.00	65.99
16QAM 0.87 dual	52.29	26.14	78.43	34.23	17.11	51.34
16QAM 0.63 dual	37.59	18.79	56.38	24.60	12.30	36.91
256QAM 0.94 single	56.16	28.08	84.23	36.76	18.38	55.14
256QAM 0.81 single	48.81	24.40	73.21	31.95	15.97	47.92

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
64QAM 0.92 single	41.12	20.56	61.68	26.92	13.46	40.38
64QAM 0.75 single	33.60	16.80	50.41	22.00	11.00	33.00
16QAM 0.87 single	26.14	13.07	39.21	17.11	8.56	25.67
16QAM 0.63 single	18.79	9.40	28.19	12.30	6.15	18.45
QPSK 0.87 single	13.07	6.54	19.61	8.56	4.28	12.83
QPSK 0.63 single	9.40	4.70	14.09	6.15	3.08	9.23
BPSK 0.63 single	4.70	2.35	7.05	3.08	1.54	4.61

Table 149 PTP 78700 throughput at zero link range (Mbit/s), symmetry 2:1, optimization TDM

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	277.27	138.63	415.90	258.26	129.13	387.40
256QAM 0.81 dual	240.98	120.49	361.47	224.47	112.23	336.70
64QAM 0.92 dual	203.03	101.52	304.55	189.12	94.56	283.68
64QAM 0.75 dual	165.92	82.96	248.88	154.55	77.27	231.82
16QAM 0.87 dual	129.08	64.54	193.62	120.23	60.12	180.35
16QAM 0.63 dual	92.79	46.40	139.19	86.43	43.22	129.65
256QAM 0.94 single	138.63	69.32	207.95	129.13	64.57	193.70
256QAM 0.81 single	120.49	60.25	180.74	112.23	56.12	168.35
64QAM 0.92 single	101.52	50.76	152.27	94.56	47.28	141.84
64QAM 0.75 single	82.96	41.48	124.44	77.27	38.64	115.91
16QAM 0.87 single	64.54	32.27	96.81	60.11	30.06	90.17
16QAM 0.63 single	46.39	23.20	69.59	43.21	21.61	64.82
QPSK 0.87 single	32.27	16.13	48.40	30.06	15.03	45.08
QPSK 0.63 single	23.20	11.60	34.79	21.61	10.80	32.41
BPSK 0.63 single	11.60	5.80	17.40	10.80	5.40	16.20

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	200.28	100.14	300.42	139.91	69.96	209.87
256QAM 0.81 dual	174.07	87.03	261.10	121.60	60.80	182.40
64QAM 0.92 dual	146.66	73.33	219.98	102.45	51.23	153.68

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
64QAM 0.75 dual	119.85	59.92	179.77	83.72	41.86	125.58
16QAM 0.87 dual	93.24	46.62	139.85	65.13	32.57	97.70
16QAM 0.63 dual	67.03	33.51	100.54	46.82	23.41	70.24
256QAM 0.94 single	100.14	50.07	150.21	69.96	34.98	104.93
256QAM 0.81 single	87.03	43.52	130.55	60.80	30.40	91.20
64QAM 0.92 single	73.33	36.66	109.99	51.23	25.61	76.84
64QAM 0.75 single	59.92	29.96	89.88	41.86	20.93	62.79
16QAM 0.87 single	46.62	23.31	69.93	32.57	16.28	48.85
16QAM 0.63 single	33.51	16.76	50.27	23.41	11.71	35.12
QPSK 0.87 single	23.31	11.65	34.96	16.28	8.14	24.42
QPSK 0.63 single	16.76	8.38	25.13	11.71	5.85	17.56
BPSK 0.63 single	8.38	4.19	12.57	5.85	2.93	8.78

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	107.60	53.80	161.40	73.52	36.76	110.28
256QAM 0.81 dual	93.52	46.76	140.28	63.90	31.95	95.85
64QAM 0.92 dual	78.79	39.40	118.19	53.84	26.92	80.75
64QAM 0.75 dual	64.39	32.19	96.58	43.99	22.00	65.99
16QAM 0.87 dual	50.09	25.05	75.14	34.23	17.11	51.34
16QAM 0.63 dual	36.01	18.01	54.02	24.60	12.30	36.91
256QAM 0.94 single	53.80	26.90	80.70	36.76	18.38	55.14
256QAM 0.81 single	46.76	23.38	70.14	31.95	15.97	47.92
64QAM 0.92 single	39.40	19.70	59.09	26.92	13.46	40.38
64QAM 0.75 single	32.19	16.10	48.29	22.00	11.00	33.00
16QAM 0.87 single	25.05	12.52	37.57	17.11	8.56	25.67
16QAM 0.63 single	18.00	9.00	27.01	12.30	6.15	18.45
QPSK 0.87 single	12.52	6.26	18.78	8.56	4.28	12.83
QPSK 0.63 single	9.00	4.50	13.50	6.15	3.08	9.23
BPSK 0.63 single	4.50	2.25	6.75	3.08	1.54	4.61

Table 150 PTP 78700 throughput at zero link range (Mbit/s), symmetry 3:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	371.94	123.98	495.93	340.48	113.49	453.98
256QAM 0.81 dual	323.27	107.76	431.02	295.92	98.64	394.57
64QAM 0.92 dual	272.36	90.79	363.15	249.32	83.11	332.43
64QAM 0.75 dual	222.57	74.19	296.76	203.74	67.91	271.66
16QAM 0.87 dual	173.15	57.72	230.87	158.51	52.84	211.34
16QAM 0.63 dual	124.48	41.49	165.97	113.95	37.98	151.93
256QAM 0.94 single	185.97	61.99	247.96	170.24	56.75	226.99
256QAM 0.81 single	161.63	53.88	215.51	147.96	49.32	197.28
64QAM 0.92 single	136.18	45.39	181.57	124.66	41.55	166.21
64QAM 0.75 single	111.29	37.10	148.38	101.87	33.96	135.83
16QAM 0.87 single	86.57	28.86	115.43	79.25	26.42	105.67
16QAM 0.63 single	62.24	20.75	82.98	56.97	18.99	75.96
QPSK 0.87 single	43.29	14.43	57.71	39.62	13.21	52.83
QPSK 0.63 single	31.12	10.37	41.49	28.48	9.49	37.98
BPSK 0.63 single	15.56	5.19	20.74	14.24	4.75	18.99
Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	248.18	82.73	330.91	161.71	53.90	215.61
256QAM 0.81 dual	215.70	71.90	287.60	140.55	46.85	187.40
64QAM 0.92 dual	181.73	60.58	242.31	118.42	39.47	157.89
64QAM 0.75 dual	148.51	49.50	198.01	96.77	32.26	129.02
16QAM 0.87 dual	115.54	38.51	154.05	75.28	25.09	100.38
16QAM 0.63 dual	83.06	27.69	110.74	54.12	18.04	72.16
256QAM 0.94 single	124.09	41.36	165.45	80.85	26.95	107.81
256QAM 0.81 single	107.85	35.95	143.80	70.27	23.42	93.70
64QAM 0.92 single	90.87	30.29	121.15	59.21	19.74	78.94
64QAM 0.75 single	74.26	24.75	99.01	48.38	16.13	64.51
16QAM 0.87 single	57.77	19.26	77.02	37.64	12.55	50.19
16QAM 0.63 single	41.53	13.84	55.37	27.06	9.02	36.08

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
QPSK 0.87 single	28.88	9.63	38.51	18.82	6.27	25.09
QPSK 0.63 single	20.76	6.92	27.68	13.53	4.51	18.04
BPSK 0.63 single	10.38	3.46	13.84	6.76	2.25	9.02

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	123.65	41.22	164.86	83.99	28.00	111.99
256QAM 0.81 dual	107.46	35.82	143.29	73.00	24.33	97.33
64QAM 0.92 dual	90.54	30.18	120.72	61.50	20.50	82.01
64QAM 0.75 dual	73.99	24.66	98.65	50.26	16.75	67.01
16QAM 0.87 dual	57.56	19.19	76.75	39.10	13.03	52.13
16QAM 0.63 dual	41.38	13.79	55.17	28.11	9.37	37.48
256QAM 0.94 single	61.82	20.61	82.43	42.00	14.00	55.99
256QAM 0.81 single	53.73	17.91	71.64	36.50	12.17	48.67
64QAM 0.92 single	45.27	15.09	60.36	30.75	10.25	41.00
64QAM 0.75 single	36.99	12.33	49.33	25.13	8.38	33.51
16QAM 0.87 single	28.78	9.59	38.37	19.55	6.52	26.07
16QAM 0.63 single	20.69	6.90	27.59	14.05	4.68	18.74
QPSK 0.87 single	14.39	4.80	19.19	9.77	3.26	13.03
QPSK 0.63 single	10.34	3.45	13.79	7.03	2.34	9.37
BPSK 0.63 single	5.17	1.72	6.90	3.51	1.17	4.68

Table 151 PTP 78700 throughput at zero link range (Mbit/s), symmetry 5:1, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	413.27	82.65	495.93	357.82	71.56	429.38
256QAM 0.81 dual	359.19	71.84	431.02	310.99	62.20	373.19
64QAM 0.92 dual	302.62	60.52	363.15	262.02	52.40	314.42
64QAM 0.75 dual	247.30	49.46	296.76	214.12	42.82	256.94
16QAM 0.87 dual	192.39	38.48	230.87	166.57	33.31	199.89
16QAM 0.63 dual	138.31	27.66	165.97	119.75	23.95	143.70
256QAM 0.94 single	206.63	41.33	247.96	178.91	35.78	214.69

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.81 single	179.59	35.92	215.51	155.49	31.10	186.59
64QAM 0.92 single	151.31	30.26	181.57	131.01	26.20	157.21
64QAM 0.75 single	123.65	24.73	148.38	107.06	21.41	128.47
16QAM 0.87 single	96.19	19.24	115.43	83.29	16.66	99.94
16QAM 0.63 single	69.15	13.83	82.98	59.87	11.97	71.85
QPSK 0.87 single	48.10	9.62	57.71	41.64	8.33	49.97
QPSK 0.63 single	34.57	6.91	41.49	29.93	5.99	35.92
BPSK 0.63 single	17.29	3.46	20.74	14.97	2.99	17.96

Modulation mode	30 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	270.27	54.05	324.32
256QAM 0.81 dual	234.90	46.98	281.88
64QAM 0.92 dual	197.91	39.58	237.49
64QAM 0.75 dual	161.73	32.35	194.08
16QAM 0.87 dual	125.82	25.16	150.98
16QAM 0.63 dual	90.45	18.09	108.54
256QAM 0.94 single	135.13	27.03	162.16
256QAM 0.81 single	117.45	23.49	140.94
64QAM 0.92 single	98.95	19.79	118.74
64QAM 0.75 single	80.86	16.17	97.04
16QAM 0.87 single	62.91	12.58	75.49
16QAM 0.63 single	45.22	9.04	54.27
QPSK 0.87 single	31.45	6.29	37.74
QPSK 0.63 single	22.61	4.52	27.13
BPSK 0.63 single	11.30	2.26	13.57

Table 152 PTP 78700 throughput at zero link range (Mbit/s), symmetry Adaptive, optimization IP

Modulation mode	45 MHz (Tx/Rx/Aggregate)			40 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	447.45	44.74	492.19	403.95	44.88	448.83
256QAM 0.81 dual	388.89	38.89	427.78	351.09	39.01	390.10
64QAM 0.92 dual	327.65	32.77	360.42	295.80	32.87	328.67
64QAM 0.75 dual	267.75	26.78	294.53	241.72	26.86	268.58
16QAM 0.87 dual	208.30	20.83	229.13	188.05	20.89	208.95
16QAM 0.63 dual	149.74	14.97	164.72	135.19	15.02	150.21
256QAM 0.94 single	223.72	22.37	246.09	201.97	22.44	224.42
256QAM 0.81 single	194.44	19.44	213.89	175.54	19.50	195.05
64QAM 0.92 single	163.82	16.38	180.21	147.90	16.43	164.33
64QAM 0.75 single	133.88	13.39	147.26	120.86	13.43	134.29
16QAM 0.87 single	104.15	10.41	114.56	94.02	10.45	104.47
16QAM 0.63 single	74.87	7.49	82.36	67.59	7.51	75.10
QPSK 0.87 single	52.07	5.21	57.28	47.01	5.22	52.23
QPSK 0.63 single	37.43	3.74	41.18	33.79	3.75	37.55
BPSK 0.63 single	18.71	1.87	20.59	16.90	1.88	18.77
Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	289.54	41.36	330.91	175.37	43.84	219.22
256QAM 0.81 dual	251.65	35.95	287.60	152.42	38.11	190.53
64QAM 0.92 dual	212.02	30.29	242.31	128.42	32.10	160.52
64QAM 0.75 dual	173.26	24.75	198.01	104.94	26.24	131.18
16QAM 0.87 dual	134.79	19.26	154.05	81.64	20.41	102.05
16QAM 0.63 dual	96.90	13.84	110.74	58.69	14.67	73.36
256QAM 0.94 single	144.77	20.68	165.45	87.69	21.92	109.61
256QAM 0.81 single	125.82	17.97	143.80	76.21	19.05	95.26
64QAM 0.92 single	106.01	15.14	121.15	64.21	16.05	80.26
64QAM 0.75 single	86.63	12.38	99.01	52.47	13.12	65.59
16QAM 0.87 single	67.40	9.63	77.02	40.82	10.21	51.03
16QAM 0.63 single	48.45	6.92	55.37	29.34	7.34	36.68

Modulation mode	30 MHz (Tx/Rx/Aggregate)			20 MHz (Tx/Rx/Aggregate)		
QPSK 0.87 single	33.70	4.81	38.51	20.41	5.10	25.51
QPSK 0.63 single	24.22	3.46	27.68	14.67	3.67	18.34
BPSK 0.63 single	12.11	1.73	13.84	7.34	1.83	9.17

Modulation mode	15 MHz (Tx/Rx/Aggregate)			10 MHz (Tx/Rx/Aggregate)		
256QAM 0.94 dual	133.61	33.40	167.01	73.52	36.76	110.28
256QAM 0.81 dual	116.12	29.03	145.15	63.90	31.95	95.85
64QAM 0.92 dual	97.84	24.46	122.29	53.84	26.92	80.75
64QAM 0.75 dual	79.95	19.99	99.94	43.99	22.00	65.99
16QAM 0.87 dual	62.20	15.55	77.75	34.23	17.11	51.34
16QAM 0.63 dual	44.71	11.18	55.89	24.60	12.30	36.91
256QAM 0.94 single	66.80	16.70	83.50	36.76	18.38	55.14
256QAM 0.81 single	58.06	14.51	72.57	31.95	15.97	47.92
64QAM 0.92 single	48.92	12.23	61.15	26.92	13.46	40.38
64QAM 0.75 single	39.97	9.99	49.97	22.00	11.00	33.00
16QAM 0.87 single	31.10	7.77	38.87	17.11	8.56	25.67
16QAM 0.63 single	22.36	5.59	27.95	12.30	6.15	18.45
QPSK 0.87 single	15.55	3.89	19.44	8.56	4.28	12.83
QPSK 0.63 single	11.18	2.79	13.97	6.15	3.08	9.23
BPSK 0.63 single	5.59	1.40	6.99	3.08	1.54	4.61

Figure 69 Range adjustment for PTP 700, symmetry 1:1, optimization IP, bandwidth 45 MHz

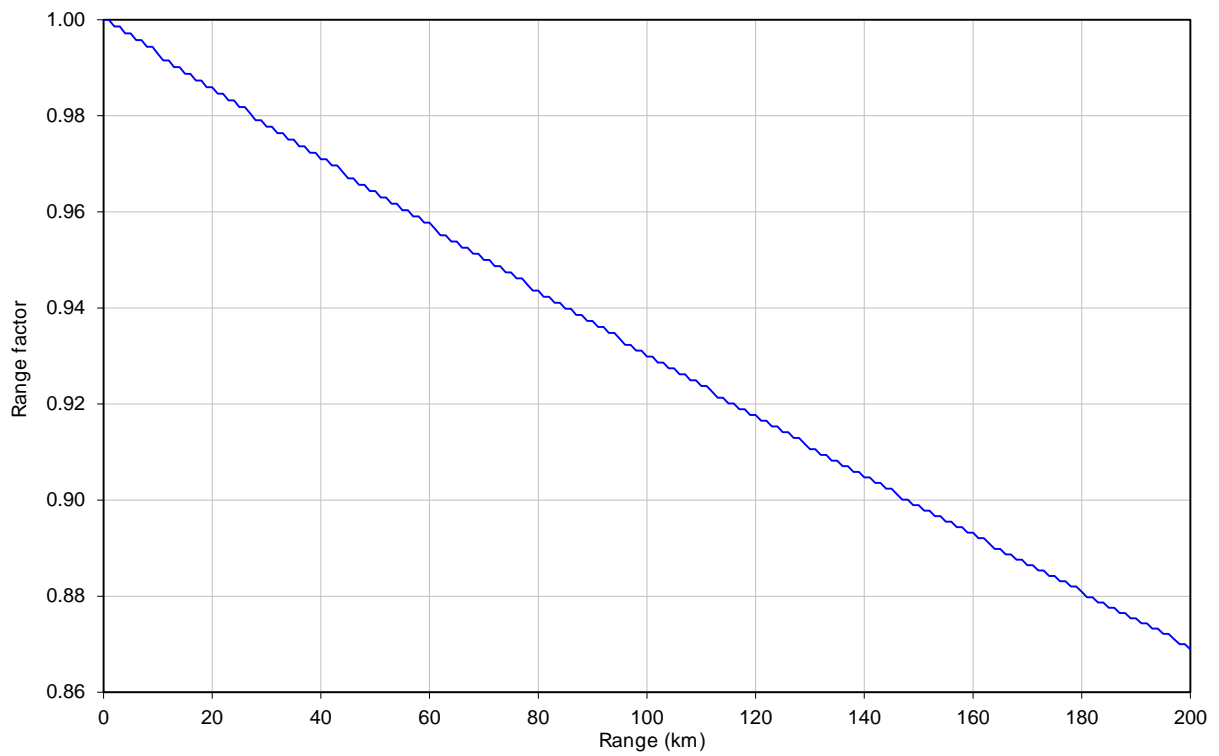


Figure 70 Range adjustment for PTP 700, symmetry 1:1, optimization IP, bandwidth 40 MHz

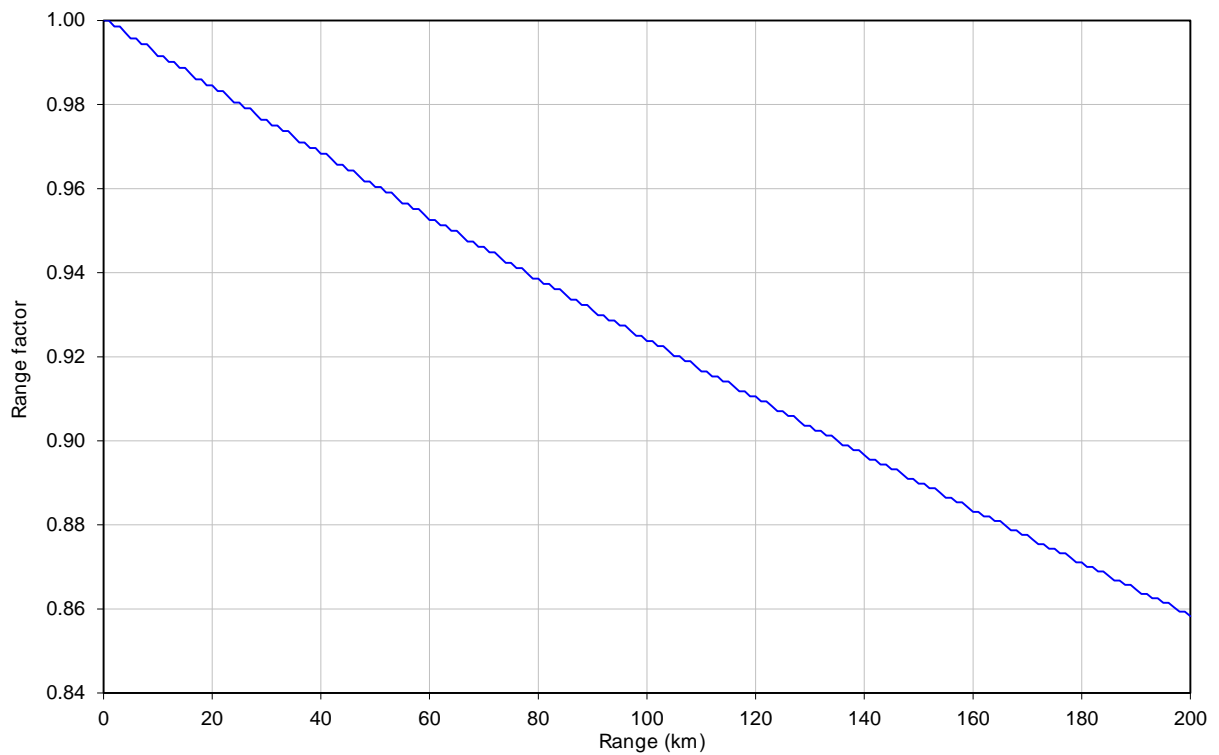


Figure 71 Range adjustment for PTP 700, symmetry 1:1, optimization IP, bandwidth 30 MHz

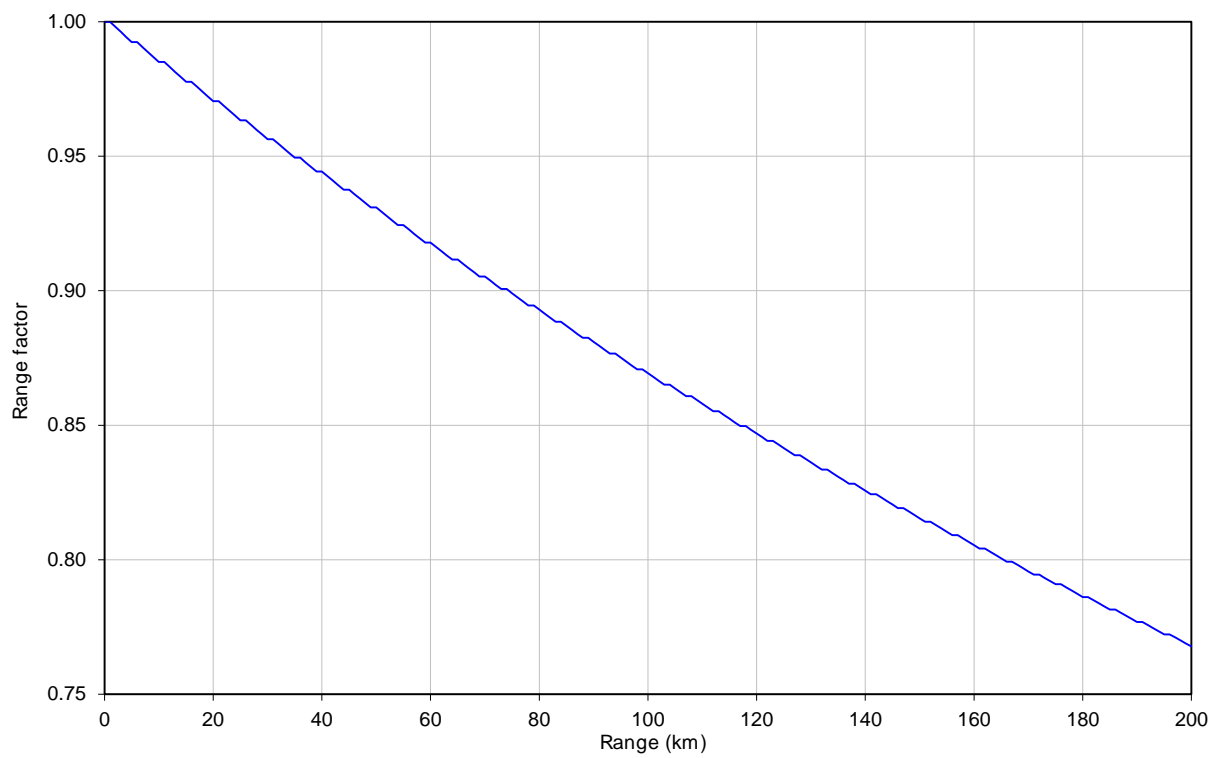


Figure 72 Range adjustment for PTP 700, symmetry 1:1, optimization IP, bandwidth 20 MHz

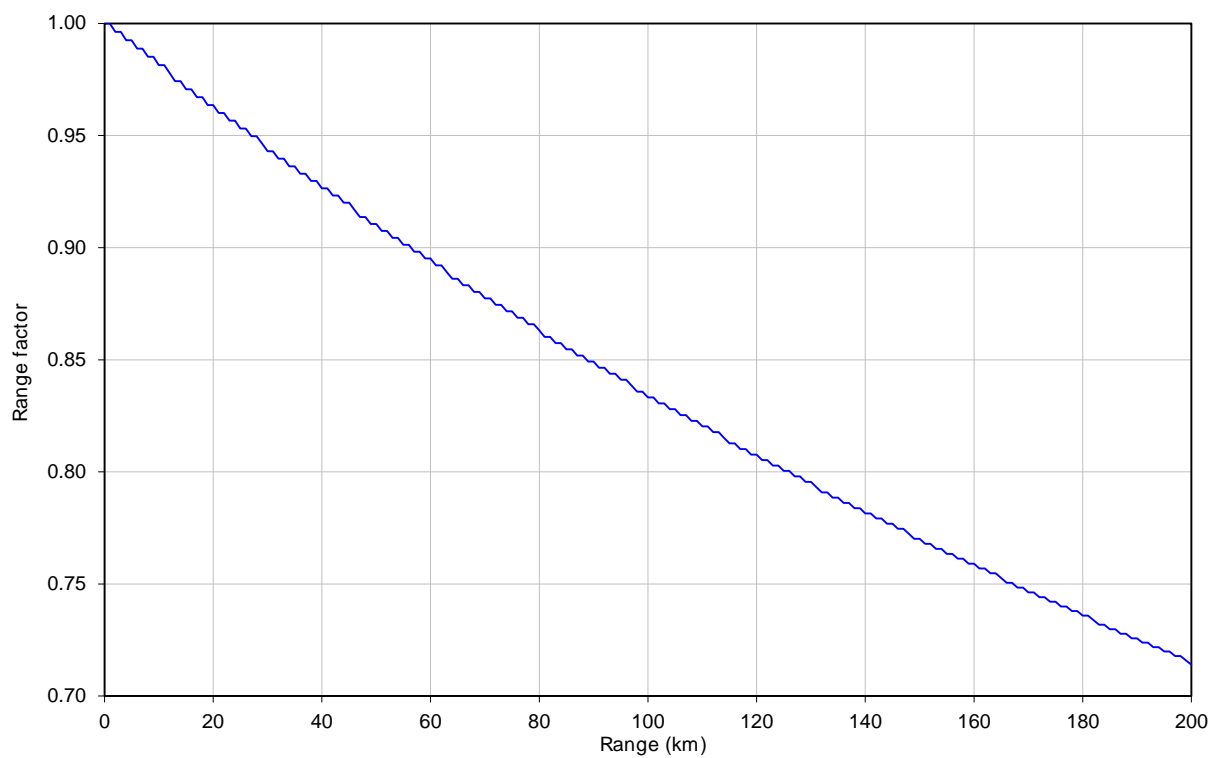


Figure 73 Range adjustment for PTP 700, symmetry 1:1, optimization IP, bandwidth 15 MHz

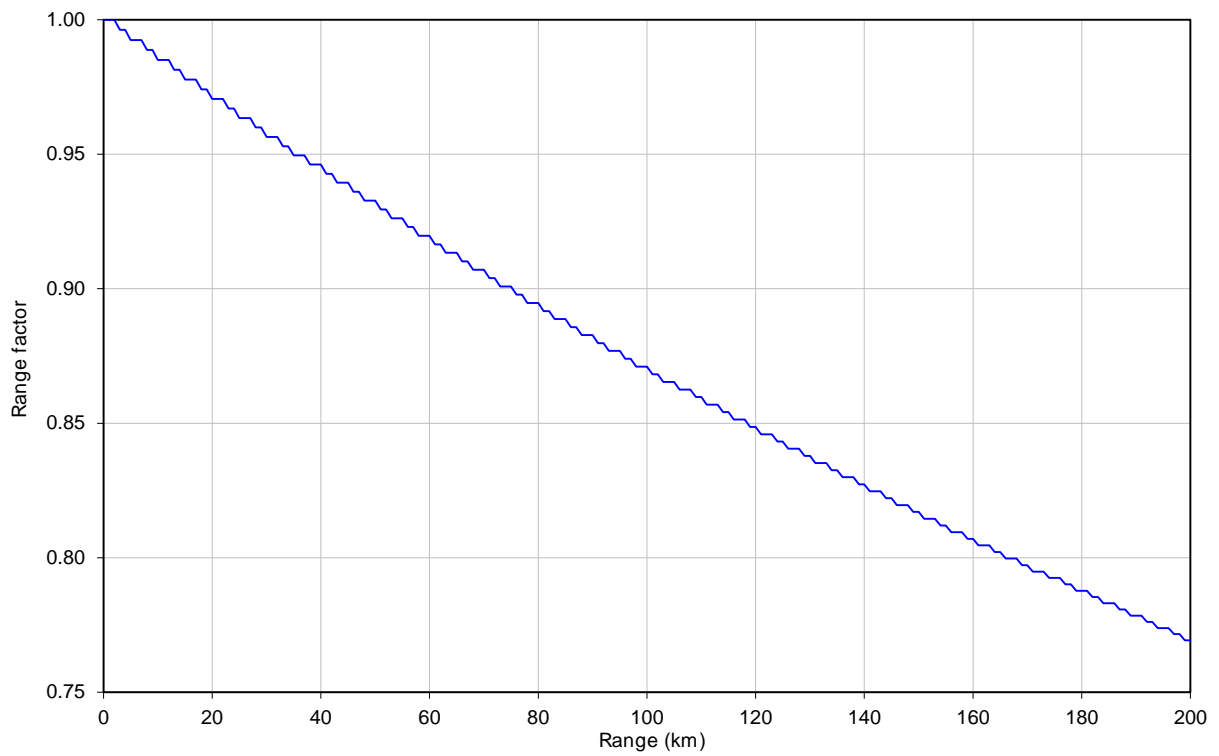


Figure 74 Range adjustment for PTP 700, symmetry 1:1, optimization IP, bandwidth 10 MHz

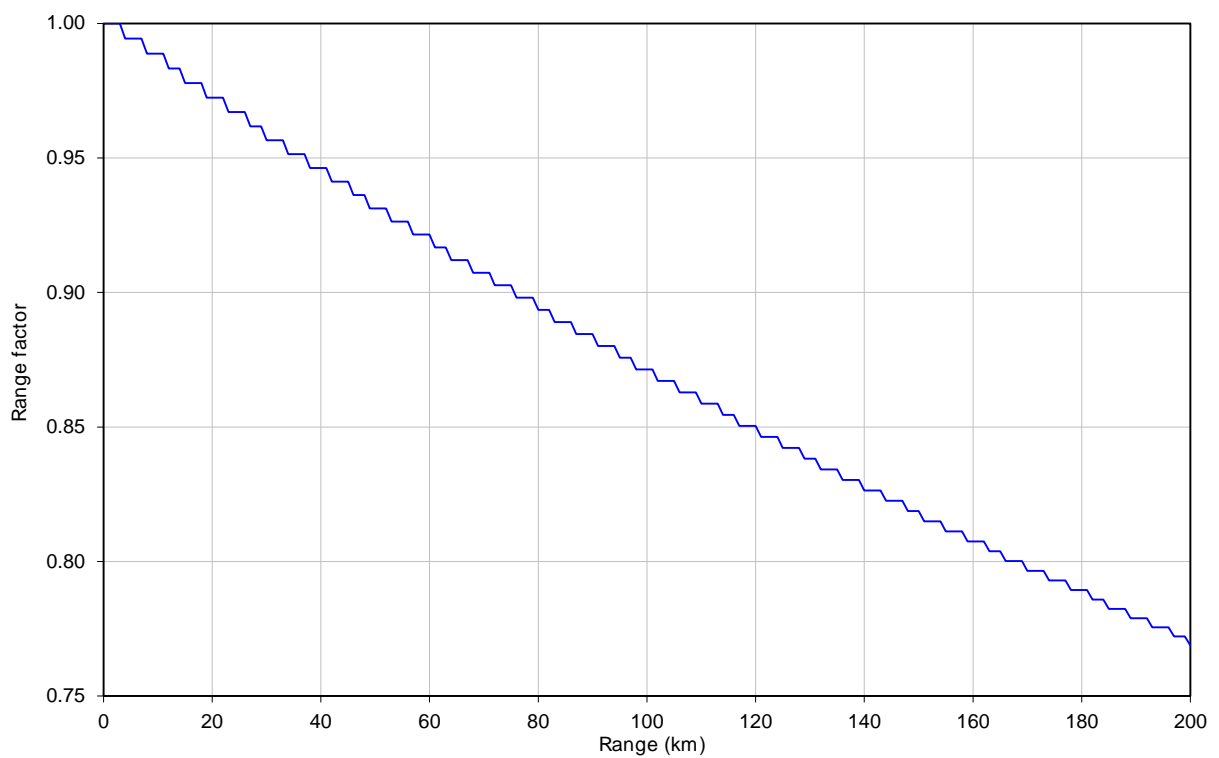


Figure 75 Range adjustment for PTP 700, symmetry 1:1, optimization IP, bandwidth 5 MHz

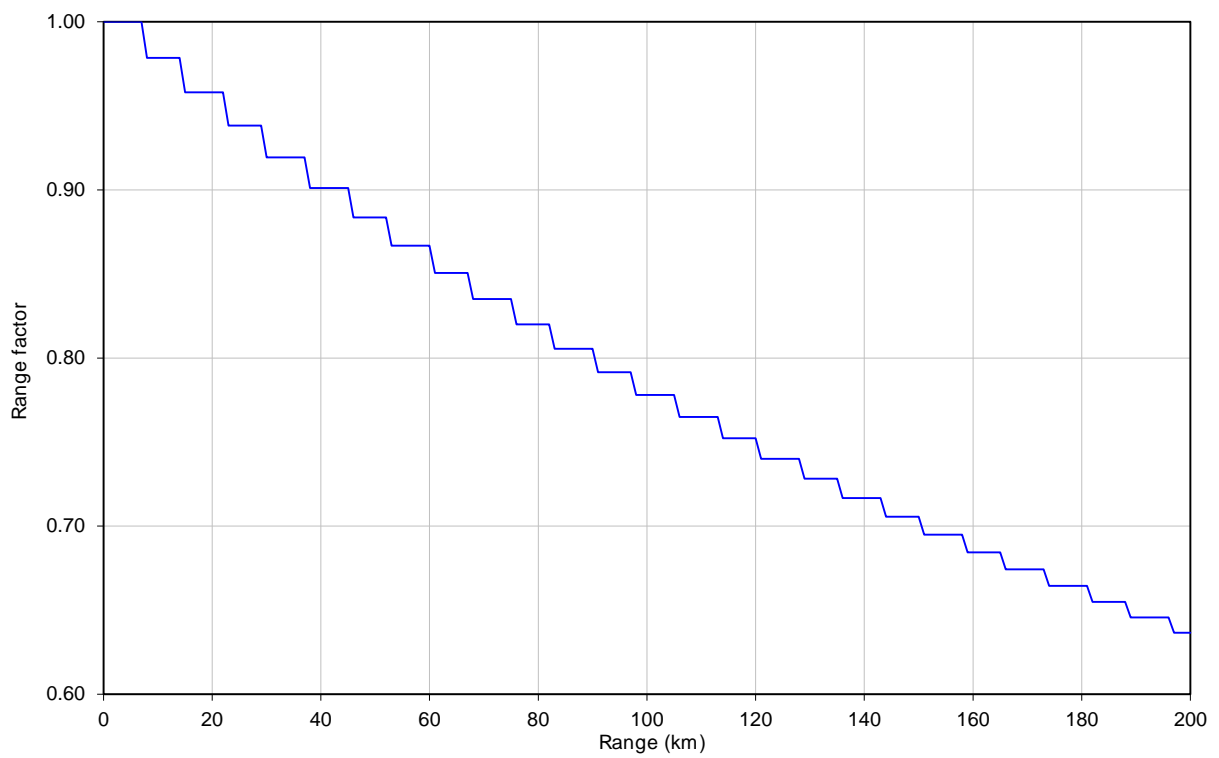


Figure 76 Range adjustment for PTP 700, symmetry 1:1, optimization TDM, bandwidth 45 MHz

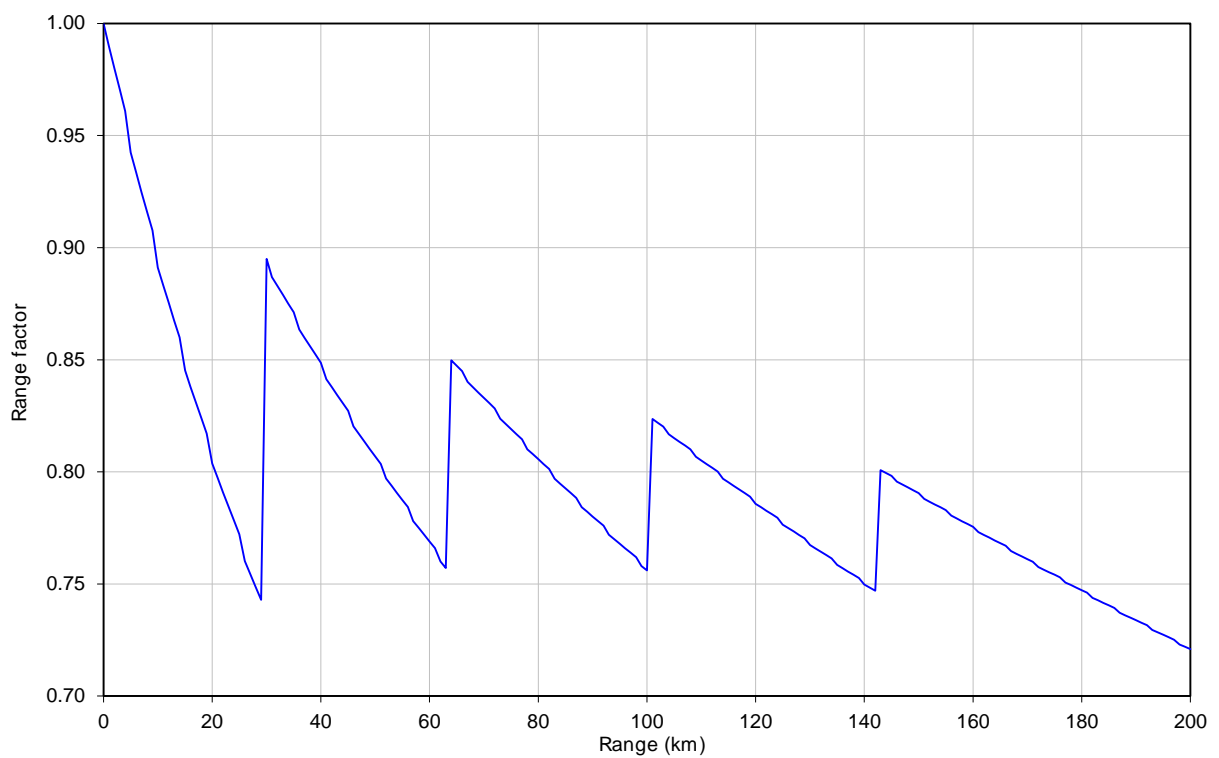


Figure 77 Range adjustment for PTP 700, symmetry 1:1, optimization TDM, bandwidth 40 MHz

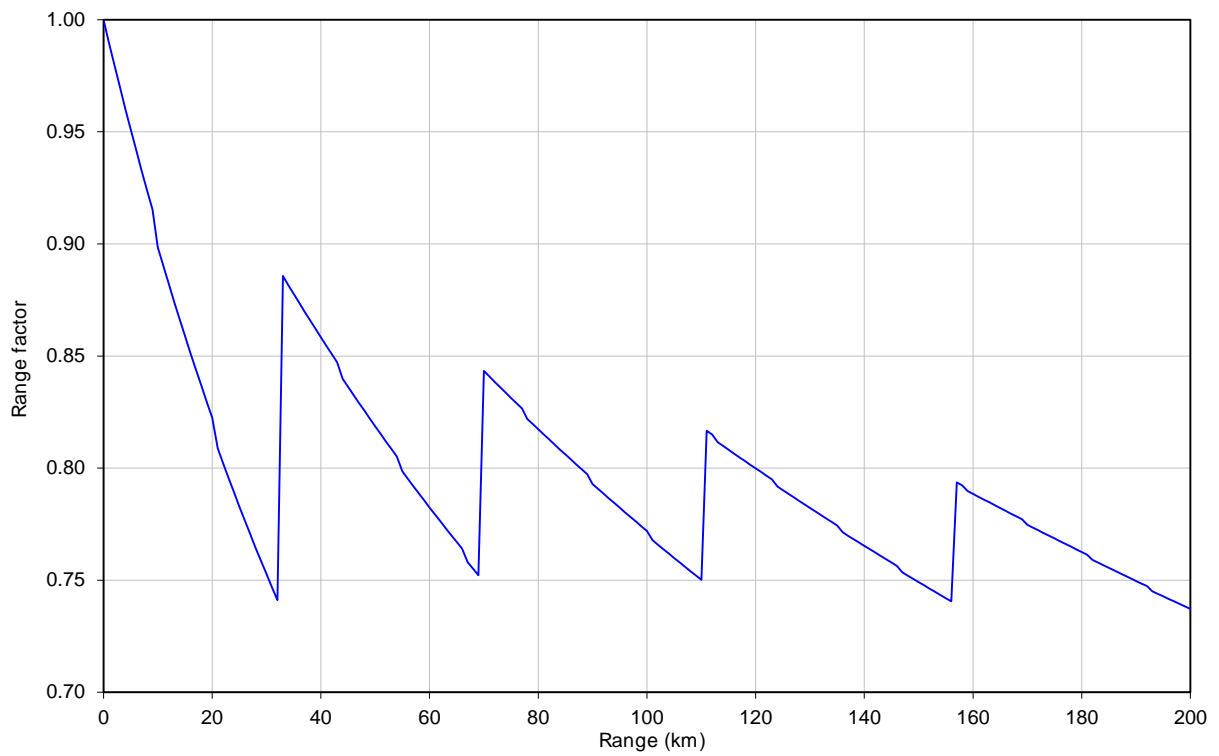


Figure 78 Range adjustment for PTP 700, symmetry 1:1, optimization TDM, bandwidth 30 MHz

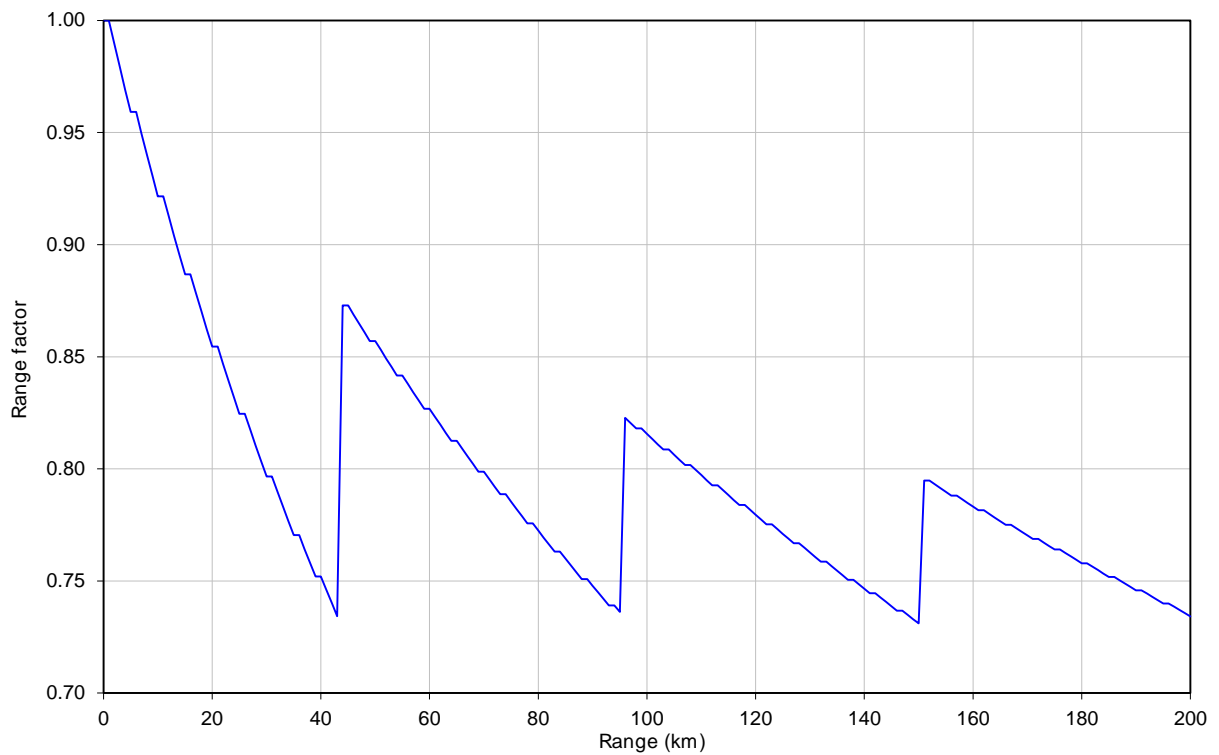


Figure 79 Range adjustment for PTP 700, symmetry 1:1, optimization TDM, bandwidth 20 MHz

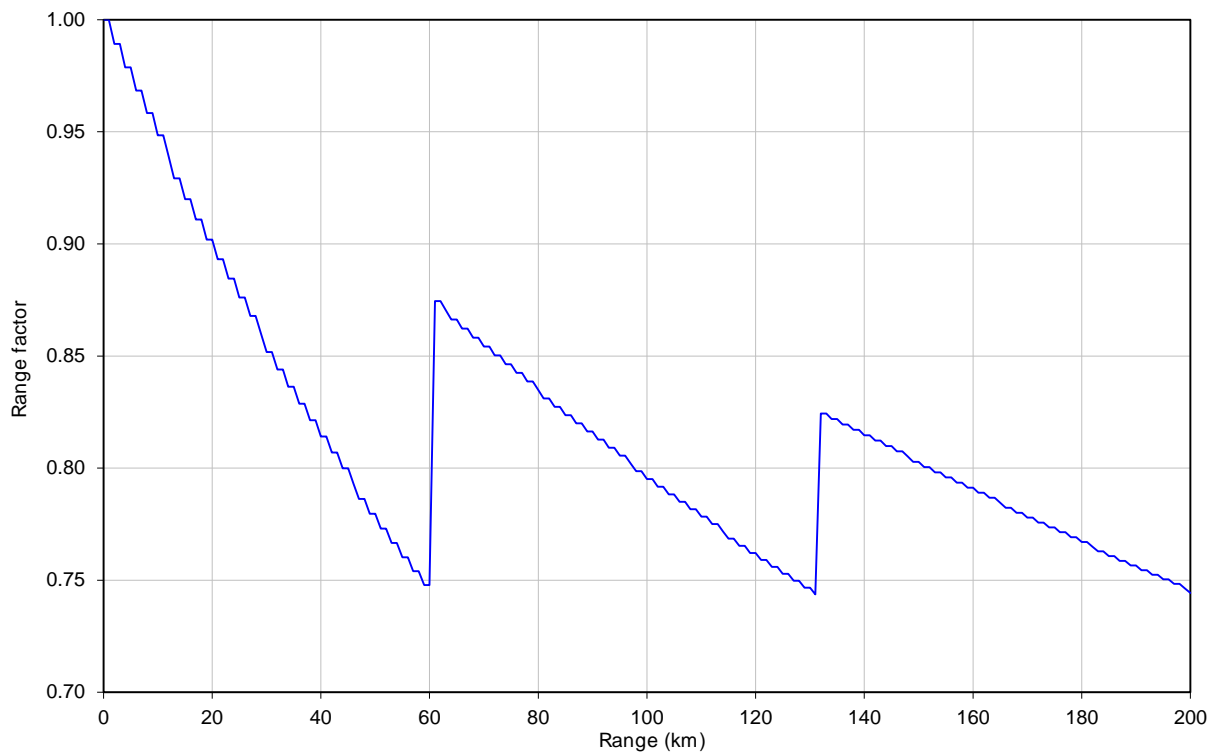


Figure 80 Range adjustment for PTP 700, symmetry 1:1, optimization TDM, bandwidth 15 MHz

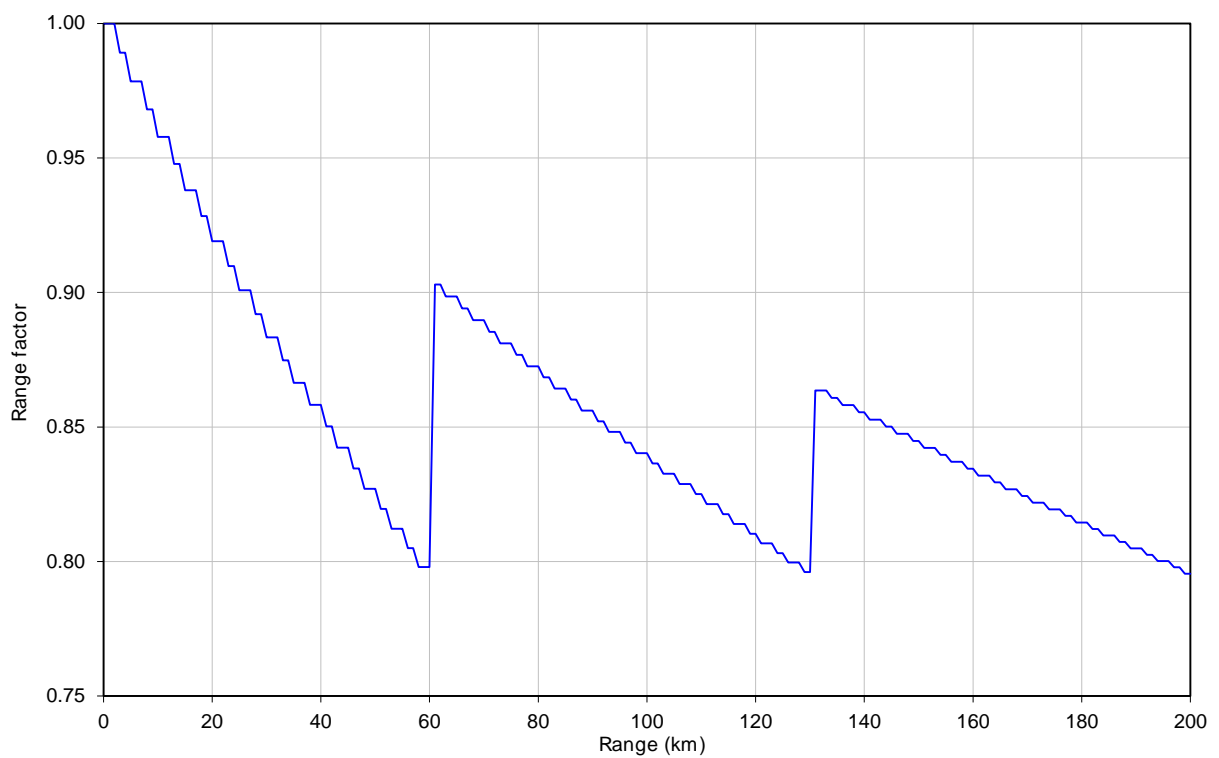


Figure 81 Range adjustment for PTP 700, symmetry 1:1, optimization TDM, bandwidth 10 MHz

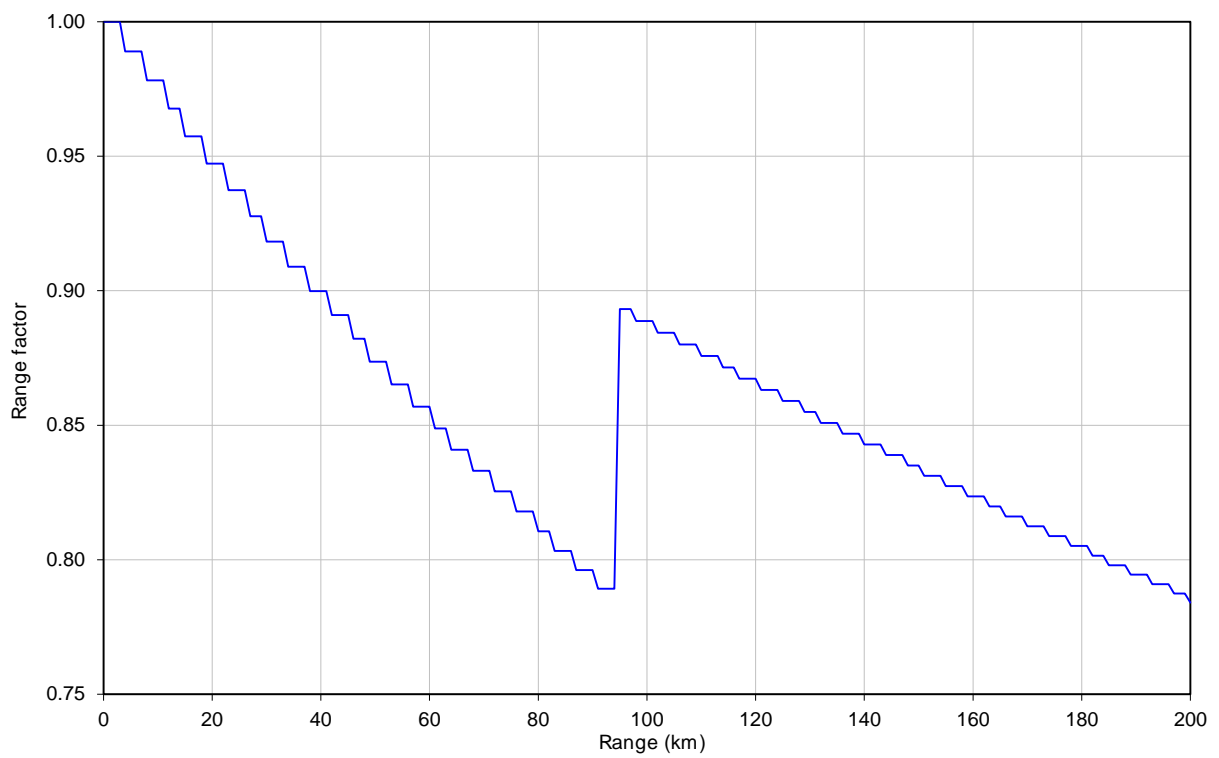


Figure 82 Range adjustment for PTP 700, symmetry 1:1, optimization TDM, bandwidth 5 MHz

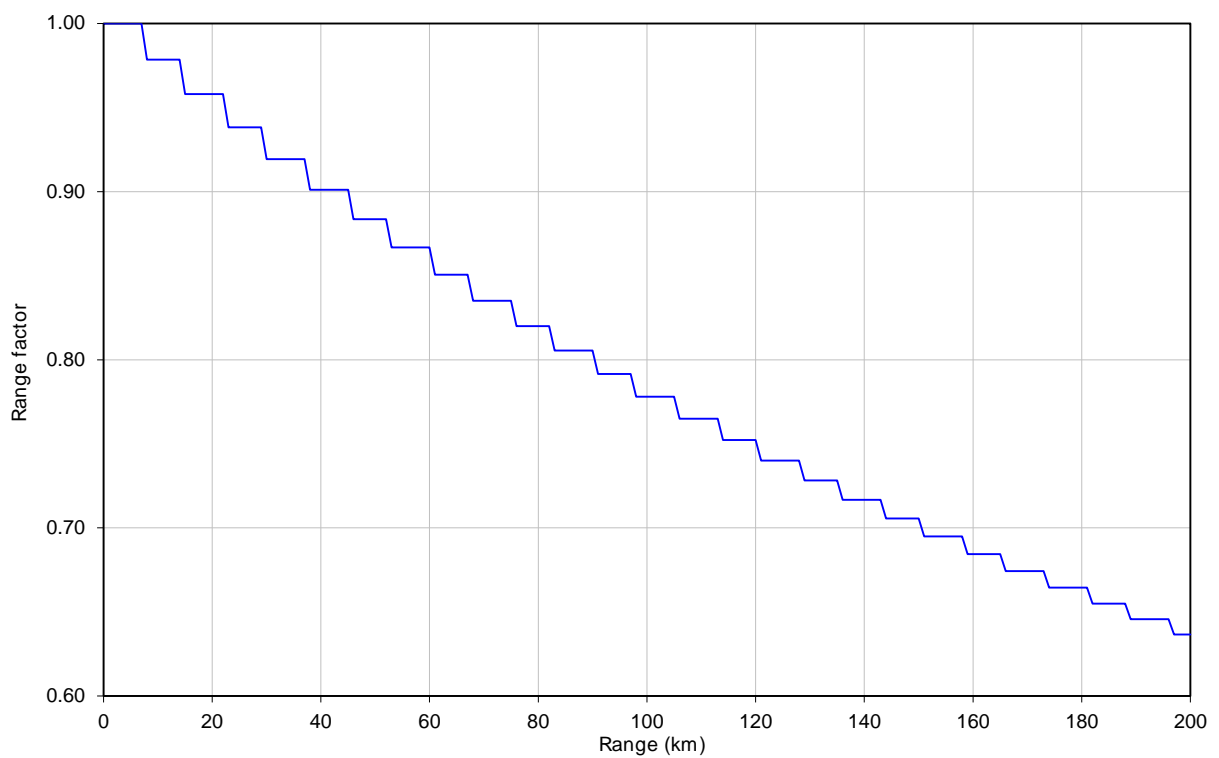


Figure 83 Range adjustment for PTP 700, symmetry 2:1, optimization IP, bandwidth 45 MHz

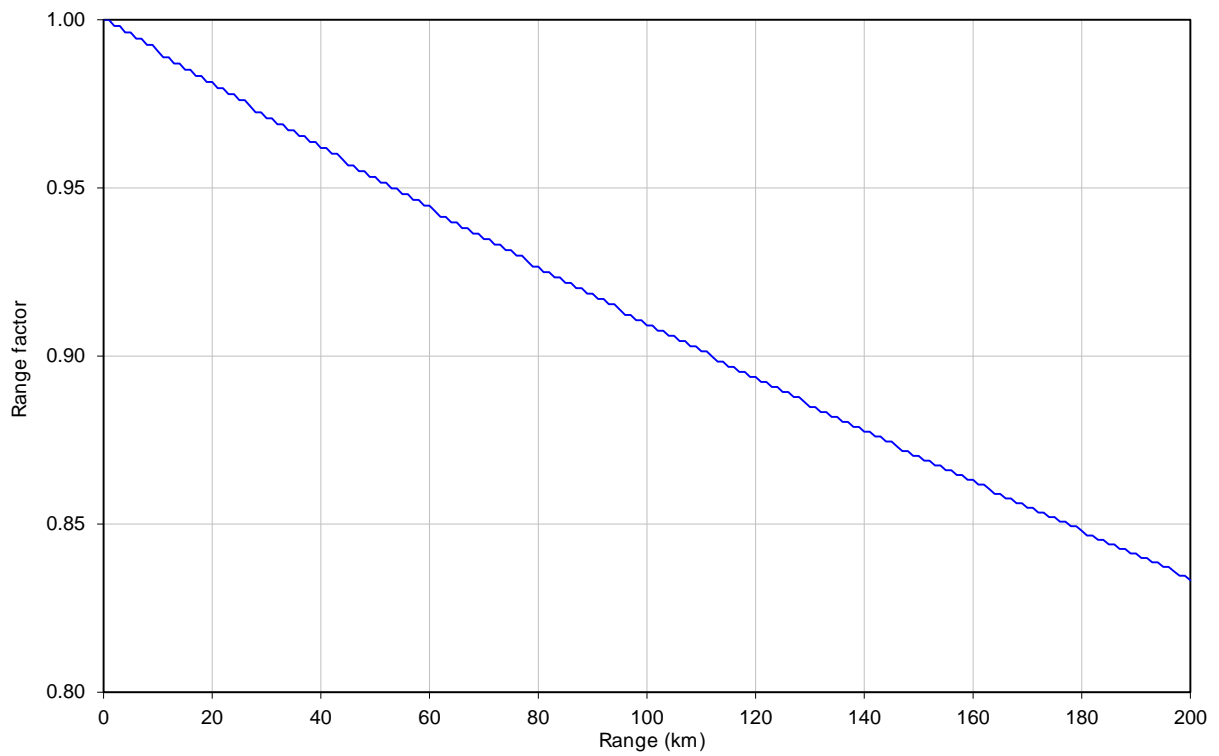


Figure 84 Range adjustment for PTP 700, symmetry 2:1, optimization IP, bandwidth 40 MHz

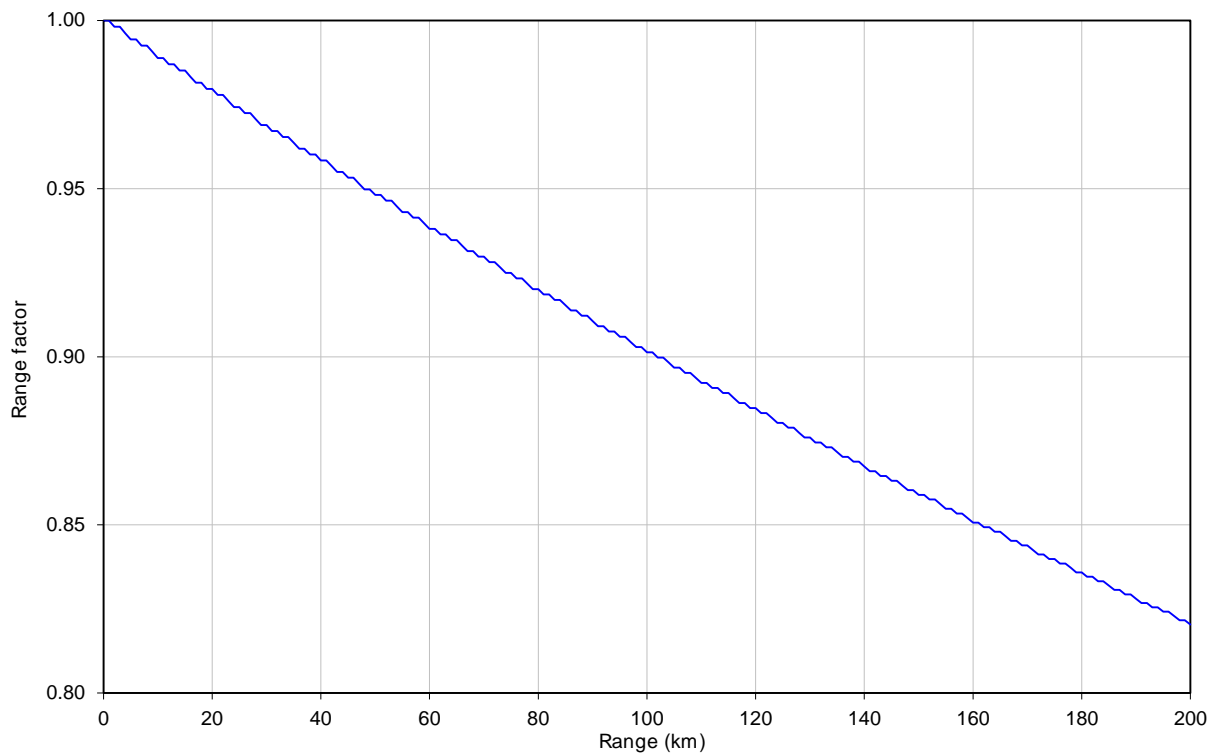


Figure 85 Range adjustment for PTP 700, symmetry 2:1, optimization IP, bandwidth 30 MHz

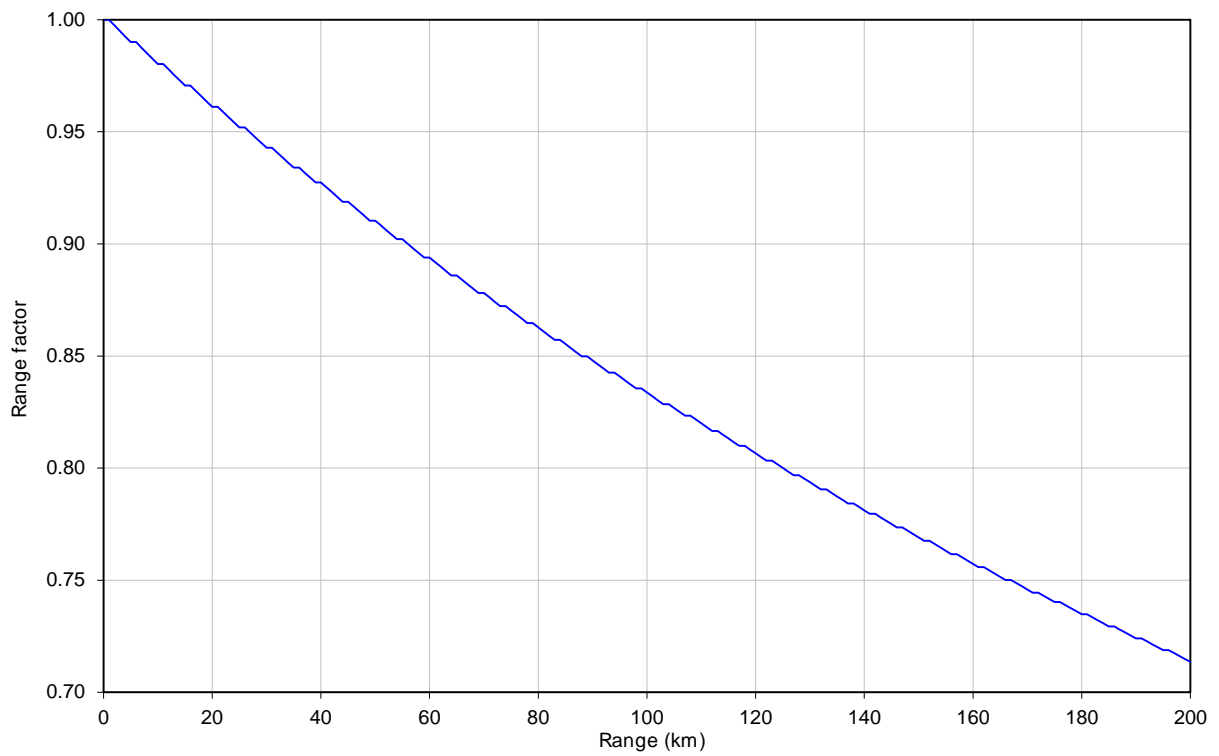


Figure 86 Range adjustment for PTP 700, symmetry 2:1, optimization IP, bandwidth 20 MHz

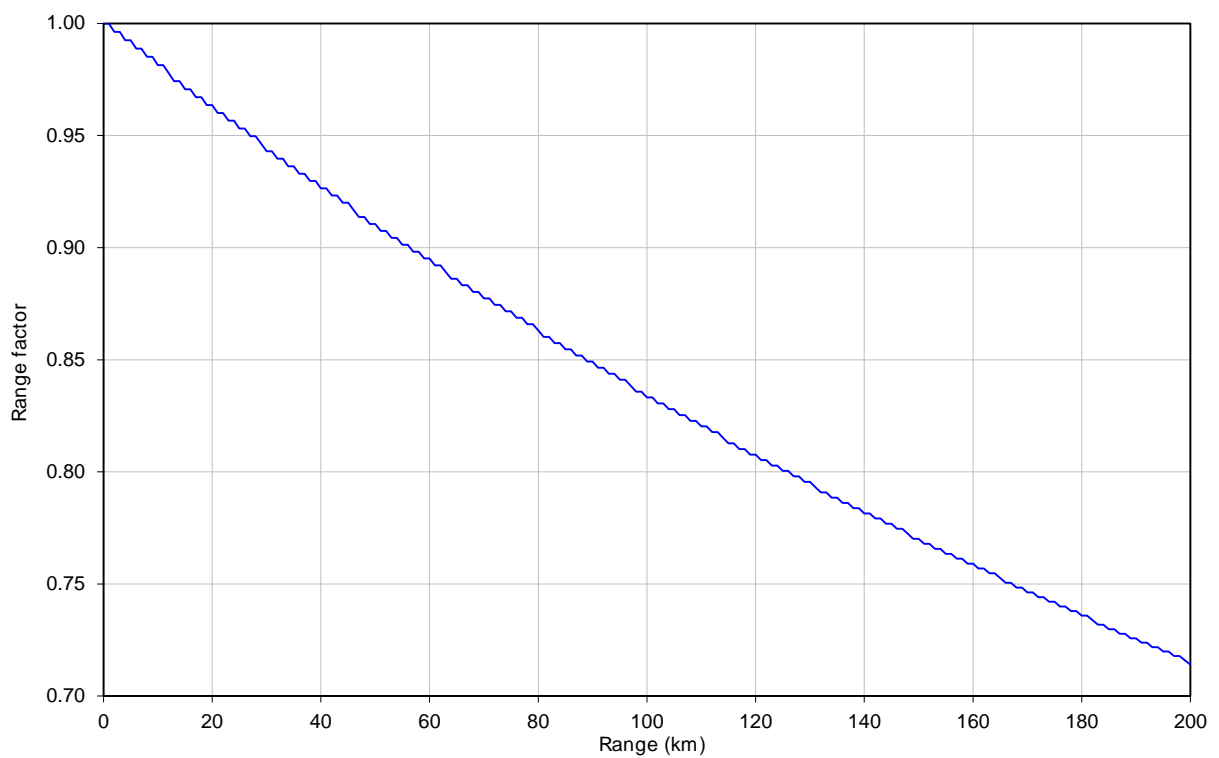


Figure 87 Range adjustment for PTP 700, symmetry 2:1, optimization IP, bandwidth 15 MHz

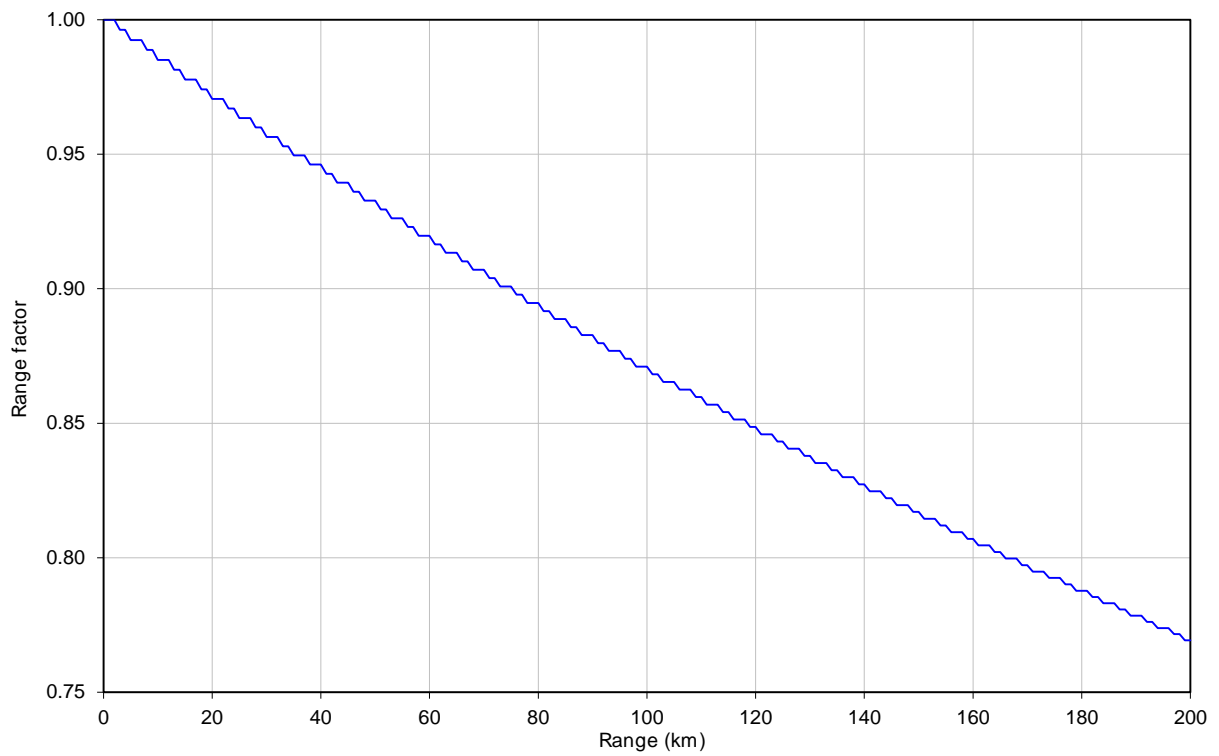


Figure 88 Range adjustment for PTP 700, symmetry 2:1, optimization IP, bandwidth 10 MHz

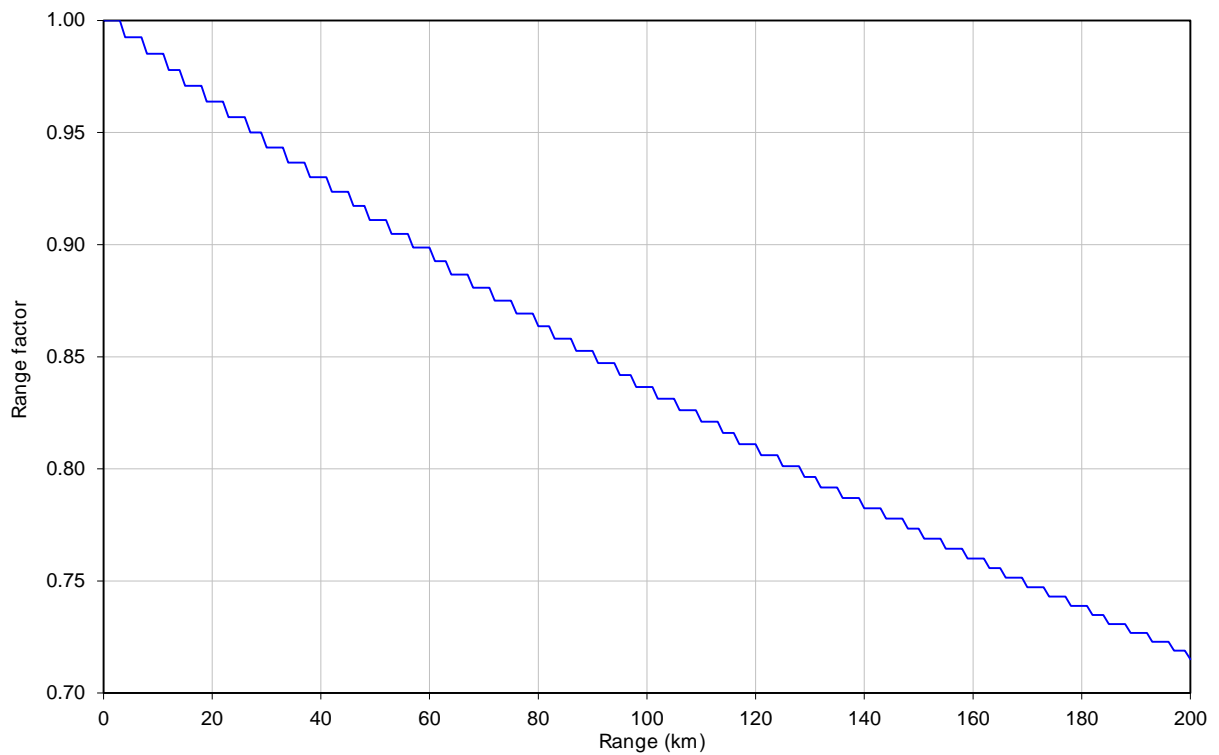


Figure 89 Range adjustment for PTP 700, symmetry 2:1, optimization TDM, bandwidth 45 MHz

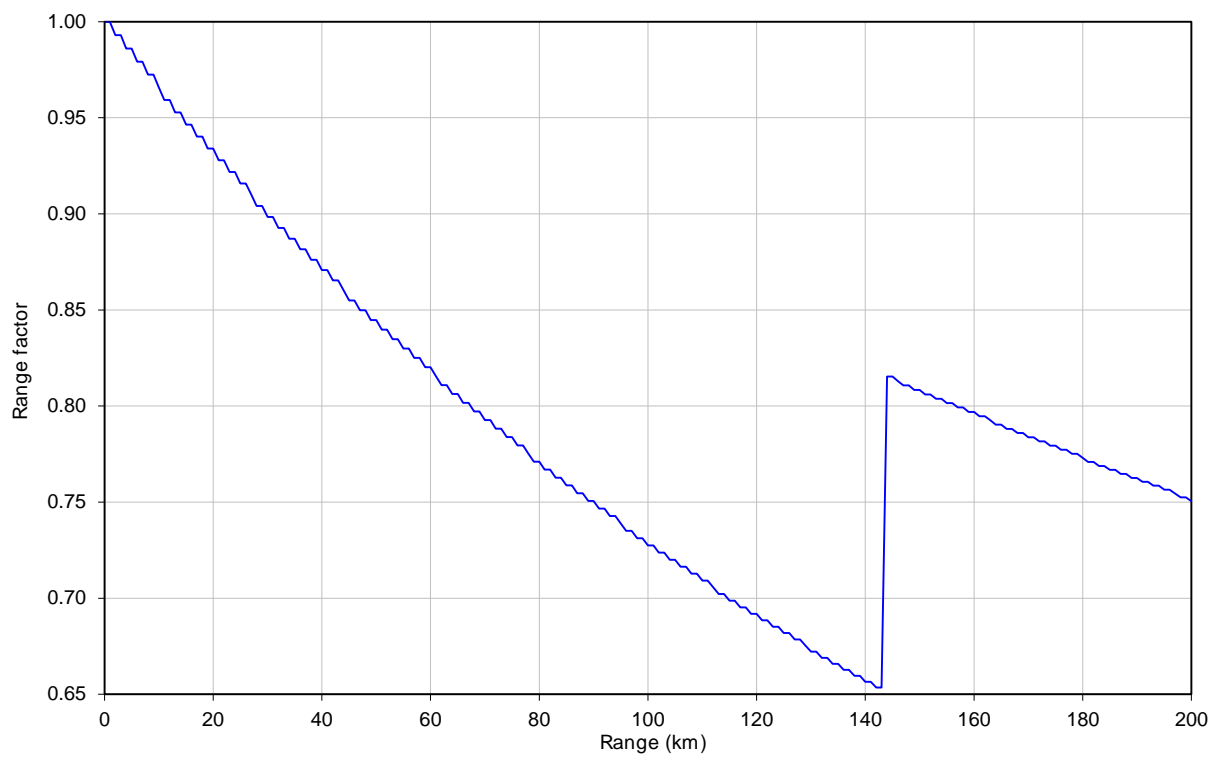


Figure 90 Range adjustment for PTP 700, symmetry 2:1, optimization TDM, bandwidth 40 MHz

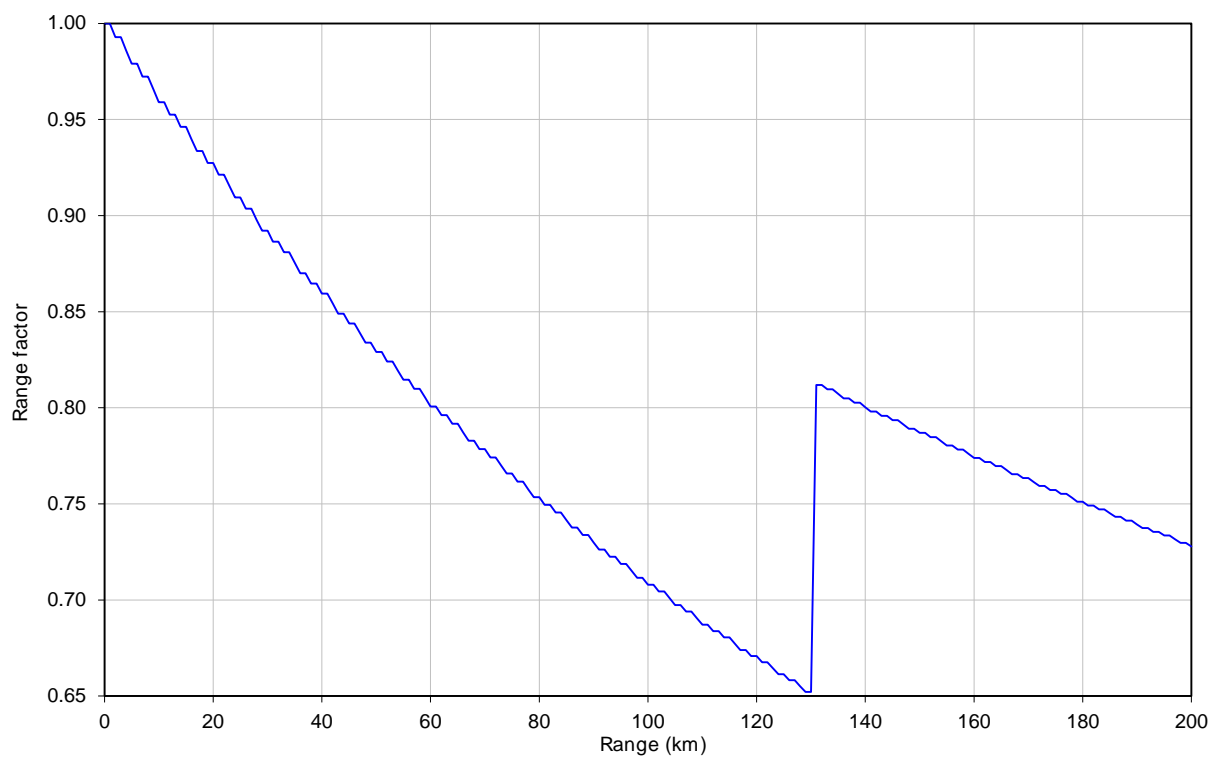


Figure 91 Range adjustment for PTP 700, symmetry 2:1, optimization TDM, bandwidth 30 MHz

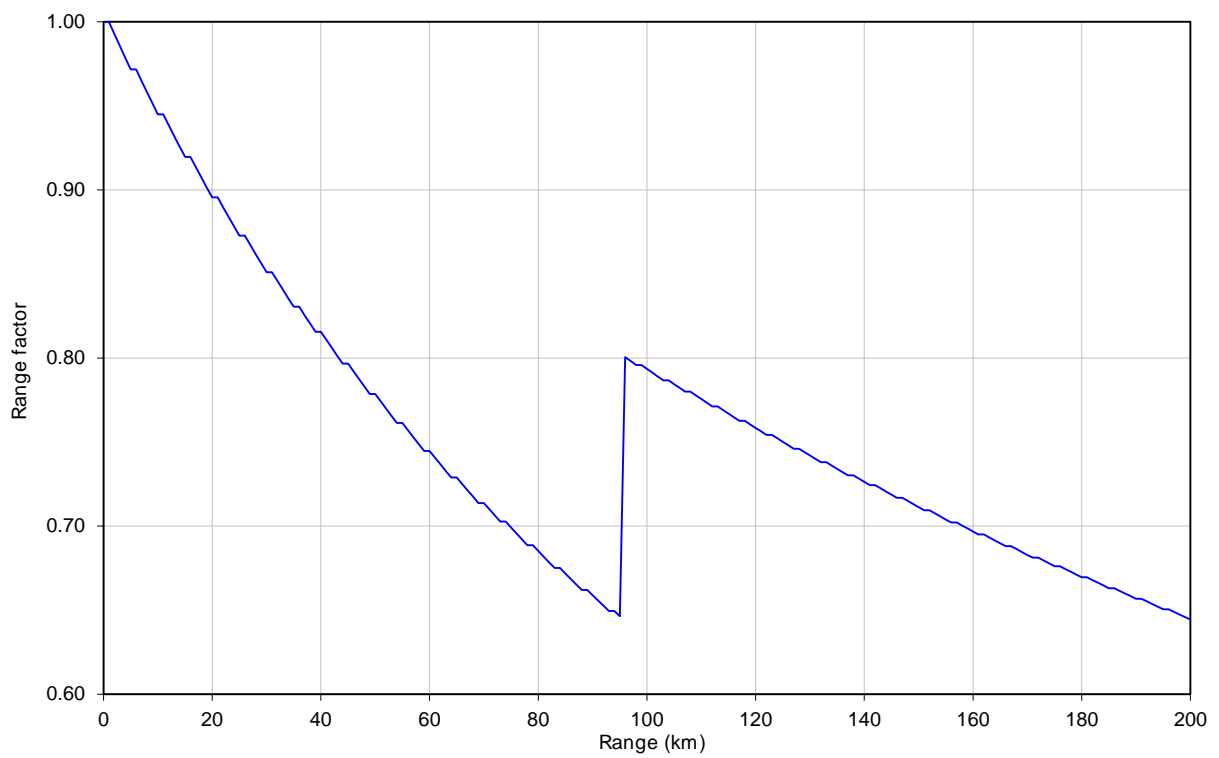


Figure 92 Range adjustment for PTP 700, symmetry 2:1, optimization TDM, bandwidth 20 MHz

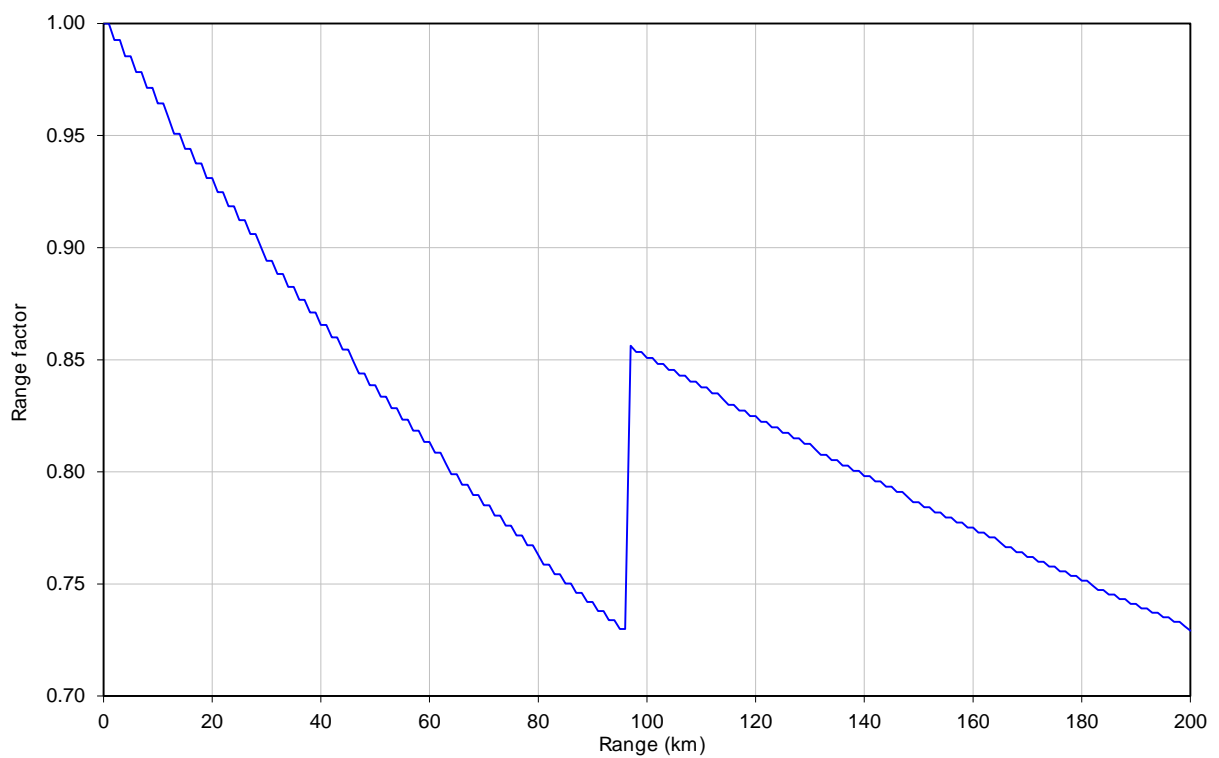


Figure 93 Range adjustment for PTP 700, symmetry 2:1, optimization TDM, bandwidth 15 MHz

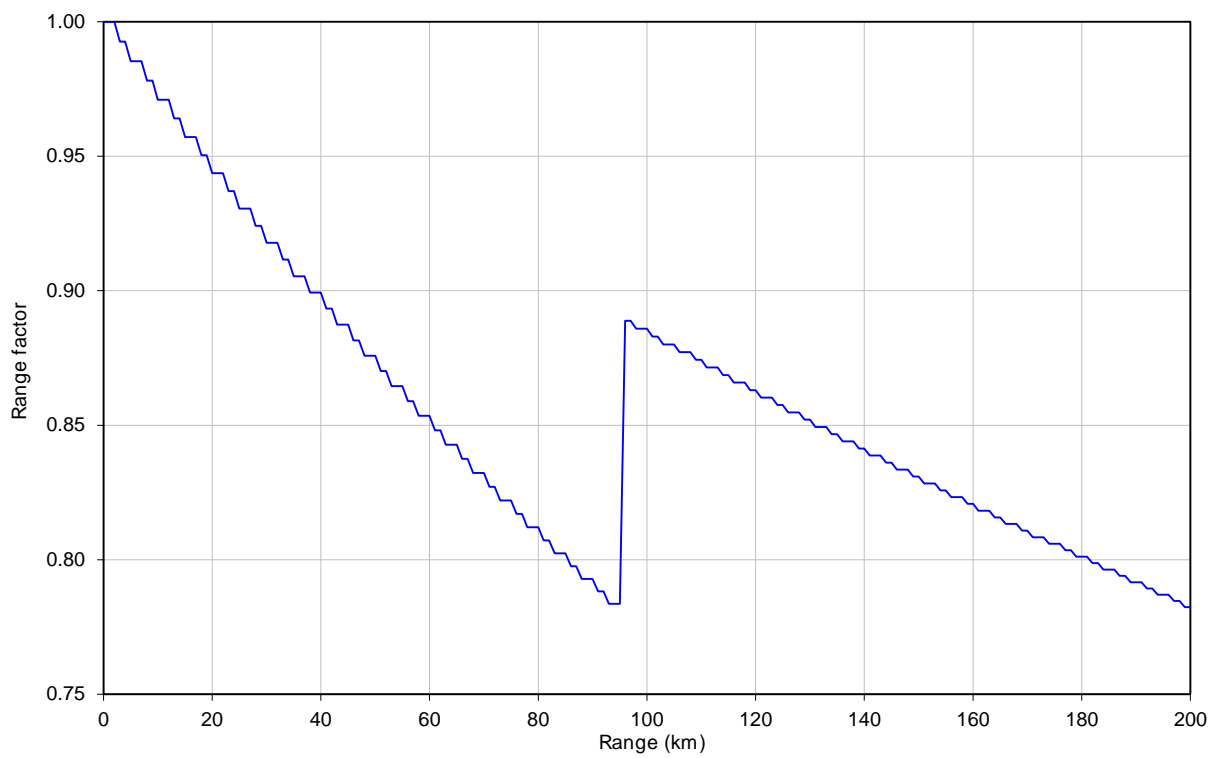


Figure 94 Range adjustment for PTP 700, symmetry 2:1, optimization TDM, bandwidth 10 MHz

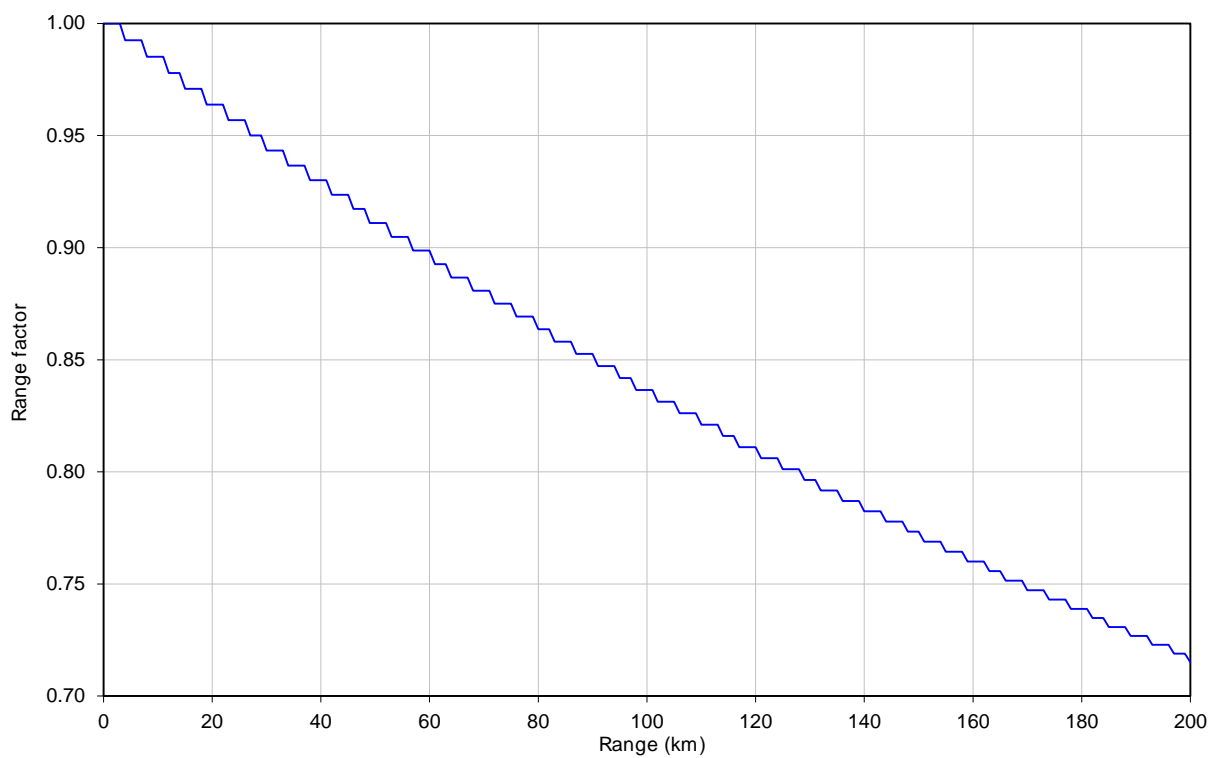


Figure 95 Range adjustment for PTP 700, symmetry 3:1, optimization IP, bandwidth 45 MHz

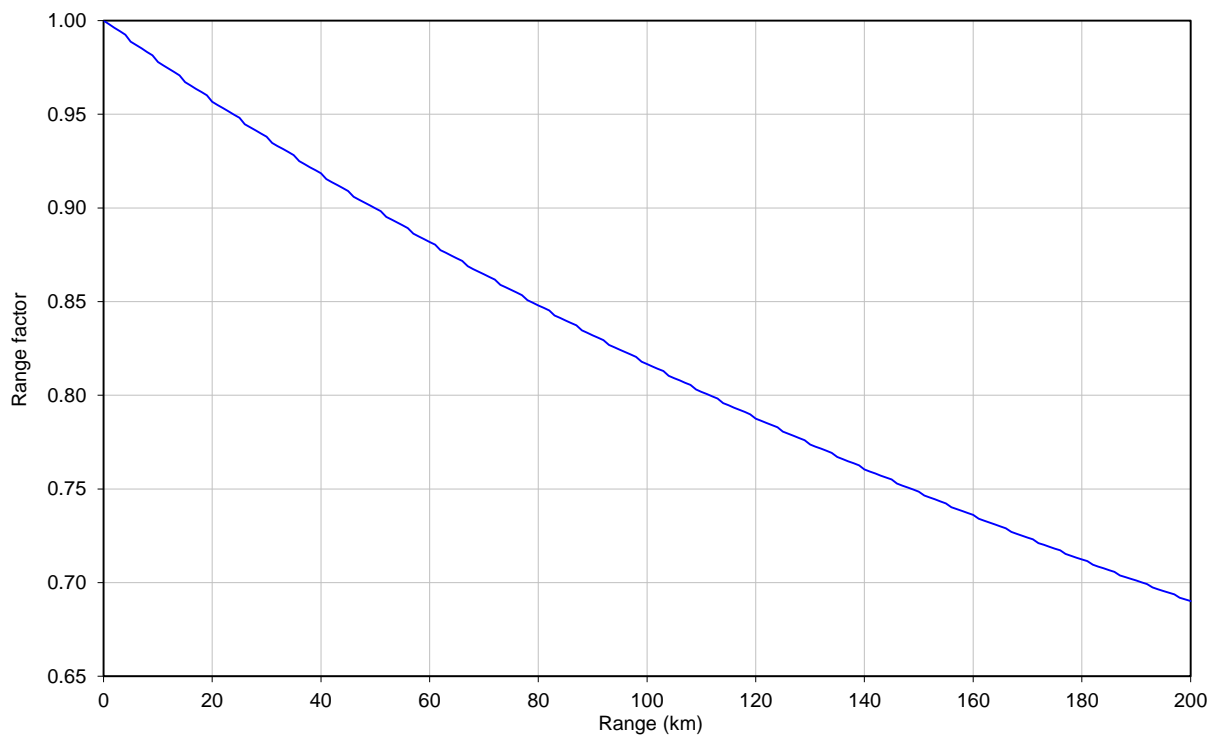


Figure 96 Range adjustment for PTP 700, symmetry 3:1, optimization IP, bandwidth 40 MHz



Figure 97 Range adjustment for PTP 700, symmetry 3:1, optimization IP, bandwidth 30 MHz

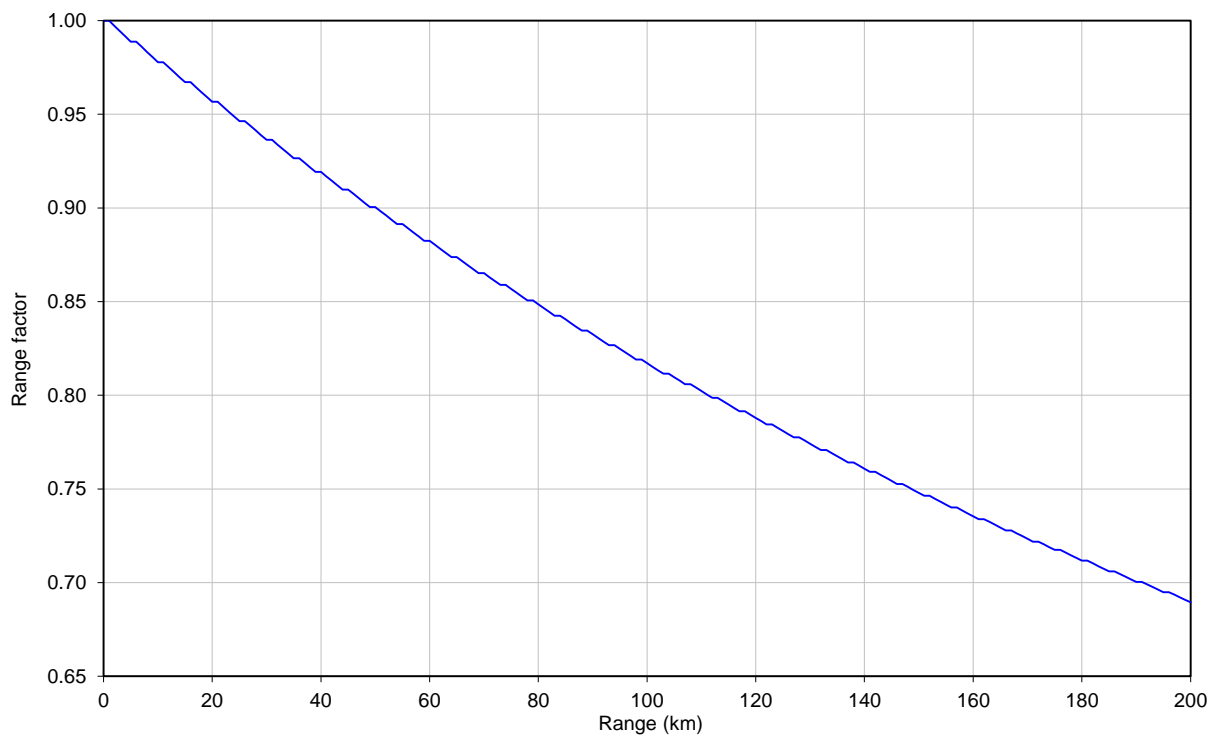


Figure 98 Range adjustment for PTP 700, symmetry 3:1, optimization IP, bandwidth 20 MHz

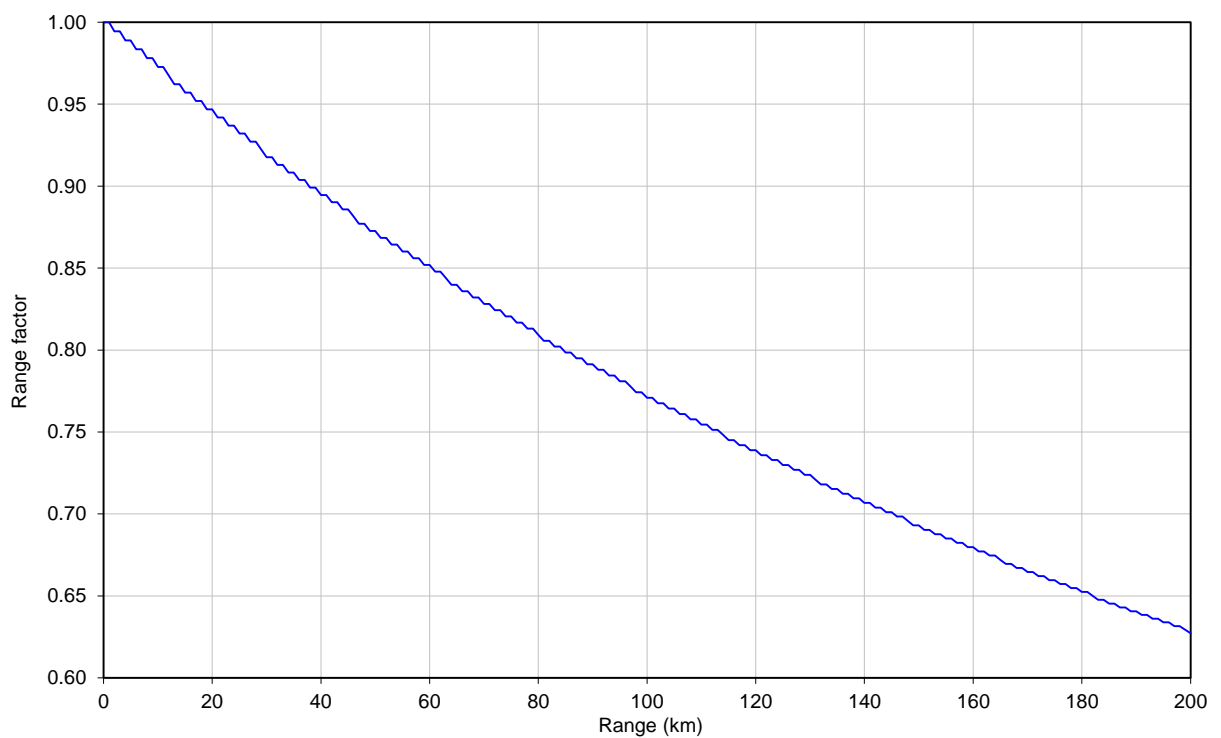


Figure 99 Range adjustment for PTP 700, symmetry 3:1, optimization IP, bandwidth 15 MHz

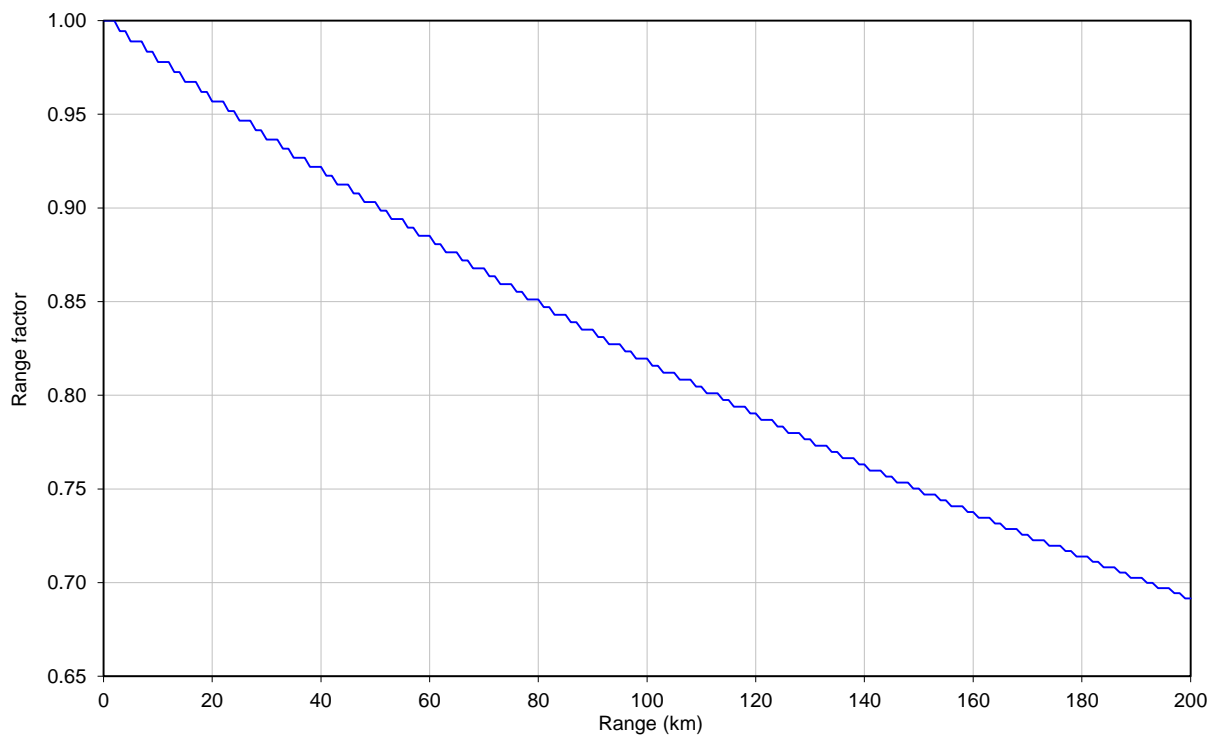


Figure 100 Range adjustment for PTP 700, symmetry 3:1, optimization IP, bandwidth 10 MHz

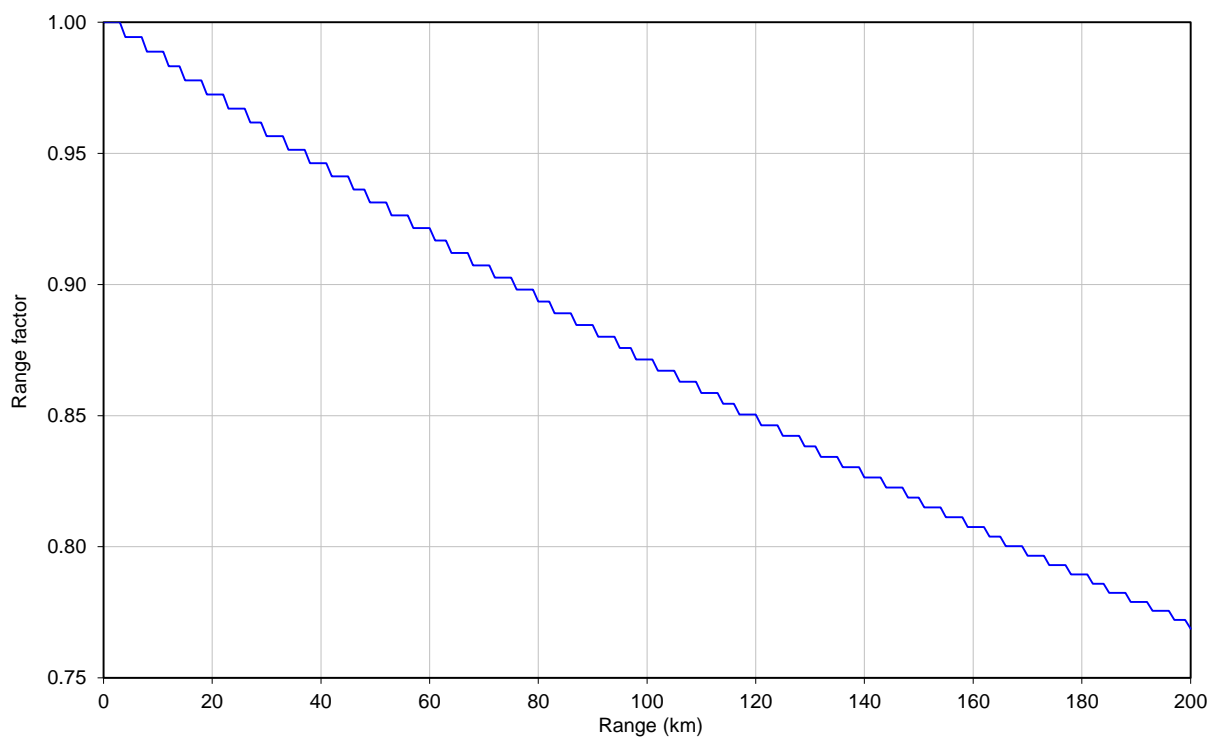


Figure 101 Range adjustment for PTP 700, symmetry 5:1, optimization IP, bandwidth 45 MHz

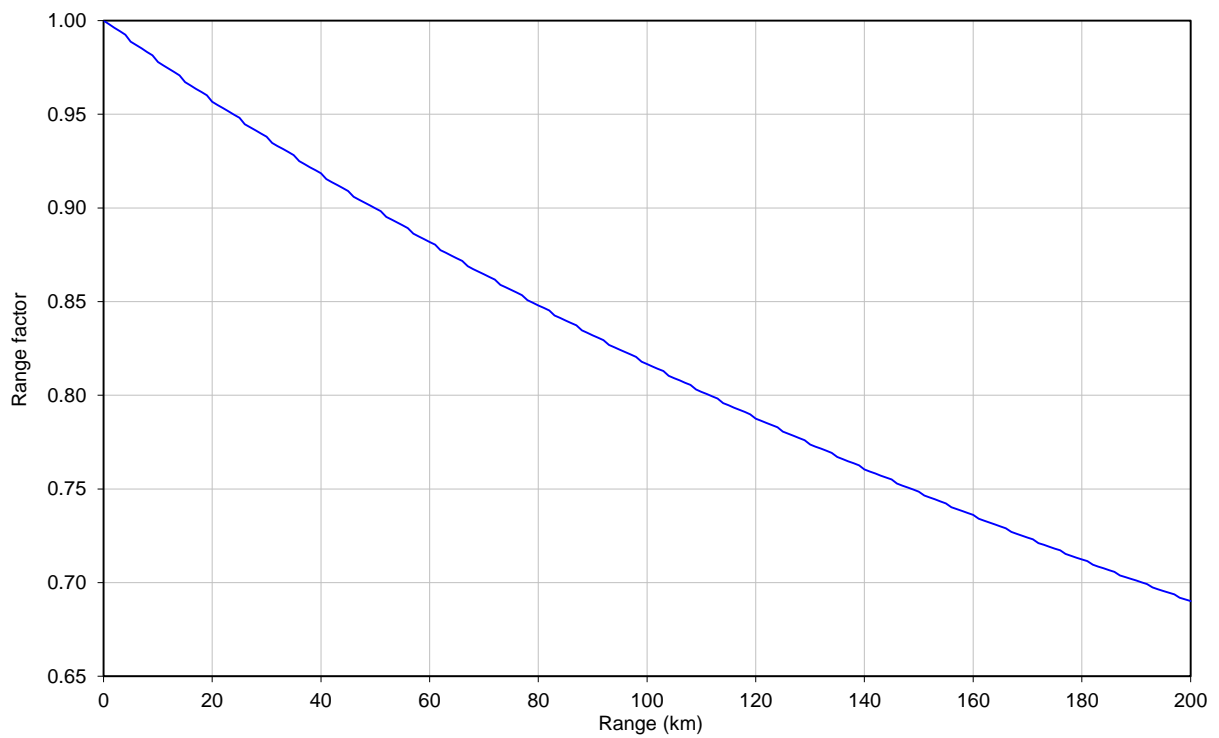


Figure 102 Range adjustment for PTP 700, symmetry 5:1, optimization IP, bandwidth 40 MHz

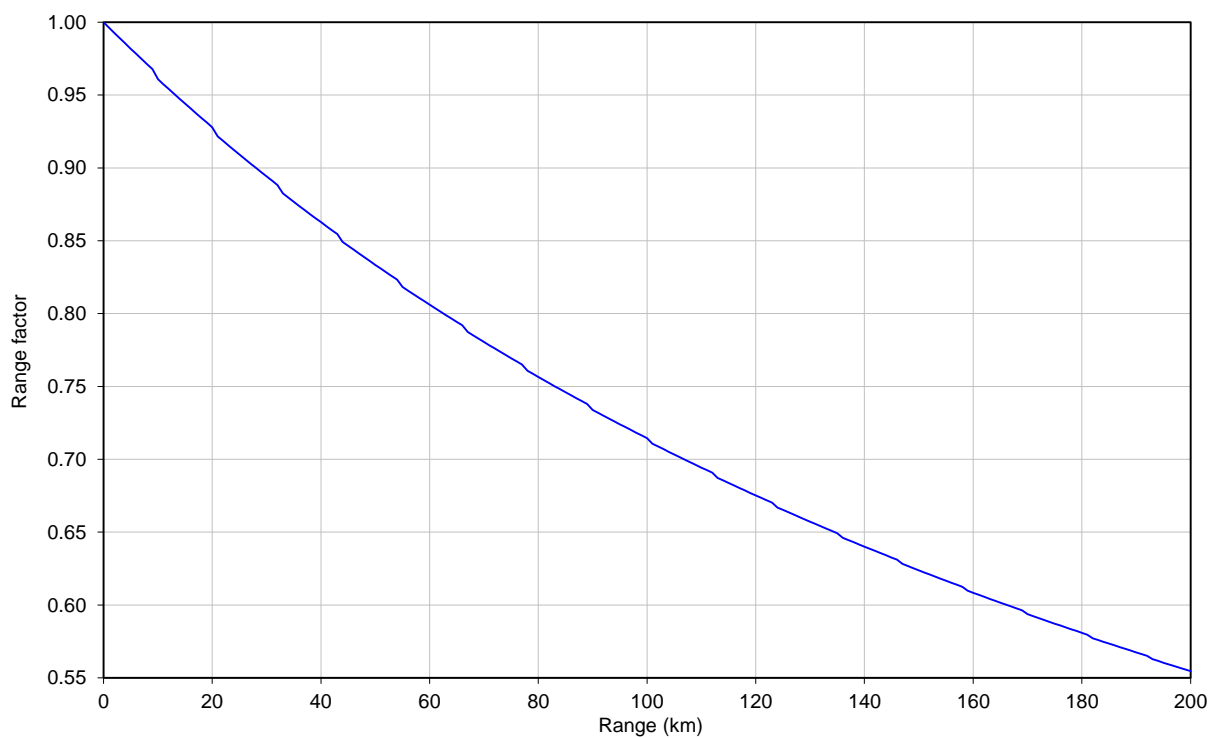


Figure 103 Range adjustment for PTP 700, symmetry 5:1, optimization IP, bandwidth 30 MHz

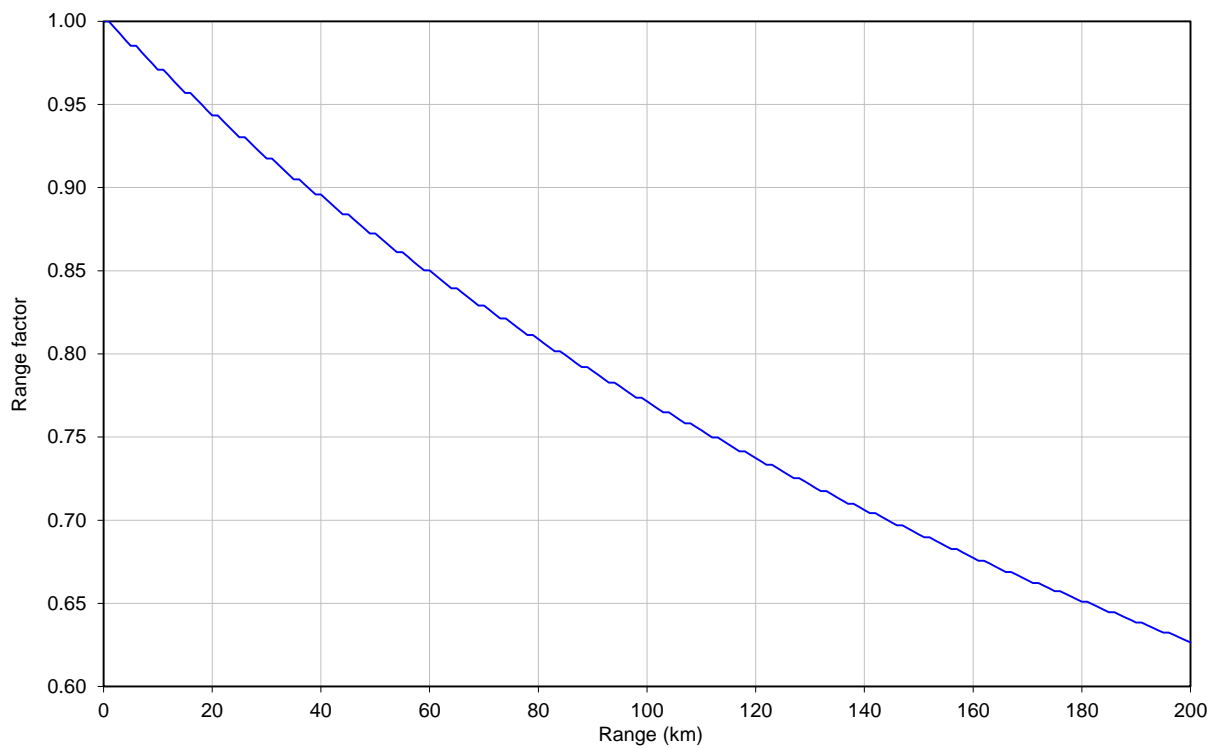


Figure 104 Range adjustment for PTP 700, adaptive, optimization IP, bandwidth 45 MHz

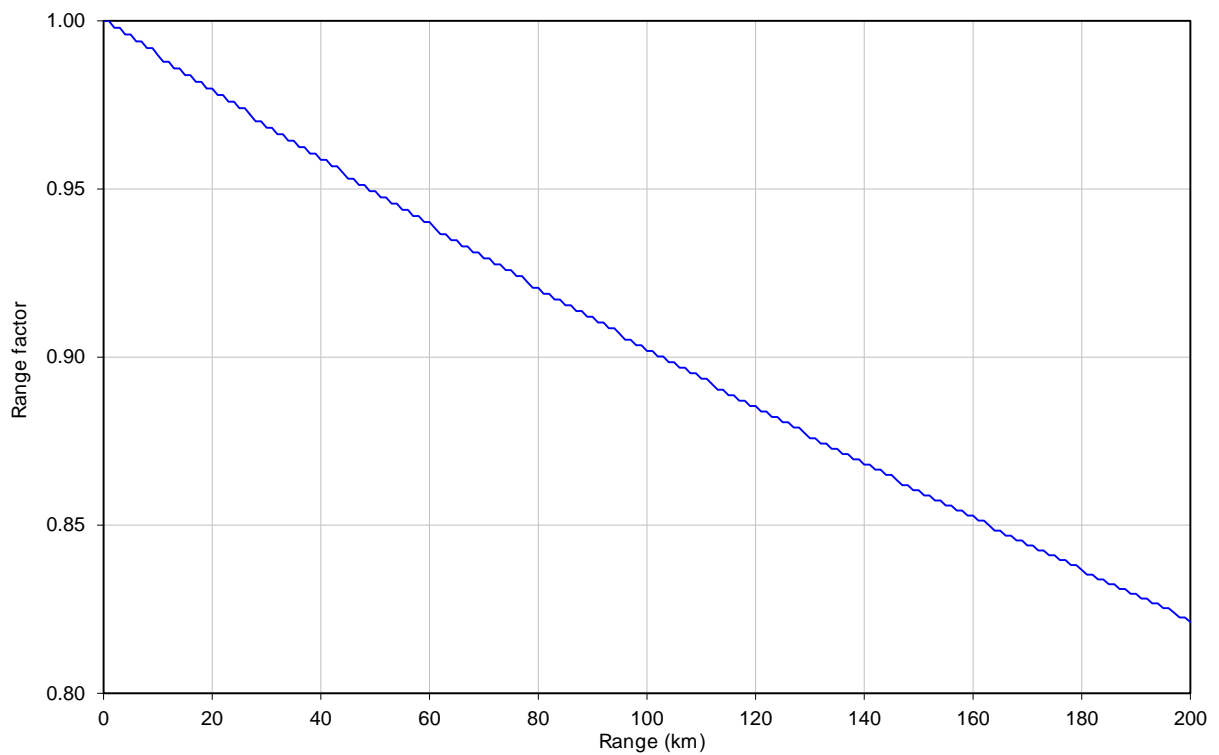


Figure 105 Range adjustment for PTP 700, adaptive, optimization IP, bandwidth 40 MHz

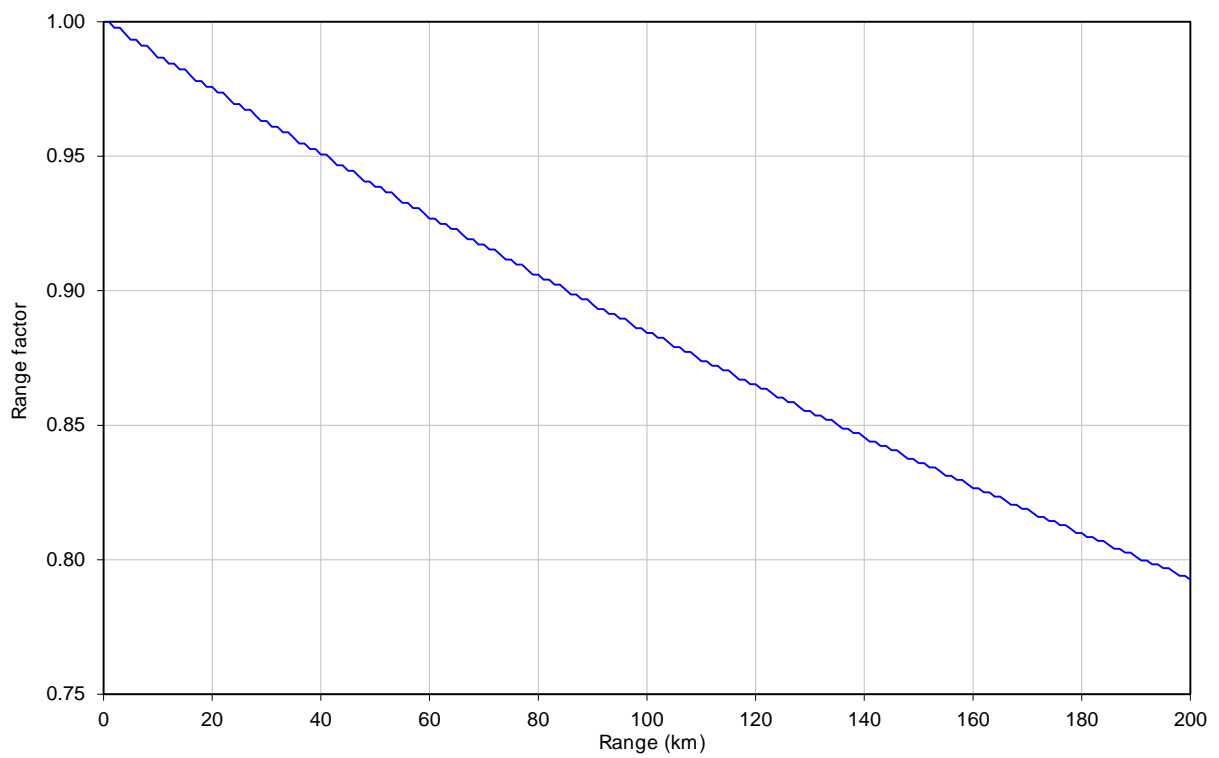


Figure 106 Range adjustment for PTP 700, adaptive, optimization IP, bandwidth 30 MHz

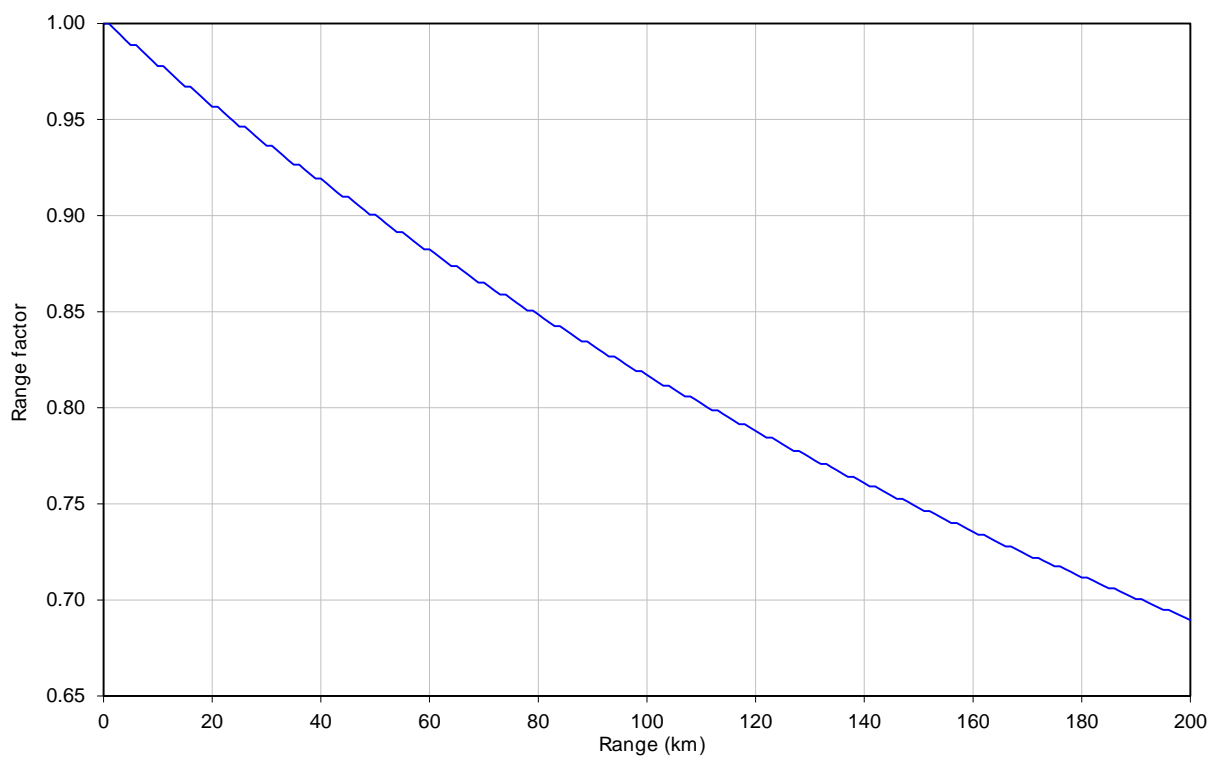


Figure 107 Range adjustment for PTP 700, adaptive, optimization IP, bandwidth 20 MHz

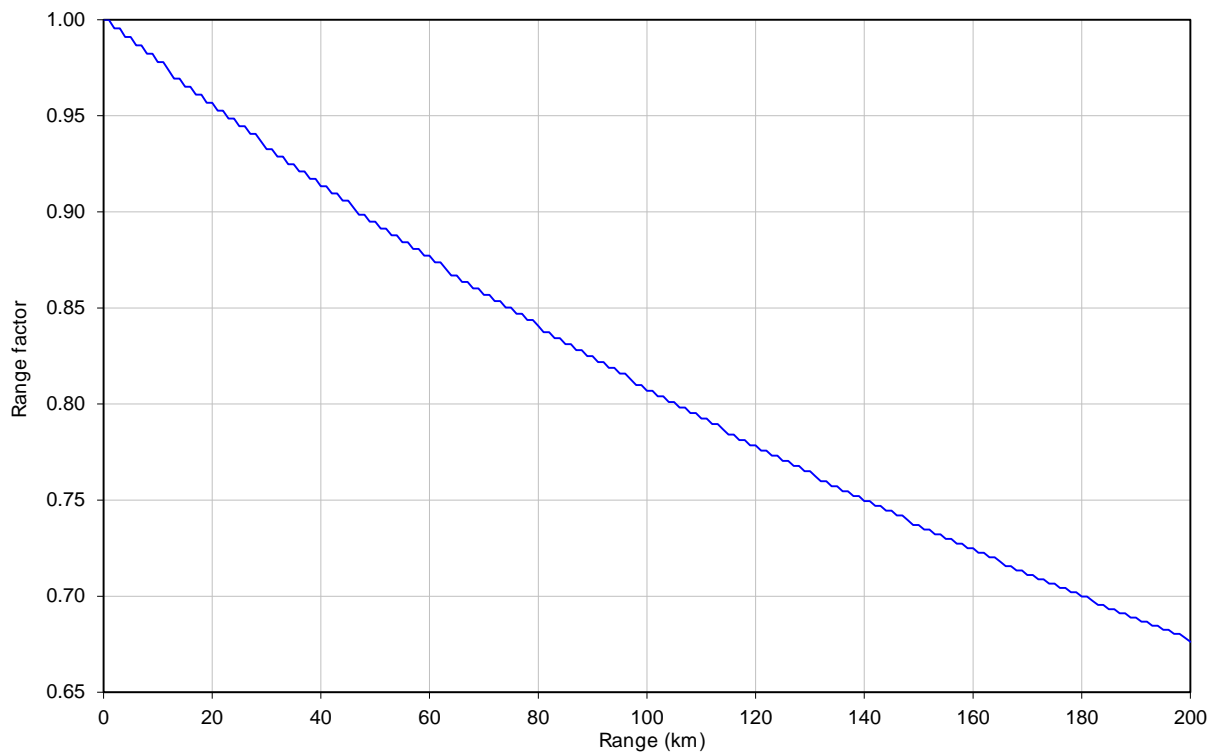


Figure 108 Range adjustment for PTP 700, adaptive, optimization IP, bandwidth 15 MHz


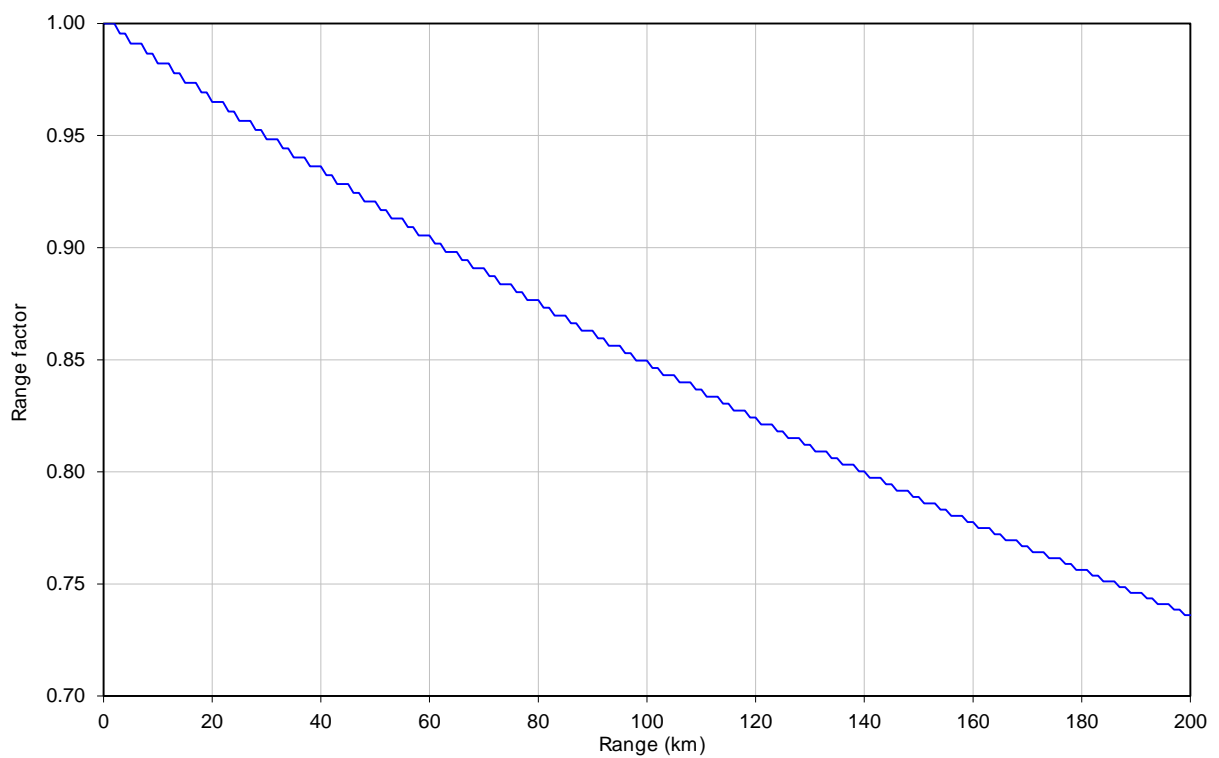


Figure 109 Range adjustment for PTP 700, adaptive, optimization IP, bandwidth 10 MHz

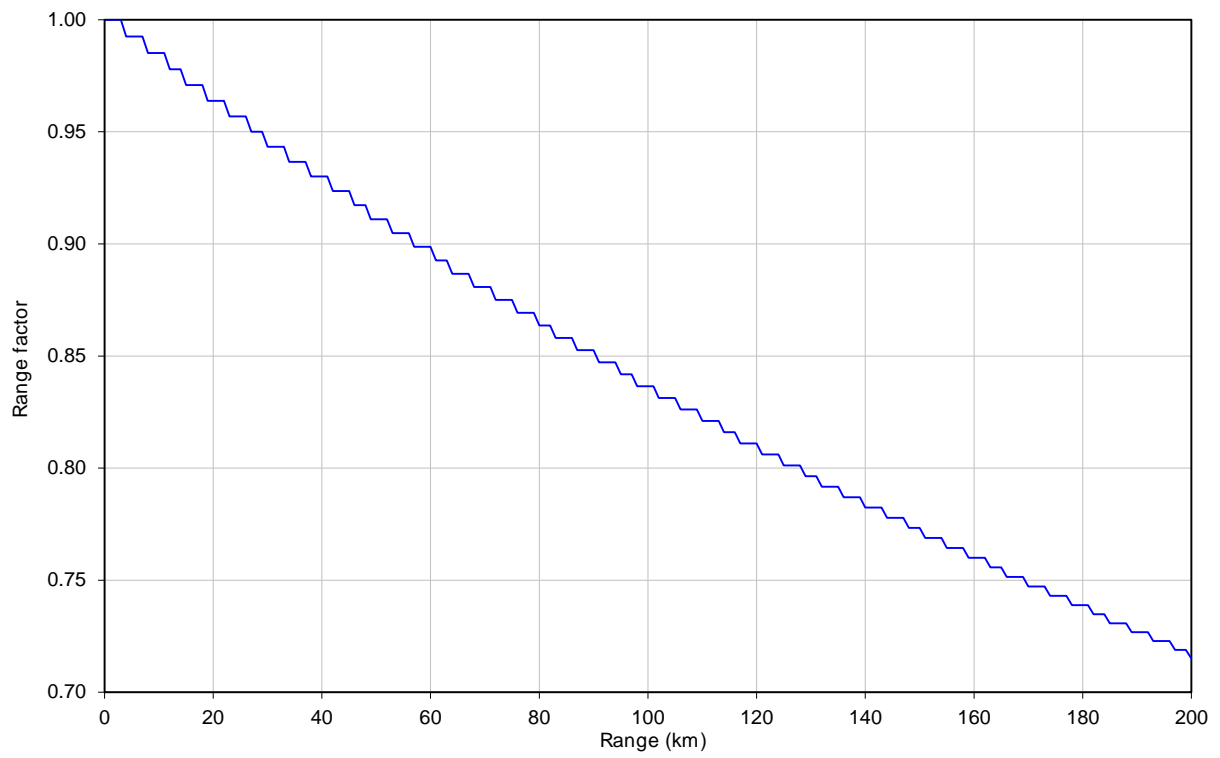

Time slots per frame in PTP topology with synchronization

Use the tables in this section to look up the number of time slots per TDD frame in PTP topology with TDD synchronization, including links with Hot Standby protection. Use this information with the capacity per time slot in [Table 159](#) to calculate link capacity in each direction.

PTP topology with standard frame duration

Table 153 Number of time slots in synchronized PTP links

Channel Bandwidth	Burst Duration	Number of time slots
10 MHz	1088 Qs	1
	2176 Qs	2
15 MHz	726 Qs	1
	1451 Qs	2
	2176 Qs	3
20 MHz	544 Qs	1
	1088 Qs	2
	1632 Qs	3
	2176 Qs	4
30 MHz	726 Qs	2
	1088 Qs	3
	1453 Qs	4
	2176 Qs	6
40 MHz	544 Qs	2
	816 Qs	3
	1088 Qs	4
	1632 Qs	6
	2176 Qs	8
45 MHz	484 Qs	2
	726 Qs	3
	970 Qs	4
	1453 Qs	6
	1937 Qs	8

PTP topology with long frame duration

Table 154 Number of time slots in synchronized PTP links with long frame duration

Channel Bandwidth	Burst Duration	Number of time slots	
		Unprotected	Hot Standby
20 MHz	1088 Qs	2	1
	1632 Qs	3	2
	2176 Qs	4	3
	2720 μ s	5	4
	3264 μ s	6	5
	3808 μ s	7	6
	4352 μ s	8	7
	4896 μ s	9	8
	5440 μ s	10	9
	5984 μ s	11	10
	6528 μ s	12	11
30 MHz	726 μ s	2	1
	1088 μ s	3	2
	1451 μ s	4	3
	1814 μ s	5	4
	2176 μ s	6	5
	2539 μ s	7	6
	2902 μ s	8	7
	3264 μ s	9	8
	3627 μ s	10	9
	3990 μ s	11	10
	4352 μ s	12	11
	4715 μ s	13	12
	5078 μ s	14	13
	5440 μ s	15	14
40 MHz	532 μ s	2	1
	798 μ s	3	2

Channel Bandwidth	Burst Duration	Number of time slots	
		Unprotected	Hot Standby
	1064 μ s	4	3
	1330 μ s	5	4
	1596 μ s	6	5
	1862 μ s	7	6
	2128 μ s	8	7
	2394 μ s	9	8
	2660 μ s	10	9
	2926 μ s	11	10
	3192 μ s	12	11
	3458 μ s	13	12
	3724 μ s	14	13
	3990 μ s	15	14
45 MHz	486 μ s	2	1
	728 μ s	3	2
	971 μ s	4	3
	1214 μ s	5	4
	1456 μ s	6	5
	1699 μ s	7	6
	1942 μ s	8	7
	2184 μ s	9	8
	2427 μ s	10	9
	2670 μ s	11	10
	2912 μ s	12	11
	3155 μ s	13	12
	3398 μ s	14	13
	3640 μ s	15	14

Frame duration in HCMP topology with standard configuration

Use the tables in this section to look up the TDD frame duration as a function of bandwidth, number of Slaves and Link Symmetry. Then look up one-way capacity (Mbit/s) achieved in each time slot of an HCMP sector as a function of frame duration and modulation mode.

The one-way capacity for a single Slave is the capacity per time slot multiplied by the number of time slots. The aggregate (two-way) capacity for one Slave is the sum of two one-way capacities. The aggregate capacity for the Master is the capacity for one Slave multiplied by the number of Slaves.

Determine the frame duration from the following tables:

Table 155 HCMP frame duration table of tables

Channel Bandwidth	TDD Synchronization	Frame Duration Table	Capacity Table
20 MHz	Disabled	Table 156	Table 159
	Enabled		
40 MHz	Disabled	Table 157	
	Enabled	Table 158	

Table 156 HCMP frame duration, 20 MHz Channel Bandwidth

Number of Slaves	Link symmetry	Maximum range	Frame Duration	
Two	1:1	5.0 km to 16.3 km	2882 Qs	
		16.4 km to 32.6 km	3012 Qs	
		32.7 km to 57.0 km	3145 Qs	
		57.1 km to 81.5 km	3311 Qs	
		81.6 km to 97.8 km	3460 Qs	
		97.9 km to 100.0 km	3610 Qs	
	1:2 and 2:1	5.0 km to 16.3 km	4184 Qs	
		16.4 km to 40.7 km	4367 Qs	
		40.8 km to 73.3 km	4566 Qs	
		73.4 km to 100.0 km	4785 Qs	
		1:3 and 3:1	5.0 km to 16.3 km	5495 Qs
			16.4 km to 48.9 km	5714 Qs
49.0 km to 97.8 km	6024 Qs			
97.9 km to 100.0 km	6410 Qs			

Number of Slaves	Link symmetry	Maximum range	Frame Duration	
Three	1:4 and 4:1	5.0 km to 24.4 km	6849 Qs	
		24.5 km to 65.2 km	7143 Qs	
		65.3 km to 100.0 km	8065 Qs	
	1:1	5.0 km to 16.3 km	5.0 km to 16.3 km	4184 Qs
			16.4 km to 40.7 km	4367 Qs
			40.8 km to 73.3 km	4566 Qs
			73.4 km to 100.0 km	4785 Qs
		1:2 and 2:1	5.0 km to 57.0 km	6410 Qs
			57.1 km to 100.0 km	6849 Qs
1:3 and 3:1		5.0 km to 8.1 km	8065 Qs	
		8.2 km to 81.5 km	8547 Qs	
		81.6 km to 100.0 km	9259 Qs	
1:4 and 4:1		5.0 km to 8.1 km	10000 Qs	
		8.2 km to 81.5 km	10526 Qs	
		81.6 km to 100.0 km	10989 Qs	
Four	1:1	5.0 km to 16.3 km	5495 Qs	
		16.4 km to 48.9 km	5714 Qs	
		49.0 km to 97.8 km	6024 Qs	
		97.9 km to 100.0 km	6410 Qs	
	1:2 and 2:1	5.0 km to 8.1 km	8065 Qs	
		8.2 km to 81.5 km	8547 Qs	
		81.6 km to 100.0 km	9259 Qs	
	1:3 and 3:1	5.0 km to 57.0 km	10989 Qs	
		57.1 km to 100.0 km	11628 Qs	
	1:4 and 4:1	5.0 km to 40.7 km	13514 Qs	
		40.8 km to 100.0 km	14286 Qs	
	Five	1:1	5.0 km to 24.4 km	6849 Qs
			24.5 km to 65.2 km	7143 Qs
			65.3 km to 100.0 km	8065 Qs

Number of Slaves	Link symmetry	Maximum range	Frame Duration
	1:2 and 2:1	5.0 km to 8.1 km	10000 Qs
		8.2 km to 81.5 km	10526 Qs
		81.6 km to 100.0 km	10989 Qs
	1:3 and 3:1	5.0 km to 40.7 km	13514 Qs
		40.8 km to 100.0 km	14286 Qs
	Six	1:1	5.0 km to 8.1 km
8.2 km to 81.5 km			8547 Qs
81.6 km to 100.0 km			9259 Qs
1:2 and 2:1		5.0 km to 40.7 km	12195 Qs
		40.8 km to 100.0 km	13514 Qs
Seven		1:1	5.0 km to 32.6 km
	32.7 km to 100.0 km		10000 Qs
	1:2 and 2:1	5.0 km to 57.0 km	14286 Qs
Eight	1:1	5.0 km to 57.0 km	10989 Qs
		57.1 km to 100.0 km	11628 Qs

Table 157 HCMP frame duration, 40 MHz Channel Bandwidth, without TDD Sync

Number of Slaves	Link symmetry	Maximum range	Frame Duration
Two	1:1	5.0 km to 7.9 km	1439 Qs
		8.0 km to 15.9 km	1504 Qs
		16.0 km to 27.9 km	1575 Qs
		28.0 km to 31.8 km	1623 Qs
		31.9 km to 39.8 km	1650 Qs
		39.9 km to 51.8 km	1730 Qs
		51.9 km to 59.7 km	1805 Qs
		59.8 km to 67.7 km	1859 Qs
		67.8 km to 75.7 km	1908 Qs
		75.8 km to 91.6 km	2000 Qs
		91.7 km to 100.0 km	2079 Qs

Number of Slaves	Link symmetry	Maximum range	Frame Duration
	2:1	5.0 km to 7.9 km	2079 Qs
		8.0 km to 19.9 km	2179 Qs
		20.0 km to 35.8 km	2283 Qs
		35.9 km to 51.8 km	2392 Qs
		51.9 km to 67.7 km	2500 Qs
		67.8 km to 87.6 km	2618 Qs
		87.7 km to 100.0 km	2747 Qs
	3:1	5.0 km to 11.9 km	2747 Qs
		12.0 km to 31.8 km	2882 Qs
		31.9 km to 51.8 km	3012 Qs
		51.9 km to 71.7 km	3145 Qs
		71.8 km to 95.6 km	3311 Qs
		95.7 km to 100.0 km	3460 Qs
	4:1	5.0 km to 19.9 km	3460 Qs
		20.0 km to 43.8 km	3610 Qs
		43.9 km to 75.7 km	3817 Qs
		75.8 km to 100.0 km	4000 Qs
Three	1:1	5.0 km to 7.9 km	2079 Qs
		8.0 km to 19.9 km	2179 Qs
		20.0 km to 35.8 km	2283 Qs
		35.9 km to 51.8 km	2392 Qs
		51.9 km to 67.7 km	2500 Qs
		67.8 km to 87.6 km	2618 Qs
		87.7 km to 100.0 km	2747 Qs
	2:1	5.0 km to 19.9 km	3145 Qs
		20.0 km to 47.8 km	3311 Qs
		47.9 km to 67.7 km	3460 Qs
		67.8 km to 91.6 km	3610 Qs
		91.7 km to 100.0 km	3817 Qs

Number of Slaves	Link symmetry	Maximum range	Frame Duration
	3:1	5.0 km to 7.9 km	4000 Qs
		8.0 km to 31.8 km	4184 Qs
		31.9 km to 59.7 km	4367 Qs
		59.8 km to 91.6 km	4566 Qs
		91.7 km to 100.0 km	4785 Qs
	4:1	5.0 km to 11.9 km	5000 Qs
		12.0 km to 47.8 km	5236 Qs
		47.9 km to 87.6 km	5495 Qs
		87.7 km to 100.0 km	5714 Qs
	Four	1:1	5.0 km to 11.9 km
12.0 km to 31.8 km			2882 Qs
31.9 km to 51.8 km			3012 Qs
51.9 km to 71.7 km			3145 Qs
71.8 km to 95.6 km			3311 Qs
95.7 km to 100.0 km			3460 Qs
2:1		5.0 km to 7.9 km	4000 Qs
		8.0 km to 31.8 km	4184 Qs
		31.9 km to 59.7 km	4367 Qs
		59.8 km to 91.6 km	4566 Qs
		91.7 km to 100.0 km	4785 Qs
		3:1	5.0 km to 39.8 km
39.9 km to 71.7 km	5714 Qs		
71.8 km to 100.0 km	6024 Qs		
4:1	5.0 km to 47.8 km	6849 Qs	
	47.9 km to 91.6 km	7143 Qs	
	91.7 km to 100.0 km	8065 Qs	
Five	1:1	5.0 km to 19.9 km	3460 Qs
		20.0 km to 43.8 km	3610 Qs
		43.9 km to 75.7 km	3817 Qs

Number of Slaves	Link symmetry	Maximum range	Frame Duration
		75.8 km to 100.0 km	4000 Qs
	2:1	5.0 km to 11.9 km	5000 Qs
		12.0 km to 47.8 km	5236 Qs
		47.9 km to 87.6 km	5495 Qs
		87.7 km to 100.0 km	5714 Qs
	3:1	5.0 km to 47.8 km	6849 Qs
		47.9 km to 91.6 km	7143 Qs
		91.7 km to 100.0 km	8065 Qs
	4:1	5.0 km to 63.7 km	8547 Qs
		63.8 km to 100.0 km	9259 Qs
Six	1:1	5.0 km to 7.9 km	4000 Qs
		8.0 km to 31.8 km	4184 Qs
		31.9 km to 59.7 km	4367 Qs
		59.8 km to 91.6 km	4566 Qs
		91.7 km to 100.0 km	4785 Qs
	2:1	5.0 km to 19.9 km	6024 Qs
		20.0 km to 79.7 km	6410 Qs
		79.8 km to 100.0 km	6849 Qs
	3:1	5.0 km to 39.8 km	8065 Qs
		39.9 km to 100.0 km	8547 Qs
	4:1	5.0 km to 39.8 km	10000 Qs
		39.9 km to 100.0 km	10526 Qs
Seven	1:1	5.0 km to 27.9 km	4785 Qs
		28.0 km to 59.7 km	5000 Qs
		59.8 km to 95.6 km	5236 Qs
		95.7 km to 100.0 km	5495 Qs
	2:1	5.0 km to 43.8 km	7143 Qs
		43.9 km to 100.0 km	8065 Qs
	3:1	5.0 km to 27.9 km	9259 Qs

Number of Slaves	Link symmetry	Maximum range	Frame Duration	
		28.0 km to 63.7 km	9524 Qs	
		63.8 km to 100.0 km	10000 Qs	
		4:1	5.0 km to 43.8 km	11628 Qs
		43.9 km to 100.0 km	12195 Qs	
Eight	1:1	5.0 km to 39.8 km	5495 Qs	
		39.9 km to 71.7 km	5714 Qs	
		71.8 km to 100.0 km	6024 Qs	
	2:1	5.0 km to 39.8 km	8065 Qs	
		39.9 km to 100.0 km	8547 Qs	
	3:1	5.0 km to 23.9 km	10526 Qs	
		24.0 km to 91.6 km	10989 Qs	
		91.7 km to 100.0 km	11628 Qs	
	4:1	5.0 km to 87.6 km	13514 Qs	
		87.7 km to 100.0 km	14286 Qs	

Table 158 HCMP frame duration, 40 MHz Channel Bandwidth, with TDD Sync

Number of Slaves	Link symmetry	Maximum range	Frame Duration
Two	1:1	5.0 km to 91.6 km	2000 Qs
		91.7 km to 100.0 km	2283 Qs
	2:1	5.0 km to 35.8 km	2283 Qs
		35.9 km to 100.0 km	2747 Qs
	3:1	5.0 km to 11.9 km	2747 Qs
		12.0 km to 100.0 km	4000 Qs
4:1	5.0 km to 100.0 km	4000 Qs	
Three	1:1	5.0 km to 35.8 km	2283 Qs
		35.9 km to 100.0 km	2747 Qs
	2:1	5.0 km to 100.0 km	4000 Qs
	3:1	5.0 km to 7.9 km	4000 Qs
		8.0 km to 31.8 km	4184 Qs

Number of Slaves	Link symmetry	Maximum range	Frame Duration	
		31.9 km to 91.6 km	4566 Qs	
		91.7 km to 100.0 km	5495 Qs	
		4:1	5.0 km to 87.6 km	5495 Qs
		87.7 km to 100.0 km	6024 Qs	
	Four	1:1	5.0 km to 11.9 km	2747 Qs
			12.0 km to 100.0 km	4000 Qs
		2:1	5.0 km to 7.9 km	4000 Qs
			8.0 km to 31.8 km	4184 Qs
31.9 km to 91.6 km			4566 Qs	
91.7 km to 100.0 km			5495 Qs	
3:1		5.0 km to 39.8 km	5495 Qs	
		39.9 km to 100.0 km	6024 Qs	
4:1		5.0 km to 47.8 km	6849 Qs	
		47.9 km to 91.6 km	7143 Qs	
		91.7 km to 100.0 km	8065 Qs	
Five		1:1	5.0 km to 100.0 km	4000 Qs
	2:1	5.0 km to 87.6 km	5495 Qs	
		87.7 km to 100.0 km	6024 Qs	
	3:1	5.0 km to 47.8 km	6849 Qs	
		47.9 km to 91.6 km	7143 Qs	
		91.7 km to 100.0 km	8065 Qs	
	4:1	5.0 km to 63.7 km	8547 Qs	
		63.8 km to 100.0 km	9259 Qs	
Six	1:1	5.0 km to 7.9 km	4000 Qs	
		8.0 km to 31.8 km	4184 Qs	
		31.9 km to 91.6 km	4566 Qs	
		91.7 km to 100.0 km	5495 Qs	
	2:1	5.0 km to 19.9 km	6024 Qs	
		20.0 km to 79.7 km	6410 Qs	

Number of Slaves	Link symmetry	Maximum range	Frame Duration
		79.8 km to 100.0 km	6849 Qs
	3:1	5.0 km to 39.8 km	8065 Qs
		39.9 km to 100.0 km	8547 Qs
	4:1	5.0 km to 39.8 km	10000 Qs
		39.9 km to 100.0 km	10526 Qs
Seven	1:1	5.0 km to 100.0 km	5495 Qs
	2:1	5.0 km to 43.8 km	7143 Qs
		43.9 km to 100.0 km	8065 Qs
	3:1	5.0 km to 27.9 km	9259 Qs
		28.0 km to 63.7 km	9524 Qs
		63.8 km to 100.0 km	10000 Qs
	4:1	5.0 km to 43.8 km	11628 Qs
		43.9 km to 100.0 km	12195 Qs
Eight	1:1	5.0 km to 39.8 km	5495 Qs
		39.9 km to 100.0 km	6024 Qs
	2:1	5.0 km to 39.8 km	8065 Qs
		39.9 km to 100.0 km	8547 Qs
	3:1	5.0 km to 23.9 km	10526 Qs
		24.0 km to 91.6 km	10989 Qs
		91.7 km to 100.0 km	11628 Qs
	4:1	5.0 km to 87.6 km	13514 Qs
		87.7 km to 100.0 km	14286 Qs

Frame duration in HCMP topology with expert configuration

When TDD Frame Configuration Mode is set to Expert Mode, the ODU is configured by setting the maximum link range in the Wireless Configuration page of the Installation Wizard and selecting the number of time slots reserved for uplink and downlink directions in the TDD Frame page. The ODU calculates the TDD Frame Duration and displays this in the TDD Synchronization page of the Installation Wizard. TDD Frame Duration depends on:

- Channel Bandwidth
- Maximum Range

- TDD Synchronization
- Number of Uplink Time Slots at the Master
- Number of Downlink Time Slots at the Master

Frame Duration in HCMP Frame Configuration Expert Mode can be determined using the ODU or the LINKPlanner.

Capacity per time slot

The following table shows the data capacity of a PTP 700 wireless link for one time slot at any Modulation Mode and any Frame Duration.

Table 159 Throughput (Mbit/s) per time slot

Modulation mode	Frame duration						
	1439 μ s	1504 μ s	1575 μ s	1623 μ s	1650 μ s	1730 μ s	1805 μ s
256QAM 0.94 dual	88.81	84.98	81.15	78.72	77.44	73.86	70.80
256QAM 0.81 dual	77.19	73.86	70.53	68.42	67.31	64.20	61.53
64QAM 0.92 dual	65.04	62.23	59.42	57.64	56.71	54.09	51.84
64QAM 0.75 dual	53.15	50.85	48.56	47.11	46.34	44.20	42.36
16QAM 0.87 dual	41.35	39.56	37.78	36.65	36.05	34.39	32.96
16QAM 0.63 dual	29.72	28.44	27.16	26.34	25.92	24.72	23.69
256QAM 0.94 single	44.41	42.49	40.57	39.36	38.72	36.93	35.40
256QAM 0.81 single	38.60	36.93	35.26	34.21	33.65	32.10	30.77
64QAM 0.92 single	32.52	31.11	29.71	28.82	28.35	27.04	25.92
64QAM 0.75 single	26.57	25.43	24.28	23.55	23.17	22.10	21.18
16QAM 0.87 single	20.67	19.78	18.89	18.32	18.03	17.19	16.48
16QAM 0.63 single	14.86	14.22	13.58	13.17	12.96	12.36	11.85
QPSK 0.87 single	10.34	9.89	9.44	9.16	9.01	8.60	8.24
QPSK 0.63 single	7.43	7.11	6.79	6.59	6.48	6.18	5.92
BPSK 0.63 single	3.72	3.56	3.39	3.29	3.24	3.09	2.96

Modulation mode	Frame duration						
	1859 μ s	1908 μ s	2000 μ s	2079 μ s	2179 μ s	2283 μ s	2392 μ s
256QAM 0.94 dual	68.75	66.96	63.90	61.47	58.66	55.97	53.42
256QAM 0.81 dual	59.75	58.20	55.53	53.42	50.98	48.65	46.43
64QAM 0.92 dual	50.34	49.03	46.79	45.01	42.95	40.99	39.12

Modulation mode	Frame duration						
	1859 μ s	1908 μ s	2000 μ s	2079 μ s	2179 μ s	2283 μ s	2392 μ s
64QAM 0.75 dual	41.14	40.07	38.24	36.78	35.10	33.49	31.96
16QAM 0.87 dual	32.01	31.17	29.75	28.62	27.31	26.06	24.87
16QAM 0.63 dual	23.01	22.41	21.38	20.57	19.63	18.73	17.88
256QAM 0.94 single	34.38	33.48	31.95	30.73	29.33	27.99	26.71
256QAM 0.81 single	29.88	29.10	27.77	26.71	25.49	24.32	23.21
64QAM 0.92 single	25.17	24.52	23.39	22.51	21.48	20.49	19.56
64QAM 0.75 single	20.57	20.04	19.12	18.39	17.55	16.75	15.98
16QAM 0.87 single	16.00	15.59	14.87	14.31	13.65	13.03	12.43
16QAM 0.63 single	11.50	11.21	10.69	10.29	9.82	9.37	8.94
QPSK 0.87 single	8.00	7.79	7.44	7.15	6.83	6.51	6.22
QPSK 0.63 single	5.75	5.60	5.35	5.14	4.91	4.68	4.47
BPSK 0.63 single	2.88	2.80	2.67	2.57	2.45	2.34	2.23

Modulation mode	Frame duration						
	2500 μ s	2618 μ s	2747 μ s	2882 μ s	3012 μ s	3145 μ s	3311 μ s
256QAM 0.94 dual	51.12	48.82	46.52	44.34	42.43	40.64	38.59
256QAM 0.81 dual	44.43	42.43	40.43	38.54	36.87	35.32	33.54
64QAM 0.92 dual	37.43	35.75	34.06	32.47	31.07	29.76	28.26
64QAM 0.75 dual	30.59	29.21	27.84	26.54	25.39	24.32	23.09
16QAM 0.87 dual	23.80	22.73	21.65	20.64	19.75	18.92	17.97
16QAM 0.63 dual	17.11	16.34	15.57	14.84	14.20	13.60	12.92
256QAM 0.94 single	25.56	24.41	23.26	22.17	21.21	20.32	19.30
256QAM 0.81 single	22.21	21.21	20.21	19.27	18.44	17.66	16.77
64QAM 0.92 single	18.72	17.87	17.03	16.24	15.53	14.88	14.13
64QAM 0.75 single	15.29	14.61	13.92	13.27	12.69	12.16	11.55
16QAM 0.87 single	11.90	11.36	10.83	10.32	9.88	9.46	8.98
16QAM 0.63 single	8.55	8.17	7.78	7.42	7.10	6.80	6.46
QPSK 0.87 single	5.95	5.68	5.41	5.16	4.94	4.73	4.49
QPSK 0.63 single	4.28	4.08	3.89	3.71	3.55	3.40	3.23

Frame duration							
Modulation mode	2500 μ s	2618 μ s	2747 μ s	2882 μ s	3012 μ s	3145 μ s	3311 μ s
BPSK 0.63 single	2.14	2.04	1.95	1.86	1.77	1.70	1.61

Frame duration							
Modulation mode	3460 μ s	3610 μ s	3817 μ s	4000 μ s	4184 μ s	4367 μ s	4566 μ s
256QAM 0.94 dual	36.93	35.40	33.48	31.95	30.54	29.26	27.99
256QAM 0.81 dual	32.10	30.77	29.10	27.77	26.55	25.43	24.32
64QAM 0.92 dual	27.04	25.92	24.52	23.39	22.37	21.43	20.49
64QAM 0.75 dual	22.10	21.18	20.04	19.12	18.28	17.51	16.75
16QAM 0.87 dual	17.19	16.48	15.59	14.87	14.22	13.62	13.03
16QAM 0.63 dual	12.36	11.85	11.21	10.69	10.22	9.79	9.37
256QAM 0.94 single	18.47	17.70	16.74	15.97	15.27	14.63	13.99
256QAM 0.81 single	16.05	15.38	14.55	13.88	13.27	12.72	12.16
64QAM 0.92 single	13.52	12.96	12.26	11.70	11.18	10.71	10.25
64QAM 0.75 single	11.05	10.59	10.02	9.56	9.14	8.76	8.37
16QAM 0.87 single	8.60	8.24	7.79	7.44	7.11	6.81	6.51
16QAM 0.63 single	6.18	5.92	5.60	5.35	5.11	4.90	4.68
QPSK 0.87 single	4.30	4.12	3.90	3.72	3.55	3.41	3.26
QPSK 0.63 single	3.09	2.96	2.80	2.67	2.56	2.45	2.34
BPSK 0.63 single	1.54	1.48	1.40	1.34	1.28	1.22	1.17

Frame duration							
Modulation mode	4785 μ s	5000 μ s	5236 μ s	5495 μ s	5714 μ s	6024 μ s	6410 μ s
256QAM 0.94 dual	26.71	25.56	24.41	23.26	22.36	21.21	19.94
256QAM 0.81 dual	23.21	22.21	21.21	20.21	19.44	18.44	17.33
64QAM 0.92 dual	19.56	18.72	17.87	17.03	16.38	15.53	14.60
64QAM 0.75 dual	15.98	15.29	14.61	13.92	13.38	12.69	11.93
16QAM 0.87 dual	12.43	11.90	11.36	10.83	10.41	9.88	9.28
16QAM 0.63 dual	8.94	8.55	8.17	7.78	7.48	7.10	6.67
256QAM 0.94 single	13.35	12.78	12.20	11.63	11.18	10.61	9.97

Frame duration							
Modulation mode	4785 μ s	5000 μ s	5236 μ s	5495 μ s	5714 μ s	6024 μ s	6410 μ s
256QAM 0.81 single	11.61	11.11	10.61	10.11	9.72	9.22	8.66
64QAM 0.92 single	9.78	9.36	8.94	8.52	8.19	7.77	7.30
64QAM 0.75 single	7.99	7.65	7.30	6.96	6.69	6.35	5.96
16QAM 0.87 single	6.22	5.95	5.68	5.41	5.21	4.94	4.64
16QAM 0.63 single	4.47	4.28	4.08	3.89	3.74	3.55	3.34
QPSK 0.87 single	3.11	2.97	2.84	2.71	2.60	2.47	2.32
QPSK 0.63 single	2.23	2.14	2.04	1.95	1.87	1.77	1.67
BPSK 0.63 single	1.12	1.07	1.02	0.97	0.94	0.89	0.83

Frame duration							
Modulation mode	6849 μ s	7143 μ s	8065 μ s	8547 μ s	9259 μ s	9524 μ s	10000 μ s
256QAM 0.94 dual	18.66	17.89	15.85	14.95	13.80	13.42	12.78
256QAM 0.81 dual	16.22	15.55	13.77	12.99	12.00	11.66	11.11
64QAM 0.92 dual	13.66	13.10	11.60	10.95	10.11	9.83	9.36
64QAM 0.75 dual	11.16	10.71	9.48	8.95	8.26	8.03	7.65
16QAM 0.87 dual	8.69	8.33	7.38	6.96	6.43	6.25	5.95
16QAM 0.63 dual	6.24	5.99	5.30	5.00	4.62	4.49	4.28
256QAM 0.94 single	9.33	8.95	7.92	7.48	6.90	6.71	6.39
256QAM 0.81 single	8.11	7.77	6.89	6.50	6.00	5.83	5.55
64QAM 0.92 single	6.83	6.55	5.80	5.47	5.05	4.91	4.68
64QAM 0.75 single	5.58	5.35	4.74	4.47	4.13	4.01	3.82
16QAM 0.87 single	4.34	4.16	3.69	3.48	3.21	3.12	2.97
16QAM 0.63 single	3.12	2.99	2.65	2.50	2.31	2.25	2.14
QPSK 0.87 single	2.17	2.08	1.84	1.74	1.61	1.56	1.49
QPSK 0.63 single	1.56	1.50	1.33	1.25	1.15	1.12	1.07
BPSK 0.63 single	0.78	0.75	0.66	0.63	0.58	0.56	0.53

Modulation mode	Frame duration					
	10526 μ s	10989 μ s	11628 μ s	12195 μ s	13514 μ s	14286 μ s
256QAM 0.94 dual	12.14	11.63	10.99	10.48	9.46	8.95
256QAM 0.81 dual	10.55	10.11	9.55	9.11	8.22	7.77
64QAM 0.92 dual	8.89	8.52	8.05	7.67	6.92	6.55
64QAM 0.75 dual	7.26	6.96	6.58	6.27	5.66	5.35
16QAM 0.87 dual	5.65	5.41	5.12	4.88	4.40	4.16
16QAM 0.63 dual	4.06	3.89	3.68	3.51	3.16	2.99
256QAM 0.94 single	6.07	5.81	5.50	5.24	4.73	4.47
256QAM 0.81 single	5.28	5.05	4.78	4.55	4.11	3.89
64QAM 0.92 single	4.44	4.26	4.02	3.84	3.46	3.28
64QAM 0.75 single	3.63	3.48	3.29	3.14	2.83	2.68
16QAM 0.87 single	2.83	2.71	2.56	2.44	2.20	2.08
16QAM 0.63 single	2.03	1.95	1.84	1.75	1.58	1.50
QPSK 0.87 single	1.41	1.35	1.28	1.22	1.10	1.04
QPSK 0.63 single	1.02	0.97	0.92	0.88	0.79	0.75
BPSK 0.63 single	0.51	0.49	0.46	0.44	0.40	0.37

Chapter 4: Regulatory information

This chapter provides regulatory notifications.



Attention Intentional or unintentional changes or modifications to the equipment must not be made unless under the express consent of the party responsible for compliance. Any such modifications could void the user's authority to operate the equipment and will void the manufacturer's warranty.

The following topics are described in this chapter:

- [Compliance with safety standards](#) on page 4-2 lists the safety specifications against which the PTP 700 has been tested and certified. It also describes how to keep RF exposure within safe limits.
- [Compliance with radio regulations](#) on page 4-5 describes how the PTP 700 complies with the radio regulations that are in force in various countries, and contains notifications made to regulatory bodies for the PTP 700.

Compliance with safety standards

This section lists the safety specifications against which the PTP 700 has been tested and certified. It also describes how to keep RF exposure within safe limits.

Electrical safety compliance

The PTP 700 hardware has been tested for compliance to the electrical safety specifications listed in [Table 160](#).

Table 160 PTP 700 safety compliance specifications

Region	Standard
USA	UL 62368-1 3rd edition
	UL 60950-22 2nd edition
	FCC Part 15B
Canada	CSA C22.2 No. 62368-1 3rd edition
	CSA C22.2 No. 60950-22 2nd edition
	ICES-003
EU	EN IEC 62368-1:2020/A11:2020
	EN 60529:1992/A2:2013
	IEC 62368-1:2018
	IEC 62368-3: 2017

Electromagnetic compatibility (EMC) compliance

The PTP 700 complies with European EMC Specification EN301 489-1 with testing carried out to the detailed requirements of EN301 489-17.



Note For EN 61000-4-2: 1995 to 2009 Electro Static Discharge (ESD), Class 2, 8 kV air, 4 kV contact discharge, the PTP 700 has been tested to ensure immunity to 15 kV air and 8 kV contact.

Human exposure to radio frequency energy

Relevant standards (USA and EC) applicable when working with RF equipment are:

- ANSI IEEE C95.1-1991, IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.

- Council recommendation of 12 July 1999 on the limitation of exposure of the general public to electromagnetic fields (0 Hz to 300 GHz) (1999/519/EC) and respective national regulations.
- *Directive 2013/35/EU of the European Parliament and of the Council of 26 June 2013* on the minimum health and safety requirements regarding the exposure of workers to the risks arising from physical agents (electromagnetic fields) (20th individual Directive within the meaning of Article 16(1) of Directive 89/391/EEC) and repealing Directive 2004/40/EC

US FCC limits for the general population. See the FCC web site at <http://www.fcc.gov>, and the policies, guidelines, and requirements in Part 1 of Title 47 of the Code of Federal Regulations.

Health Canada limits for the general population. See the Health Canada web site at http://www.hc-sc.gc.ca/ewh-semt/pubs/radiation/99ehd-dhm237/limits-limités_e.html and Safety Code 6.

- EN 50383:2002 to 2010 Basic standard for the calculation and measurement of electromagnetic field strength and SAR related to human exposure from radio base stations and fixed terminal stations for wireless telecommunication systems (110 MHz - 40 GHz).
- BS EN 50385:2002 Product standard to demonstrate the compliances of radio base stations and fixed terminal stations for wireless telecommunication systems with the basic restrictions or the reference levels related to human exposure to radio frequency electromagnetic fields (110 MHz - 40 GHz) - general public.

ICNIRP (International Commission on Non-Ionizing Radiation Protection) guidelines for the general public. See the ICNIRP web site at <http://www.icnirp.de/> and Guidelines for Limiting Exposure to Time-Varying Electric, Magnetic, and Electromagnetic Fields.

Power density exposure limit

Install the radios for the PTP 700 family of PTP wireless solutions so as to provide and maintain the minimum separation distances from all persons.

The applicable power density exposure limit for RF energy between 4400 MHz and 5875 MHz is **10 W/m²**.

Calculation of power density

The following calculation is based on the ANSI IEEE C95.1-1991 method, as that provides a worst case analysis. Details of the assessment to EN50383:2002 can be provided, if required.

Peak power density in the far field of a radio frequency point source is calculated as follows:

$$S = \frac{PG}{4\pi d^2}$$

Where:

- S is the power density in W/m²
- P is the average transmit power capability of the radio in W, equal to the configured maximum transmitter power as a linear number, multiplied by 0.8 to account for the worst case transmit/receive ratio
- G is the effective antenna gain, including cable losses, expressed as a linear number (not in dBi)
- d is the distance from the antenna

Rearranging terms to solve for distance yields:

$$d = \sqrt{\frac{PG}{4\pi S}}$$

Calculated distances

Table 161 shows calculated minimum separation distances each frequency band and for the highest gain antenna of each type, assuming that the equipment is operating at the maximum transmit power for PTP 700. At these and greater separation distances, the power density from the RF field is below generally accepted limits for the general population.

Table 161 Minimum safe distances for PTP 45700 at maximum transmitter power

Antenna	P (W) (*1)	G (*2)	S (W/m ²)	d (m) (*3)
Parabolic 6 ft (38.1 dBi)	0.635	5248.1	10	5.15
Parabolic 4 ft (35.3 dBi)	0.635	3388.4	10	3.73
Flat plate 2 ft (28.5 dBi)	0.635	575.4	10	1.71
Integrated (21.0 dBi)	0.635	125.9	10	0.80
Sectorized (17.0 dBi)	0.635	40.7	10	0.45
Omni (13.0 dBi)	0.635	16.2	10	0.29

(*1) P: maximum average transmit power capability of the radio (Watt)

(*2) G: total transmit gain as a factor, converted from dB, including 0.9 dB cable loss for connectorised antennas

(*3) d: minimum distance from the antenna (meters)



Note Gain of antenna in dBi = 10*log(G).

The regulations require that the power used for the calculations is the maximum power in the transmit burst subject to allowance for source-based time-averaging.

Minimum separation distances for other transmitter powers and antenna gains

The minimum separation distances can be calculated for any transmit power or antenna gain using the formula provided in [Calculation of power density](#) on page 4-3.

In many deployments, the antenna gains will be lower than the maximum listed in [Table 161](#) and the transmitter power will be reduced to comply with applicable regulations; in such cases, the minimum separation distances will be significantly reduced compared with the results in [Table 161](#).

Compliance with radio regulations

This section describes how the PTP 700 complies with the radio regulations that are in force in various countries.



Attention Where necessary, the end user is responsible for obtaining any National licenses required to operate this product and these must be obtained before using the product in any particular country. Contact the appropriate national administrations for details of the conditions of use for the bands in question and any exceptions that might apply.



Attention Changes or modifications not expressly approved by Cambium Networks could void the user's authority to operate the system.



Attention For the connectorized version of the product and in order to reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the Effective Isotropically Radiated Power (EIRP) is not more than that permitted for successful communication.

Chapter 5: Installation

This chapter describes how to install and test the hardware for a PTP 700 link. It contains the following topics:

- [Safety](#) on page 5-2 contains important safety guidelines that must be observed by personnel installing or operating PTP 700 equipment.
- [ODU variants and mounting bracket options](#) on page 5-5 provides details of four different bracket options, including the type of ODU and range of pole diameters supported by each option.
- [Installing the ODU and top LPU](#) on page 5-6 describes how to mount and ground an Integrated, Connectorized+Integrated, Beam Steering or Connectorized ODU, and how to mount and ground the top LPU.
- [Install external antennas](#) on page 5-15 describes how to mount and connect an external antenna for the Connectorized or Connectorized+Integrated ODU.
- [Installing the copper Cat5e Ethernet interface](#) on page 5-19 describes how to install the copper Cat5e power over Ethernet interface from the ODU (PSU port) to the PSU.
- [Installing the PSU](#) on page 5-27 describes how to install a power supply unit for the PTP 700, using the AC+DC Enhanced Power Injector 56V.
- [Installing a PTP-SYNC unit](#) on page 5-29 describes how to install a PTP-SYNC unit for TDD synchronization.
- [Installing the Trimble Accutime GPS receiver](#) on page 5-33 describes how to install a GPS receiver as the timing reference source for PTP-SYNC.
- [Installing an SFP Ethernet interface](#) on page 5-29 describes how to install an optical or copper Cat5e Ethernet interface from the ODU (SFP port) to a connected device.
- [Installing an Aux Ethernet interface](#) on page 5-52 describes how to install a copper Cat5e Ethernet interface from the ODU (Aux port) to a connected device.
- [Supplemental installation information](#) on page 5-53 contains detailed installation procedures that are not included in the above topics, such as how to strip cables, create grounding points and weatherproof connectors.



Note These instructions assume that LPUs are being installed from the LPU and grounding kit (Cambium part number C000065L007). If the installation does not require LPUs, adapt these instructions as appropriate.

If LPUs are being installed, only use the five black-capped EMC cable glands supplied in the LPU and grounding kit. The silver-capped cable glands supplied in the ODU kits must only be used in PTP 700 installations which do not require LPUs.

Safety



Warning To prevent loss of life or physical injury, observe the following safety guidelines. In no event shall Cambium Networks be liable for any injury or damage caused during the installation of the Cambium PTP 700. Ensure that only qualified personnel install a PTP 700 link.

Power lines

Exercise extreme care when working near power lines.

Working at heights

Exercise extreme care when working at heights.

PSU

Always use the AC+DC Enhanced Power Injector 56V to power the ODU. Failure to use these Cambium supplied PSUs could result in equipment damage and will invalidate the safety certification and may cause a safety hazard.

Grounding and protective earth

The Outdoor Unit (ODU) must be properly grounded to protect against lightning. It is the user's responsibility to install the equipment in accordance with national regulations. In the USA follow the requirements of the National Electrical code NFPA 70-2005 and 780-2004 *Installation of Lightning Protection Systems*. In Canada, follow Section 54 of the *Canadian Electrical Code*. These codes describe correct installation procedures for grounding the outdoor unit, mast, lead-in wire and discharge unit, size of grounding conductors and connection requirements for grounding electrodes. Other regulations may apply in different countries and therefore it is recommended that installation of the outdoor unit be contracted to a professional installer.

AC supply

To power the ODU from an AC supply, use the AC+DC Enhanced Power Injector 56V (Cambium part number C000065L002D).

Always use an appropriately rated and approved AC supply cord-set in accordance with the regulations of the country of use.

DC supply

To power the ODU from a DC supply, use the AC+DC Enhanced Power Injector 56V (Cambium part number C000065L002D). Ensure that the DC power supply meets the requirements specified in [PSU DC power supply](#) on page 3-14.

Powering down before servicing

Before servicing PTP 700 equipment, always switch off the power supply and unplug it from the PSU.

Do not disconnect the RJ45 drop cable connectors from the ODU while the PSU is connected to the power supply. Always remove the AC or DC Configure power from the PSU.

Primary disconnect device

The main power supply is the primary disconnect device. The AC+DC Enhanced Power Injector 56V is fused on the DC Configure. Some installations will also require an additional circuit breaker or isolation switch to be fitted in the DC supply.

External cables

Safety may be compromised if outdoor rated cables are not used for connections that will be exposed to the outdoor environment. For outdoor copper Cat5e Ethernet interfaces, always use Cat5e cable that is gel-filled and shielded with copper-plated steel. Alternative types of drop cable are not supported by Cambium Networks for the PTP 700.

Drop cable tester

The PSU output voltage may be hazardous in some conditions, for example in wet weather. Do NOT connect a drop cable tester to the PSU, either directly or via LPUs.

Grounding PTP-SYNC

In order to meet the safety requirements for deployment in Australia and New Zealand (AS/NZS 60950-1), the PTP-SYNC unit, if deployed, must be grounded to a Protective Ground in accordance with Local Electrical Regulations.

RF exposure near the antenna

Strong radio frequency (RF) fields will be present close to the antenna when the transmitter is on. Always turn off the power to the ODU before undertaking maintenance activities in front of the antenna.

Minimum separation distances

Ensure that personnel are not exposed to unsafe levels of RF energy. The units start to radiate RF energy as soon as they are powered up. Never work in front of the antenna when the ODU is powered. Install the ODUs so as to provide and maintain the minimum separation distances from all persons. For minimum separation distances, see [Calculated distances](#) on page 4-4.

Grounding and lightning protection requirements

Ensure that the installation meets the requirements defined in [Grounding and lightning protection](#) on page 3-10.

Grounding cable installation methods

To provide effective protection against lightning induced surges, observe these requirements:

- Grounding conductor runs are as short, straight and smooth as possible, with bends and curves kept to a minimum.
- Grounding cables must not be installed with drip loops.
- All bends must have a minimum radius of 200 mm (8 in) and a minimum angle of 90°. A diagonal run is preferable to a bend, even though it does not follow the contour or run parallel to the supporting structure.
- All bends, curves and connections must be routed towards the grounding electrode system, ground rod, or ground bar.
- Grounding conductors must be securely fastened.
- Braided grounding conductors must not be used.
- Approved bonding techniques must be used for the connection of dissimilar metals.

Siting ODUs and antennas

ODUs, external antennas and GPS receivers for PTP-SYNC are not designed to survive direct lightning strikes. For this reason they must be installed in Zone B as defined in [Lightning protection zones](#) on page 3-10. Mounting in Zone A may put equipment, structures and life at risk.

Thermal Safety

The ODU enclosure may be hot to the touch when in operation. The ODU must not be operated in ambient temperatures exceeding 40°C unless mounted in a Restricted Access Location. For more information, see [ODU ambient temperature limits](#) on page 3-12.



Warning Do not install the ODU in a location where the ambient temperature could exceed 40°C unless this is a Restricted Access Location as defined by EN 60950-1.



Alerte L'unité externe ne doit pas être installée dans un endroit où la température ambiante est supérieure à 40C à moins que l'accès soit limité au personnel autorisé.

ODU variants and mounting bracket options

Mounting bracket options

The PTP 700 series supports four mounting bracket options. Select the optimum mounting bracket arrangement based on the pole diameter and the ODU variant. Order brackets separately.

Table 162 ODU mounting bracket part numbers

Bracket	Pole diameter	ODU variants	Bracket part number
Tilt Bracket Assembly	40 mm to 77 mm (1.6 inches to 3.0 inches)	PTP 700 Integrated PTP 700 Connectorized+Integrated PTP 700 Connectorized	N000045L002A
Tilt Bracket Assembly with band clamps	90 mm to 230 mm (3.6 inches to 9.0 inches)	PTP 700 Integrated PTP 700 Connectorized+Integrated PTP 700 Connectorized	N000045L002A + third-party band clamps
Heavy Duty Mounting Bracket (Integrated)	40 mm to 82 mm (1.6 inches to 3.2 inches)	PTP 700 Integrated PTP 700 Connectorized+Integrated	N000070L021A
Beam Steering ODU Pole Mounting Bracket	40 mm to 100 mm (1.6 inches to 3.9 inches)	PTP 700 Beam Steering	N000070L022A



Note The Tilt Bracket Assembly allows for elevation angle adjustment for the Connectorized+Integrated ODU between -17° and $+26^{\circ}$. The Heavy Duty Mounting Bracket (Integrated) allows for elevation angle adjustment between -26° and $+41^{\circ}$.


Installing the ODU and top LPU

To install the ODU and top LPU, use the following procedures:

- [Attach ground cables to the ODU](#) on page 5-6
- [Mount the ODU on the mast](#) on page 5-6
- [Mount the top LPU](#) on page 5-11
- [Interconnect and ground the ODU and top LPU](#) on page 5-12

Attach ground cables to the ODU

- 1 Fasten one ground cable to each ODU grounding point using the M6 (small) lugs: one is for the top LPU (M6 lug at other end) and the other is for the tower or building (M10 lug at other end). It does not matter which cable goes on which ODU grounding point.
- 2 Tighten both ODU grounding bolts to a torque of 5 Nm (3.9 lb ft).

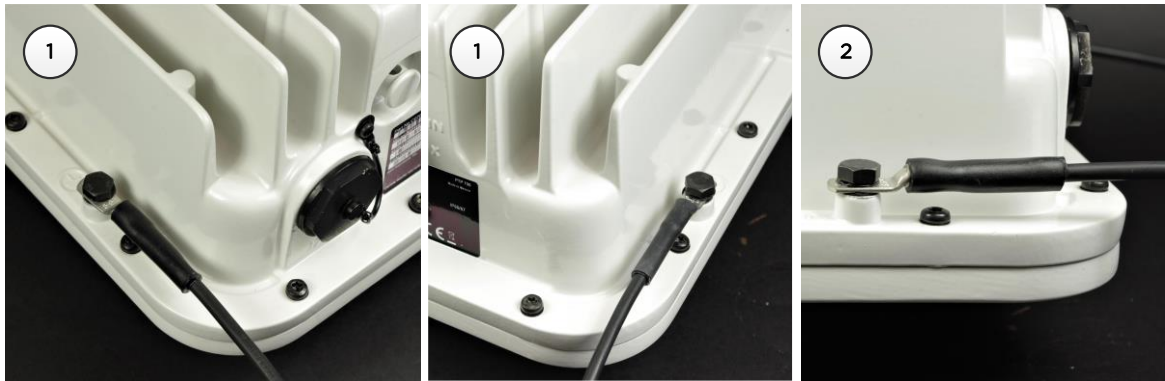

Mount the ODU on the mast

Select the most appropriate bracket mounting arrangement from the options listed in [Mounting bracket options](#) on page 5-5. Refer to individual procedures below for each of the options:


- [Tilt Bracket Assembly](#) on page 5-6
- [Tilt Bracket Assembly with band clamps](#) on page 5-8
- [Heavy Duty Mounting bracket \(Integrated\)](#) on page 5-8
- [Smart Antenna Clamp Set](#) on page 5-9

The mounting procedures can be adapted to attach the Connectorized, Connectorized+Integrated and Integrated ODUs to a suitable horizontal pole, but the adjustment of azimuth angle is necessarily limited compared with an installation on a vertical pole.

Tilt Bracket Assembly


- 1 Fix the mounting plate of the Tilt Bracket to the back of the ODU using four of the short bolts, ensuring that the arrow in the plate points towards the top of the ODU. Tighten the four bolts to a torque setting of 5.0 Nm (3.7 lb ft) using a 13 mm spanner or socket.

- 2 Fit the two long bolts through the bracket body so that the bolt heads engage in the slots as shown. Fit two of the short bolts into the side of the bracket body but do not tighten.
- 3 Thread two of the nuts to the long bolts and tighten against the bracket body using a 13 mm spanner. Fit the bracket strap and thread the remaining nuts onto the long bolts.
- 4 Fix the assembled bracket body to the pole, adjust the azimuth angle, and tighten the nuts to a torque setting of 10.0 Nm (7.4 lb ft) using a 13 mm spanner, ensuring that the arrow in the body is pointing upwards.
- 5 Hoist the ODU to the mounting position. Fit the mounting plate to the bracket body by positioning the open-ended slots over the short bolts. Insert the remaining short bolts through the longer curved slots into the threaded holes in the bracket body. Adjust the elevation angle, and tighten the bolts to a torque setting of 5.0 Nm (3.7 lb ft) using a 13 mm spanner or socket.

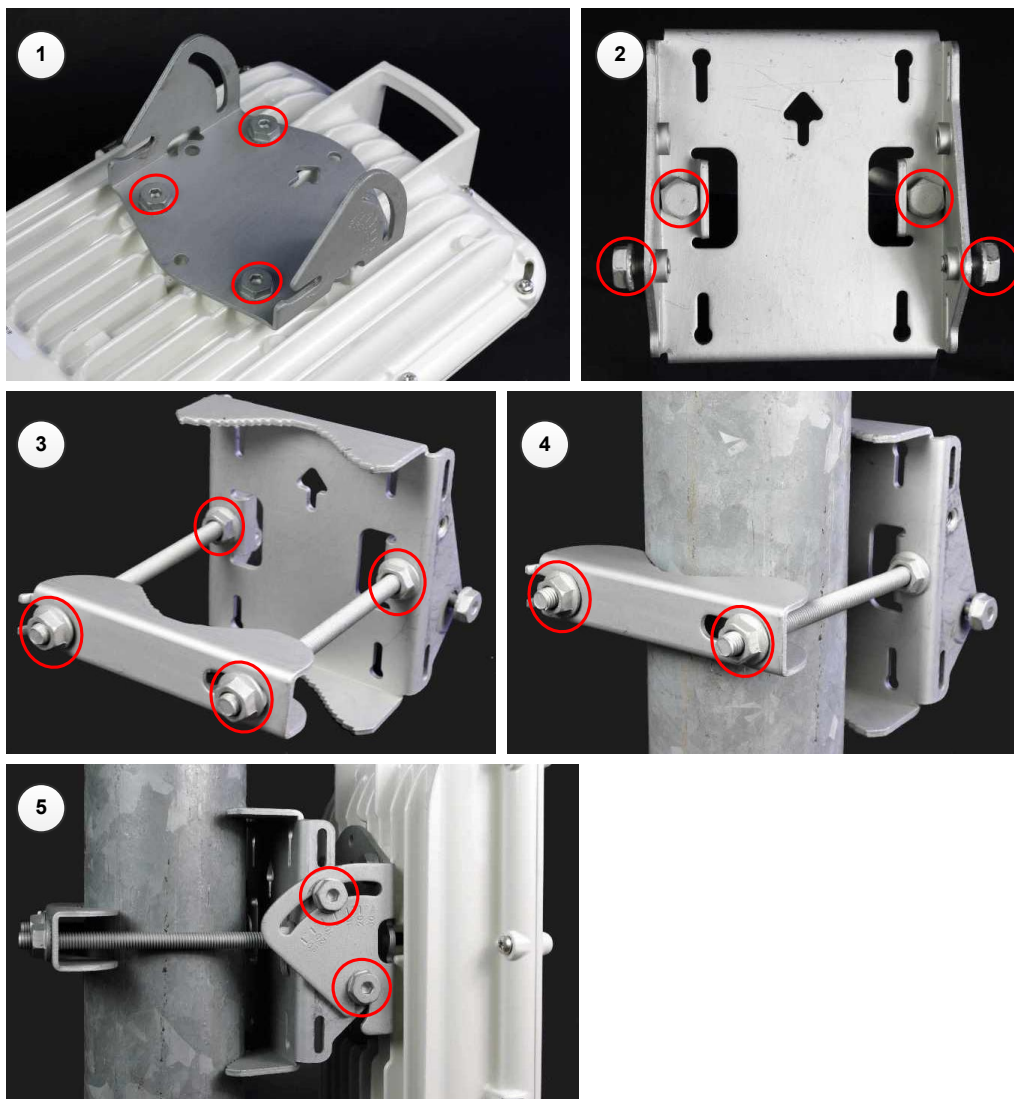


Tilt Bracket Assembly with band clamps

- 1 Follow Step 1 for the Tilt Bracket Assembly procedure above.
- 2 Feed the band clamps through the slots in the bracket body. Secure the bracket body to the pole using band clamps (not supplied by Cambium), ensuring that the arrow in the body is pointing upwards. Adjust the azimuth angle, and tighten the band clamps to a torque setting of 6.0 Nm (4.5 lb ft).
- 3 Hoist the ODU to the mounting position. Fix the mounting plate to the bracket body with four of the short bolts, using a 13 mm spanner or socket. Adjust the elevation angle, and tighten the bolts to a torque setting of 5.0 Nm (3.7 lb ft).

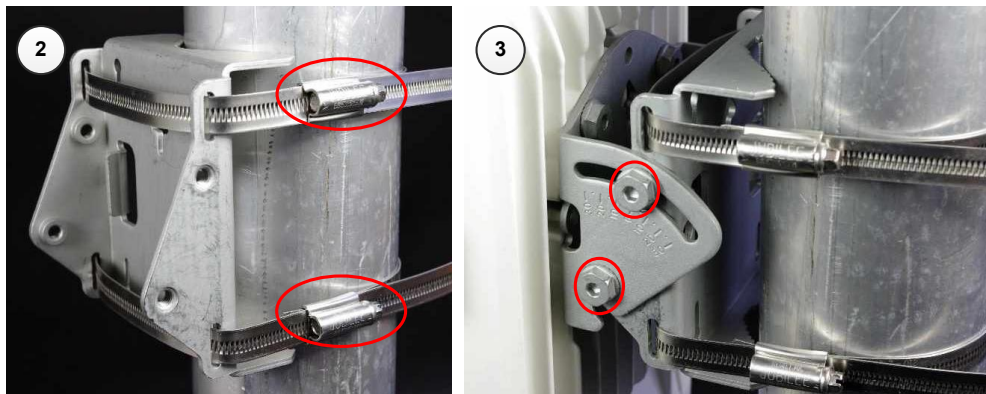






Heavy Duty Mounting bracket (Integrated)

- 1 Fix the mounting plate to the back of the ODU using the four bolts, and spring and plain washers provided. Ensure that the spring washer is between the bolt head and the plain washer. Tighten the bolts to a torque setting of 5.0 Nm (3.7 lb ft).
- 2 Attach the bracket body to the mounting plate using the M8 bolt, spring and plain washers. Ensure that the spring washer is between the bolt head and the plain washer.
- 3 Hoist the ODU to the mounting position.
- 4 Attach the bracket body to the pole using the bracket clamp, M8 bolts, and spring and plain washers. Ensure that the spring washer is between the bolt head and the plain washer.
- 5 Adjust the elevation and azimuth to achieve visual alignment. Tighten all three bracket bolts to a torque of 8.0 Nm (6.0 lb ft).

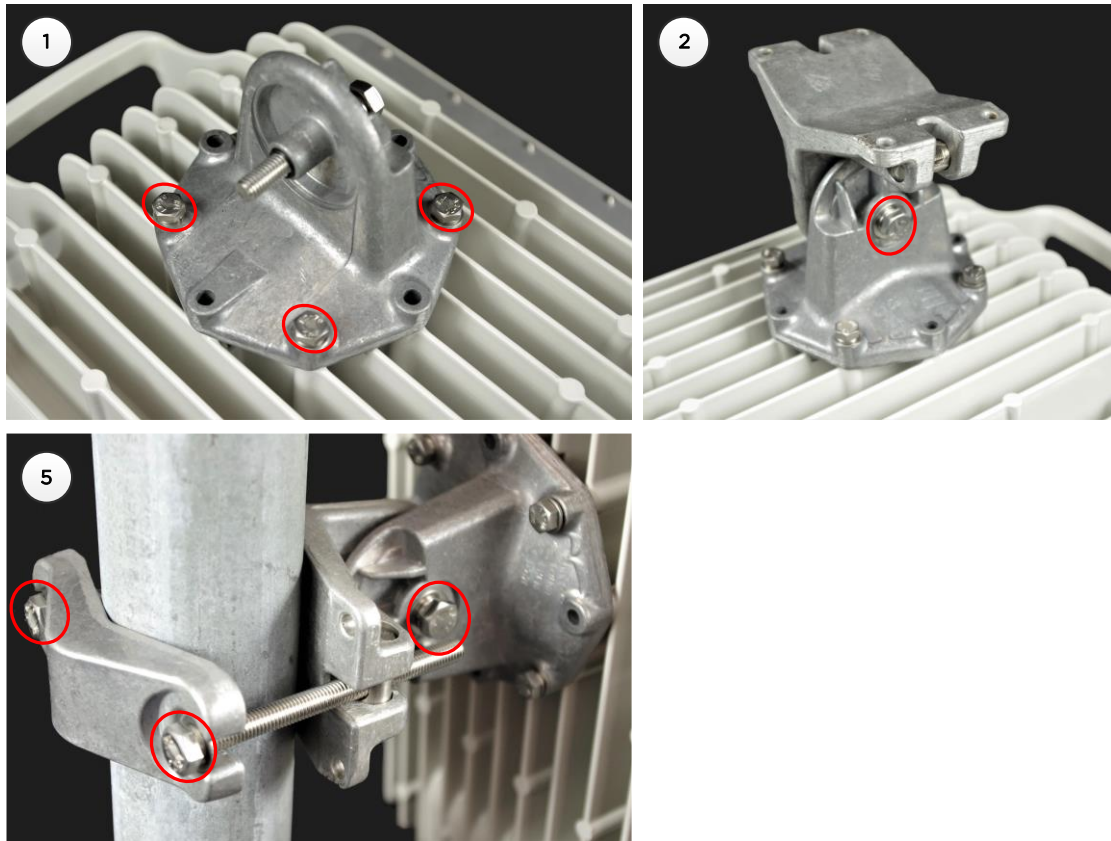


Smart Antenna Clamp Set

- 1 Fit two long screws through the inner strap for the top bracket, and secure in position using two nuts. Repeat for the inner strap for the bottom bracket.
- 2 Attach the top bracket to the ODU using three nuts. Tighten all three nuts to a torque of 4.0 Nm (3.0 lbf ft).
- 3 Attach the bottom bracket to the ODU using three nuts. Tighten all three nuts to a torque of 4.0 Nm (3.0 lbf ft).
- 4 Attach the inner strap to the top bracket using two short screws.
- 5 Attach the inner strap to the bottom bracket using two short screws.
- 6 Hoist the ODU to the mounting position.
- 7 Fit the back strap to the top bracket using two nuts. Adjust the azimuth to achieve visual alignment. Tighten the nuts evenly to a torque of 8.0 Nm (5.9 lbf ft).
- 8 Fit the back strap to the bottom bracket using two nuts. Tighten the nuts evenly to a torque of 8.0 Nm (6.0 lbf ft).
- 9 Adjust the elevation to achieve visual alignment. Note that the elevation angle is indicated by markings on the top bracket. Tighten two short screws in the upper bracket and two short screws in the bottom bracket to a torque of 6.0 Nm (4.4 lbf ft).

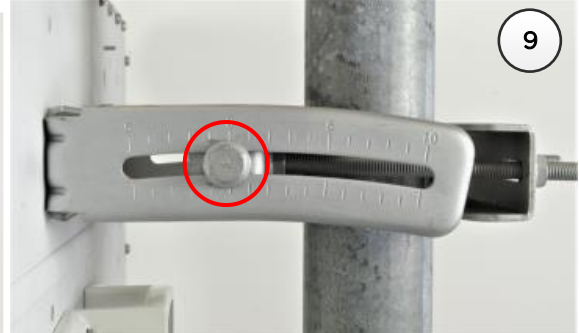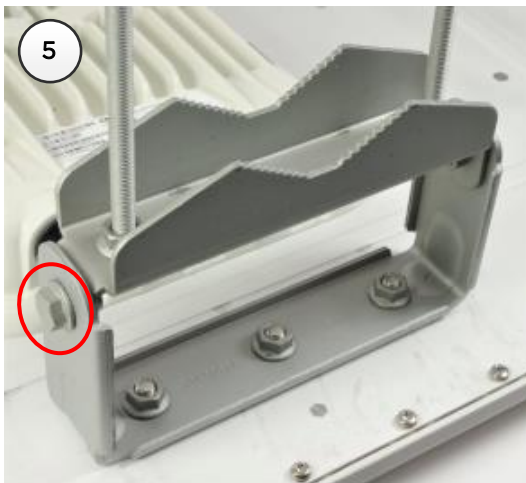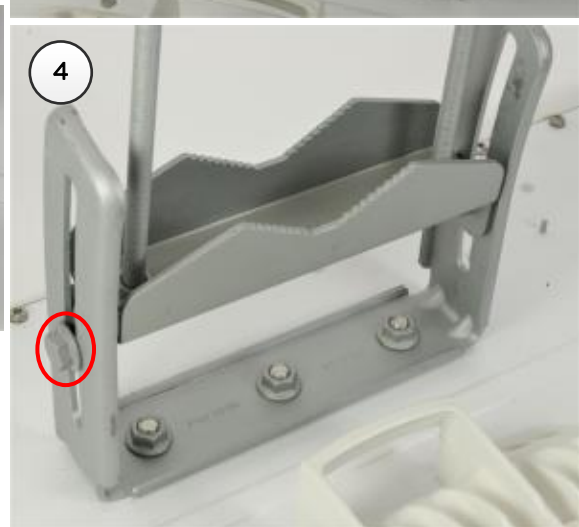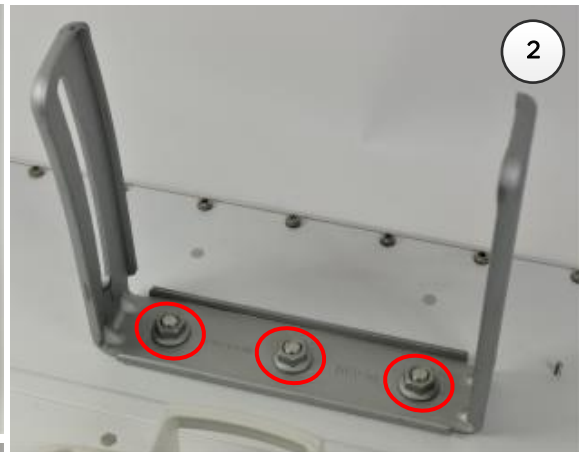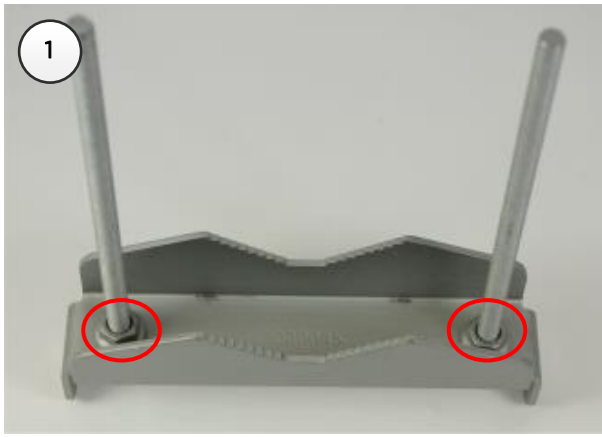



Mount the top LPU

- 1 For separate LPU mounting, use the U-bolt bracket from the LPU kit to mount the top LPU on the pole below the ODU. Tighten to a torque setting of 7.0 Nm (5.2 lb ft):

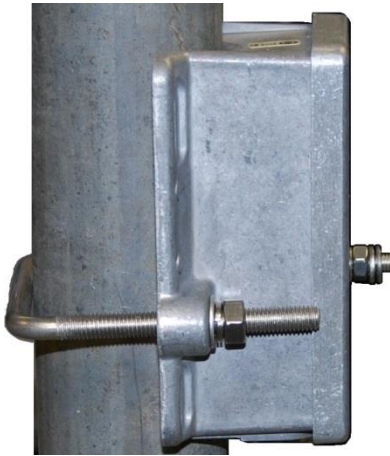


Interconnect and ground the ODU and top LPU

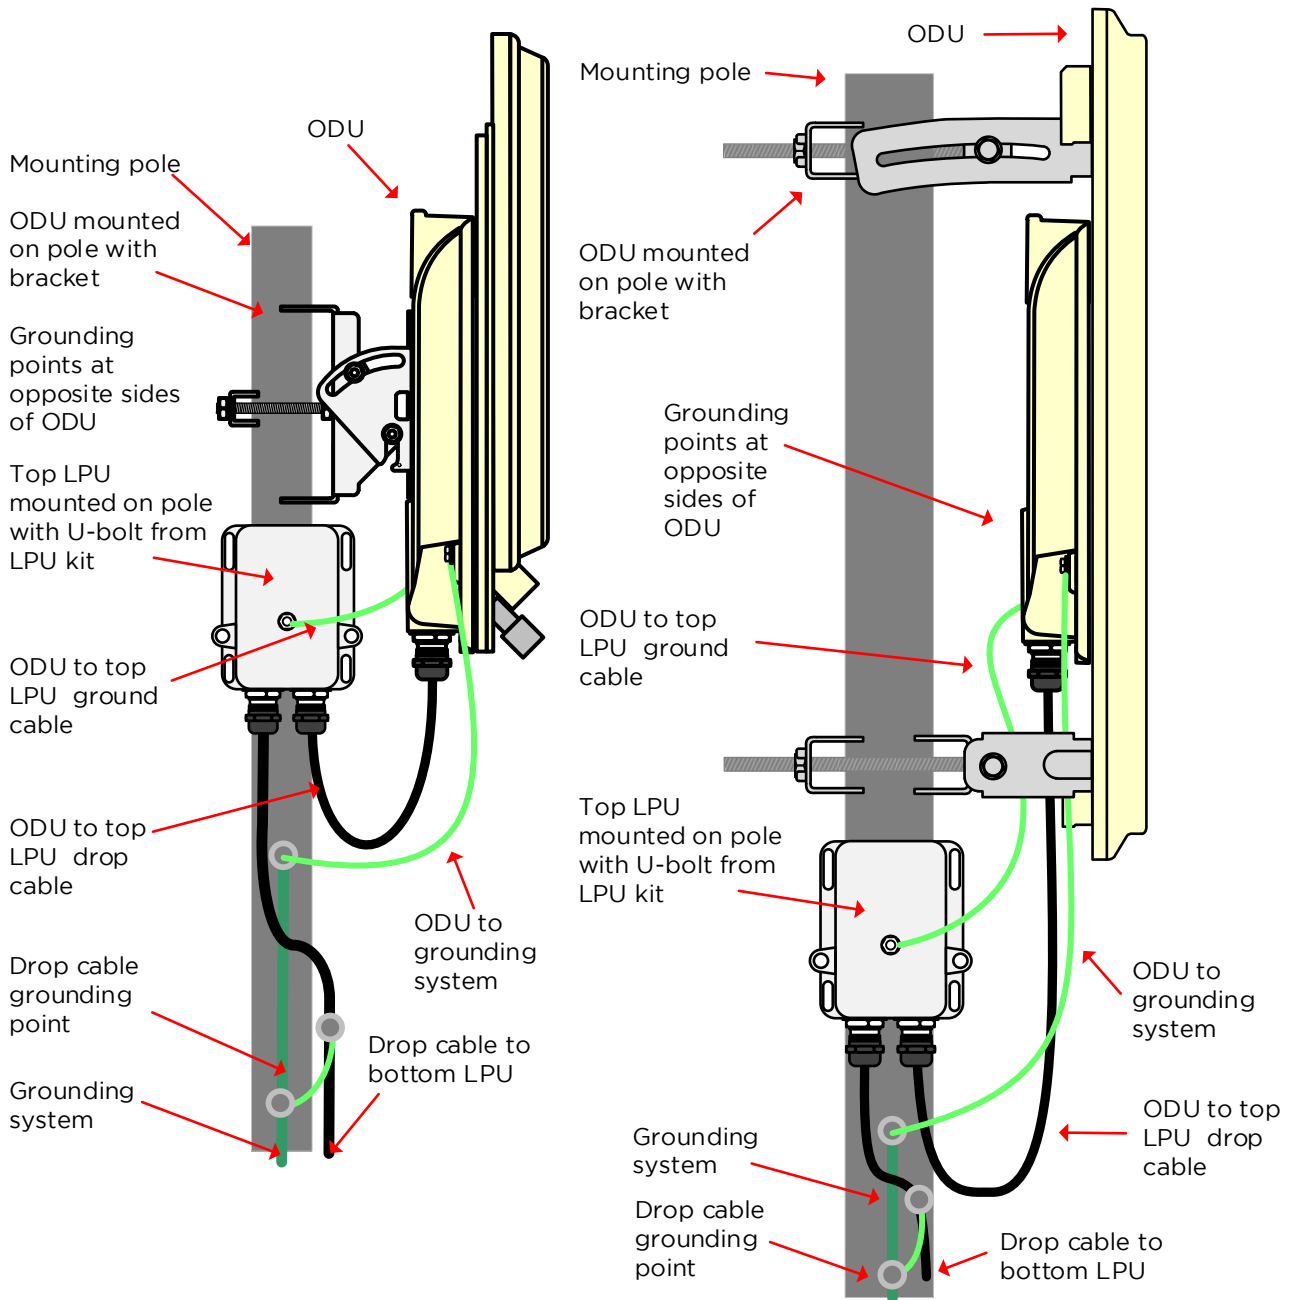

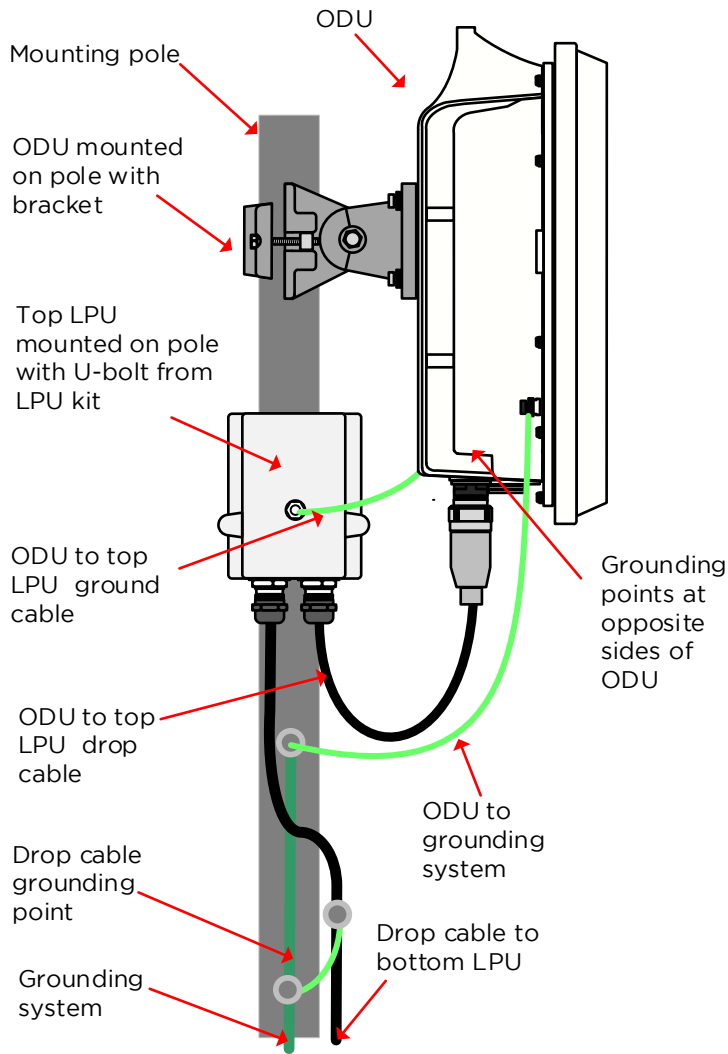

Attention Do not attach grounding cables to the ODU mounting bracket bolts, as this arrangement will not provide full protection.

- 1 Fasten the ODU grounding cable to the top LPU using the M6 (small) lug. Tighten both nuts to a torque of 5 Nm (3.9 lb ft):

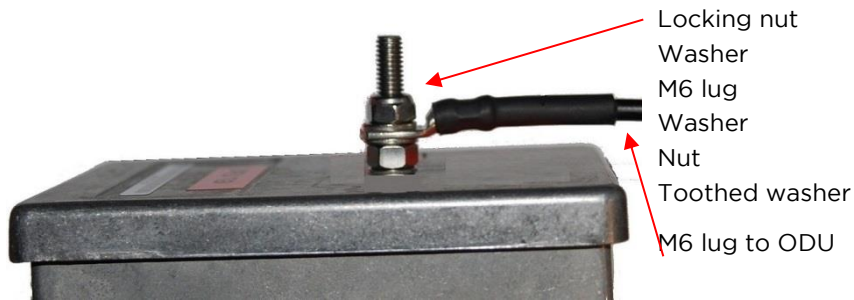


- 2 Select a tower or building grounding point within 0.3 meters (1 ft) of the ODU bracket. Remove paint from the surface and apply anti-oxidant compound. Fasten the ODU grounding cable to this point using the M10 (large) lug.
- 3 If local regulations mandate the independent grounding of all devices, add a third ground cable to connect the top LPU directly to the grounding system.


Install external antennas

To mount and connect an external antenna, proceed as follows:

- 1 Mount the antenna(s) according to manufacturer's instructions. When using separate antennas to achieve spatial diversity, mount one with Horizontal polarization and the other with Vertical polarization.
- 2 Connect the ODU V and H interfaces to the antenna(s) with RF cable of type LMR-400 (Cambium part numbers 30010194001 and 30010195001) and N type connectors (Cambium part number 09010091001). Tighten the N type connectors to a torque setting of 1.7 Nm (1.3 lb ft).
- 3 If the ODU is mounted indoors, install lightning arrestors at the building entry point:
- 4 Form drip loops near the lower ends of the antenna cables. These ensure that water is not channeled towards the connectors.
- 5 If the ODU is mounted outdoors, weatherproof the N type connectors (when antenna alignment is complete) using PVC tape and self-amalgamating rubber tape.
- 6 Weatherproof the antenna connectors in the same way (unless the antenna manufacturer specifies a different method).

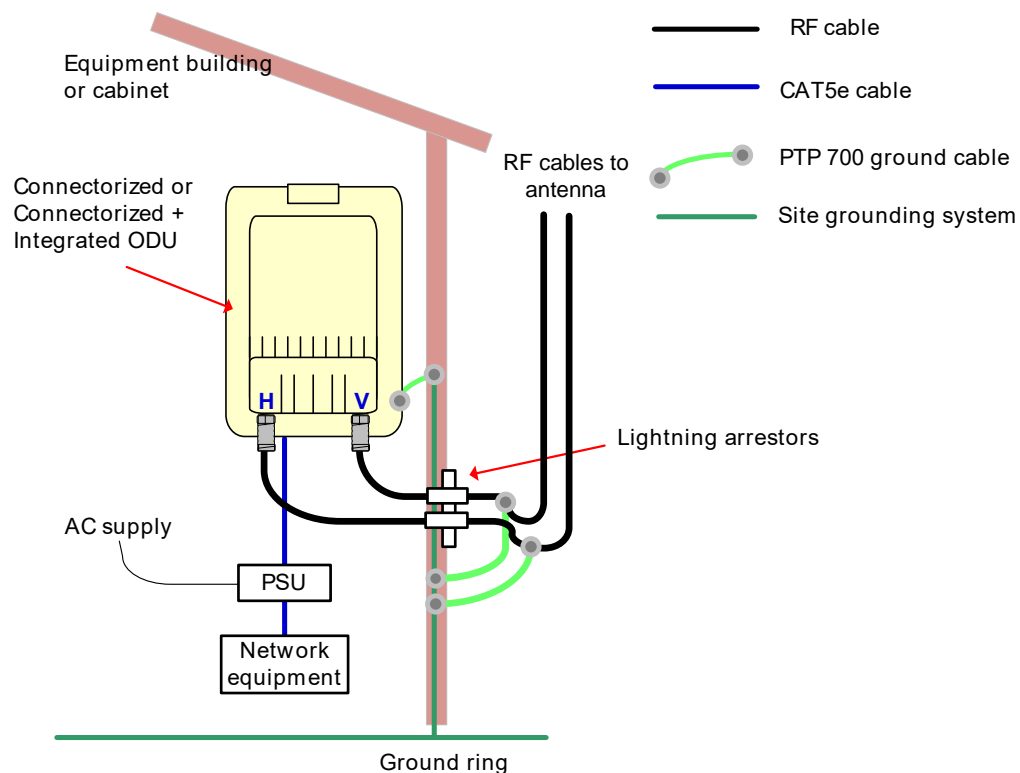

- 7 Ground the antenna cables to the supporting structure within 0.3 meters (1 foot) of the ODU and antennas using the Cambium grounding kit (part number 01010419001):

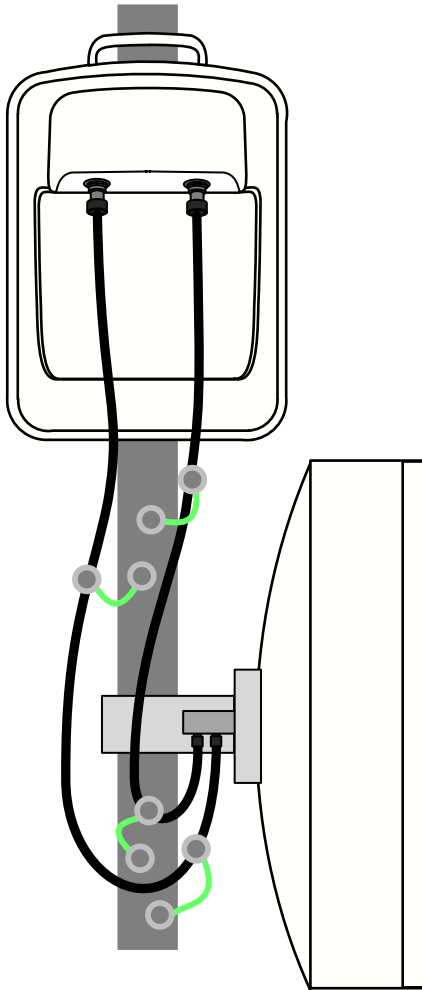

- 8 Fix the antenna cables to the supporting structure using site approved methods. Ensure that no undue strain is placed on the ODU or antenna connectors. Ensure that the cables do not flap in the wind, as flapping cables are prone to damage and induce unwanted vibrations in the supporting structure.

Install RF Combiners

To install and connect the RF Combiner Kit (N000070L123A) for use in Hot Standby (1+1) and 2+0 protection schemes with shared antennas, proceed as follows:

Assemble and mount the RF Combiners


- 1 Assemble the RF Combiner Kit according to the instructions provided in the kit, in the wrap-around arrangement, OR
- 2 Assemble the RF Combiner Kit according to the instructions provided in the kit, in the back-to-back arrangement



- 3, 4, 5 Mount the assembled RF Combiner Kit on the mast or tower standoff. Tighten the fixing nuts to 10 Nm (7.4 lbft) using a 13 mm spanner.



Interconnect the RF Combiners, ODUs and antennas

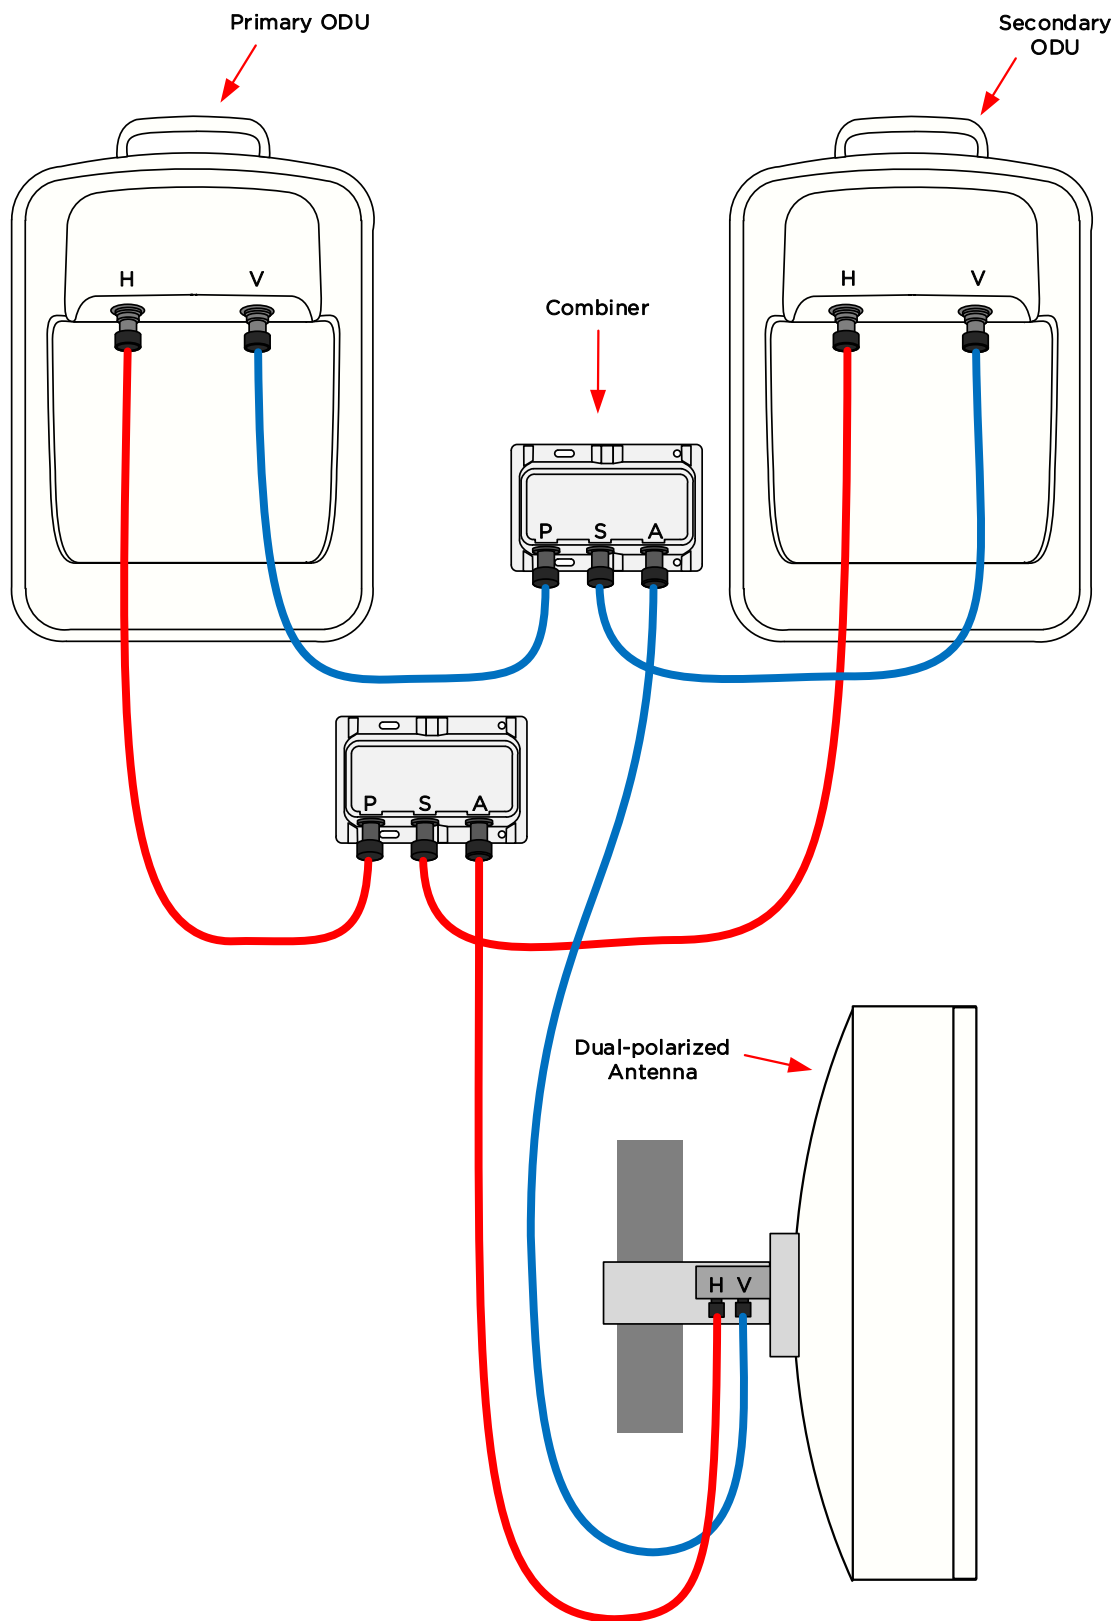

Installing the copper Cat5e Ethernet interface

To install the copper Cat5e Ethernet interface, use the following procedures:

- [Install the ODU to top LPU drop cable](#) on page 5-19
- [Install the main drop cable](#) on page 5-22
- [Install the bottom LPU to PSU drop cable](#) on page 5-24
- [Test resistance in the drop cable](#) on page 5-26



Attention To avoid damage to the installation, do not connect or disconnect the drop cable when power is applied to the PSU or network terminating equipment.



Attention Do not connect the SFP or Aux drop cables to the PSU, as this may damage equipment.



Attention Always use Cat5e cable that is gel-filled and shielded with copper-plated steel. Alternative types of Cat5e cable are not supported by Cambium Networks. Cambium Networks supply this cable (Cambium part numbers WB3175 and WB3176), RJ45 connectors (Cambium part number WB3177) and a crimp tool (Cambium part number WB3211). The LPU and grounding kit contains a 600 mm length of this cable.

Install the ODU to top LPU drop cable

Use the following cables to connect the PTP 78700 ODU to the top LPU:

Cambium description	Cambium part number
PTP 700 Drop Cable 38999 to 1 x RJ45 male extension Cable 2'	N000070L018A
PTP 700 Drop Cable 38999 to 2 x RJ45 male extension Cable 2'	N000070L019A

For other ODU types, use the 600 mm drop cable supplied in the LPU and Grounding Kit.

Fit glands to the ODU to top LPU drop cable

Fit EMC strain relief cable glands (with black caps) to both ends of the 600 mm length of pre-terminated cable. These parts are supplied in the LPU and grounding kit.

- 1 Disassemble the gland and thread each part onto the cable (the rubber bung is split). Assemble the spring clip and the rubber bung:



Note Ensure that the four spring fingers fit inside the silver ring.

- 2 Fit the parts into the body and lightly screw on the gland nut (do not tighten it):



Connect the drop cable to the ODU (PSU port) and LPU

- 1 For PTP 700 7125-8500 MHz, connect the ODU cable to Connector J1 at the ODU. Ensure that the coupling nut is tightened so that the red ring on the receptacle is no longer visible.

Correct





Incorrect




- 2 For other ODU types, (a) Plug the RJ45 connector into the socket in the unit, ensuring that it snaps home. (b) Fit the gland body to the RJ45 port and tighten it to a torque of 5.5 Nm (4.1 lb ft):



- 3 (a) Plug the RJ45 connector into the socket in the LPU, ensuring that it snaps home.
(b) Fit the gland body to the RJ45 port using a 24 mm spanner, and tighten it to a torque of 5.5 Nm (4.1 lb ft):

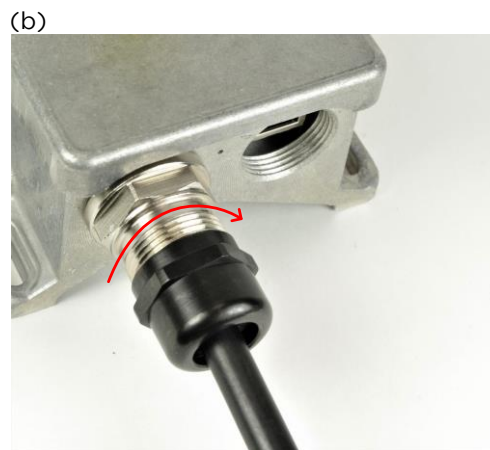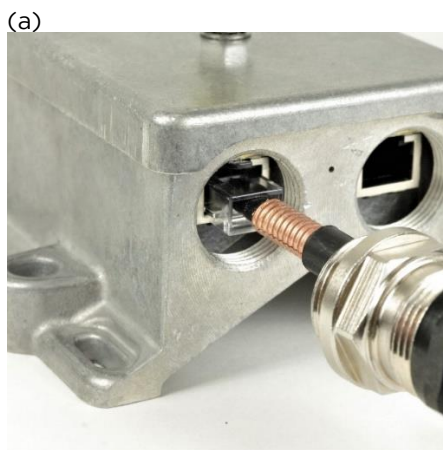

- 4 (a) Tighten the gland nut at the ODU and LPU until the rubber seal closes on the cable. (b) Do not over-tighten the gland nut, as there is a risk of damage to its internal components:

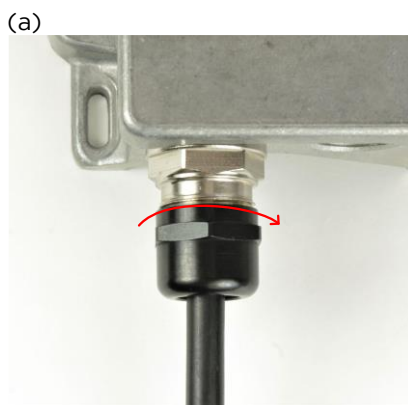

(b)
Correct




Incorrect



Disconnect the drop cable from the LPU or ODU

Use this procedure if it is necessary to remove an EMC strain relief cable gland and RJ45 connector from the ODU (as illustrated) or LPU.

- 1 (a) Remove the gland nut. Wiggle the drop cable to release the tension of the gland body. When the tension in the gland body is released, a gap opens at the point show. Unscrew the gland body.
- (b) Use a small screwdriver to press the RJ45 locking tab, then remove the RJ45 connector.

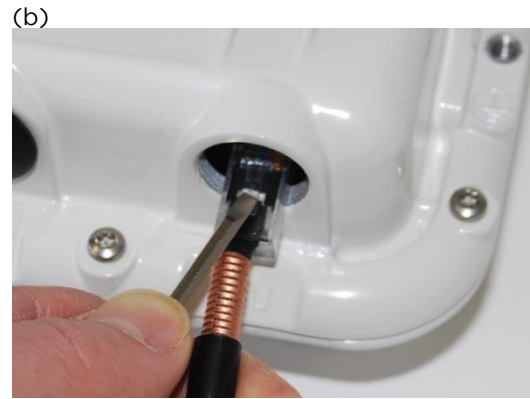

Install the main drop cable



Warning The metal screen of the drop cable is very sharp and may cause personal injury.

- ALWAYS wear cut-resistant gloves (check the label to ensure they are cut resistant).
- ALWAYS wear protective eyewear.
- ALWAYS use a rotary blade tool to strip the cable (DO NOT use a bladed knife).



Warning Failure to obey the following precautions may result in injury or death:

- Use the proper hoisting grip for the cable being installed. If the wrong hoisting grip is used, slippage or insufficient gripping strength will result.
- Do not reuse hoisting grips. Used grips may have lost elasticity, stretched, or become weakened. Reusing a grip can cause the cable to slip, break, or fall.
- The minimum requirement is one hoisting grip for each 60 m (200 ft) of cable.

Cut to length and fit hoisting grips

- 1 Cut the main drop cable to length from the top LPU to the bottom LPU.
- 2 Slide one or more hoisting grips onto the top end of the drop cable.
- 3 Secure the hoisting grip to the cable using a special tool, as recommended by the manufacturer.


Terminate with RJ45 connectors and glands



Attention Check that the crimp tool matches the RJ45 connector, otherwise the cable or connector may be damaged.

- Strip the cable outer and inner sheath, and fit the RJ45 connector load bar. Fit the RJ45 connector housing as shown. To ensure there is effective strain relief, locate the cable inner sheath under the connector housing tang.

The color code for the Superior Essex cable is shown here.

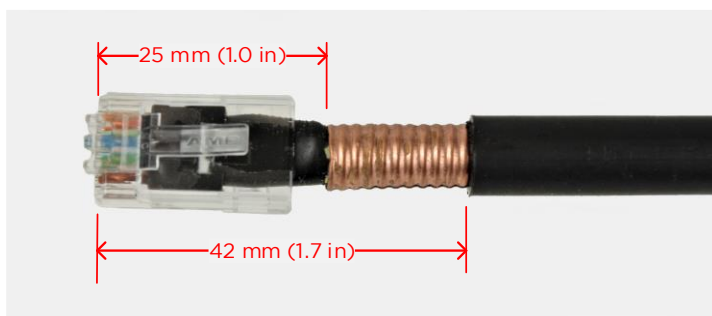

Color Code

Contact	Color
1	Light Orange
2	Orange
3	Light Green
4	Blue
5	Light Blue
6	Green
7	Light Brown
8	Brown

- Fit the gland components in the order shown in [Fit glands to the ODU to top LPU drop cable](#) on page 5-19, but do not tighten the gland nut.

Hoist and fix the main drop cable



Warning Failure to obey the following precautions may result in injury or death:

- Use the hoisting grip to hoist one cable only. Attempting to hoist more than one cable may cause the hoisting grip to break or the cables to fall.
- Do not use the hoisting grip for lowering cable unless the clamp is securely in place.
- Maintain tension on the hoisting grip during hoisting. Loss of tension can cause dangerous movement of the cable and result in injury or death to personnel.
- Do not release tension on the grip until after the grip handle has been fastened to the supporting structure.
- Do not apply any strain to the RJ45 connectors.



Attention Do not lay the drop cable alongside a lightning air terminal.

- 1 Hoist the top end of the main drop cable up to the top LPU, following the hoist manufacturer's instructions. When the cable is in position, fasten the grip handle to the supporting structure and remove the hoist line.
- 2 Connect the main drop cable to the top LPU by following the procedure [Connect the drop cable to the ODU \(PSU port\) and LPU](#) on page 5-20.
- 3 Run the main drop cable to the site of the bottom LPU.
- 4 Attach the main drop cable to the supporting structure using site approved methods.


Ground the main drop cable

At all required grounding points, connect the screen of the main drop cable to the metal of the supporting structure using the cable grounding kit (Cambium part number 01010419001).


Install the bottom LPU to PSU drop cable

Install the bottom LPU

Install the bottom LPU, ground it, and connect it to the main drop cable.

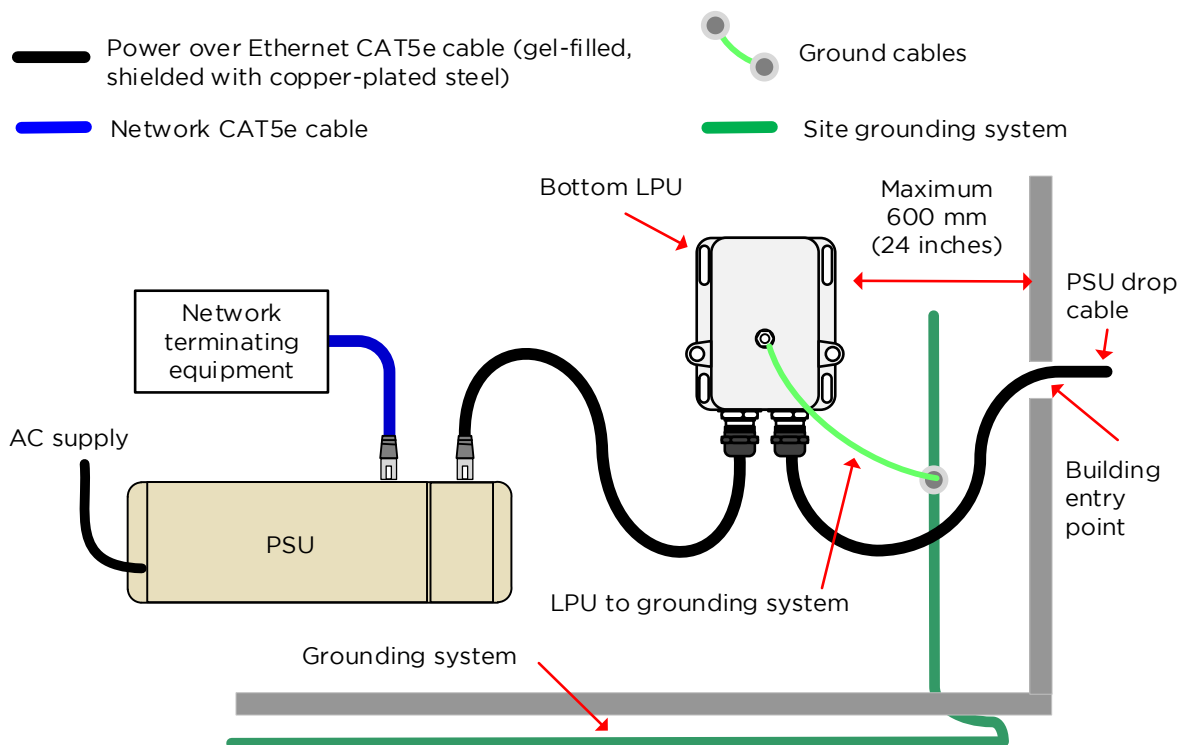

- 1 Select a mounting point for the bottom LPU within 600 mm (24 in) of the building entry point. Mount the LPU vertically with cable glands facing downwards
- 2 Connect the main drop cable to the bottom LPU by following the procedure [Connect the drop cable to the ODU \(PSU port\) and LPU](#) on page 5-20.
- 3 Fasten one ground cable to the bottom LPU using the M6 (small) lug. Tighten both nuts to a torque of 5 Nm (3.9 lb ft):

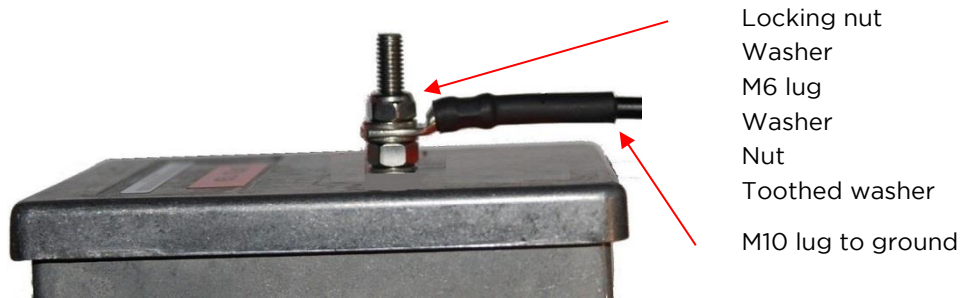

- 4 Select a building grounding point near the LPU bracket. Remove paint from the surface and apply anti-oxidant compound. Fasten the LPU ground cable using the M10 (large) lug.

Install the LPU to PSU drop cable

Use this procedure to terminate the bottom LPU to PSU drop cable with RJ45 connectors at both ends, and with a cable gland at the LPU end.



Warning The metal screen of the drop cable is very sharp and may cause personal injury. ALWAYS wear cut-resistant gloves (check the label to ensure they are cut resistant). ALWAYS wear protective eyewear. ALWAYS use a rotary blade tool to strip the cable, not a bladed knife.



Attention Check that the crimp tool matches the RJ45 connector, otherwise the cable or connector may be damaged.

- 1 Cut the drop cable to the length required from bottom LPU to PSU.
- 2 **At the LPU end only:**
 - Fit one cable gland and one RJ45 connector by following the procedure [Terminate with RJ45 connectors and glands](#) on page 5-23.
 - Connect this cable and gland to the bottom LPU by following the procedure [Connect the drop cable to the ODU \(PSU port\) and LPU](#) on page 5-20.
- 3 **At the PSU end only:** Do not fit a cable gland. Strip the cable outer sheath and fit the RJ45 connector load bar. Fit the RJ45 connector housing. To ensure there is effective strain relief, locate the cable inner sheath under the connector housing tang:



Test resistance in the drop cable

Connect the bottom end of the copper Cat5e drop cable to a suitable drop cable tester and test that the resistances between pins are within the correct limits, as specified in the table below. If any of the tests fail, examine the drop cable for wiring faults.

Measure the resistance between...	Enter measured resistance	To pass test, resistance must be...	Circle "Pass" or "Fail"	Additional tests and notes
Pins 1 and 2	Ohms	<20 Ohms (60 Ohms) (*1)	Pass Fail	Resistances must be within 10% of each other (*2). Circle "Pass" or "Fail": Pass Fail
Pins 3 and 6	Ohms	<20 Ohms (60 Ohms) (*1)	Pass Fail	
Pins 4 and 5	Ohms	<20 Ohms (60 Ohms) (*1)	Pass Fail	
Pins 7 and 8	Ohms	<20 Ohms (60 Ohms) (*1)	Pass Fail	
Pin 1 and screen (ODU ground)	K Ohms	>100K Ohms	Pass Fail	These limits apply regardless of cable length.
Pin 8 and screen (ODU ground)	K Ohms	>100K Ohms	Pass Fail	

(*1) A resistance of 20 Ohms is the maximum allowed when the cable is carrying Ethernet. A resistance of 60 Ohms is the maximum allowed when the cable is carrying only power to the ODU (when Ethernet is carried by one of the other ODU interfaces).

(*2) Ensure that these resistances are within 10% of each other by multiplying the lowest resistance by 1.1 - if any of the other resistances are greater than this, the test has failed.

Installing the PSU

Install the AC+DC Enhanced Power Injector 56V (Cambium part number C000065L002C or C000065L002D). Refer to [Installing the AC+DC Enhanced Power Injector 56V](#) on page 5-27.



Warning Always use an appropriately rated and approved AC supply cord-set in accordance with the regulations of the country of use.



Attention As the PSU is not waterproof, locate it away from sources of moisture, either in the equipment building or in a ventilated moisture-proof enclosure. Do not locate the PSU in a position where it may exceed its temperature rating.



Attention Do not plug any device other than a PTP 700 ODU into the ODU port of the PSU. Other devices may be damaged due to the non-standard techniques employed to inject DC power into the Ethernet connection between the PSU and the ODU.

Do not plug any device other than a Cambium PTP 700 PSU into the PSU port of the ODU. Plugging any other device into the PSU port of the ODU may damage the ODU and device.

Installing the AC+DC Enhanced Power Injector 56V

Follow this procedure to install the AC+DC Enhanced Power Injector 56V (Cambium part number C000065L002C or C000065L002D):

- 1 Mount the AC+DC Power Injector 56V by screwing it to a vertical or horizontal surface using the four screw holes (two holes circled):



- 2 Form a drip loop on the PSU end of the LPU to PSU drop cable. The drip loop ensures that any moisture that runs down the cable into the cabinet or enclosure cannot enter the PSU.
- 3 (a) Undo the retaining screw, hinge back the cover and plug the drop cable or the cable from the PTP-SYNC into the port. (b) Close the cover and secure with the screw. (c) When the system is ready for network connection, connect the network Cat5e cable to the LAN port of the PSU:

Installing a PTP-SYNC unit

To install a PTP-SYNC unit (for TDD synchronization), use the following procedures:

- [Mounting the PTP-SYNC unit](#) on page 5-29
- [Connecting up the PTP-SYNC unit](#) on page 5-30
- [Powering up the PTP-SYNC installation](#) on page 5-32



Attention The PTP-SYNC unit must be installed indoors in a non-condensing environment, otherwise it will be prone to water damage.



Attention To protect the PTP-SYNC from damage, disconnect the power supply from the PSU before connecting up the PTP-SYNC.

Mounting the PTP-SYNC unit

Use this procedure to install the PTP-SYNC unit in the equipment building, either in a rack or on a wall.

- Racking mounting option: fix the PTP-SYNC to the rack mount using the M3 screws from the rack mount installation kit ([Figure 110](#)).
- Wall mounting option: mount the PTP-SYNC vertically with interfaces and cabling facing downwards ([Figure 111](#)).

Figure 110 PTP-SYNC mounted in a rack



Figure 111 PTP-SYNC mounted on a wall

Connecting up the PTP-SYNC unit

Use this procedure to connect the PTP-SYNC to the AC+DC Power Injector 56V, ODU, GPS receiver (if fitted), and LPU (if fitted).

- 1 Disconnect the power supply from the AC+DC Power Injector 56V.
- 2 If using GPS, connect the cable from the GPS unit to the GPS/SYNC IN port.



- 3 To link clustered PTP-SYNC units, connect the SYNC OUT port of the first PTP-SYNC to the GPS/SYNC IN port of the second PTP-SYNC in the chain. Repeat for subsequent PTP-SYNC units in the chain.



- 4 Connect the cable from the PSU to the PIDU IN port. A suitable 1 meter cable is included in the PTP-SYNC kit.



- 5 Connect the cable from the ODU to the ODU OUT port.



- 6 Use a grounding cable to connect the ground stud of the PTP-SYNC to the master ground bar of the building, or to the rack ground bar.



Powering up the PTP-SYNC installation

Use this procedure to power up the PTP-SYNC installation.



Attention Ensure that all cables are connected to the correct interfaces of the PTP SYNC unit and the GPS receiver (if used). Ensure that the installation is correctly grounded. Failure to do so may result in damage to the equipment.

- 1 Connect the power supply to the PSU.
- 2 Within 90 seconds, the PTP-SYNC STATUS LED should blink once every second to show that satellite lock has been achieved.
- 3 If the system does not operate correctly, refer to [Testing PTP-SYNC](#) on page 8-15.

Installing the Trimble Accutime GPS receiver

To install a GPS receiver as the timing reference source for PTP-SYNC, use the following procedures:

- [Mounting the GPS receiver](#) on page 5-33
- [Preparing the GPS drop cable](#) on page 5-33
- [Assembling an RJ45 plug and housing for GPS](#) on page 5-34
- [Assembling a 12 way circular connector](#) on page 5-36
- [Connecting the GPS drop cable](#) on page 5-40
- [Top grounding point for GPS adapter cable](#) on page 5-40
- [Installing and connecting the GPS LPU](#) on page 5-42



Attention A Prior to power-up of equipment, ensure that all cables are connected to the correct interfaces of the PTP-SYNC unit and the GPS receiver module. Failure to do so may result in damage to the equipment.

Mounting the GPS receiver

Mount the GPS receiver (following manufacturer's instructions) upon either an external wall ([Figure 50](#)) or a metal tower or mast ([Figure 51](#)).

Preparing the GPS drop cable

Use this procedure to make the main drop cable that will connect the GPS receiver to its bottom LPU. GPS drop cables do not require top LPUs.



Attention Always use Cat5e cable that is gel-filled and shielded with copper-plated steel. Alternative types of cable are not supported by Cambium.

- 1 Measure the distance from the GPS receiver to the LPU site at building entry.
- 2 Cut the required length of drop cable.
- 3 Attach one or more hoisting grips to the top end of the cable, as described in [Install the main drop cable](#) on page 5-22.

- 4 Fit a suitable GPS connector to the top end of the drop cable:
 - If a GPS adapter cable kit is available, attach the plug housing and an RJ45 plug to the top end of the main GPS drop cable, as described in [Assembling an RJ45 plug and housing for GPS](#) on page 5-34.
 - If a GPS adapter cable kit is not available, fit a 12 way circular connector to the top end of the main drop cable as described in [Assembling a 12 way circular connector](#) on page 5-36.
- 5 Hoist the GPS drop cable safely up a tower or building, as described in [Install the main drop cable](#), on page 5-22.

Assembling an RJ45 plug and housing for GPS


Use this procedure to assemble the plug housing over the end of the drop cable. This procedure is only performed when a GPS adapter cable kit is available. This kit is used to connect the Trimble Acutime™ GG GPS receiver or the Trimble Acutime™ Gold GPS receiver to the GPS drop cable.

The kit contains an adapter cable (GPS receiver circular connector to RJ45 socket) and an RJ45 plug housing. The plug housing should be assembled over the end of the drop cable to provide a sealed connection to the adapter cable.




Note These instructions are for the preparation of the Cambium-supplied drop cable type (Superior Essex EnduraGain OSP Armored Cat 5e). Other types of cable may need different preparation methods.


- 1 Prepare the top end of the GPS drop cable.

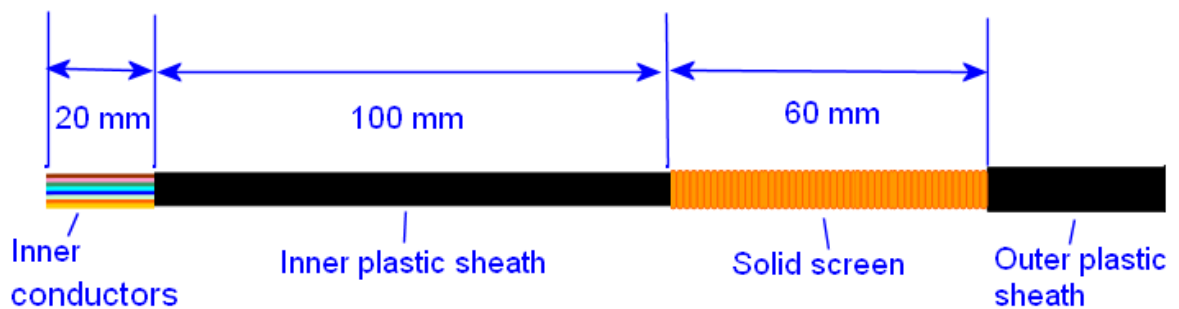


- 2 Install plug housing from the converter kit onto the prepared cable. Do not tighten the nuts at this stage.

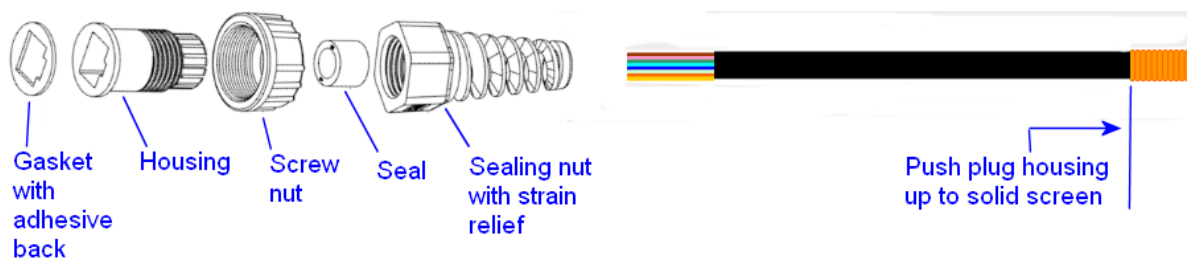

- 3 Install the RJ45 crimp plug.

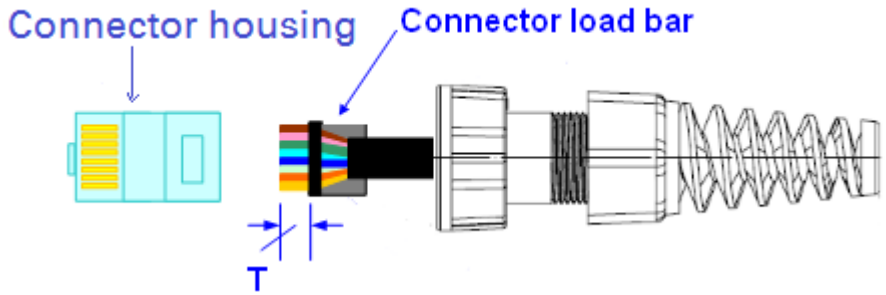

Start with tails over-length to assist insertion into load bar, then trim them to 5 mm (T). Connect the RJ45 pins to the following conductors (Superior Essex EnduraGain OSP Armored Cat 5e colors):


Pin 8 Brown	
Pin 7 Light Brown	
Pin 6 Green	
Pin 5 Light Blue	
Pin 4 Blue	
Pin 3 Light Green	
Pin 2 Orange	
Pin 1 Light Orange	

- 4 Assemble plug housing:

Depress the RJ45 locking tab (A).

Slide the plug housing assembly (B) over the RJ45 plug.

Tighten the sealing nut (C). This is easier to fully tighten when the plug housing is mated to the socket of the adapter cable.

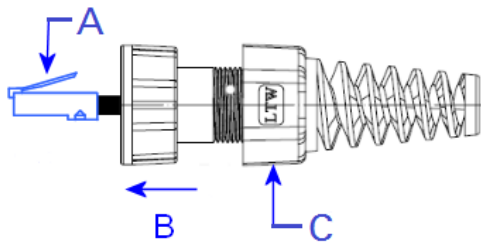

- 5 Check the assembly. This is an example of an assembled plug housing on the end of a drop cable:



Assembling a 12 way circular connector

Use this procedure to connect the GPS drop cable to a 12 way circular connector. This procedure is only performed when a GPS adapter cable kit is NOT available.



Note This procedure requires a soldering iron and solder.




Attention The drop cable has solid copper conductors. There are a limited number of times each conductor can be bent before it fatigues and fails.

Table 163 shows how the 12 way circular connector locations map to the PTP-SYNC RJ45 pins. Figure 112 illustrates this mapping.

Table 163 GPS 12 way circular connector to RJ45 pin mappings

GPS connector location	Function	Cat5e wire color		PTP-SYNC (J10) RJ45 pin	PTP-SYNC signal name
		Conventional	Supported drop cable		
1	DC Pwr (12V)	Orange/White	Light Orange	1	12VGPS
2	RxB-	Brown/White	Light Brown	7	GPS_TXDA
3	RxB+	Brown	Brown	8	GPS_TXDB
4	TxB-	Blue	Blue	4	GPS_RXDA
5	TxB+	Blue/White	Light Blue	5	GPS_RXDB
6	RxA-	N.C	N.C	---	
7	RxA+	N.C	N.C	---	
8	TxA-	N.C	N.C	---	
9	DC Ground	Orange	Orange	2	GND
10	TxA+	N.C	N.C	---	
11	Tx1PPS+	Green/White	Light Green	3	GPS_1PPSA
12	Tx1PPS-	Green	Green	6	GPS_1PPSB

Figure 112 Inserting RJ45 pins into the 12 way circular connector

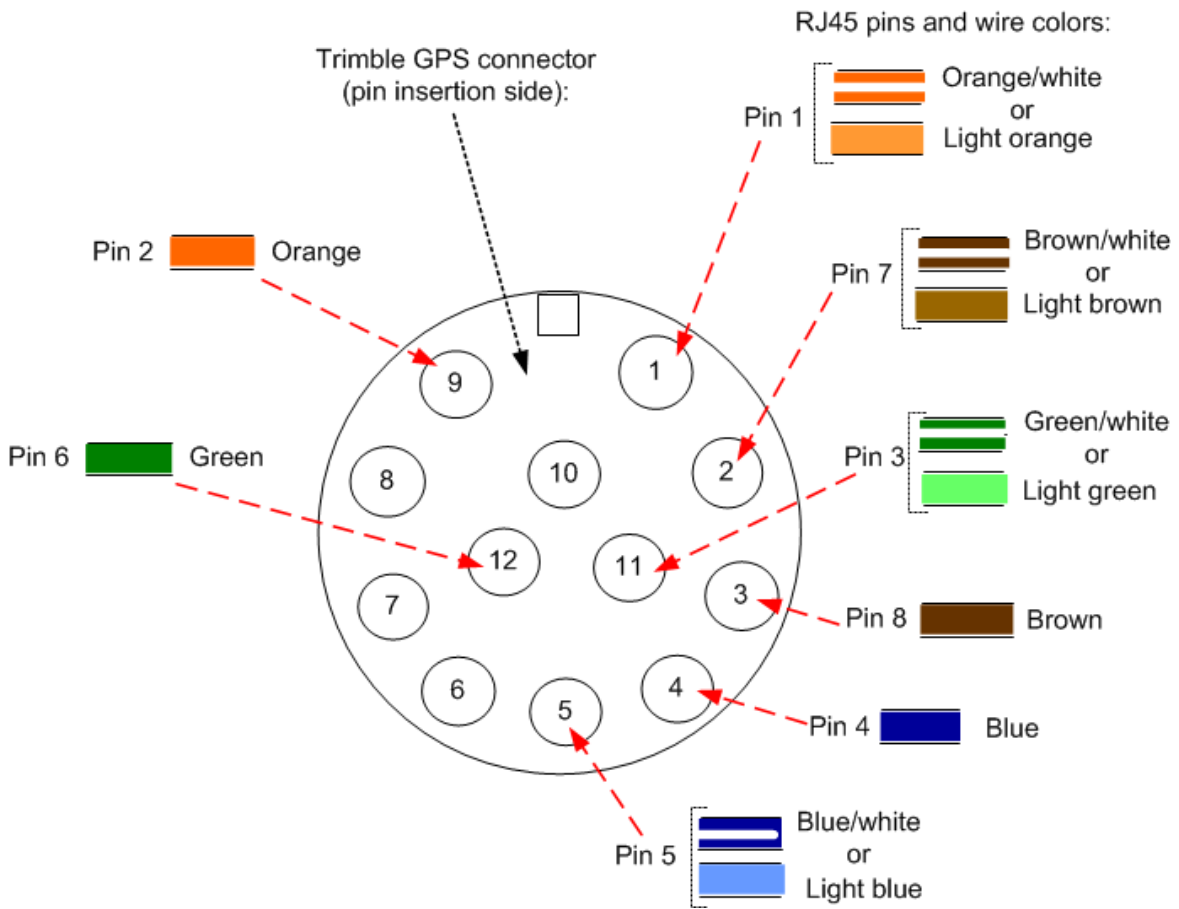

- 1 Prepare the drop cable end as follows:
 - Bare back the cable outer and copper screen to 50mm.
 - Bare back the cable inner to 17mm.
 - Un-twist the cable pairs.
 - Strip the individual conductors to 5mm.



- 2 Fit the plug outer, associated boot, and boot insert.



- 3 Connect the socket contacts using either of the following techniques:

- **Crimp:** Crimp the socket contacts onto each of the conductors using the correct crimp tool and positioner, setting the wire size selector to "3" for 24AWG wire.



- **Solder:** When soldering the socket contacts onto each of the conductors, ensure that there is no solder or flux residue on the outside of the contact. Care should also be taken that the individual conductor insulation does not peel back with the soldering heat, allowing possible shorts when assembled into the plug shell.

- 4 Fit four dummy contacts into the unused 12 way circular connector locations (6, 7, 8 and 10), to provide strength and sealing. Push the contacts in from the pin insertion side.

Pin insertion side:

Plug mating side:



- 5 Insert the eight RJ45 contact pins into the pin insertion side of the 12 way circular connector in accordance with [Figure 112](#).

It is easiest to insert the pins from the center out, in descending order of Trimble location number, that is, 12, 11, 9, 5, 4, 3, 2, 1. Push the contacts in so that the shoulder on the contact fits into the hole in the plug shell. When all contacts have been fitted, push them in further to engage with the locking mechanism in the plug shell. This can be done by applying pressure to the contact with a small diameter stiff object, such as tweezers.



Note If a contact is pushed in to the point where the locking mechanism engages before all of the contacts have been inserted it will limit the amount of room available to fit the remaining contacts, requiring harder bends to be applied.



- 6 Fit the plug to its shell. The plastic ring fits inside the rubber boot and ensures a tight fit when the plug body is clipped onto the plug shell. Be aware that the plug body is a hard push fit onto the plug shell.



- 7 Fit the strain relief clip.



Connecting the GPS drop cable

Use this procedure to connect the GPS drop cable to the GPS unit and supporting structure.

- 1 If a GPS adapter cable is available, use it to connect the main GPS drop cable to the GPS unit:




- 2 If a GPS adapter cable is not available, connect the main GPS drop cable to the GPS unit via a 12 way circular connector. Weatherproof the connection as follows:
 - Wrap a layer of self-amalgamating tape, starting 25mm below the bared back outer of the cable and finishing at the GPS housing.
 - Wrap a layer of PVC tape, starting just below the start of the self-amalgamating tape and finishing at the GPS housing, overlapping at half width.
 - Repeat with four more layers of PVC tape alternating the start and finish ends.



- 3 Lay the main drop cable as far as the building entry point, ensuring there is enough length to extend through the wall of the building to the LPU.
- 4 Attach the main GPS drop cable to the supporting structure using site approved methods.
- 5 Ground the GPS drop cable to the supporting structure at the points shown in [Figure 50](#) (wall installation) or [Figure 51](#) (mast or tower installation):
 - For standard grounding instructions, see [Creating a drop cable grounding point](#) on page [5-54](#).
 - If a GPS adapter cable has been installed, see [Top grounding point for GPS adapter cable](#) on page [5-40](#).

Top grounding point for GPS adapter cable

If a GPS adapter cable has been installed ([Figure 113](#)), use this procedure to ground the drop cable at the point where the solid screen is already exposed, and weatherproof both the ground cable joint and the RJ45 connection.

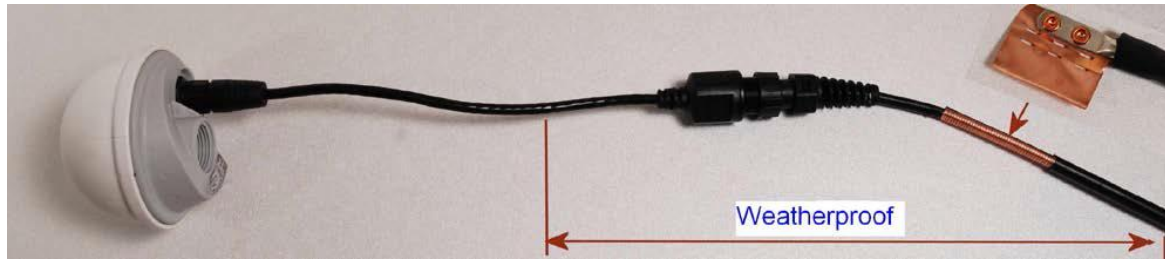Figure 113 Grounding and weatherproofing requirements for GPS adapter cable

Follow the procedure described in [Creating a drop cable grounding point](#) on page 5-54, but observe the following differences:

- There is no need to remove 60mm (2.5inches) of the drop cable outer sheath, as this has already been done.
- Wrap the top layer of self-amalgamating tape around the complete assembly (not just the ground cable joint), including the RJ45 connection with the GPS adapter cable ([Figure 114](#)).
- Wrap all five layers of PVC tape around the complete assembly ([Figure 115](#)). Wrap the layers in alternate directions: (1st) bottom to top; (2nd) top to bottom; (3rd) bottom to top; (4th) top to bottom; (5th) bottom to top. The edges of each layer should be 25mm (1 inch) above (A) and 25 mm (1 inch) below (B) the previous layer.
- Check that the joint between the GPS adapter cable, drop cable and ground cable is fully weatherproofed ([Figure 116](#)).

Figure 114 Wrapping self-amalgamating tape around the GPS adapter cable joint

Figure 115 Wrapping PVC tape around the GPS adapter cable joint**Figure 116** Grounding and weatherproofing example for GPS adapter cable

Installing and connecting the GPS LPU

Install and ground the GPS drop cable LPU at the building (or cabinet) entry point, and install the LPU-PTP-SYNC drop cable, as described in [Install the bottom LPU](#) on page 5-24.

Connect this cable to the PTP-SYNC unit as described in [Connecting up the PTP-SYNC unit](#) on page 5-30.


Installing an SFP Ethernet interface

In more advanced configurations, there may be an optical or copper Cat5e Ethernet interface connected to the SFP port of the ODU. Refer to [Typical deployment](#) on page 3-2 for diagrams of these configurations.

Adapt the installation procedures in this chapter as appropriate for SFP interfaces, noting the following differences from a PSU interface:

- Install an optical or copper SFP module in the ODU (SFP port) and connect the SFP optical or copper cable into this module using the long cable gland from the SFP module kit. This is described in the following procedures:
 - [Fitting the long cable gland](#) on page 5-45
 - [Inserting the SFP module](#) on page 5-46
 - [Connecting the cable](#) on page 5-48
 - [Fitting the gland](#) on page 5-49
 - [Removing the cable and SFP module](#) on page 5-51
- Optical cables do not require LPUs or ground cables.
- At the remote end of an SFP drop cable, use an appropriate termination for the connected device.
- If the connected device is outdoors, not in the equipment building or cabinet, adapt the grounding instructions as appropriate.
- PTP 700 LPUs are not suitable for installation on SFP copper Cat5e interfaces. For SFP drop cables, obtain suitable surge protectors from a specialist supplier.
- Ground the top LPUs and surge protector to the same point on the ODU ([Figure 117](#)).

Figure 117 ODU with copper Cat5e connections to all three Ethernet ports

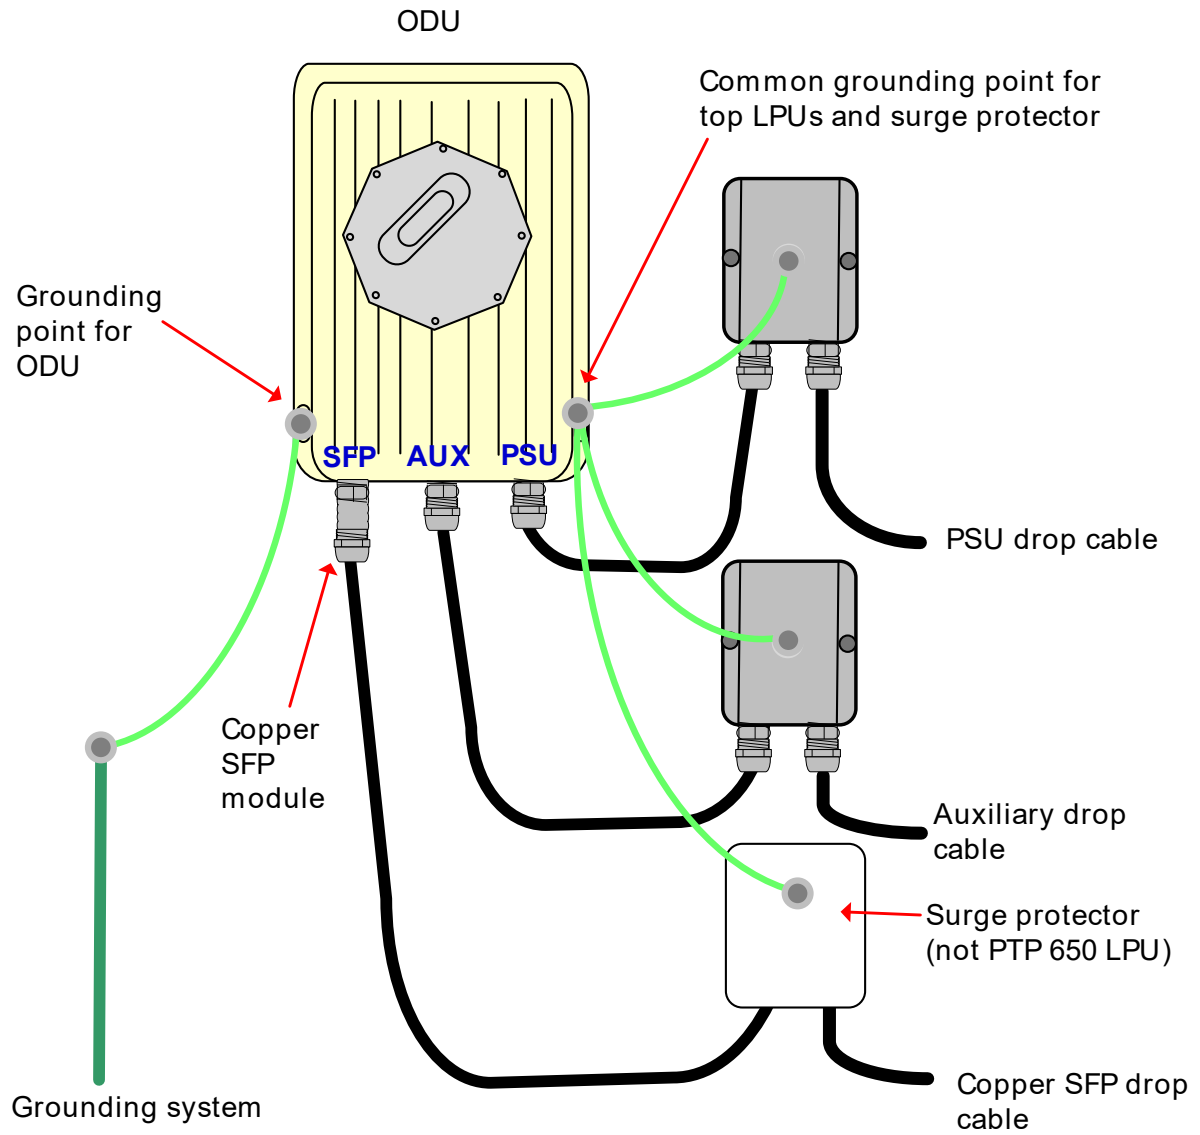

Fitting the long cable gland

Optical SFP interface: Disassemble the long cable gland and thread its components over the LC connector at the ODU end as shown below.

Copper Cat5e SFP interface: Disassemble the long cable gland and thread its components over the RJ45 connector at the ODU end as shown below.

- 1 Disassemble the gland:



- 2 Thread each part onto the cable (the rubber bung is split):



- 3 Assemble the spring clip and the rubber bung (the clips go inside the ring):



- 4 Fit the parts into the body and lightly screw on the gland nut (do not tighten it):

Optical



Copper



Inserting the SFP module

To insert the SFP module into the ODU, proceed as follows:

- 1 Remove the blanking plug from the SFP port of the ODU:




- 2 Insert the SFP module into the SFP receptacle with the label up:

Optical



Copper

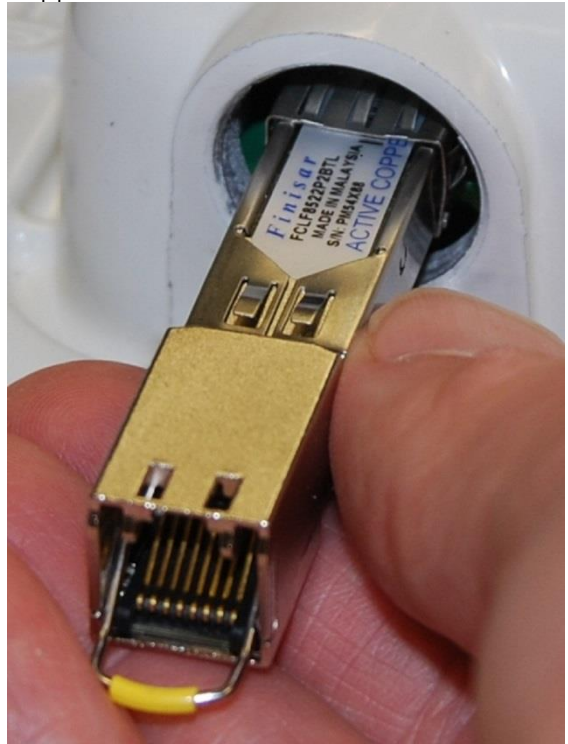

- 3 Push the module home until it clicks into place:

Optical




Copper



- 4 Rotate the latch to the locked position:

Optical

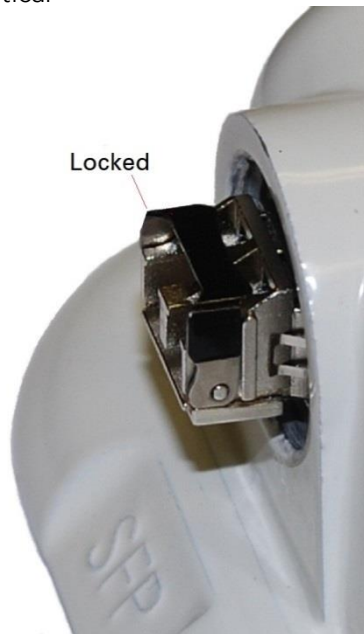

Copper



Connecting the cable



Attention The fiber optic cable assembly is very delicate. To avoid damage, handle it with extreme care. Ensure that the fiber optic cable does not twist during assembly, especially when fitting and tightening the weatherproofing gland.

Do not insert the power over Ethernet drop cable from the PSU into the SFP module, as this will damage the module.

- 1 Remove the LC connector dust caps from the ODU end (optical cable only):



- 2 Plug the connector into the SFP module, ensuring that it snaps home:

Optical



Copper



Fitting the gland

- 1 Fit the gland body to the SFP port and tighten it to a torque of 5.5 Nm (4.3 lb ft)



- 2 Fit the gland nut and tighten until the rubber seal closes on the cable. Do not over-tighten the gland nut, as there is a risk of damage to its internal components:




Removing the cable and SFP module


Do not attempt to remove the module without disconnecting the cable, otherwise the locking mechanism in the ODU will be damaged.

- 1 Remove the cable connector by pressing its release tab before pulling it out:

Optical

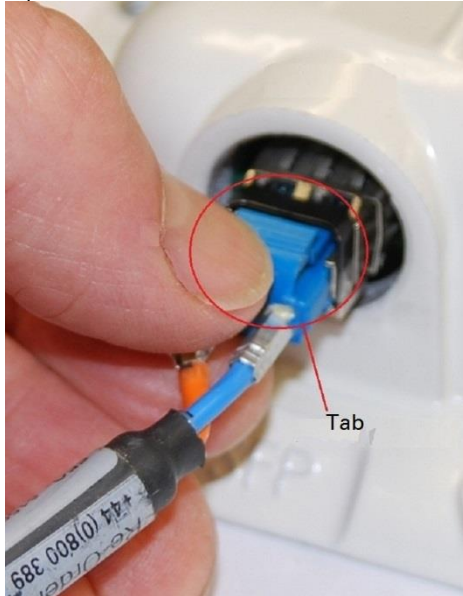


Copper

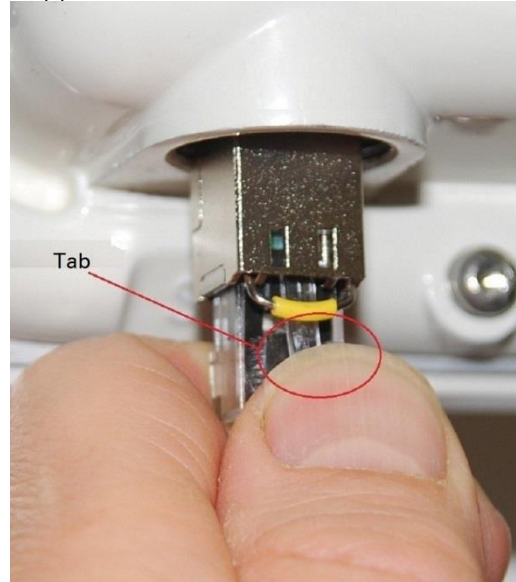


- 2 Rotate the latch to the unlocked position. Extract the module by using a screwdriver:

Optical

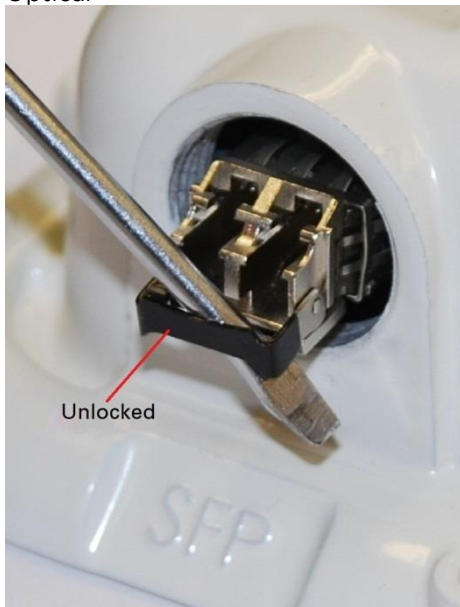

Copper

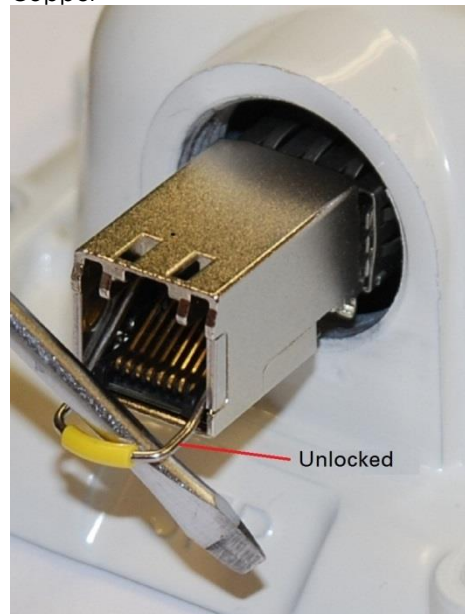

Installing an Aux Ethernet interface

In more advanced configurations, there may be a copper Cat5e Ethernet interface connected to the Aux port of the ODU. Refer to [Typical deployment](#) on page 3-2 for a diagram of this configuration.

Adapt the installation procedures in this chapter as appropriate for the Aux interface, noting the following differences:


- At the remote end of the Aux drop cable, use an appropriate termination for the connected device (for example, a video camera or wireless access point).
- If the connected device is outdoors, not in the equipment building or cabinet, adapt the grounding instructions as appropriate.
- Ground the top LPUs and surge protector to the same point on the ODU ([Figure 117](#)).

Supplemental installation information


This section contains detailed installation procedures that are not included in the above topics, such as how to strip cables, create grounding points and weatherproof connectors.

Stripping drop cable

When preparing drop cable for connection to the PTP 700 ODU or LPU, use the following measurements:

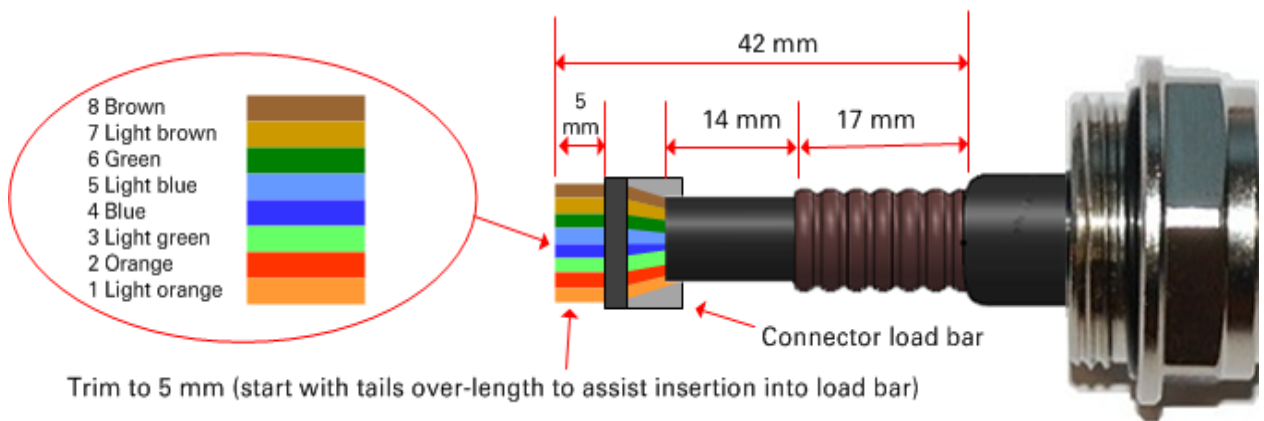

When preparing drop cable for connection to the PTP 700 PSU (without a cable gland), use the following measurements:

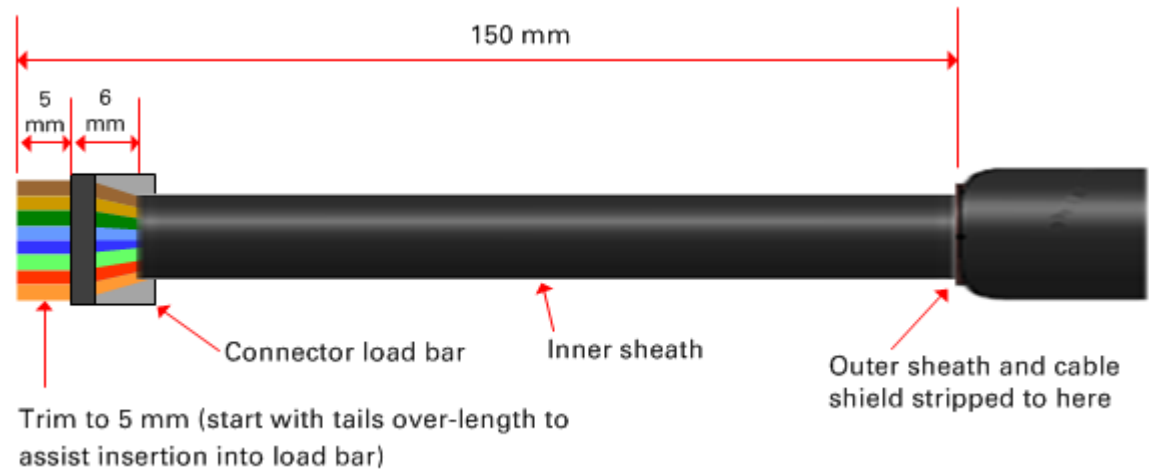

Creating a drop cable grounding point

Use this procedure to connect the screen of the main drop cable to the metal of the supporting structure using the cable grounding kit (Cambium part number 01010419001).

To identify suitable grounding points, refer to [Drop cable grounding points](#) on page 3-15.

- 1 Remove 60 mm (2.5 inches) of the drop cable outer sheath.



- 2 Cut 38mm (1.5 inches) of rubber tape (self-amalgamating) and fit to the ground cable lug. Wrap the tape completely around the lug and cable.



- 3 Fold the ground wire strap around the drop cable screen and fit cable ties.



- 4 Tighten the cable ties with pliers. Cut the surplus from the cable ties.



- 5 Cut a 38mm (1.5 inches) section of self-amalgamating tape and wrap it completely around the joint between the drop and ground cables.



- 6 Use the remainder of the self-amalgamating tape to wrap the complete assembly. Press the tape edges together so that there are no gaps.



- 7 Wrap a layer of PVC tape from bottom to top, starting from 25 mm (1 inch) below and finishing 25 mm (1 inch) above the edge of the self-amalgamating tape, over lapping at half width.



- 8 Repeat with a further four layers of PVC tape, always overlapping at half width. Wrap the layers in alternate directions (top to bottom, then bottom to top). The edges of each layer should be 25mm (1 inch) above (A) and 25 mm (1 inch) below (B) the previous layer.




- 9 Prepare the metal grounding point of the supporting structure to provide a good electrical contact with the grounding cable clamp. Remove paint, grease or dirt, if present. Apply anti-oxidant compound liberally between the two metals.
- 10 Clamp the bottom lug of the grounding cable to the supporting structure using site approved methods. Use a two-hole lug secured with fasteners in both holes. This provides better protection than a single-hole lug.


Weatherproofing an N type connector

Use this procedure to weatherproof the N type connectors fitted to the connectorized ODU and external antenna (if recommended by the antenna manufacturer).

- 1 Ensure the connection is tight. A torque wrench should be used if available:

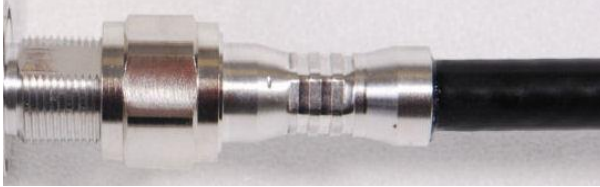


- 2 Wrap the connection with a layer of 19 mm (0.75 inch) PVC tape, starting 25 mm (1 inch) below the connector body. Overlap the tape to half-width and extend the wrapping to the body of the LPU. Avoid making creases or wrinkles:

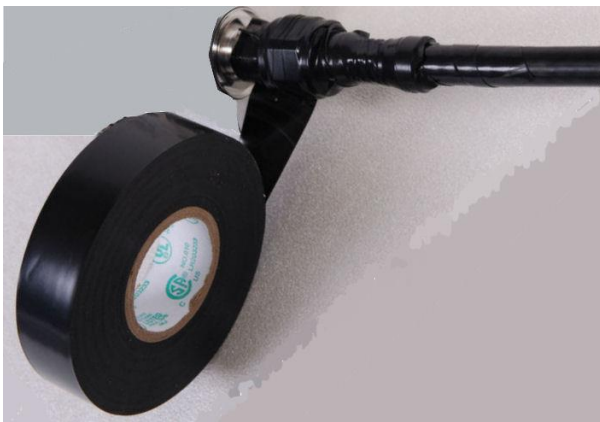

- 3 Smooth the tape edges:



- 4 Cut a 125mm (5 inches) length of rubber tape (self-amalgamating):

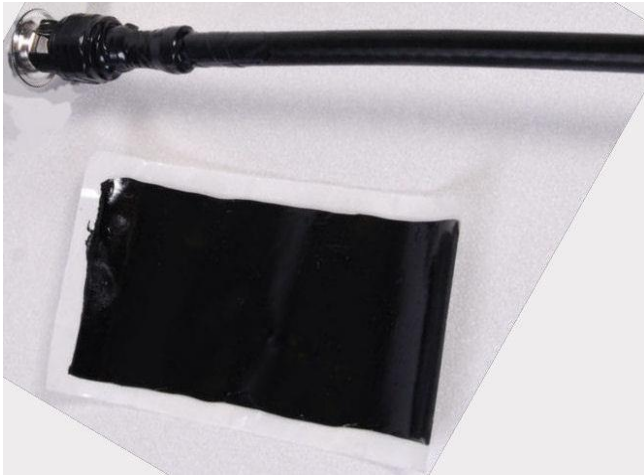

- 5 Expand the width of the tape by stretching it so that it will wrap completely around the connector and cable:



- 6 Press the tape edges together so that there are no gaps. The tape should extend 25 mm (1 inch) beyond the PVC tape:



- 7 Wrap a layer of 50 mm (2 inch) PVC tape from bottom to top, starting from 25 mm (1 inch) below the edge of the self-amalgamating tape, overlapping at half width.



- 8 Repeat with a further four layers of 19 mm (0.75 inch) PVC tape, always overlapping at half width. Wrap the layers in alternate directions:
- Second layer: top to bottom.
 - Third layer: bottom to top.
 - Fourth layer: top to bottom.
 - Fifth layer: bottom to top.

The bottom edge of each layer should be 25 mm (1 inch) below the previous layer.



- 9 Check the completed weatherproof connection:



Replacing PSU fuses

The AC+DC Enhanced Power Injector 56V contains two replaceable fuses. These fuses protect the positive and negative grounded DC Configure voltages. If an incorrect power supply (that is, not in the range 37V to 60V DC) is connected to the DC Configure terminals, one or both fuses may blow.

Both fuses are 3 Amp slow-blow, for example Littlefuse part number 0229003.

To replace these fuses, undo the retaining screw and hinge back the cover as indicated:



Note No other fuses are replaceable in the AC+DC Enhanced Power Injector 56V.

Chapter 6: Configuration and alignment

This chapter describes how to use the web interface to configure the PTP 700 link. It also describes how to align antennas. This chapter contains the following topics:

- [Preparing for configuration and alignment](#) on page 6-2
- [Connecting to the unit](#) on page 6-4
- [Using the web interface](#) on page 6-6
- [Standard Installation](#) menu on page 6-12
- [System menu](#) on page 6-56
- [Management menu](#) on page 6-83
- [SNMP pages \(for SNMPv3\)](#) on page 6-106
- [SNMP pages \(for SNMPv1/2c\)](#) on page 6-115
- [Security menu](#) on page 6-122
- [Configuring security for FIPS 140-3 applications](#) on page 6-137
- [External Devices](#) on page 6-140 for integrated management of the TD-90 antenna positioner
- [Aligning fixed beam antennas](#) on page 6-144
- [Other configuration tasks](#) on page 6-154

Preparing for configuration and alignment

This section describes the checks to be performed before proceeding with unit configuration and antenna alignment.

Safety precautions

All national and local safety standards must be followed while configuring the units and aligning the antennas.



Warning Ensure that personnel are not exposed to unsafe levels of RF energy. The units start to radiate RF energy as soon as they are powered up. Respect the safety standards defined in [Compliance with safety standards](#) on page 4-2, in particular the minimum separation distances.

Observe the following guidelines:

- Never work in front of the antenna when the ODU is powered.
- Always power down the PSU before connecting or disconnecting the drop cable from the PSU, ODU or LPU.

Regulatory compliance

All applicable radio regulations must be followed while configuring the units and aligning the antennas. For more information, refer to [Compliance with radio regulations](#) on page 4-5.



Attention If the system designer has provided a list of channels to be barred for TDWR radar avoidance, the affected channels must be barred before the units are allowed to radiate on site, otherwise the regulations will be infringed. To bar these channels, follow the procedure [Barring channels](#) on page 7-47.

Selecting configuration options

Use the installation report to determine which configuration options are required. Refer to [LINKPlanner](#) on page 3-24.

Generating license keys

To obtain License Keys for capabilities that are not factory-installed, proceed as follows:

- 1 Identify and purchase the required entitlement for additional capabilities by referring to [ODU capability upgrades](#) on page 2-12.

- 2 Obtain the MAC Address of the ODU (it is on the System Status page).
- 3 Follow instructions, supplied in the email, to apply the entitlement to the ODU at the Cambium Networks support web site. Generated license keys are displayed in the License Keys page

Use the Software License Key page to configure the ODU with new license keys ([Software License Key page](#) on page 6-16).

Connecting to the unit


This section describes how to connect the unit to a management PC and power it up.

Configuring the management PC

Use this procedure to configure the local management PC to communicate with the PTP 700.


Procedure:

- 1 Select **Properties** for the Ethernet port. In Windows 7 this is found in **Control Panel > Network and Internet > Network Connections > Local Area Connection**.
- 2 Select **Internet Protocol (TCP/IP)**:

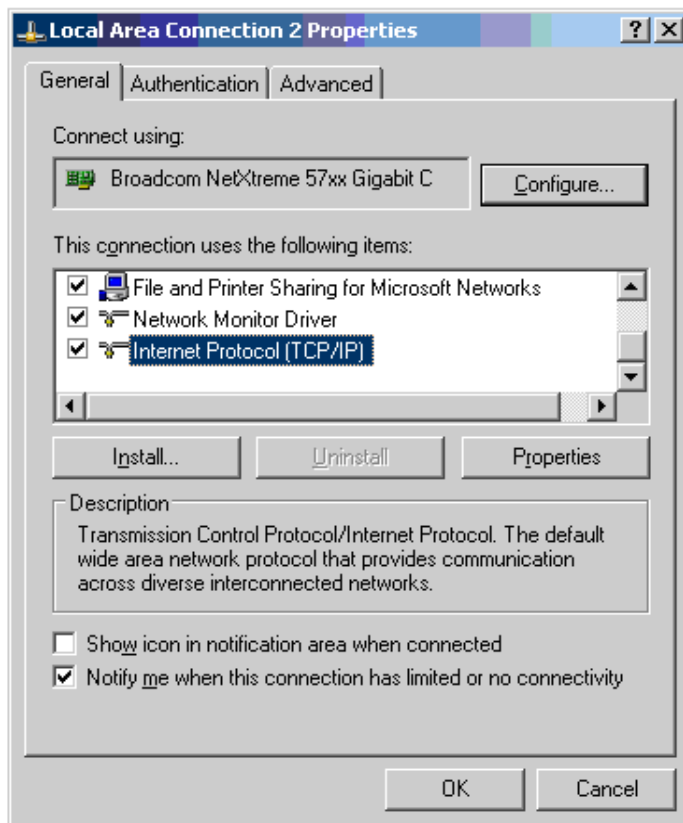

- 3 Click **Properties**.

- 4 Enter an IP address that is valid for the 169.254.X.X network, avoiding 169.254.0.0 and 169.254.1.1. A good example is 169.254.1.3:

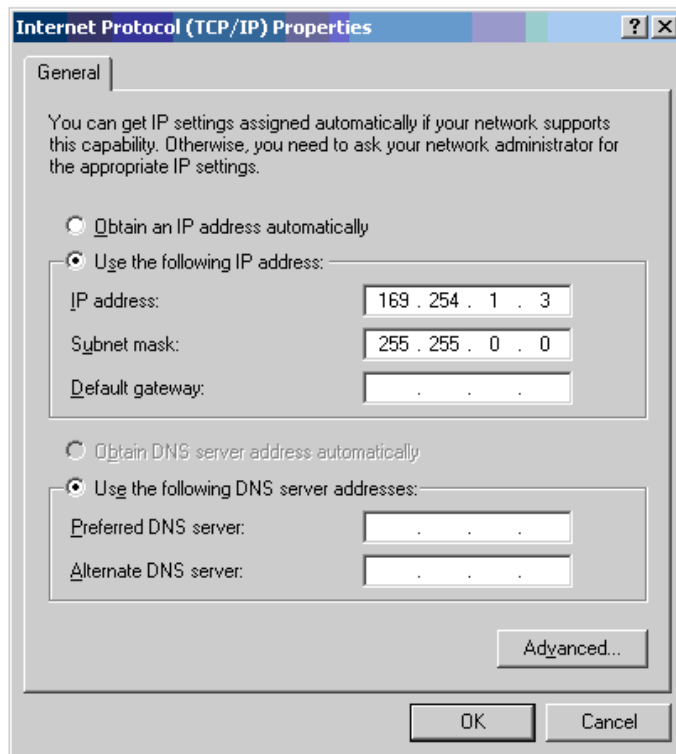

- 5 Enter a subnet mask of 255.255.0.0. Leave the default gateway blank.

Connecting to the PC and powering up

Use this procedure to connect a management PC and power up the PTP 700.

Procedure:

- 1 Check that the ODU and PSU are correctly connected.
- 2 Connect the PC Ethernet port to the LAN port of the PSU using a standard (not crossed) Ethernet cable.
- 3 Apply mains or battery power to the PSU. The green Power LED should illuminate continuously.
- 4 After about 45 seconds, check that the orange Ethernet LED starts with 10 slow flashes.
- 5 Check that the Ethernet LED then illuminates continuously. If the Power and Ethernet LEDs do not illuminate correctly, refer to [Testing link end hardware](#) on page 8-7.

Using the web interface

This section describes how to use the PTP 700 web-based management interface to create a user account, to log in, and to use the various menu options provided.

Creating a user account

Use this procedure to set a password for the web interface when:


- The ODU is accessed for the first time.
- Configuration data has been erased.
- SSPs (including passwords) have been zeroized.

If Identity Based User Accounts is Enabled, the ODU prompts for a username and password, and creates an initial user account with the Security Officer user role.

Procedure:

- 1 Start the web browser from the management PC.
- 2 Type the IP address of the unit into the address bar. The factory default IP address is **169.254.1.1**. Press ENTER.
- 3 By default, Identity Based User Accounts is Disabled, and the set password dialog is displayed with only the Password and Confirm Password controls. Enter and confirm a new password of between eight and 31 characters.


Click **Set Password** to access the web-based interface.

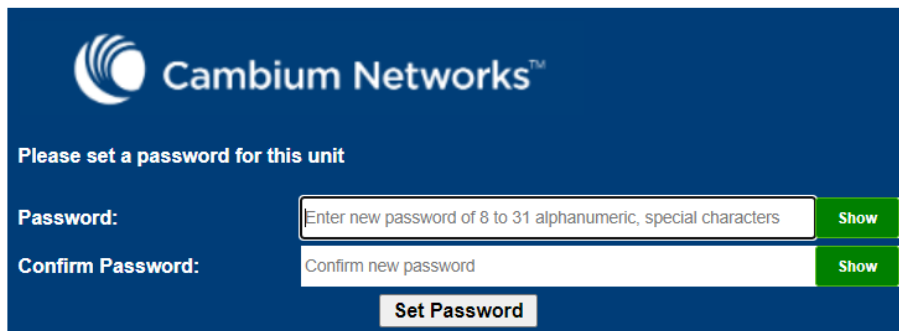

The screenshot shows the Cambium Networks logo at the top left. Below it, the text reads "Please set a password for this unit". There are two input fields: "Password:" with a placeholder "Enter new password of 8 to 31 alphanumeric, special characters" and a green "Show" button; and "Confirm Password:" with a placeholder "Confirm new password" and a green "Show" button. At the bottom center is a white button with the text "Set Password".

If Identity Based User Accounts is Enabled, the create user account dialog is displayed with Username, Password and Confirm Password controls. Enter a valid username and new password. The password must comply with the configured password complexity rules. By default, the minimum password length is eight characters. In FIPS Approved mode, the minimum password length is at least 15 characters.

Click **Create User Account** to access the web-based interface.

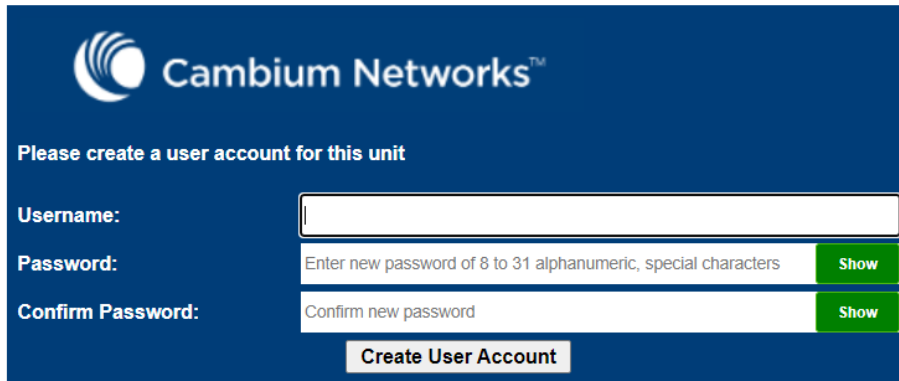

The screenshot shows a web interface for creating a user account. At the top left is the Cambium Networks logo. Below it, the text reads "Please create a user account for this unit". There are three input fields: "Username:" with an empty text box; "Password:" with a text box containing the instruction "Enter new password of 8 to 31 alphanumeric, special characters" and a green "Show" button; and "Confirm Password:" with a text box containing the instruction "Confirm new password" and a green "Show" button. At the bottom center is a white button with the text "Create User Account".


Logging into the web interface

Use this procedure to log into the web interface if a user account has already been created.

Procedure:

- 1 Start the web browser from the management PC.
- 2 Type the IP address of the unit into the address bar. The factory default IP address is **169.254.1.1**. Press ENTER.
- 3 By default, Identity Based User Accounts is Disabled, and the login dialog is displayed with only the Password control. Enter the password.


Click **Login** to access the web-based interface.

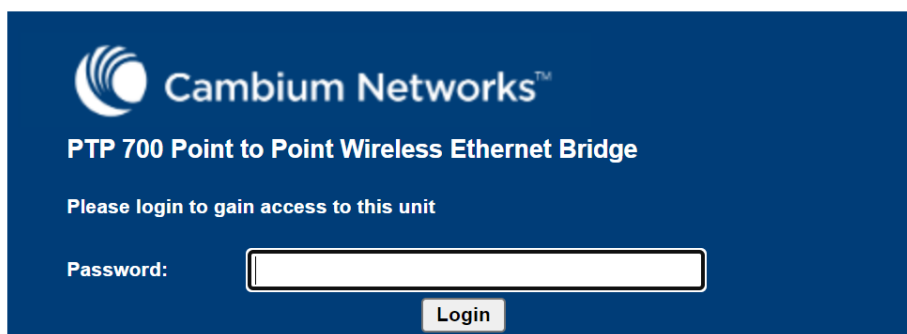


The screenshot shows a web interface for logging into a Cambium Networks device. At the top left is the Cambium Networks logo. Below it, the text reads "PTP 700 Point to Point Wireless Ethernet Bridge". Underneath, it says "Please login to gain access to this unit". There is a "Password:" label next to a text input field. At the bottom center is a white button with the text "Login".

If Identity Based User Accounts is Enabled, the login dialog is displayed with User Name and Password controls. Enter a valid username and password.

Click **Login** to access the web-based interface.



If Single Sign On is Enabled, the login dialog is displayed with User Name and Password controls, and an additional Single Sign On button. Click Single Sign On for SSO authentication, or enter a valid username and password and click **Login** for local authentication.

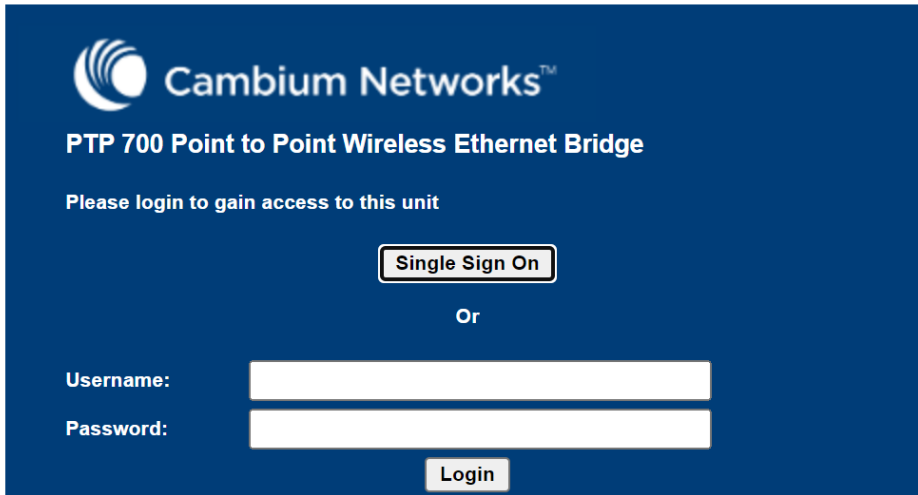

Using the menu options for the standard web interface

The standard web interface is displayed when Identity Based User Accounts is Disabled, or when a user with the Security Officer, System Administrator or Read Only user roles is logged in. A simplified web interface is displayed when a user with the Installer user role is logged in. For menu options in the simplified web interface, refer to [Using the menu options for the simplified web interface](#) on page 6-11.

Use the menu navigation bar in the left panel to navigate to each web page. Some of the menu options are only displayed for specific system configurations. Use [Table 164](#) to locate information about using each web page.

Table 164 Menu options and web pages in the standard web interface

Main menu	Menu option	Web page information
Home		System Summary page on page 7-2
Status		Standard System Status page on page 7-3
Alarms		Alarms on page 7-24
System		
	Configuration	System Configuration page on page 6-56
	LAN Configuration	LAN Configuration page on page 6-60
	QoS Configuration	QoS Configuration page on page 6-70
	SFP Configuration	SFP Configuration page on page 6-73
	Whitelist Configuration	Authorization Control page on page 6-75
	Save and Restore	Save and Restore Configuration page on page 6-77
	Reset Configuration	Reset Configuration page on page 6-79
	Spectrum Expert or Spectrum Management	Spectrum Management on page 7-32
	Statistics	System Statistics page on page 7-59 Comparing actual to predicted performance on page 6-149
	Wireless Port Counters	Wireless Port Counters page on page 7-65 Test Ethernet packet errors reported by ODU on page 8-11
	Main Port Counters	Main Port Counters page on page 7-68
	Aux Port Counters	Aux Port Counters page on page 7-70
	SFP Port Counters	SFP Port Counters page on page 7-71
	SyncE Status	SyncE Status page on page 7-73
	Diagnostics Plotter	Diagnostics Plotter page on page 7-76
	CSV Download	Generate Downloadable Diagnostics page on page 7-78
	Cable Diagnostics	Cable Diagnostics on page 8-2
	Software Upgrade	Software Upgrade page on page 6-80
	Reboot	Reboot Wireless Unit page on page 7-22
Installation		Standard Installation menu on page 6-12
	Graphical Install	Graphical Install page on page 6-147

Main menu	Menu option	Web page information
Management		
	Web	Web-Based Management page on page 6-83
	Local User Accounts	Local User Accounts page on page 6-85
	RADIUS Configuration	RADIUS Configuration page on page 6-89
	SSO Configuration	SSO Configuration page on page 6-91
	Login Information	Login Information page on page 7-22
	Web Properties	Webpage Properties page on page 6-92
	SNMP	SNMP pages (for SNMPv3) on page 6-106 SNMP pages (for SNMPv1/2c) on page 6-115
	Email	Email Configuration page on page 6-95
	Instant Messaging	Instant Messaging page on page 6-97
	Diagnostic Alarms	Diagnostic Alarms page on page 6-98
	Time	Time Configuration page on page 6-99
	Syslog	Syslog page on page 7-28
	Syslog Configuration	Syslog Configuration page on page 6-104
Template Manager		Template Manager on page 6-119
Security		Security menu on page 6-122
	Zeroize SSPs	Zeroize SSPs page on page 6-147
External Devices		
	TD90	
	System Summary	System Summary on page 6-140
	System Setup	System Setup on page 6-140
	Manual Control	Manual Control on page 6-141
	Positioner Configuration	Positioner Configuration on page 6-142
	Software Upgrade	Firmware Upgrade on page 6-142
	Compass Setup	Compass Setup on page 6-142
	Errors	Errors on page 6-143
	Reboot	Reboot on page 6-143

Main menu	Menu option	Web page information
Change Password		Change Password page on page 7-23
Logout		Logging out on page 7-23

Using the menu options for the simplified web interface

The simplified web interface (Figure 118) is displayed when a user with the Installer user role is logged in. For menu options in the standard web interface, refer to [Using the menu options for the standard web interface](#) on page 6-8.

Use the menu navigation bar in the left panel to navigate to each web page. Use [Table 165](#) to locate information about using each web page.

Figure 118 Navigation bar in the simplified web interface

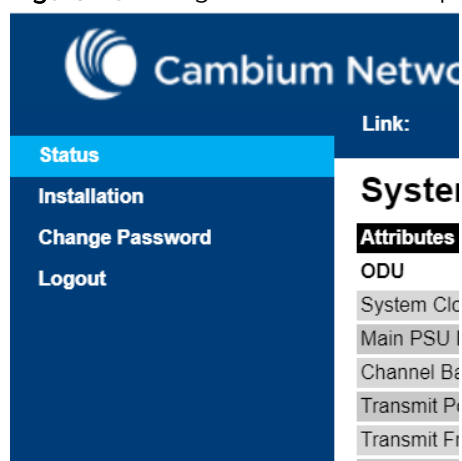


Table 165 Menu options and web pages in the simplified web interface

Main menu	Web page information
Status	Simplified System Status page on page 7-17
Installation	Simplified Installation menu on page 6-47
Change Password	Change Password page on page 7-23
Logout	Logging out on page 7-23

Standard Installation menu

This section describes how to use the Installation Wizard to complete the essential system configuration tasks that must be performed on a new link.



Attention If the system designer has provided a list of channels to be barred for TDWR radar avoidance, the affected channels must be barred before the units are allowed to radiate on site, otherwise the regulations will be infringed. To bar these channels, follow the procedure [Barring channels](#) on page 7-47.

Starting the Installation Wizard

To start the Installation Wizard: on the menu, click **Installation**. The response depends upon the state of the unit:

- If the unit is newly installed, the Software License Key page is displayed. Continue at [Software License Key page](#) on page 6-16.
- If the unit is armed for alignment, the Disarm Installation page is displayed. Continue at [Disarm Installation page](#) on page 6-13.
- If the unit is not armed, the Current Installation Summary page is displayed. Continue at [Current Installation Summary page](#) on page 6-13.

Disarm Installation page

Menu option: **Installation** (Figure 119). This page is displayed only when unit is armed.



Note The Installation agent cannot be armed (or disarmed) when the ODU operates as a Master in the HCMP topology.

Figure 119 Disarm Installation page (top and bottom of page shown)

Disarm Installation

The installation agent is armed. If you wish to disarm installation then use the 'Disarm Installation Agent' button. If you wish to reconfigure the installation agent then use the wizards 'back' button

License configuration

Attributes	Value	Units
MAC Address	00:04:56:58:00:d5	
License Unit Serial Number	5800D5	
License Country	Development Key	
License Capacity	Full	

Installation Mode

Installation Mode	Arm Without Tones	
Ranging Mode	Auto 0 to 40 km	

◀◀ Back

To disarm the unit, click **Disarm Installation Agent**.

Current Installation Summary page

Menu option: **Installation** (Figure 120 and Figure 121). This page is displayed only when unit is not armed.

Figure 120 Current Installation Summary page (PTP topology)

Current Installation Summary

This page shows a summary of the current unit configuration. Press the 'Continue to Installation Wizard' button below to change this configuration.

License configuration

Attributes	Value	Units
MAC Address	00:04:56:58:00:d5	
License Unit Serial Number	5800D5	
License Country	Development Key	
License Capacity	Full	

Installation Configuration

IP Version	IPv4	
IPv4 Address	169.254.1.11	
Subnet Mask	255.0.0.0	
Gateway IP Address	169.254.0.0	
Use VLAN For Management Interfaces	No VLAN Tagging	
DSCP Management Priority	00 - DF	
Data Service	Main PSU Port	
Second Data Service	None	
Management Service	Main PSU Port	
Local Management Service	<input checked="" type="checkbox"/> Out-of-Band Aux Port	
TDM Interface Control	None	

Wireless Configuration

Master Slave Mode	Master	
Access Method	Link Name Access	
Link Name	Ashburton to Widecombe	
Dual Payload	Enabled	
Max Receive Modulation Mode	256QAM 0.81	
Lowest Data Modulation Mode	BPSK 0.63	
Link Mode Optimization	IP Traffic	
TDD Synchronization Mode	Disabled	
Regulatory Band	8 - 5.4 GHz Unrestricted EIRP	
Channel Bandwidth	15	MHz
Link Symmetry	1 to 1	
Spectrum Management Control	DSO	
Extended Spectrum Scanning	Disabled	
Channel Raster	5	MHz
Lower Center Frequency	5478	MHz
Tx Color Code	A	
Rx Color Code	A	
Antenna Gain	23.0	dBi
Cable Loss	0.0	dB
Maximum Transmit Power	23	dBm
EIRP	46.0	dBm
ATPC Peer Rx Max Power	-35	dBm

Installation Mode

Installation Mode	Arm Without Tones	
Ranging Mode	Auto 0 to 40 km	

[Continue to Installation Wizard](#)

Click **Continue to Installation Wizard**.

Figure 121 Current Installation Summary page (HCMP topology)

Current Installation Summary		
This page shows a summary of the current unit configuration. Press the 'Continue to Installation Wizard' button below to change this configuration.		
License configuration		
Attributes	Value	Units
MAC Address	00:04:56:58:00:58	
License Unit Serial Number	580058	
License Country	Development Key	
License Capacity	Full	
Installation Configuration		
IP Version	IPv4	
IPv4 Address	169.254.1.11	
Subnet Mask	255.255.0.0	
Gateway IP Address	169.254.0.0	
Use VLAN For Management Interfaces	No VLAN Tagging	
DSCP Management Priority	00 - DF	
Data Service	Main PSU Port + SFP Port	
Management Service	In-Band	
Local Management Service	<input checked="" type="checkbox"/> None <input checked="" type="checkbox"/> In-Band	
Wireless Configuration		
Wireless Topology	High Capacity Multi-Point	
Master Slave Mode	Master	
Access Method	Group Access	
Group ID	0	
Dual Payload	Enabled	
Max Receive Modulation Mode	256QAM 0.81	
Lowest Data Modulation Mode	BPSK 0.63	
Link Mode Optimization	IP Traffic	
HCMP Maximum Link Range	24.0	km
Maximum Number Of Slaves	4	
HCMP Link Symmetry	1 to 1	
Downlink Ratio	50.0	%
Maximum Downlink Capacity	80.42	Mbps
Maximum Uplink Capacity	80.42	Mbps
TDD Frame Duration	5495	µs
TDD Synchronization Mode	Disabled	
Antenna Selection	Connectorized	
Connectorized Antenna Type	Directional, Integrated flat plate	
Regulatory Band	81 - 4.7 GHz	
Channel Bandwidth	20	MHz
Spectrum Management Control	Fixed Frequency	
Extended Spectrum Scanning	Disabled	
Channel Raster	5	MHz
Fixed Transmit Frequency	4410	MHz
Tx Color Code	A	
Fixed Receive Frequency	4410	MHz
Rx Color Code	A	
Antenna Gain	23.0	dBi
Cable Loss	0.0	dB
Maximum Transmit Power	27	dBm
EIRP	50.0	dBm
Atpc Hcmp Master Target Rx Power	-56	dBm
Installation Mode		
Installation Mode	Arm Without Tones	
Ranging Mode	Auto 0 to 40 km	
<input type="button" value="Continue to Installation Wizard"/>		

Click **Continue to Installation Wizard**.

Software License Key page

Menu option: **Installation**. Use this page to configure the unit with a new License Key and to review the capabilities of an installed License Key. The appearance of this page varies depending upon which capabilities are enabled by the entered license key. For example, [Figure 122](#) shows the licensed capabilities for a PTP 700 in the USA market with a Full Capability Trial License, whereas [Figure 123](#) shows IPv6 and other capabilities. Use the Cambium Networks License Key Generator to generate new License Keys ([Generating license keys](#) on page 6-2).

Figure 122 Software License Key page (PTP 700 USA market)

Software License Key

A valid software license key is required before installation of the PTP (Point to Point) wireless link can commence. To obtain a license key, please follow the instructions in the user guide.

License key data entry

Attributes	Value	Units
License Key	/A 000002 /C USA /E 3 /ZF 0.0.0.0 /I 1 /P 3 /R 1 /R 82 /T 2 /X 3 /H TOS52R6BV27454V7FETQHSASC=====	
<input type="button" value="Submit"/>		
<input type="button" value="Clear"/> <input type="button" value="Format"/> <input type="button" value="Validate"/> <input type="button" value="Reset"/>		

Full capability trial license

Attributes	Value	Units
License Full Capability Trial Status	Active	
Trial Period Remaining	60	Days
Stop Full Capability Trial License	<input checked="" type="radio"/> No <input type="radio"/> Yes	

Capability summary

Attributes	Value	Units
MAC Address	00:04:56:00:00:02	
License Unit Serial Number	000002	
License Country	USA	
License Number Of Regulatory Bands	2	
License Regulatory Bands List 1	1 - 5.8 GHz	
License Regulatory Bands List 2	82 - 4.7 GHz	
License Encryption	AES 256-bit (Rijndael)	
License SFP Port Support	Enabled	
License Auxiliary Port Support	Enabled	
License Capacity	Lite	
License IEEE1588 Support	Enabled	
License Sync E Support	Enabled	
License IPv6 Support	Enabled	
License TDD Sync Support	Enabled	

Figure 123 Software License Key page (IPv6 and other capabilities)

Software License Key

A valid software license key is required before installation of the PTP (Point to Point) wireless link can commence. To obtain a license key, please follow the instructions in the user guide.

License key data entry

Attributes	Value	Units
License Key	/A 000002 /C Development_Key /G 1 /I 1 /M 1 /R 1 /R 13 /R 14 /R 25 /R 26 /R 255 /W 8 /X 3 /H XYQZJG4CDV	

Capability summary

Attributes	Value	Units
MAC Address	00:04:56:00:00:02	
License Unit Serial Number	000002	
License Country	Development Key	
License Number Of Regulatory Bands	6	
License Regulatory Bands List 1	1 - 5.8 GHz	
License Regulatory Bands List 2	13 - 5.4 GHz	
License Regulatory Bands List 3	14 - 4.9 GHz Public Safety	
License Regulatory Bands List 4	25 - 5.8 GHz ETSI	
License Regulatory Bands List 5	26 - 5.4 GHz ETSI	
License Regulatory Bands List 6	255	
License Group Access	Enabled	
License OOB Management Support	Enabled	
License Capacity	Full	
License Max Number Of TDM Channels	8	
License IEEE1588 Support	Enabled	
License Sync E Support	Enabled	
License IPv6 Support	Enabled	
License TDD Sync Support	Enabled	

Procedures:

To enter a new License Key, proceed as follows:

- To clear the existing License Key (if present), click **Clear**.
- To format the new License Key: copy it from the Cambium notification email, paste it into the License Key box and click **Format**. The page is redisplayed with the License Key formatted.
- To enter the new License Key, click **Submit**. The page is redisplayed with the Capability Summary updated.

Full capacity trial

To control the full capacity trial, proceed as follows:

- If License Full Capability Trial Status is **Available** (Figure 124), start the full capacity trial period by setting Activate Full Capability Trial License to **Yes**.
- If License Full Capability Trial Status is **Active** (Figure 125), suspend the full capacity trial period by setting Stop Full Capability Trial License to **Yes**.
- If License Full Capability Trial Status is **Inactive** (Figure 126), resume the full capacity trial period by setting Start Full Capability Trial License to **Yes**.

To continue with the Installation Wizard, click **Next**.

Figure 124 Software License Key page (extract) with full capacity trial available

Full capacity trial license		
Attributes	Value	Units
License Full Capability Trial Status	Available	
Activate Full Capability Trial License	<input checked="" type="radio"/> No <input type="radio"/> Yes	

Figure 125 Software License Key page (extract) with full capacity trial active

Full capacity trial license		
Attributes	Value	Units
License Full Capability Trial Status	Active	
Trial Period Remaining	60	Days
Stop Full Capability Trial License	<input checked="" type="radio"/> No <input type="radio"/> Yes	

Figure 126 Software License Key page (extract) with full capacity trial inactive

Full capacity trial license		
Attributes	Value	Units
License Full Capability Trial Status	Inactive	
Trial Period Remaining	60	Days
Start Full Capability Trial License	<input checked="" type="radio"/> No <input type="radio"/> Yes	

Changing AES license

If Identity Based User Accounts is Enabled, only a user with the Security Officer user role is allowed to enter a replacement License Key that alters the AES license.

The ODU zeroizes SSPs when the AES license is changed.



Attention When SSPs have been zeroized, all user accounts are disabled, and the ODU is returned to the “first use” condition. See [Creating a user account](#) on page 6-6 to create a new user account for the web-based interface.

Wireless Topology Configuration page

Menu option: **Wireless Topology**. Use this page to update Wireless Topology and Master Slave Mode.

The appearance of this page varies depending upon which capabilities have been enabled by license key. The HCMP option is only available if enabled in the license key.

Procedure:

- Review and update the Wireless Topology.
- Review and update the Master Slave Mode.
- If Wireless Topology = Point To Point, review and update Protection Mode.
- If Protection Mode = Hot Standby Primary, review and update Hot Standby Preference.

Figure 127 Wireless Topology page

Wireless Topology

Please select the following wireless topology parameters.

Wireless Topology data entry

Attributes	Value	Units
Wireless Topology	<input checked="" type="radio"/> Point To Point <input type="radio"/> High Capacity Multi-Point	
Master Slave Mode	<input checked="" type="radio"/> Master <input type="radio"/> Slave	
Protection Mode	<input type="radio"/> Disabled <input checked="" type="radio"/> Hot Standby Primary <input type="radio"/> Hot Standby Secondary	
Hot Standby Preference	<input checked="" type="radio"/> No preference <input type="radio"/> Prefer Primary <input type="radio"/> Prefer Secondary	

◀ Back
Next ▶

Interface Configuration page

Menu option: **Installation**. Use this page to update the IP interface attributes.

The appearance of this page varies depending upon which capabilities have been enabled by license key. For example, [Figure 128](#) shows the attributes that are displayed when IPv6, Aux Port, SFP Port and Out-of-Band Management support are enabled.



Attention Before configuring a VLAN for management interfaces, ensure that the VLAN is accessible, otherwise the unit will be inaccessible after the next reboot.



Note Synchronous Ethernet and IEEE 1588 Transparent Clock are disabled when TDM is enabled ([LAN Configuration page](#) on page 6-60).

Procedure:

- Review and update the IP and VLAN attributes ([Table 166](#)).
- To continue with the Installation Wizard, click **Next** or **Submit Interface Configuration**.

Figure 128 Interface Configuration page (IPv6, Aux, SFP, and OOB support)

Interface Configuration

Please complete the wizard in order to arm the unit.

A valid IP address and subnet mask is required before this unit can be used on a network. Please see your network administrator if you are unsure of the correct values to enter here.

Interface configuration data entry

Attributes	Value	Units
IP Version	<input type="radio"/> IPv4 <input type="radio"/> IPv6 <input checked="" type="radio"/> Dual IPv4 and IPv6	
IPv4 Address	<input type="text" value="10"/> . <input type="text" value="130"/> . <input type="text" value="159"/> . <input type="text" value="44"/>	
Subnet Mask	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="254"/> . <input type="text" value="0"/>	
Gateway IP Address	<input type="text" value="10"/> . <input type="text" value="130"/> . <input type="text" value="159"/> . <input type="text" value="254"/>	
IPv6 Address	<input type="text" value="2001:cdba:0000:0000:0000:3257:9652"/>	
IPv6 Prefix Length	<input type="text" value="64"/>	
IPv6 Gateway Address	<input type="text"/>	
IPv6 Auto Configured Link Local Address	<input type="text"/>	
DNS Resolver	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
DNS Primary Server	<input checked="" type="radio"/> Server 1 <input type="radio"/> Server 2	
DNS Server 1 Internet Address	<input type="text" value="10.130.159.99"/>	
DNS Server 1 Port Number	<input type="text" value="53"/>	
DNS Server 2 Internet Address	<input type="text" value="10.130.159.98"/>	
DNS Server 2 Port Number	<input type="text" value="53"/>	
Use VLAN For Management Interfaces	<input type="text" value="No VLAN Tagging"/> ▾	
DSCP Management Priority	<input type="text" value="00 - DF"/> ▾	
Data Service	<input type="text" value="Main PSU Port + Aux Port"/> ▾	
Management Service	<input type="text" value="In-Band"/> ▾	
Local Management Service	<input type="text" value="Out-of-Band SFP Port"/> ▾	

◀ Back
Next ▶

Figure 129 Interface Configuration page (Hot Standby support)

Interface Configuration

Please complete the wizard in order to arm the unit.

A valid IP address and subnet mask is required before this unit can be used on a network. Please see your network administrator if you are unsure of the correct values to enter here.

Interface configuration data entry

Attributes	Value	Units
IP Version	<input checked="" type="radio"/> IPv4 <input type="radio"/> IPv6 <input type="radio"/> Dual IPv4 and IPv6	
IPv4 Address	<input type="text" value="10"/> . <input type="text" value="130"/> . <input type="text" value="159"/> . <input type="text" value="44"/>	
Subnet Mask	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="254"/> . <input type="text" value="0"/>	
Gateway IP Address	<input type="text" value="10"/> . <input type="text" value="130"/> . <input type="text" value="159"/> . <input type="text" value="254"/>	
DNS Resolver	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
DNS Primary Server	<input checked="" type="radio"/> Server 1 <input type="radio"/> Server 2	
DNS Server 1 Internet Address	<input type="text" value="10.130.159.99"/>	
DNS Server 1 Port Number	<input type="text" value="53"/>	
DNS Server 2 Internet Address	<input type="text" value="10.130.159.98"/>	
DNS Server 2 Port Number	<input type="text" value="53"/>	
Use VLAN For Management Interfaces	<input type="text" value="No VLAN Tagging"/> ▼	
DSCP Management Priority	<input type="text" value="00 - DF"/> ▼	
Protection Service	<input type="text" value="Aux Port"/> ▼	
Data Service	<input type="text" value="Main PSU Port"/> ▼	
Management Service	<input type="text" value="In-Band"/> ▼	
Local Management Service	<input type="text" value="None"/> ▼	

◀ Back
Next ▶

Figure 130 Interface Configuration page (TD-90 support)

Interface Configuration

Please complete the wizard in order to arm the unit.

A valid IP address and subnet mask is required before this unit can be used on a network. Please see your network administrator if you are unsure of the correct values to enter here.

Interface configuration data entry

Attributes	Value	Units
IP Version	<input checked="" type="radio"/> IPv4 <input type="radio"/> IPv6 <input type="radio"/> Dual IPv4 and IPv6	
IPv4 Address	<input type="text" value="10"/> . <input type="text" value="130"/> . <input type="text" value="159"/> . <input type="text" value="44"/>	
Subnet Mask	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="254"/> . <input type="text" value="0"/>	
Gateway IP Address	<input type="text" value="10"/> . <input type="text" value="130"/> . <input type="text" value="159"/> . <input type="text" value="254"/>	
DNS Resolver	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
DNS Primary Server	<input checked="" type="radio"/> Server 1 <input type="radio"/> Server 2	
DNS Server 1 Internet Address	<input type="text" value="10.130.159.99"/>	
DNS Server 1 Port Number	<input type="text" value="53"/>	
DNS Server 2 Internet Address	<input type="text" value="10.130.159.98"/>	
DNS Server 2 Port Number	<input type="text" value="53"/>	
Use VLAN For Management Interfaces	<input type="text" value="No VLAN Tagging"/> ▼	
DSCP Management Priority	<input type="text" value="00 - DF"/> ▼	
TD90 Service	<input type="text" value="SFP Port"/> ▼	
Data Service	<input type="text" value="Main PSU Port"/> ▼	
Management Service	<input type="text" value="In-Band"/> ▼	
Local Management Service	<input type="text" value="Out-of-Band Aux Port"/> ▼	
<input type="button" value="Submit Interface Configuration"/> <input type="button" value="Reset Form"/>		
Back		Next

Table 166 Interface Configuration attributes

Attribute	Meaning
IP Version	<p>The internet protocols to be supported by this ODU:</p> <p>IPv4: IPv4 protocols only. IPv4 attributes are displayed.</p> <p>IPv6: IPv6 protocols only. IPv6 attributes are displayed.</p> <p>Dual IPv4 and IPv6: Both IPv4 and IPv6 protocols. IPv4 and IPv6 attributes are displayed.</p>
IPv4 Address	The IPv4 internet protocol address. This address is used by the family of Internet protocols to uniquely identify this unit on a network.
Subnet Mask	The address range of the connected IPv4 network.

Attribute	Meaning
Gateway IP Address	The IPv4 address of a computer on the current network that acts as an IPv4 gateway. A gateway acts as an entrance and exit to frames from and to other networks.
IPv6 Address	The IPv6 internet protocol address. This address is used by the family of Internet protocols to uniquely identify this unit on a network.
IPv6 Prefix Length	Length of the IPv6 subnet prefix (default 64 bits).
IPv6 Gateway Address	The IPv6 address of a computer on the current network that acts as an IPv6 gateway. A gateway acts as an entrance and exit to frames from and to other networks. It is usual to use the link-local address of the gateway.
IPv6 Auto Configured Link Local Address	The link-local address of the IPv6 gateway (displayed only, not updateable).
DNS Resolver	Options for using the internal DNS Resolver: Disabled: The DNS Resolver is not used. Enabled: The DNS Resolver is used.
DNS Primary Server	Select Server 1 or Server 2 as the Primary Server. The selected server will be used to resolve addresses configured as FQDNs to IPv4 or IPv6. The Secondary Server will be used if the Primary Server is not available.
DNS Server 1 Internet Address	The IPv4 or IPv6 address of DNS Server 1.
DNS Server 1 Port Number	The UDP Port Number used by DNS Server 1. The default is Port 53.
DNS Server 2 Internet Address	The IPv4 or IPv6 address of DNS Server 2.
DNS Server 2 Port Number	The UDP Port Number used by DNS Server 2. The default is Port 53.
Use VLAN For Management Interfaces	VLAN tagging options for the management interfaces: No VLAN Tagging IEEE 802.1Q Tagged (C-Tag, Type 8100) IEEE 802.1ad Tagged (S-Tag or B-Tag, Type 88a8) Ensure that the configured VLAN is accessible, otherwise it will not be possible to access the unit following the next reboot. The PTP 700 management function is only compatible with single VLAN tagged frames. Any management frame with two or more tags will be ignored.

Attribute	Meaning
VLAN Management VID	<p>Only displayed when Use VLAN for Management Interfaces is not set to No VLAN Tagging.</p> <p>The VLAN VID (range 0 to 4094) that will be included in Ethernet frames generated by the management interfaces.</p>
VLAN Management Priority	<p>Only displayed when Use VLAN for Management Interfaces is not set to No VLAN Tagging.</p> <p>The VLAN priority (range 0 to 7) that will be included in Ethernet frames generated by the management interfaces.</p>
DSCP Management Priority	<p>Differentiated Services Code Point (DSCP) value to be inserted in the IP header of all IP datagrams transmitted by the management interface.</p>
TD90 Service	<p>The port allocation for the TD-90 Service for integrated management of the TD-90 antenna positioner.</p> <p>None: The TD-90 Service is disabled</p> <p>SFP Port: The TD-90 Service is enabled to use the SFP Port</p> <p>The TD-90 Service cannot be enabled at an HCMP Master.</p>
Protection Service	<p>The port allocation for the Protection Service in Hot Standby links:</p> <p>Aux Port: The Protection Service uses the Aux Port</p> <p>SFP Port: The Protection Service uses the SFP Port</p>
Data Service	<p>The port allocation for the Data Service:</p> <p>Main PSU Port: The Data Service is connected to the Main PSU Port</p> <p>Aux Port: The Data Service is connected to the Aux Port</p> <p>SFP Port: The Data Service is connected to the SFP Port</p> <p>Main PSU Port + Aux Port: The Data Service is connected to the Main PSU Port and the Aux Port</p> <p>Main PSU Port + SFP Port: The Data Service is connected to the Main PSU Port and the SFP Port</p> <p>Aux Port + SFP Port: The Data Service is connected to the Aux Port and the SFP Port</p> <p>Main PSU Port + Aux Port + SFP Port: The Data Service is connected to the Main PSU, Aux Port and the SFP Port</p> <p>The Data Service must always be assigned to at least one of the wired ports.</p> <p>For more help, see Ethernet port allocation on page 3-48.</p>

Attribute	Meaning
Management Service	<p>The port allocation for the end-to-end Management Service:</p> <p>None: The Management Service is not used.</p> <p>In-Band: The Management Service is connected to the port or ports allocated to the Data Service.</p> <p>Out-Of-Band Main PSU Port: The Management Service is connected to the Main PSU Port</p> <p>Out-Of-Band Aux Port: The Management Service is connected to the Aux Port</p> <p>Out-Of-Band SFP Port: The Management Service is connected to the SFP Port</p> <p>Out-Of-Band Main PSU Port + Aux Port: The Management Service is connected to the Main PSU Port and the Aux Port</p> <p>Out-Of-Band Main PSU Port + SFP Port: The Management Service is connected to the Main PSU Port and the SFP Port</p> <p>Out-Of-Band Aux Port + SFP Port: The Management Service is connected to the Aux Port and the SFP Port</p> <p>For more help, see Ethernet port allocation on page 3-48.</p>
Local Management Service	<p>Any port not already selected to the Data or Management Service is available for connection as an out-of-band port for the Local Management Service. Ports already selected to the Data or Management services are not displayed as options.</p> <p>For more help, see Ethernet port allocation on page 3-48.</p>

Configuring port allocations

The Interface Configuration page controls the allocation of the Main PSU Port, Aux Port and SFP Port to the Data Service, Management Service and Local Management Service.

PTP 700 supports exactly one instance of the Data Service, and this service is always mapped to one or more of the three wired ports. It is not possible to operate a link without any port selected to the Data Service.

PTP 700 supports zero or one instances of the optional Management Service. The Management Service can be used to access the management agent at the local unit. If the wireless link is established, the Management Service can also be used to access the management agent at the remote unit and other devices connected in the remote management network. The Management Service can be mapped to the set of ports that are already used for the Data Service to provide In-Band Management. Alternatively, the Management Service can be allocated to one or more dedicated ports to provide Out-of-Band Management.

PTP 700 also supports an optional Local Management Service, providing a connection from a wired port to the local management agent. Any port not already selected is available for selection to the Local Management Service. The Local Management Service does not connect across the wireless link.

The PTP 700 must always be manageable through one of three ports. Therefore, it is not possible to disable the Management Service unless at least one port is allocated to the Local Management Service.

For more details, see [Ethernet port allocation](#) on page 3-48.

Management Configuration page

Menu option: **Management Configuration**. Use this page to configure the cnMaestro device agent for connection to a cnMaestro server.

The appearance of the page depends on whether cnMaestro is configured, which type of server is selected, and which type of authentication is selected. See Figure 131 to Figure 133.

Figure 131 Management Configuration, cnMaestro disabled

Management Configuration

Please enter the following configuration to manage this unit from cnMaestro.

Management configuration data entry

Attributes	Value	Units
cnMaestro	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	

◀ Back
Next ▶

Figure 132 Management Configuration, cnMaestro Cloud

Management Configuration

Please enter the following configuration to manage this unit from cnMaestro.

Management configuration data entry

Attributes	Value	Units
cnMaestro	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
cnMaestro Server	<input checked="" type="radio"/> cnMaestro Cloud <input type="radio"/> cnMaestro On-Premises	
cnMaestro Server Internet Address	cloud.cambiumnetworks.com	
cnMaestro Server Port	443	
Onboarding Method	<input type="radio"/> Serial Number <input checked="" type="radio"/> Cambium ID	
Cambium ID	<input type="text"/>	
Onboarding Key	Enter server key upto 35 alphanumeric, special chara <input type="button" value="Show"/>	

◀ Back
Next ▶

Figure 133 Management Configuration, cnMaestro On-Premises

Management Configuration

Please enter the following configuration to manage this unit from cnMaestro.

Management configuration data entry

Attributes	Value	Units
cnMaestro	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
cnMaestro Server	<input type="radio"/> cnMaestro Cloud <input checked="" type="radio"/> cnMaestro On-Premises	
cnMaestro Server Internet Address	<input type="text" value="10.110.230.202"/>	
cnMaestro Server Port	443	
Onboarding Method	<input type="radio"/> Serial Number or MAC Address <input checked="" type="radio"/> Cambium ID <input type="radio"/> Unsolicited	
Cambium ID	<input type="text"/>	
Onboarding Key	Enter server key upto 35 alphanumeric, special characters Show	

Submit Management Configuration
Reset Form

◀ Back
Next ▶

Table 167 Management Configuration attributes

Attribute	Meaning
cnMaestro	<p>Enabled: The cnMaestro device agent is enabled.</p> <p>Disabled: The cnMaestro device agent is disabled.</p>
cnMaestro Server	<p>cnMaestro Cloud: The device agent will connect to the Cloud server.</p> <p>cnMaestro On-Premises: The device agent will connect to an On-Premises server.</p>
cnMaestro Server Internet Address	The Internet Address of the cnMaestro server. For a Cloud server, the address is always “cloud.cambiumnetworks.com”. For an On Premises server, configure the IPv4 address or FQDN of the server.
cnMaestro Server Port	The protocol port used by the HTTPS protocol. This is always 443.
Onboarding Method	<p>Serial Number: The device is claimed by the cnMaestro user into an account using the device’s MSN. The Serial Number option is hidden unless the ODU has a 12-character MSN.</p> <p>Cambium ID: The device agent is authenticated for onboarding using the operator’s Cambium ID and secret Onboarding Key. This option supports Cloud and On-Premises servers.</p> <p>Serial Number or MAC Address: The device is claimed by the cnMaestro user into an account using the device’s MSN or MAC Address. This option is hidden unless the ODU has a 12-character MSN.</p> <p>Unsolicited: The device is automatically onboarded into cnMaestro server. This option is supported for the On-Premises server only.</p>

Attribute	Meaning
	<p>Note 1: Cambium ID is not enabled by default in the cnMaestro On-Premises server. To use this onboarding method, enable authentication using Cambium ID at the server before the ODU attempts to connect.</p> <p>Note 2: A device can onboard into the cnMaestro On-Premises server in unsolicited mode only when authentication using Cambium ID is disabled at the server.</p>
Cambium ID	The operator's Cambium ID entered as a text string of up to 60 characters. Cambium ID is erased automatically after successful onboarding.
Onboarding Key	<p>The secret Onboarding Key associated with the Cambium ID entered as a text string of up to 35 characters. Onboarding Key is erased automatically after successful onboarding.</p> <p>If the ODU is subsequently removed from cnMaestro, the Onboarding Key must be entered again.</p>

Wireless Configuration page

Menu option: **Installation** ([Figure 134](#) and [Figure 135](#)).

This page is part of the Installation Wizard. Use it to update the wireless attributes.

Figure 134 Wireless Configuration page (PTP topology)

Wireless Configuration

Please enter the following wireless configuration parameters.

Wireless data entry

Attributes	Value	Units
Wireless Topology	Point To Point	
Master Slave Mode	Master	
Protection Mode	Disabled	
Access Method	<input type="radio"/> Link Access <input type="radio"/> Link Name Access <input checked="" type="radio"/> Group Access	
Group ID	123	
Dual Payload	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Max Receive Modulation Mode	16QAM 0.63	
Lowest Data Modulation Mode	BPSK 0.63	
Link Mode Optimization	<input checked="" type="radio"/> IP Traffic <input type="radio"/> TDM Traffic	
TDD Synchronization Mode	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Long Frame Duration	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
Regulatory Band	95 - 4.5 GHz	
Channel Bandwidth	<input type="radio"/> 45 MHz <input type="radio"/> 40 MHz <input type="radio"/> 30 MHz <input checked="" type="radio"/> 20 MHz <input type="radio"/> 15 MHz <input type="radio"/> 10 MHz <input type="radio"/> 5 MHz	
Spectrum Management Control	<input checked="" type="radio"/> DSO <input type="radio"/> Fixed Frequency	
Extended Spectrum Scanning	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
Channel Raster	5	MHz
Lower Center Frequency	4410.0	MHz
Tx Color Code	A	
Rx Color Code	A	
Transmitter Channels	<input checked="" type="radio"/> H and V <input type="radio"/> H Only <input type="radio"/> V Only	
Maximum Transmit Power	29	dBm
ATPC Peer Rx Max Power	-35	dBm
Link Registration Timeout	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Link Registration Timeout Period	30	minutes
Installation Mode	<input type="radio"/> Arm With Tones <input type="radio"/> Arm Without Tones <input checked="" type="radio"/> Change Config Without Arming	
Ranging Mode	<input type="radio"/> Auto 0 to 40 km <input type="radio"/> Auto 0 to 100 km <input type="radio"/> Auto 0 to 200 km <input type="radio"/> Auto 0 to 250 km <input type="radio"/> Target Range	

◀ Back
Next ▶

Figure 135 Wireless Configuration page (HCMP topology)

Wireless Configuration

Please enter the following wireless configuration parameters.

Wireless data entry

Attributes	Value	Units
Wireless Topology	High Capacity Multi-Point	
Master Slave Mode	Master	
Access Method	<input checked="" type="radio"/> Group Access	
Group ID	<input type="text" value="0"/>	
Dual Payload	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Max Receive Modulation Mode	256QAM 0.81	
Lowest Data Modulation Mode	BPSK 0.63	
Link Mode Optimization	IP Traffic	
TDD Synchronization Mode	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
Regulatory Band	81 - 4.7 GHz	
Channel Bandwidth	<input checked="" type="radio"/> 40 MHz <input type="radio"/> 20 MHz	
Spectrum Management Control	<input type="radio"/> DSO <input type="radio"/> Fixed Frequency	
Extended Spectrum Scanning	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
Default Raster	<input checked="" type="radio"/> On <input type="radio"/> Off	
Fixed Tx Frequency	4420.0	MHz
Tx Color Code	A	
Fixed Rx Frequency	4420.0	MHz
Rx Color Code	A	
Antenna Gain	23.0	dBi
Cable Loss	0.0	dB
Maximum Transmit Power	29	dBm
Atpc Hcmp Master Target Rx Power	-56	dBm
Installation Mode	<input checked="" type="radio"/> Change Config Without Arming	
HCMP Maximum Link Range	5.0	km

◀◀ Back Next ▶▶

Figure 136 Wireless Configuration page (Connectorized Antenna Type, HCMP topology)

TDD Synchronization Mode	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
Regulatory Band	1 - 5.8 GHz	
Connectorized Antenna Type	90 degrees sector	
Channel Bandwidth	<input type="radio"/> 40 MHz <input checked="" type="radio"/> 20 MHz	
Spectrum Management Control	<input type="radio"/> DSO <input checked="" type="radio"/> Fixed Frequency	
Extended Spectrum Scanning	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	

Procedure:

- Update the attributes (Table 168).
- To save any changes and continue with the Installation Wizard, click **Next** or click **Submit Wireless Configuration**.



Attention The lower center frequency attribute must be configured to the same value for both the Master and Slave, otherwise the wireless link will fail to establish. The only way to recover from this situation is to modify the Lower Center Frequency attributes so that they are identical on both the master and slave units.




Note When configuring a linked pair of units, use the Master Slave Mode to ensure that one unit is **Master** and the other is **Slave**.

Table 168 Wireless Configuration attributes



Attribute	Meaning
Master Slave Mode	<p>Master: The unit controls the point-to-point link and its maintenance. On startup, the Master transmits until a link with the Slave is made.</p> <p>Slave: The unit listens for its peer and only transmits when the peer has been identified.</p>
Protection Mode	<p>Disabled: Hot Standby is disabled.</p> <p>Hot Standby Primary: The ODU is configured as the Primary ODU in a Hot Standby link.</p> <p>Hot Standby Secondary: The ODU is configured as the Secondary ODU in a Hot Standby link.</p>
Access Method	<p>ODUs must be configured in pairs before a link can be established. Access Method determines how paired ODUs will recognize each other.</p> <p>Link Access: Each ODU must be configured with Target MAC Address equal to the MAC Address of the other unit.</p> <p>Link Name Access: Both ODUs must be configured with the same Link Name.</p> <p>Group Access: Both ODUs in a PTP link, and all ODUs in an HCMP sector, must be configured with the same Group ID attributes. Group Access is the only Access Method supported in the HCMP topology.</p>
Target MAC Address	<p>Only displayed when Access Method is set to Link Access. This is the MAC Address of the peer unit that will be at the other end of the wireless link. This is used by the system to ensure the unit establishes a wireless link to the correct peer. The MAC Address can be found embedded within the serial number of the unit. The last six characters of the serial number are the last three bytes of the unit's MAC address.</p>

Attribute	Meaning
Link Name	<p>Only displayed when Access Method is set to Link Name Access.</p> <p>Link Name may consist of letters (A-Z and a-z), numbers (0-9), spaces, and the following special characters: (),-.,:<=>[]_{}.</p> <p>Link Name must be same at both ends and different to site name.</p>
Group ID	<p>Only displayed when Access Method is set to Group Access. A link can only be established between units that have identical Group IDs.</p>
Dual Payload	<p>Disabled: The link maximizes robustness against fading and interference.</p> <p>Enabled: The link attempts to reach maximum throughput at the expense of robustness against fading and interference.</p>
Max Receive Modulation Mode	<p>The maximum mode the unit will use as its adaptive modulation. By default the Max Receive Modulation Mode is the highest mode available.</p> <p>For minimum error rates, set the maximum modulation mode to the minimum necessary to carry the required traffic.</p>
Lowest Data Modulation Mode	<p>The lowest modulation mode that must be achieved before the link is allowed to bridge customer data Ethernet frames. This does not affect the bridging of management data: if out-of-band remote management is enabled, this will continue regardless of modulation mode.</p>
Link Mode Optimization	<p>IP Traffic: The link is optimized for IP traffic to provide the maximum possible link capacity.</p> <p>TDM Traffic: The link is optimized for TDM traffic to provide the lowest possible latency. This is the only available setting when TDM is enabled (Interface Configuration page on page 6-19).</p>
TDD Synchronization Mode	<p>Enabled: The ODU will synchronized the TDD frames at the wireless interface to an external or internal 1 Hz reference.</p>
Long Frame Duration	<p>Always enabled for a PTP link in Hot Standby. Can optionally be enabled for an unprotected PTP link to provide synchronization between protected and unprotected links.</p>
Antenna Selection	<p>Integrated: The unit uses the integrated antenna. The antenna connectors are disabled.</p> <p>Connectorized: The unit uses the antenna connectors. The integrated antenna is disabled.</p> <p>This attribute is only displayed in a Connectorized+Integrated unit.</p>
Regulatory Band	<p>The regulatory band selected from the list in the license key.</p> <p>Regulatory bands that require DFS (radar avoidance) are omitted from the list in this control if Long Frame Duration = Enabled.</p>

Attribute	Meaning
Connectorized Antenna Type	<p>Only displayed in the HCMP topology, and only when the Regulatory Band applies different limits for PTP and PMP operation.</p> <p>Select one of the following for an HCMP Master:</p> <ul style="list-style-type: none"> • 60 degrees sector • 90 degrees sector • 120 degrees sector • Omni-directional • Other
Channel Bandwidth	<p>5 MHz, 10 MHz, 15 MHz, 20 MHz, 30 MHz, 40 MHz, 45 MHz: The bandwidth of the transmit and receive radio channels.</p>
Link Symmetry	<p>Only displayed when Wireless Topology is set to Point To Point and Master Slave Mode is set to Master.</p> <p>Adaptive: Allows link symmetry to vary dynamically in response to offered traffic load. This is not supported in the following cases:</p> <ul style="list-style-type: none"> • Where radar avoidance is mandated in the region. • Link Mode Optimization is set to TDM Traffic. <p>“5 to 1”, “3 to 1”, “2 to 1”, “1 to 1”, “1 to 2”, “1 to 3” or “1 to 5”: There is a fixed division between transmit and receive time in the TDD frame of the master ODU. The first number in the ratio represents the time allowed for the transmit direction and the second number represents the time allowed for the receive direction. The appropriate matching Link Symmetry is set at the slave ODU automatically. For example, if Link Symmetry is set to “2 to 1” at the master ODU, then the slave ODU will be set automatically as “1 to 2”. In this example, the master-slave direction has double the capacity of the slave-master direction.</p> <p>When TDM is enabled (Interface Configuration page on page 6-19), Link Symmetry is limited to “1 to 1”.</p>
Spectrum Management Control	<p>PTP topology</p> <p>In regions that do not mandate DFS (radar detection), the options are:</p> <p>DSO</p> <p>Fixed Frequency</p> <p>In regions that mandate DFS (radar detection), the options are:</p> <p>DFS</p> <p>DFS with DSO</p> <p>This attribute is disabled if the regulatory requirement is fixed frequency only.</p>

Attribute	Meaning
	<p>HCMP topology</p> <p>The options are:</p> <p>DSO</p> <p>Fixed Frequency</p>
Slave Scan	<p>Only displayed at an HCMP Slave ODU.</p> <p>Disabled: The Slave will be configured with fixed frequencies.</p> <p>Auto Single: The Slave</p> <p>Auto Optimum: The Slave</p>
Extended Spectrum Scanning	<p>Enables scanning of the entire frequency spectrum supported by the device (4400 MHz to 5875 MHz, 7125 MHz to 8500 MHz).</p> <p>Disabled: The extended Spectrum Scanning is disabled.</p> <p>Enabled: The extended Spectrum Scanning is enabled.</p> <div data-bbox="491 869 560 981" style="float: left; margin-right: 10px;">  </div> <div data-bbox="619 869 1402 1003" style="background-color: #f4a460; padding: 5px;"> <p>Attention Extended Spectrum Scanning decreases DSO performance. Do not leave Extended Spectrum Scanning enabled during normal operation.</p> </div>
Lower Center Frequency	<p>The center frequency (MHz) of the lowest channel that may be used by this link. Not displayed when Spectrum Management Control is set to Fixed Frequency.</p> <p>Use this attribute to slide the available channels up and down the band.</p>
Default Raster	<p>This is only displayed when Spectrum Management Control is set to Fixed Frequency. Limits frequency selection to the unit's default raster setting.</p>
Fixed Tx Frequency, Fixed Rx Frequency	<p>This is only displayed when Spectrum Management Control is set to Fixed Frequency. The settings must be compatible at each end of the link. Once configured, the spectrum management function will not attempt to move the wireless link to a channel with lower co-channel or adjacent channel interference. Therefore, this mode of operation is only recommended for deployments where the installer has a good understanding of the prevailing interference environment.</p>
Tx Color Code, Rx Color Code	<p>Tx Color Code and Rx Color Code may be used to minimize interference in a dense network of synchronized PTP 700 units where some of the units are operating on the same frequency. When this type of network is designed, the Color Code values are normally specified in the link planning report. In all other cases, Cambium Networks recommend that Tx Color Code and Rx Color Code are left at the default value of A.</p> <p>The value of Tx Color Code MUST always match the value of Rx Color Code at the other end of the link.</p>
Antenna Gain	<p>Only displayed for a Connectorized ODU, or a Connectorized+Integrated ODU where Antenna Selection is set to Connectorized.</p> <p>Gain of the remote antenna.</p>

Attribute	Meaning
Cable Loss	<p>Only displayed for a Connectorized ODU, or a Connectorized+Integrated ODU where Antenna Selection is set to Connectorized.</p> <p>Loss in the ODU-antenna RF cable. If there is a significant difference in length of the RF cables for the two antenna ports, then the average value should be entered.</p>
Automatic Alignment	<p>Enables automatic alignment in a Beam Steering ODU.</p>
Transmitter Channels	<p>Only displayed when the Transmitter Channels Control attribute is enabled (see Webpage Properties page on page 6-92).</p> <p>H and V: The ODU transmits on Horizontal and Vertical polarisation</p> <p>H Only: The ODU transmits on Horizontal polarisation (or at the H output of a Connectorized unit) only.</p> <p>V Only: The ODU transmits on Vertical polarisation (or at the V output of a Connectorized unit) only.</p> <div data-bbox="491 891 587 1003" style="float: left; margin-right: 10px;"> </div> <div data-bbox="619 882 1396 1048" style="background-color: #e0f2f7; padding: 5px;"> <p>Note Operation using a single polarisation cannot provide polarisation diversity or polarisation multiplexing. This will reduce availability in non-line-of-sight paths and will reduce capacity in line-of-sight or near-line-of-sight paths.</p> </div>
Maximum Transmit Power	<p>The maximum power (dBm) at which the unit will transmit, configurable in steps of 1 dB. Its maximum value is controlled by the combination of the selected Regulatory Band, Bandwidth and (for connectorized units) Antenna Gain and Cable Loss.</p> <p>Set this attribute to the value specified in the installation report (LINKPlanner).</p> <div data-bbox="491 1335 587 1447" style="float: left; margin-right: 10px;"> </div> <div data-bbox="619 1326 1396 1559" style="background-color: #e0f2f7; padding: 5px;"> <p>Note Maximum Transmit Power is the maximum combined power for the normal case where H and V channels operate together.</p> <p>When Transmitter Channels is set to H Only or V Only, the maximum transmitted power will be 3 dB lower than the configured Maximum Transmit Power.</p> </div>
ATPC Peer Rx Max Power	<p>This attribute is only displayed if:</p> <ul style="list-style-type: none"> • The unit is in PTP topology • The operating regulatory band does not require radar detection. <p>Set this attribute to the maximum receive power the ATPC mechanism must try to achieve at the peer unit.</p>
ATPC HCMP Master Transmit Power	<p>This attribute is only visible if the unit is configured as an HCMP Slave.</p> <p>This attribute must be set to the same value as the Maximum Power Power on the HCMP Master.</p>

Attribute	Meaning
	 <p data-bbox="624 264 1347 327">Note The wireless link may fail to establish if the value of this attribute is not set as recommended.</p>
ATPC HCMP Master Target Receive Power	<p data-bbox="491 412 1262 443">This attribute is only visible if Wireless Topology is set to HCMP.</p> <p data-bbox="491 461 1378 524">This determines the HCMP Master receive power the ATPC mechanism on the HCMP Slave must try to reach.</p>
	 <p data-bbox="624 557 1353 656">Note Setting a high value may reduce sensitivity of the HCMP Master to low receive signal while setting it low value may prevent the HCMP Master to reach top rate mode.</p> <p data-bbox="624 674 1382 772">The default value of -56 dBm ensures that the top modulation mode can be reached whilst not degrading the performance at low receive signal level.</p>
Link Registration Timeout	<p data-bbox="491 804 1358 866">Only displayed when the Configure Link Registration Timeout Control is enabled (see Webpage Properties page on page 6-92).</p> <p data-bbox="491 884 1386 947">Disabled: The ODU remains in the acquisition state indefinitely if a wireless link is not established.</p> <p data-bbox="491 965 1353 1037">Enabled: The ODU reboots if a wireless link is not established within the Link Registration Timeout Period.</p>
Link Registration Timeout Period	<p data-bbox="491 1072 1222 1104">Only displayed if Link Registration Timeout is set to Enabled.</p> <p data-bbox="491 1122 1326 1184">The period in minutes (15..720) for the Link Registration Timeout. The default value is 15 minutes.</p>
Installation Mode	<p data-bbox="491 1218 1350 1317">Arm With Tones: Audio tones will be emitted during antenna alignment (the recommended option). This option is not available if automatic alignment is enabled.</p> <p data-bbox="491 1335 1310 1397">Arm Without Tones: Audio tones will not be emitted during antenna alignment.</p> <p data-bbox="491 1415 1386 1585">Change Config Without Arming: Configuration changes will be made without arming the ODU for alignment. This is the only option supported for the Master ODU in HCMP topology. This option is not available in an ODU with automatic alignment enabled unless alignment has already been successfully completed.</p>

Attribute	Meaning
Ranging Mode	<p>This can only be modified if the unit is operating in the PTP topology, and Installation Mode is Arm With Tones or Arm Without Tones.</p> <p>Auto..: During alignment, the wireless units use algorithms to calculate link range. To implement automatic ranging, select a value that corresponds to the estimated maximum range of the link:</p> <p>Auto 0 to 40 km (0 to 25 miles).</p> <p>Auto 0 to 100 km (0 to 62 miles).</p> <p>Auto 0 to 200 km (0 to 125 miles).</p> <p>Auto 0 to 250 km (0 to 156 miles).</p> <p>Target Range: During alignment, the wireless units use the approximate link distance (entered in Target Range) to calculate link range. The main advantage of Target Range mode is that it reduces the time taken by the units to range.</p> <p>If preferred, range functions can be configured to operate in miles, as described in Webpage Properties page on page 6-92.</p>
Target Range	<p>Only available when Ranging Mode is set to Target Range.</p> <p>The approximate distance between the two wireless units to within ± 1 km. Enter the same value at both ends of the link.</p>
HCMP Maximum Link Range	<p>The maximum link range that will be supported for any link in an HCMP sector. Configure a value between 5.0 km and 100.0 km (3 miles to 62 miles).</p>

TDD Frame page

The TDD Frame page ([Figure 137](#)) is displayed in the Installation Wizard page after the Wireless Configuration page when the ODU is operating in the HCMP topology.

Procedure:

- Update the attributes ([Table 169](#)).
- Click **Next**.

Figure 137 TDD Frame page (HCMP Master, Standard TDD Frame Configuration)

TDD Frame

Please enter the following TDD Frame parameters. In HCMP mode, the same parameters must be entered at both the Master and the Slaves.

TDD Frame data entry

Attributes	Value	Units
Maximum Number Of Slaves	4 <input type="text"/>	
TDD Frame Configuration Mode	<input checked="" type="radio"/> Standard Mode <input type="radio"/> Expert Mode	
HCMP Link Symmetry	<input type="radio"/> 4 to 1 <input checked="" type="radio"/> 3 to 1 <input type="radio"/> 2 to 1 <input type="radio"/> 1 to 1 <input type="radio"/> 1 to 2 <input type="radio"/> 1 to 3 <input type="radio"/> 1 to 4	
Downlink Ratio	75.0	%
Total Downlink Capacity	242.54	Mbps
Total Uplink Capacity	80.84	Mbps

Back
Next

Figure 138 TDD Frame page (HCMP Master, Expert TDD Frame Configuration)

TDD Frame

Please enter the following TDD Frame parameters. In HCMP mode, the same parameters must be entered at both the Master and the Slaves.

TDD Frame data entry

Attributes	Value	Units
Maximum Number Of Slaves	4 <input type="text"/>	
TDD Frame Configuration Mode	<input type="radio"/> Standard Mode <input checked="" type="radio"/> Expert Mode	
Downlink Timeslots in TDD period	10 <input type="text"/>	
Uplink Timeslots in TDD period	6 <input type="text"/>	
Downlink Ratio	62.5	%
Total Downlink Capacity	202.12	Mbps
Total Uplink Capacity	121.27	Mbps

Back
Next

Figure 139 TDD Frame page (HCMP Slave, Standard TDD Frame Configuration)

TDD Frame

Please enter the following TDD Frame parameters. In HCMP mode, the same parameters must be entered at both the Master and the Slaves.

TDD Frame data entry

Attributes	Value	Units
Maximum Number Of Slaves	4 ▾	
TDD Frame Configuration Mode	<input checked="" type="radio"/> Standard Mode <input type="radio"/> Expert Mode	
HCMP Link Symmetry	<input type="radio"/> 4 to 1 <input checked="" type="radio"/> 3 to 1 <input type="radio"/> 2 to 1 <input type="radio"/> 1 to 1 <input type="radio"/> 1 to 2 <input type="radio"/> 1 to 3 <input type="radio"/> 1 to 4	
Downlink Ratio	75.0	%
Total Downlink Capacity	242.54	Mbps
Total Uplink Capacity	80.84	Mbps
Slave Downlink Capacity	60.63	Mbps
Slave Uplink Capacity	20.21	Mbps

◀ Back
Next ▶▶

Figure 140 TDD Frame page (HCMP Slave, Expert TDD Frame Configuration)

TDD Frame

Please enter the following TDD Frame parameters. In HCMP mode, the same parameters must be entered at both the Master and the Slaves.

TDD Frame data entry

Attributes	Value	Units
Maximum Number Of Slaves	4 ▾	
TDD Frame Configuration Mode	<input type="radio"/> Standard Mode <input checked="" type="radio"/> Expert Mode	
Downlink Timeslots in TDD period	10 ▾	
Uplink Timeslots in TDD period	6 ▾	
Slave Downlink Timeslots Request	3 ▾	
Slave Uplink Timeslots Request	1 ▾	
Slave Downlink Timeslots Limit	9 ▾	
Slave Uplink Timeslots Limit	5 ▾	
Downlink Ratio	62.5	%
Total Downlink Capacity	202.12	Mbps
Total Uplink Capacity	121.27	Mbps
Slave Downlink Capacity	60.63	Mbps
Slave Uplink Capacity	20.21	Mbps

◀ Back
Next ▶▶

Table 169 TDD Frame attributes

Attribute	Meaning
Maximum Number Of Slaves	<p>2 to 8</p> <p>The maximum number of HCMP Slaves that can simultaneously connect to the HCMP Master.</p> <p>The same value must be used on the HCMP Master and all the HCMP Slaves that connect to it.</p>
TDD Frame Configuration Mode	<p>Standard, Expert</p> <p>Select Expert to configure individual time slot allocations to each Slave ODU.</p>
HCMP Link Symmetry	<p>Standard TDD Frame Configuration Mode only.</p> <p>"4 to 1", "3 to 1", "2 to 1", "1 to 1", "1 to 2", "1 to 3" or "1 to 4": The ratio of capacity between the downlink direction and the uplink direction.</p>
Downlink Ratio	The proportion of total (uplink and downlink) time slots assigned to the downlink as a percentage.
Total Downlink Capacity	The combined capacity for all downlink time slots assuming the highest modulation mode
Total Uplink Capacity	The combined capacity for all uplink time slots assuming the highest modulation mode
Downlink Timeslots in TDD Period	Expert TDD Frame Configuration Mode only.
Uplink Timeslots in TDD Period	The number of downlink and uplink time slots configured in the TDD frame at the HCMP Master.
Slave Downlink Capacity	The capacity for downlink time slots assigned to the Slave ODU assuming the highest modulation mode
Slave Uplink Capacity	The capacity for uplink time slots assigned to the slave assuming the highest modulation mode
Slave Downlink Timeslots Request	Expert TDD Frame Configuration Mode only.
Slave Uplink Timeslots Request	The number of downlink and uplink time slots requested for the Slave ODU.
Slave Downlink Timeslots Limit	Expert TDD Frame Configuration Mode only.
Slave Uplink Timeslots Limit	<p>The maximum number of downlink and uplink time slots that can be assigned by dynamic allocation to the Slave ODU.</p> <p>See Dynamic time slot allocation in HCMP on page 1-35</p>

TDD Synchronization page (optional)

If TDD Synchronization Mode is set to **Enabled** in the Wireless Configuration page, the TDD Synchronization page (Figure 141, Figure 142, Figure 143, Figure 144, Figure 145) is the fourth Installation Wizard page.

For more information on the available options, refer to [Configuration options for TDD synchronization](#) on page 3-36.

Procedure:

- Update the attributes (Table 170 and Table 171)
- Click **Next**.

Figure 141 TDD Synchronization page, PTP-SYNC, PTP topology

TDD Synchronization

Please enter the following TDD Synchronization parameters

TDD Synchronization data entry

Attributes	Value	Units
TDD Sync Device	<input checked="" type="radio"/> PTPSYNC <input type="radio"/> Cambium Sync Injector	
Cluster Master Slave	<input checked="" type="radio"/> Cluster Master <input type="radio"/> Cluster Slave	
PTP Sync Site Reference	<input type="radio"/> Internal <input checked="" type="radio"/> GPS/1PPS External	
Max Burst Duration Master To Slave	1453 ▼	μs
Max Burst Duration Slave To Master	726 ▼	μs
TDD Frame Duration	2500 ▼	μs
TDD Frame Offset	0	μs
Slave Receive To Transmit Gap	39	μs
TDD Holdover Mode	<input checked="" type="radio"/> Strict <input type="radio"/> Best Effort	
TDD Holdover Duration	1	minutes

Submit TDD Synchronization Configuration
Reset Form

◀ Back
Next ▶

Figure 142 TDD Synchronization page, direct connection, PTP topology

TDD Synchronization

Please enter the following TDD Synchronization parameters

TDD Synchronization data entry

Attributes	Value	Units
TDD Sync Device	<input type="checkbox"/> PTPSYNC <input checked="" type="radio"/> Cambium Sync Injector	
Cambium Sync Input Port	<input type="radio"/> Internal <input checked="" type="radio"/> Main PSU <input type="radio"/> Aux	
Cambium Sync Output Port	<input type="radio"/> None <input checked="" type="radio"/> Aux	
Max Burst Duration Master To Slave	726 ▼	µs
Max Burst Duration Slave To Master	1453 ▼	µs
TDD Frame Duration	2283 ▼	µs
TDD Frame Offset	0	µs
Slave Receive To Transmit Gap	39	µs
TDD Holdover Mode	<input checked="" type="radio"/> Strict <input type="radio"/> Best Effort	
TDD Holdover Duration	1	minutes

◀ Back
Next ▶

Figure 143 TDD Synchronization page, PTP-SYNC, HCMP topology

TDD Synchronization

Please enter the following TDD Synchronization parameters

TDD Synchronization data entry

Attributes	Value	Units
TDD Sync Device	<input checked="" type="radio"/> PTPSYNC <input type="radio"/> Cambium Sync Injector	
Cluster Master Slave	<input checked="" type="radio"/> Cluster Master <input type="radio"/> Cluster Slave	
PTP Sync Site Reference	<input type="radio"/> Internal <input checked="" type="radio"/> GPS/1PPS External	
TDD Frame Duration	5495	µs
TDD Frame Offset	0	µs
TDD Holdover Mode	<input type="radio"/> Strict <input checked="" type="radio"/> Best Effort	
TDD Holdover Duration	10	minutes

◀ Back
Next ▶

Figure 144 TDD Synchronization page, direct connection, HCMP topology

TDD Synchronization

Please enter the following TDD Synchronization parameters

TDD Synchronization data entry

Attributes	Value	Units
TDD Sync Device	<input type="radio"/> PTPSYNC <input checked="" type="radio"/> Cambium Sync Injector	
Cambium Sync Input Port	<input type="radio"/> Internal <input checked="" type="radio"/> Main PSU <input type="radio"/> Aux	
Cambium Sync Output Port	<input checked="" type="radio"/> None <input type="radio"/> Aux	
TDD Frame Duration	5495	µs
TDD Frame Offset	<input type="text" value="0"/>	µs
TDD Holdover Mode	<input type="radio"/> Strict <input checked="" type="radio"/> Best Effort	
TDD Holdover Duration	<input type="text" value="10"/>	minutes

◀◀ Back
Next ▶▶

Figure 145 TDD Synchronization page, HCMP Slave

TDD Synchronization

Please enter the following TDD Synchronization parameters

TDD Synchronization data entry

Attributes	Value	Units
TDD Frame Duration	5495	µs

◀◀ Back
Next ▶▶



Note For units operating in the PTP topology, obtain the data required to populate this page using the LINKPlanner.

Table 170 TDD Synchronization attributes at a TDD Master or TDD Slave ODU

Attribute	Meaning
Max Burst Duration	<p>Displayed in PTP topology when the link is configured for Hot Standby link protection.</p> <p>The maximum duration of the burst transmitted by Master and Slave ODUs.</p> <p>For standard frame duration, select a value in the range 544 to 2176 microseconds.</p> <p>For long frame duration (including Hot Standby), select a value in the range 484 to 6528 microseconds.</p>
Max Burst Duration Master to Slave	<p>Displayed in PTP topology when the link is not operating in a DFS band</p> <p>The maximum duration of the burst transmitted by the Master ODU and received by the Slave ODU.</p> <p>The range of the control is the same as Max Burst Duration, described above.</p>
Max Burst Duration Slave to Master	<p>Displayed in PTP topology when the link is not operating in a DFS band</p> <p>The maximum duration of the burst transmitted by the Slave ODU and received by the Master ODU.</p> <p>The range of the control is the same as Max Burst Duration, described above.</p>
TDD Frame Duration	<p>Read only in HCMP topology.</p> <p>For PTP with standard frame duration, select a value in the range 1299 to 6410 microseconds.</p> <p>For PTP with long frame duration (including Hot Standby), select a value in the range 1250 to 14286 microseconds.</p>
Slave Receive To Transmit Gap	<p>Only displayed in PTP topology.</p> <p>The duration of the gap between receive and transmit at the slave ODU.</p>

Table 171 TDD Synchronization attributes at a TDD Master ODU

Attribute	Meaning
TDD Sync Device	<p>PTP-SYNC: The ODU will synchronize using the connected PTP-SYNC unit. This option is not available for PTP 78700 ODUs.</p> <p>Cambium Sync Injector: The ODU will synchronize using a direct connection to another ODU.</p>
Cluster Master Slave	<p>Only displayed when TDD Sync Device = PTP SYNC</p> <p>Cluster Master: The first ODU in the synchronization chain.</p> <p>Cluster Slave: The second or subsequent ODU in the chain.</p>

Attribute	Meaning
PTP-SYNC Site Reference	<p>Only displayed when TDD Sync Device = PTP SYNC</p> <p>Internal: Standalone operation with no external timing reference.</p> <p>GPS/1PPS External: An external GPS receiver will provide a 1 pps timing reference.</p>
Cambium Sync Configure Port	<p>Only displayed when TDD Sync Device = Cambium Sync Injector.</p> <p>Internal: Free-running synchronization is generated internally.</p> <p>Main PSU: The ODU will synchronize to a 1PPS signal at the Main PSU port.</p> <p>Aux: The ODU will synchronize to a 1PPS signal at the Aux port.</p>
Cambium Sync Output Port	<p>Only displayed when TDD Sync Device = Cambium Sync Injector.</p> <p>None: The ODU will not output a synchronization signal.</p> <p>Aux: The ODU will output a synchronization signal at the Aux port.</p>
TDD Frame Offset	<p>The delay of the start of the TDD frame from the epoch of the external timing reference. This permits the design of synchronized networks in which the phase of the TDD frame is independent of the master/slave function. Enter a value in the range from zero to one microsecond less than the TDD Frame Duration.</p>
TDD Holdover Mode	<p>Strict: The unit will not transmit when synchronization is lost.</p> <p>Best Effort: The unit will synchronize when there is a reference signal, but otherwise will operate in unsynchronized mode.</p>
TDD Holdover Duration	<p>Specifies duration of holdover period following loss of the external timing reference for TDD synchronization. Default value 10 minutes, maximum 60 minutes.</p>

Confirm Installation Configuration page

Menu option: **Installation** (Figure 146). Use this page to review and confirm the updated wireless configuration of the unit.

Figure 146 Confirm Installation Configuration page (top and bottom of page shown)

Confirm Installation Configuration

Please review your entered configuration. If any of the configuration items are incorrect please use the back button to apply the corrections.

Once you're happy with the configuration press the 'Confirm Configuration and Reboot' button, this will commit the parameters to non-volatile memory and reboot this wireless unit.

License configuration

Attributes	Value	Units
MAC Address	00:04:56:50:00:25	
License Unit Serial Number	500025	
Installation mode	Arm without tones	
Ranging Mode	Auto 0 to 40 km	

<< **Back**

Procedure:

- To undo or correct any updates, click **Back**.
- To confirm the updates and arm the installation, click **Confirm Configuration and Reboot** and click **OK** to reboot the unit.
- If IP Address, Subnet Mask or Gateway IP Address have been changed: reconfigure the local management PC to use an IP address that is valid for the network. Refer to [Configuring the management PC](#) on page 6-4.
- If IP Address has been changed, use the new IP address to log into the unit.

Simplified Installation menu

This section describes how to use the Installation Wizard to complete the essential system configuration tasks that must be performed on a new link.

Starting the Installation Wizard

To start the Installation Wizard: on the menu, click **Installation**. The response depends upon the state of the unit:

- If the unit is armed for alignment, the Disarm Installation page is displayed. [Continue at Disarm Installation page](#) on page 6-47.
- If the unit is not armed, the Current Installation Summary page is displayed. [Continue at Current Installation Summary page](#) on page 6-48.

Disarm Installation page

Menu option: **Installation** ([Figure 147](#)). This page is displayed only when unit is armed.



Note The Installation agent cannot be armed (or disarmed) when the ODU operates as a Master in the HCMP topology.

Figure 147 Disarm Installation page

Disarm Installation

The installation agent is armed. If you wish to disarm installation then use the 'Disarm Installation Agent' button. If you wish to reconfigure the installation agent then use the wizards 'back' button

Attributes	Value	Units
Equipment Configuration		
Unit Name	Tamalpais 2	
Site Name	Mount Tamalpais	
Template Configuration		
Configuration Template	Most Robust	
Master Slave Mode	Slave	
Wireless Configuration		
Group ID	0	
Maximum Transmit Power	29	dBm
Installation Mode	Arm Without Tones	
Interface Configuration		
IP Version	IPv4	
IPv4 Address	10.130.159.48	
Subnet Mask	255.255.254.0	
Gateway IP Address	10.130.159.254	
<input type="button" value="Disarm Installation Agent"/>		
←← Back		

To disarm the unit, click **Disarm Installation Agent**.

Current Installation Summary page

Menu option: **Installation** (Figure 148). This page is displayed only when unit is not armed.

Figure 148 Current Installation Summary page

Current Installation Summary

This page shows a summary of the current unit configuration.
Press the 'Continue to Installation Wizard' button below to change this configuration.

Attributes	Value	Units
Equipment Configuration		
Unit Name	Tamalpais 2	
Site Name	Mount Tamalpais	
Template Configuration		
Configuration Template	Most Robust	
Master Slave Mode	Slave	
Wireless Configuration		
Group ID	0	
Maximum Transmit Power	29	dBm
Installation Mode	Change Config Without Arming	
Interface Configuration		
IP Version	IPv4	
IPv4 Address	10.130.159.48	
Subnet Mask	255.255.254.0	
Gateway IP Address	10.130.159.254	
<input type="button" value="Continue to Installation Wizard"/>		

Click **Continue to Installation Wizard**.

Equipment Configuration page

Menu option: **Installation**. Use this page to update Unit Name and Site Name.

Procedure:

- Review and update the Unit Name.
- Review and update the Site Name.

Figure 149 Equipment Configuration page

Equipment Configuration

Please enter the following equipment configuration parameters.

Equipment configuration data entry

Attributes	Value	Units
Unit ESN	0004565800A8	
Unit MSN	U9SD0B1ZP6J4	
Unit SKU	C045070B003B	
Unit Name	<input type="text" value="Tamalpais 2"/>	
Site Name	<input type="text" value="Mount Tamalpais"/>	
<input type="button" value="Submit Equipment Configuration"/> <input type="button" value="Reset Form"/>		
◀ Back Next ▶		

Table 172 Equipment Configuration attributes

Attribute	Meaning
Unit ESN	The Electronic Serial Number of the ODU. Read Only.
Unit MSN	The Mechanical Serial Number of the ODU. Read Only.
Unit SKU	The Cambium Part Number of the ODU Read Only.
Unit Name	Unit Name may consist of letters (A-Z and a-z), numbers (0-9), spaces, and the following special characters: (),-.,:<=>[_{}]. Unit name should be unique within the wireless network.
Site Name	User defined name for the site, with additional notes (if required).

Template Configuration page

Menu option: **Installation**. Use this page to update Template.

Procedure:

- Review and update the Template.

Figure 150 Template Configuration page

Template Configuration

Please enter the following template configuration parameters.

Template data entry

Attributes	Value	Units
Template	Most Robust <input type="button" value="v"/>	

Table 173 Wireless Configuration attributes

Attribute	Meaning
Template	<p>Selects a predetermined standard template to address a range of likely deployment scenarios, or a custom template created by a Security Officer or System Administrator user.</p> <p>The standard templates are as follows:</p> <ul style="list-style-type: none"> • Best Performance • Best Range • Most Robust • HCMP

Wireless Configuration page

Menu option: **Installation**. Use this page to update the wireless attributes.

Procedure:

- Update the Master Slave Mode, Link Name, Target MAC Address, Group ID, Maximum Transmit Power and Installation Mode attributes (Table 174).
- To save any changes and continue with the Installation Wizard, click **Next** or click **Submit Wireless Configuration**.

Figure 151 Wireless Configuration page

Wireless Configuration

Please enter the following wireless configuration parameters.


Wireless data entry

Attributes	Value	Units
Wireless Topology	Point To Point	
Master Slave Mode	<input checked="" type="radio"/> Master <input type="radio"/> Slave	
Group ID	<input type="text" value="63"/>	
Spectrum Management Control	<input type="radio"/> DSO <input checked="" type="radio"/> Fixed Frequency	
Fixed Tx Frequency	<input type="text" value="4640.0"/> ▾	MHz
Fixed Rx Frequency	<input type="text" value="4640.0"/> ▾	MHz
Maximum Transmit Power	<input type="text" value="10"/>	dBm
Installation Mode	<input type="radio"/> Arm With Tones <input checked="" type="radio"/> Arm Without Tones <input type="radio"/> Change Config Without Arming	


◀ Back
Next ▶▶

Table 174 Wireless Configuration attributes

Attribute	Meaning
Wireless Topology	<p>Point to point (PTP): A wireless link between one Master ODU and one Slave ODU.</p> <p>High-capacity multipoint (HCMP): A wireless network consisting of one Master ODU and between two and eight Slave ODUs.</p> <p>Read Only.</p>
Master Slave Mode	<p>Master: The unit controls the wireless link. On startup, the Master transmits until a link with the Slave is made.</p> <p>Slave: The unit listens for its peer and only transmits when the peer has been identified.</p>
Target MAC Address	<p>Only displayed when Access Method is set to Link Access. This is the MAC Address of the peer unit that will be at the other end of the wireless link. This is used by the system to ensure the unit establishes a wireless link to the correct peer. The MAC Address can be found embedded within the serial number of the unit. The last six characters of the serial number are the last three bytes of the unit's MAC address.</p>
Link Name	<p>Only displayed when Access Method is set to Link Name Access.</p> <p>Link Name may consist of letters (A-Z and a-z), numbers (0-9), spaces, and the following special characters: (),-.,:<=>[]_{}</p> <p>Link Name must be same at both ends and different to site name.</p>
Group ID	<p>A link can only be established between units that have identical Group IDs.</p>
Spectrum Management Control	<p>DSO: The ODU uses Dynamic Spectrum Optimization to automatically select the RF channel with the lowest interference.</p> <p>Fixed Frequency: The ODU is configured with fixed transmit and receive frequencies.</p>
Lower Centre Frequency	<p>The center frequency (MHz) of the lowest channel that may be used by this link. Not displayed when Spectrum Management Control is set to Fixed Frequency.</p>
Fixed Tx Frequency Fixed Rx Frequency	<p>This is only displayed when Spectrum Management Control is set to Fixed Frequency. The settings must be compatible at each end of the link. Once configured, the spectrum management function will not attempt to move the wireless link to a channel with lower co-channel or adjacent channel interference. Therefore, this mode of operation is only recommended for deployments where the installer has a good understanding of the prevailing interference environment.</p>
Maximum Transmit Power	<p>The maximum power (dBm) at which the unit will transmit, configurable in steps of 1 dB. Its maximum value is controlled by the combination of the selected Regulatory Band, Bandwidth and (for connectorized units) Antenna Gain and Cable Loss.</p> <p>Set this attribute to the value specified in the installation report (LINKPlanner).</p>

Attribute	Meaning
	 <p>Note Maximum Transmit Power is the maximum combined power for the normal case where H and V channels operate together.</p> <p>When Transmitter Channels is set to H Only or V Only, the maximum transmitted power will be 3 dB lower than the configured Maximum Transmit Power.</p>

Installation Mode	<p>Arm With Tones: Audio tones will be emitted during antenna alignment (the recommended option).</p> <p>Arm Without Tones: Audio tones will not be emitted during antenna alignment.</p> <p>Change Config Without Arming: Configuration changes will be made without arming the ODU for alignment. This is the only option supported for the Master ODU in HCMP topology.</p>
-------------------	---



Note When configuring a linked pair of units, use the Master Slave Mode to ensure that one unit is **Master** and the other is **Slave**.

Interface Configuration page

Menu option: **Installation**. Use this page to update the IP interface attributes.

Procedure:

- Review and update the IP interface attributes ([Table 166](#)).
- To continue with the Installation Wizard, click **Next** or **Submit Interface Configuration**.

Figure 152 Interface Configuration page

Interface Configuration

Please complete the wizard in order to arm the unit.

A valid IP address and subnet mask is required before this unit can be used on a network. Please see your network administrator if you are unsure of the correct values to enter here.

Interface configuration data entry

Attributes	Value				Units
IP Version	IPv4				
IPv4 Address	<input type="text" value="10"/>	<input type="text" value="130"/>	<input type="text" value="159"/>	<input type="text" value="48"/>	
Subnet Mask	<input type="text" value="255"/>	<input type="text" value="255"/>	<input type="text" value="254"/>	<input type="text" value="0"/>	
Gateway IP Address	<input type="text" value="10"/>	<input type="text" value="130"/>	<input type="text" value="159"/>	<input type="text" value="254"/>	

◀ Back
Next ▶

Table 175 Interface Configuration attributes

Attribute	Meaning
IP Version	<p>The internet protocols to be supported by this ODU:</p> <p>IPv4: IPv4 protocols only. IPv4 attributes are displayed.</p> <p>IPv6: IPv6 protocols only. IPv6 attributes are displayed.</p> <p>Dual IPv4 and IPv6: Both IPv4 and IPv6 protocols. IPv4 and IPv6 attributes are displayed.</p> <p>Read Only.</p>
IPv4 Address	The IPv4 internet protocol address. This address is used by the family of Internet protocols to uniquely identify this unit on a network.
Subnet Mask	The address range of the connected IPv4 network.
Gateway IP Address	The IPv4 address of a computer on the current network that acts as an IPv4 gateway. A gateway acts as an entrance and exit to frames from and to other networks.



Note The Interface Configuration will be Read Only if IP Configuration is not selected as an editable control in a custom template, or if the ODU has been configured to use the HTTPS interface.

Confirm Installation Configuration page

Menu option: **Installation** (Figure 153). Use this page to review and confirm the updated configuration of the unit.

Procedure:


- To undo or correct any updates, click **Back**.
- To confirm the updates and arm the installation, click **Confirm Configuration and Reboot** and click **OK** to reboot the unit.
- If IP Address, Subnet Mask or Gateway IP Address have been changed: reconfigure the local management PC to use an IP address that is valid for the network. Refer to [Configuring the management PC](#) on page 6-4.
- If IP Address has been changed, use the new IP address to log into the unit.

Figure 153 Confirm Installation Configuration page

Confirm Installation Configuration

Please review your entered configuration. If any of the configuration items are incorrect please use the back button to apply the corrections.

Once you're happy with the configuration press the 'Confirm Configuration and Reboot' button, this will commit the parameters to non-volatile memory and reboot this wireless unit.

Attributes	Value	Units
Equipment Configuration		
Unit Name	Colinas 6	
Site Name		
Template Configuration		
Template	Test Template	
Master Slave Mode	Master	
Wireless Configuration		
Access Method	Group Access	
Group ID	0	
Spectrum Management Control	Fixed Frequency	
Fixed Transmit Frequency	4640.000	MHz
Fixed Receive Frequency	4640.000	MHz
Maximum Transmit Power	10	dBm
Installation Mode	Arm Without Tones	
Interface Configuration		
IP Version	IPv4	
IPv4 Address	10.130.159.44	
Subnet Mask	255.255.254.0	
Gateway IP Address	10.130.159.254	
<input type="button" value="Confirm Configuration and Reboot"/>		
 Back		

System menu

This section describes how to configure the IP and Ethernet interfaces of the PTP 700 unit.

System Configuration page

Menu option: **System > Configuration** (Figure 154). Use this page to enable AES encryption and to review and update key wireless attributes of the unit.

Figure 154 System Configuration page

System Configuration

This page controls the day to day configuration of this unit.

Attributes	Value	Units
Equipment		
Enable Transmission	Enabled	
<input type="button" value="Mute Transmission"/>		
Link Name	<input type="text" value="Ashburton to Widecombe"/>	
Unit Name	<input type="text" value="Ashburton #1"/>	
Site Name	<input type="text" value="Ashburton"/>	
Fully Qualified Domain Name	<input type="text" value="ashburton001.example-nwk.com"/>	
Latitude	<input type="text" value="50.523611"/>	
Longitude	<input type="text" value="-3.740833"/>	
Altitude	<input type="text" value="96"/>	
IP Address Label	IPv4 Address	
Wireless		
Master Slave Mode	Master	
Dual Payload	Enabled	
Link Mode Optimization	IP Traffic	
Channel Bandwidth	20	MHz
Max Receive Modulation Mode	<input type="text" value="256QAM 0.81"/>	
Lowest Data Modulation Mode	<input type="text" value="BPSK 0.63"/>	
Antenna Gain	<input type="text" value="23.0"/>	dBi
Cable Loss	<input type="text" value="0.0"/>	dB
Maximum Transmit Power	<input type="text" value="29"/>	dBm
ATPC Peer Rx Max Power	<input type="text" value="-35"/>	dBm
Wireless Encryption		
Encryption Algorithm	<input type="radio"/> None <input type="radio"/> TLS RSA <input checked="" type="radio"/> TLS PSK 128-bit <input type="radio"/> TLS PSK 256-bit	
Pre-shared Key	<input type="text" value="....."/>	<input type="button" value="Show"/>
Confirm Pre-shared Key	<input type="text" value="....."/>	<input type="button" value="Show"/>
<input type="button" value="Generate Random Key"/>		
Rekey Interval	<input type="text" value="1440"/>	minutes
<input type="button" value="Submit Updated System Configuration"/> <input type="button" value="Reset Form"/>		

Figure 155 System Configuration page, TLS RSA Encryption Algorithm

Wireless Encryption	
Encryption Algorithm	<input type="radio"/> None <input checked="" type="radio"/> TLS RSA <input type="radio"/> TLS PSK 128-bit <input type="radio"/> TLS PSK 256-bit
Device Certificate	<input checked="" type="radio"/> Factory <input type="radio"/> User
TLS Minimum Security Level	AES 128-bit TLS RSA ▼
Rekey Interval	1440 minutes
<input type="button" value="Submit Updated System Configuration"/> <input type="button" value="Reset Form"/>	



Attention Configuring link encryption over an operational link will necessitate a service outage. Therefore, the configuration process should be scheduled during a period of low link utilization.



Procedure:

- If AES encryption is required but the System Configuration page does not contain the Encryption Algorithm attribute, or if the Encryption Algorithm attribute provides only the None and TLS RSA attributes, then order the necessary AES capability upgrade, generate a license key and enter it on the Software License Key page ([Software License Key page](#) on page 6-16).
- Update the attributes ([Table 176](#)).
- To save changes, click **Submit Updated System Configuration**.
- If a reboot request is displayed, click **Reboot Wireless Unit** and **OK** to confirm.

Table 176 System Configuration attributes

Attribute	Meaning
Enable Transmission	<p>Only displayed when the ODU is a Master unit and Transmitter Mute Control is enabled (see Webpage Properties page on page 6-92).</p> <p>Use the Mute Transmission/Enable Transmission control to toggle between Muted and Enabled.</p> <p>Muted: The ODU will not radiate and will not forward Ethernet frames between the wireless interface and the Ethernet ports.</p> <p>Enabled: The ODU is allowed by the user to radiate and will forward Ethernet frames between the wireless interface and the Ethernet ports.</p>
Link Name	<p>This is only visible if the Wireless Topology is set to PTP topology.</p> <p>Link Name may consist of letters (A-Z and a-z), numbers (0-9), spaces, and the following special characters: (),-,:<=>[]_{}.</p> <p>If Access Method is set to Link Name Access, Link Name must be same at both ends of the link and different to site name.</p>
Unit Name	<p>Unit Name may consist of letters (A-Z and a-z), numbers (0-9), spaces, and the following special characters: (),-,:<=>[]_{}.</p> <p>Unit name should be unique within the wireless network.</p>
Site Name	User defined name for the site, with additional notes (if required).

Attribute	Meaning
Fully Qualified Domain Name	The Fully Qualified Domain Name (FQDN) assigned to this ODU in an external Domain Name Server (DNS).
Latitude	The latitude of the ODU, measured in decimal degrees. This attribute has no internal function.
Longitude	The longitude of the ODU, measured in decimal degrees. This attribute has no internal function.
Altitude	The altitude of the ODU. This attribute has no internal function. Altitude is stored as a dimensionless integer. For systems managed by cnMaestro, enter the altitude in units of meters.
IP Address Label	Read only. The IP Address version used to identify the unit in SMTP messages, fault logs and other system outputs. IPv4 or IPv6 : The unit is identified using its IPv4 or IPv6 Address. These options are only available when IP Version is set to Dual IPv4 and IPv6 in the in the LAN Configuration page (Table 177).
Master Slave Mode	Master : The unit is a Master, that is, it controls the PTP link or HCMP sector. Following startup, the Master transmits continuously, except in the case of radar detection. Slave : The unit is a Slave, that is, it listens for its peer and only transmits when the peer has been identified. Read only.
Dual Payload	Disabled : The ODU will not request the remote unit to transmit dual payload modulation modes. Enabled : The ODU will request the remote unit to transmit single or dual payload modulation modes as determined by the wireless conditions. Read only.
Link Mode Optimization	IP Traffic : The link is optimized for IP traffic to provide the maximum possible link capacity. TDM Traffic : The link is optimized for TDM traffic to provide the lowest possible latency. Read only.
Channel Bandwidth	Bandwidth of the transmit and receive radio channels. Read only.
Max Receive Modulation Mode	The maximum mode the unit will use as its adaptive modulation. By default the Max Receive Modulation Mode is the highest mode available. For minimum error rates, set the maximum modulation mode to the minimum necessary to carry the required traffic.

Attribute	Meaning
Lowest Data Modulation Mode	The lowest modulation mode that must be achieved before the link is allowed to bridge customer data Ethernet frames. This does not affect the bridging of management data: if out-of-band remote management is enabled, this will continue regardless of modulation mode.
Antenna Gain	Only displayed for a Connectorized ODU, or a Connectorized+Integrated ODU where Anntena Selection is set to Connectorized . Gain of the external antenna.
Cable Loss	Only displayed for a Connectorized ODU, or a Connectorized+Integrated ODU where Anntena Selection is set to Connectorized . Loss in the ODU-antenna RF cable. If there is a significant difference in length of the RF cables for the two antenna ports, then the average value should be entered.
Transmitter Channels	Only displayed when the Transmitter Channels Control attribute is enabled (see Webpage Properties page on page 6-92). H and V: The ODU transmits on Horizontal and Vertical polarisation H Only: The ODU transmits on Horizontal polarisation (or at the H output of a Connectorized unit) only. V Only: The ODU transmits on Vertical polarisation (or at the V output of a Connectorized unit) only.
	 <p>Note Operation using a single polarisation cannot provide polarisation diversity or polarisation multiplexing. This will reduce availability in non-line-of-sight paths and will reduce capacity in line-of-sight or near-line-of-sight paths.</p>
Maximum Transmit Power	The maximum power (dBm) at which the unit will transmit, configurable in steps of 1 dB. Its maximum value is controlled by the combination of the selected Regulatory Band, Bandwidth and (for connectorized units) Antenna Gain and Cable Loss. Set this attribute to the value specified in the installation report (LINKPlanner).
	 <p>Note Maximum Transmit Power is the maximum combined power for the normal case where H and V channels operate together. When Transmitter Channels is set to H Only or V Only, the maximum transmitted power will be 3 dB lower than the configured Maximum Transmit Power.</p>
EIRP	Only displayed when the ODU is connectorized. Effective Isotropic Radiated Power (EIRP) describes the strength of the radio signal leaving the wireless unit. Use it to verify that the link configuration (Max Transmit Power, Antenna Gain and Cable Loss) does not exceed any applicable regulatory limit. Read only.
ATPC Peer Rx Max Power	ATPC maximum receive power level at the remote ODU. In a radar avoidance area this is calculated by the firmware and cannot be changed. In a non-radar avoidance area this can be set manually.

Attribute	Meaning
Encryption Algorithm	<p>Values are: None, TLS RSA, TLS PSK 128-bit or TLS PSK 256-bit. Use the same setting at both link ends.</p> <p>TLS PSK 128-bit and TLS PSK 256-bit are only displayed when an AES encryption license key has been generated (Generating license keys on page 6-2) and submitted (Software License Key page on page 6-16).</p> <p>TLS RSA cannot be selected if Access Method is set to Link Name Access.</p> <p>Encryption Algorithm is not displayed if the only possible value is None.</p>
Pre-shared Key	<p>Only displayed when Encryption Algorithm is set to TLS PSK 128-bit or TLS PSK 256-bit.</p> <p>The key consists of 32 or 64 case-insensitive hexadecimal characters. Use the same key at both link ends.</p>
Confirm Pre-shared Key	<p>Only displayed when encryption algorithm TLS PSK 128-bit or TLS PSK 256-bit has been selected.</p> <p>Retype the Pre-shared Key.</p>
TLS Minimum Security Level	<p>The minum encryption key size that will be selected in TLS RSA.</p> <p>Values are: None, AES 128-bit TLS RSA or AES 256-bit TLS RSA</p> <p>Only displayed when Encryption Algorithm is set to TLS RSA.</p> <p>AES 128-bit TLS RSA or AES 256-bit TLS RSA are only available when an AES encryption license key has been generated (Generating license keys on page 6-2) and submitted (Software License Key page on page 6-16).</p> <p>For additional information see TLS RSA on page 1-40</p>
Rekey Interval	<p>The interval (in minutes) between automatic update of the wireless encryption keys.</p> <p>Only displayed when an AES encryption and Over The Air Rekey license key has been generated (Generating license keys on page 6-2) and submitted (Software License Key page on page 6-16).</p> <p>Only displayed at the Master.</p>

LAN Configuration page

Menu option: **System > Configuration > LAN Configuration**. Use this page to control how users connect to the PTP 700 web interface, either from a locally connected computer or from a management network.

The appearance of this page varies depending upon which features have been enabled by license key. For example, [Figure 156](#) shows the attributes that are displayed when Aux Port and Out-of-Band Management Service support are enabled.



Attention Before configuring a VLAN for management interfaces, ensure that the VLAN is accessible, otherwise the unit will be inaccessible after the next reboot.



Attention Before configuring in-band management, ensure that the Master and Slave units are configured with different IP addresses, otherwise the management agent will not be able to distinguish the two units.



Attention Auto-negotiation and forced Ethernet configuration:

- To operate an Ethernet link at a fixed speed, set Auto Negotiation to **Enabled** and limit Auto Neg Advertisement to the desired speed. If constrained auto-negotiation fails, set Auto Negotiation to **Disabled** (forced Ethernet configuration) as a last resort.
- Both ends of an Ethernet link must be configured identically, because forced and auto-negotiation are not compatible: a mixed configuration will cause a duplex mismatch, resulting in greatly reduced data capacity.
- The Auto Neg Advertisement or Forced Configuration data rates must be within the capability of the Ethernet link partner, otherwise loss of service will occur.



Note Synchronous Ethernet and IEEE 1588 Transparent Clock are only supported in the PTP topology.

Figure 156 LAN Configuration page (Aux, SFP and DNS support)

LAN Configuration

This page controls the LAN configuration of this unit.

Attributes	Value	Units
IP Interface		
IP Version	<input checked="" type="radio"/> IPv4 <input type="radio"/> IPv6 <input type="radio"/> Dual IPv4 and IPv6	
IPv4 Address	10 . 130 . 159 . 44	
Subnet Mask	255 . 255 . 254 . 0	
Gateway IP Address	10 . 130 . 159 . 254	
DNS Resolver	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
DNS Primary Server	<input checked="" type="radio"/> Server 1 <input type="radio"/> Server 2	
DNS Server 1 Internet Address	10.130.159.99	
DNS Server 1 Port Number	53	
DNS Server 2 Internet Address	10.130.159.98	
DNS Server 2 Port Number	53	
Use VLAN For Management Interfaces	No VLAN Tagging	
DSCP Management Priority	00 - DF	
TD90 Service	None	
Data Service	Main PSU Port + Aux Port	
Management Service	In-Band	
Local Management Service	Out-of-Band SFP Port	
Data Port Wireless Down Alert	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
Main PSU Port		
Main PSU Port Auto Negotiation	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Main PSU Port Auto Neg Advertisement	<input checked="" type="checkbox"/> 1000 Mbps Full Duplex	
	<input checked="" type="checkbox"/> 100 Mbps Full Duplex	
Main PSU Port Auto Mdx	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Aux Port		
Aux Port Auto Negotiation	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Aux Port Auto Neg Advertisement	<input checked="" type="checkbox"/> 1000 Mbps Full Duplex	
	<input checked="" type="checkbox"/> 100 Mbps Full Duplex	
Aux Port Auto Mdx	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Aux Port Power Over Ethernet Output	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
SFP Port		
SFP Port Auto Negotiation	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Bridging		
Data Port Pause Frames	<input type="radio"/> Tunnel <input checked="" type="radio"/> Discard	
MAC Filtering	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
<input type="button" value="Submit Updated System Configuration"/> <input type="button" value="Reset Form"/>		

Figure 157 LAN Configuration page (Sync E and IEEE 1588 support)

SFP Port	
SFP Port Auto Negotiation	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
Bridging	
Local Packet Filtering	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
Data Port Pause Frames	<input type="radio"/> Tunnel <input checked="" type="radio"/> Discard
Synchronous Ethernet	
Sync E Tracking	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
Sync E Equipment Clock	<input checked="" type="radio"/> EEC-Option 1 <input type="radio"/> EEC-Option 2
Sync E Slave Port	<input checked="" type="radio"/> Main PSU Port <input type="radio"/> SFP Port
Main PSU Port QL Rx Overwrite	Disabled ▼
Main PSU Port SSM Tx	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
Aux Port SSM Tx	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
SFP Port SSM Tx	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
IEEE 1588	
Transparent Clock	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
Transparent Clock VLAN	<input checked="" type="radio"/> All <input type="radio"/> S-Tagged <input type="radio"/> C-Tagged
Transparent Clock Port	<input checked="" type="radio"/> Main PSU
<input type="button" value="Submit Updated System Configuration"/> <input type="button" value="Reset Form"/>	

Figure 158 LAN Configuration page (TD-90 Service)

Use VLAN For Management Interfaces	No VLAN Tagging ▼
DSCP Management Priority	00 - DF ▼
TD90 Service	SFP Port ▼
Data Service	Main PSU Port ▼
Management Service	In-Band ▼
Local Management Service	None ▼
Data Port Wireless Down Alert	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
Main PSU Port	
Main PSU Port Auto Negotiation	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
Main PSU Port Auto Neg Advertisement	<input checked="" type="checkbox"/> 1000 Mbps Full Duplex
	<input checked="" type="checkbox"/> 100 Mbps Full Duplex
Main PSU Port Auto Mdx	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled

Procedure:

- 1 Review and update the attributes: IP Interface ([Table 177](#)); Main PSU or Aux Port ([Table 178](#)); Bridging ([Table 180](#)).
- 2 To save changes, click **Submit Updated System Configuration**. The system may reboot.
- 3 If Main PSU Port is selected for **Data Service** only (and not for **Management Service**), connect management PC to the port (Aux or SFP) that was selected for Management or Local Management Service

- 4 If IP Address, Subnet Mask or Gateway IP Address have been changed, reconfigure the local management PC to use an IP address that is valid for the network. Refer to [Configuring the management PC](#) on page 6-4.
- 5 If IP Address has been changed, use the new IP address to log into the unit.

Table 177 IP interface attributes

Attribute	Meaning
IP Version	Defined in Table 166 .
IPv4 Address	
Subnet Mask	
Gateway IP Address	
IPv6 Address	
IPv6 Prefix Length	
IPv6 Gateway Address	
IPv6 Auto Configured Link Local Address	
DNS Resolver	
DNS Primary Server	
DNS Server 1 Internet Address	
DNS Server 1 Port Number	
DNS Server 2 Internet Address	
DNS Server 2 Port Number	
Use VLAN For Management Interfaces	
VLAN Management VID	
VLAN Management Priority	
DSCP Management Priority	
TD90 Service	Defined in Table 166 . For more help, see Ethernet port allocation on page 3-48.
Data Service	
Management Service	

Attribute	Meaning
Local Management Service	
Data Port Wireless Down Alert	<p>Disabled: The data Ethernet link will not be dropped when the wireless link drops.</p> <p>Enabled: The Data Ethernet link will be dropped briefly when the wireless link drops. This signals to the connected network equipment that this link is no longer available. Connected Ethernet switches can be configured to forward Ethernet frames on an alternative path identified using the Spanning Tree Protocol (STP).</p>
Management Port Wireless Down Alert	<p>Only displayed when an Out-of-Band Port is selected for Management Service.</p> <p>Disabled: The management Ethernet link will not be dropped when the wireless link drops.</p> <p>Enabled: The management Ethernet link will be dropped briefly when the wireless link drops. This signals to the connected network equipment that this link is no longer available. Connected Ethernet switches can be configured to forward Ethernet frames on an alternative path identified using the Spanning Tree Protocol (STP).</p>
Management Network Access Enabled	<p>Only displayed when one of the Port selection attributes (Main PSU, Aux or SFP) is set to Out-of-Band Management Service.</p> <p>Yes: The local out-of-band management interface can be used to access the remote management network.</p> <p>No: The local out-of-band management interface cannot be used to access the remote management network.</p>

Table 178 Main PSU Port and Aux Port attributes

Attribute	Meaning
Auto Negotiation	<p>Disabled: Configuration of the Ethernet interface is forced.</p> <p>Enabled: Configuration of the Ethernet interface is automatically negotiated (default). This is the preferred setting.</p> <p>Use the same setting for the Ethernet link partner.</p>
Auto Neg Advertisement	<p>Only displayed when Auto Negotiation is set to Enabled.</p> <p>The data rate that the auto-negotiation mechanism will advertise as available on the Ethernet interface (1000 Mbps or 100 Mbps Full Duplex). Select a data rate that is within the capability of the Ethernet link partner. Use the same setting for the Ethernet link partner.</p>
Forced Configuration	<p>Only displayed when Auto Negotiation is set to Disabled.</p> <p>This forces the speed and duplex setting of the Ethernet interface. Over-the-air throughput will be capped to the rate of the Ethernet interface at the receiving end of the link. Select a data rate that is within the capability of the link partner. Use the same setting at both ends.</p>

Attribute	Meaning
Auto Mdx	<p>Disabled: The Auto Medium Dependent Interface (MDI)/Medium Dependent Interface Crossover (MDIX) capability is disabled.</p> <p>Enabled: The Auto Medium Dependent Interface (MDI)/Medium Dependent Interface Crossover (MDIX) capability is enabled.</p>
Power Over Ethernet Output	<p>Aux port only.</p> <p>Disabled: The ODU does not supply power to the auxiliary device.</p> <p>Enabled: The ODU supplies power to the auxiliary device.</p>

Table 179 SFP Port (connected with copper module) attributes

Attribute	Meaning
SFP Port Auto Negotiation	<p>Disabled: Configuration of the Ethernet interface is forced. This is to be used as a last resort only if auto-negotiation fails.</p> <p>Enabled: Configuration of the Ethernet interface is automatically negotiated (default). This is the preferred setting.</p>
SFP Port Auto Neg Advertisement	<p>Only displayed when SFP Port Auto Negotiation is set to Enabled and SFP port is connected with copper module.</p> <p>The data rate that the auto-negotiation mechanism will advertise as available on the Ethernet interface (1000 Mbps or 100 Mbps Full Duplex). Select a data rate that is within the capability of the Ethernet link partner. Use the same setting for the Ethernet link partner.</p>
Forced Configuration	<p>Only displayed when SFP Port Auto Negotiation is set to Disabled and SFP port is connected with copper module.</p> <p>This forces the speed and duplex setting of the Ethernet interface. Over-the-air throughput will be capped to the rate of the Ethernet interface at the receiving end of the link. Select a data rate that is within the capability of the Ethernet link partner. Use the same setting for the Ethernet link partner.</p>
Auto Mdx	<p>Only displayed when SFP port is connected with copper module.</p> <p>Disabled: The Auto Medium Dependent Interface (MDI)/Medium Dependent Interface Crossover (MDIX) capability is disabled.</p> <p>Enabled: The Auto Medium Dependent Interface (MDI)/Medium Dependent Interface Crossover (MDIX) capability is enabled.</p>

Table 180 Bridging attributes

Attribute	Meaning
Data Port Pause Frames	Controls whether the bridge tunnels or discards Layer 2 pause frames arriving at the Data port. Such frames are identified by the destination MAC Address being equal to 01-80-C2-00-00-01.


Attribute	Meaning
MAC Filtering	<p>Enabled: The embedded Ethernet switch learns the location of end stations in networks at the wired or wireless ports from the source addresses in received Ethernet frames. The agent filters transmitted Ethernet frames with a unicast destination address to ensure that the frame is transmitted at the wired or wireless port associated with the learned address. If the destination address is broadcast, multicast or unknown unicast, then Ethernet traffic is flooded to all wired and wireless ports in the relevant service.</p> <p>Disabled: The embedded Ethernet switch does not learn the location of end stations, and transmitted frames are always flooded to all wired and wireless ports in the relevant service.</p>
	<div style="display: flex; align-items: center;">  <div style="background-color: #e1f5fe; padding: 5px; border: 1px solid black;"> <p>Note In the Local Management Service, Ethernet frames are not transmitted at the wireless port.</p> </div> </div>

Table 181 Synchronous Ethernet attributes

Attribute	Meaning
Sync E Tracking	<p>Disabled: The synchronous Ethernet feature is disabled. Synchronization Status Messages received at the Main PSU port will be discarded.</p> <p>Enabled: The synchronous Ethernet feature is enabled.</p>
Sync E Equipment Clock	<p>EEC-Option 1: Select this option if the equipment is operating in a 2048 kbit/s synchronisation hierarchy (ITU-T G.813 Option 1)</p> <p>EEC-Option 2: Select this option if the equipment is operating in a 1544 kbit/s synchronisation hierarchy (Type IV clock from ITU-T G.812)</p>
Sync E Slave Port	<p>This control configures either the Main PSU Port or the SFP Port as a candidate for selection as a Sync E Slave port.</p> <p>Only ports that are allocated to one of the standard services (Data Service, Management Service, Local Management Service) are offered as options here.</p>
Main PSU Port QL Rx Overwrite	<p>This control provides the facility to overwrite the Quality Level (QL) of received Synchronisation Status Messages (SSM). It may be useful in a test environment, or for interworking with equipment that does not generate SSMs.</p> <p>Disabled: The recommended setting, the QL of received SSMs is unmodified.</p> <p>“QL-PRC” or “QL-SSU A / QL-TNC” or “QL-SSU B” or “QL-EEC1 / QL-SEC” or “QL-DNU / QL-DUS”: The overwritten value of the QL. Where two QLs are given, the QL used is dependent upon the setting of “Sync E Equipment Clock” type.</p>

Attribute	Meaning
SFP Port QL Rx Overwrite	<p>This control provides the facility to overwrite the Quality Level (QL) of Synchronisation Status Messages (SSM) received at the SFP port. It may be useful in a test environment, or for interworking with equipment that does not generate SSMs.</p> <p>Disabled: The recommended setting, the QL of received SSMs is unmodified.</p> <p>“QL-PRC” or “QL-SSU A / QL-TNC” or “QL-SSU B” or “QL-EEC1 / QL-SEC” or “QL-DNU / QL-DUS”: The overwritten value of the QL. Where two QLs are given, the QL used is dependent upon the setting of “Sync E Equipment Clock” type.</p> <p>This control is hidden if Sync E Slave Port is set to Main PSU Port.</p>
Main PSU Port SSM Tx	<p>Disabled: SSMs are not transmitted from the Main PSU port. Disabling SSMs may be useful in a test environment.</p> <p>Enabled: SSMs are transmitted from the Main PSU port (normal operation)</p>
Aux Port SSM Tx	<p>Disabled: SSMs are not transmitted from the Aux Port. Disabling SSMs may be useful in a test environment.</p> <p>Enabled: SSMs are transmitted from the Aux Port (normal operation)</p>
SFP Port SSM Tx	<p>Disabled: SSMs are not transmitted from the SFP port. Disabling SSMs may be useful in a test environment.</p> <p>Enabled: SSMs are transmitted from the SFP port (normal operation)</p>

Table 182 IEEE 1588 attributes

Attribute	Meaning
Transparent Clock	<p>Disabled: The Transparent Clock function is disabled. IEEE 1588-2008 event frames will be forwarded, but residence time corrections will not be made.</p> <p>Enabled: The Transparent Clock function is enabled. Residence time corrections will be made to IEEE 1588-2008 event frames.</p>
Transparent Clock Port	<p>This specifies the transparent clock source port. It can be Main PSU, Aux Port or SFP Fiber. Only the ports allocated for the Data service are available for selection.</p>

Attribute	Meaning
Transparent Clock VLAN	<p>All: The recommended setting. Residence time corrections will be made to all IEEE 1588-2008 event frames, regardless of any VLAN encapsulation.</p> <p>S-Tagged: Residence time corrections are only made to event frames tagged with a service tag equal to “Transparent Clock VID”.</p> <p>C-Tagged: Residence time corrections are only made to event frames double tagged and with a customer tag equal to “Transparent Clock VID”.</p>
Transparent Clock VID	The VLAN Identifier (VID) used with “Transparent Clock VLAN” to restrict residence time corrections to IEEE 1588-2008 event frames in a specific VLAN.

QoS Configuration page

Menu option: **System > Configuration > QoS Configuration** (Figure 159 or Figure 160 or Figure 161). Use this page to control the quality of service configuration. Classification may be based on fields in the Ethernet header (Layer 2) or in the network header (Layer 3). The unit recognizes two network layer protocols: IP and MPLS.



Note In PTP topology, eight QoS levels (Q0 to Q7) are supported, while in HCMP topology, only four QoS levels (Q0 to Q3) are supported for each wireless link.

Figure 159 QoS Configuration page (Ethernet)

QoS Configuration

This page controls the quality of service configuration.

Layer 2 Control Protocols

Protocol	Queue
Bridge	Q7 ▾
MRP	Q7 ▾
CFM	Q7 ▾
R-APS	Q7 ▾
EAPS	Q7 ▾
PPPoE Discovery LCP	Q7 ▾

Data Priority Scheme

Data Priority Scheme Ethernet IP/MPLS

Ethernet Priority

Priority	Queue
P0	Q1 ▾
P1	Q0 ▾
P2	Q2 ▾
P3	Q3 ▾
P4	Q4 ▾
P5	Q5 ▾
P6	Q6 ▾
P7	Q7 ▾
Untagged	Q1 ▾

Reset Default Priority Mappings

Submit Updated Configuration
Reset Form

Figure 160 QoS Configuration page (IP/MPLS), Extract

Data Priority Scheme

Data Priority Scheme Ethernet IP/MPLS

Unknown Network Layer Protocol

Unknown Protocol

IP DSCP

DSCP	Queue	DSCP	Queue	DSCP	Queue	DSCP	Queue
00 - DF	<input type="text" value="Q1"/>	16 - CS2	<input type="text" value="Q3"/>	32 - CS4	<input type="text" value="Q4"/>	48 - CS6	<input type="text" value="Q7"/>
01	<input type="text" value="Q1"/>	17	<input type="text" value="Q1"/>	33	<input type="text" value="Q1"/>	49	<input type="text" value="Q1"/>
02	<input type="text" value="Q1"/>	18 - AF21	<input type="text" value="Q3"/>	34 - AF41	<input type="text" value="Q4"/>	50	<input type="text" value="Q1"/>
03	<input type="text" value="Q1"/>	19	<input type="text" value="Q1"/>	35	<input type="text" value="Q1"/>	51	<input type="text" value="Q1"/>
04	<input type="text" value="Q1"/>	20 - AF22	<input type="text" value="Q3"/>	36 - AF42	<input type="text" value="Q4"/>	52	<input type="text" value="Q1"/>
05	<input type="text" value="Q1"/>	21	<input type="text" value="Q1"/>	37	<input type="text" value="Q1"/>	53	<input type="text" value="Q1"/>
06	<input type="text" value="Q1"/>	22 - AF23	<input type="text" value="Q3"/>	38 - AF43	<input type="text" value="Q4"/>	54	<input type="text" value="Q1"/>
07	<input type="text" value="Q1"/>	23	<input type="text" value="Q1"/>	39	<input type="text" value="Q1"/>	55	<input type="text" value="Q1"/>
08 - CS1	<input type="text" value="Q0"/>	24 - CS3	<input type="text" value="Q3"/>	40 - CS5	<input type="text" value="Q5"/>	56 - CS7	<input type="text" value="Q1"/>
09	<input type="text" value="Q1"/>	25	<input type="text" value="Q1"/>	41	<input type="text" value="Q1"/>	57	<input type="text" value="Q1"/>
10 - AF11	<input type="text" value="Q2"/>	26 - AF31	<input type="text" value="Q3"/>	42	<input type="text" value="Q1"/>	58	<input type="text" value="Q1"/>
11	<input type="text" value="Q1"/>	27	<input type="text" value="Q1"/>	43	<input type="text" value="Q1"/>	59	<input type="text" value="Q1"/>
12 - AF12	<input type="text" value="Q2"/>	28 - AF32	<input type="text" value="Q3"/>	44 - VA	<input type="text" value="Q6"/>	60	<input type="text" value="Q1"/>
13	<input type="text" value="Q1"/>	29	<input type="text" value="Q1"/>	45	<input type="text" value="Q1"/>	61	<input type="text" value="Q1"/>
14 - AF13	<input type="text" value="Q2"/>	30 - AF33	<input type="text" value="Q3"/>	46 - EF	<input type="text" value="Q6"/>	62	<input type="text" value="Q1"/>
15	<input type="text" value="Q1"/>	31	<input type="text" value="Q1"/>	47	<input type="text" value="Q1"/>	63	<input type="text" value="Q1"/>

MPLS Traffic Class

MPLS	Queue
TC 0	<input type="text" value="Q0"/>
TC 1	<input type="text" value="Q1"/>
TC 2	<input type="text" value="Q2"/>
TC 3	<input type="text" value="Q3"/>
TC 4	<input type="text" value="Q4"/>
TC 5	<input type="text" value="Q5"/>
TC 6	<input type="text" value="Q6"/>
TC 7	<input type="text" value="Q7"/>

Figure 161 QoS Configuration page showing Out-of-Band Management

QoS Configuration

This page controls the quality of service configuration.

Layer 2 Control Protocols

Protocol	Queue
Bridge	Q7 ▾
MRP	Q7 ▾
CFM	Q7 ▾
R-APS	Q7 ▾
EAPS	Q7 ▾
PPPoE Discovery LCP	Q7 ▾

Data Priority Scheme

Data Priority Scheme Ethernet IP/MPLS

Ethernet Priority

Priority	Queue
P0	Q1 ▾
P1	Q0 ▾
P2	Q2 ▾
P3	Q3 ▾
P4	Q4 ▾
P5	Q5 ▾
P6	Q6 ▾
P7	Q7 ▾
Untagged	Q1 ▾

Out-of-Band Management Service

Traffic Priority

Queue

Procedures:

- Review and update the attributes ([Table 183](#) and [Table 184](#)).
- To use IEEE 802.1Q classification rules, click **Reset Default Priority Mappings**.
- To save changes, click: **Submit Updated Configuration**.



Note Priority mapping must be configured the same at both Master and Slave units on the wireless link.

Table 183 QoS Configuration attributes - Data Service

Attribute	Meaning
Bridge	The classification of each layer 2 control protocol (L2CP) to an egress queue at the wireless port.
MRP	
CFM	
R-APS	
EAPS	
PPPoE Discovery LCP	
Data Priority Scheme	<p>Ethernet: Classification is based on fields in the Ethernet header (Layer 2).</p> <p>IP/MPLS: Classification is based on fields in the network header (Layer 3). IP includes IPv4 and IPv6.</p>
Unknown Protocol	<p>Only displayed when Priority Scheme is IP/MPLS.</p> <p>The classification of unknown network protocols (that is, not IP or MPLS) to an egress queue at the wireless port.</p>
Ethernet Priority	Ethernet priority mapping to Queue

Table 184 QoS Configuration attributes -Out-of-Band Management Service

Attribute	Meaning
Queue	<p>Only displayed when one ODU port is allocated to Out-of-Band Management (Configuring port allocations on page 6-25).</p> <p>The classification of out-of-band management traffic to an egress queue at the wireless port.</p>

SFP Configuration page

Menu option: **System > Configuration > SFP Configuration**.

This page is only available when the ODU detects an optical ([Figure 162](#)) or copper ([Figure 163](#)) SFP module in the SFP port. Use it to configure the way in which the unit connects to the network via the SFP interface.

Figure 162 SFP Configuration page (optical SFP module)

SFP Configuration

This page controls the SFP configuration of the PTP wireless unit.

Attributes	Value	Units
SFP Port Auto Negotiation	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Sfp Vendor Name	JDSU	
Sfp Vendor OUI	00:01:9c	
Sfp Part Number	PLRXPL-VI-S24-22	
Sfp Revision Level	1	
Sfp Laser Wavelength	850	
Sfp Serial Number	CA51QA098	
Sfp Date Code	101214	

Figure 163 SFP Configuration page (copper SFP module)

SFP Configuration

This page controls the SFP configuration of the PTP wireless unit.

Attributes	Value	Units
SFP Port Auto Negotiation	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SFP Port Auto Neg Advertisement	<input checked="" type="checkbox"/> 1000 Mbps Full Duplex	
	<input checked="" type="checkbox"/> 100 Mbps Full Duplex	
SFP Port Auto Mdx	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Sfp Vendor Name	FINISAR CORP.	
Sfp Vendor OUI	00:90:65	
Sfp Part Number	FCLF8522P2BTL	
Sfp Revision Level	A	
Sfp Serial Number	PM54X88	
Sfp Date Code	120205	

Procedure (only applies when copper SFP module is installed):

- Update the attributes
 - When optical SFP module is installed ([Table 187](#)).
 - When copper SFP module is installed ([Table 186](#)).
- To save changes, click **Submit Updated System Configuration**.

Table 185 SFP Configuration (Optical module) attributes

Attribute	Meaning
SFP Port Auto Negotiation	<p>Disabled: Configuration of the Ethernet interface is forced. This is to be used as a last resort only if auto-negotiation fails.</p> <p>Enabled: Configuration of the Ethernet interface is automatically negotiated (default). This is the preferred setting.</p>

Table 186 SFP Configuration (copper SFP module) attributes

Attribute	Meaning
SFP Port Auto Negotiation	<p>Disabled: Configuration of the fiber interface is forced. This is to be used as a last resort only if auto-negotiation fails.</p> <p>Enabled: Configuration of the fiber interface is automatically negotiated (default). This is the preferred setting.</p>
SFP Port Auto Neg Advertisement	<p>Only displayed when SFP Port Auto Negotiation is set to Enabled.</p> <p>The data rate that the auto-negotiation mechanism will advertise as available on the Ethernet interface (1000 Mbps or 100 Mbps Full Duplex). Select a data rate that is within the capability of the Ethernet link partner. Use the same setting for the Ethernet link partner.</p>
Forced Configuration	<p>Only displayed when SFP Port Auto Negotiation is set to Disabled.</p> <p>This forces the speed and duplex setting of the Ethernet interface. Over-the-air throughput will be capped to the rate of the Ethernet interface at the receiving end of the link. Select a data rate that is within the capability of the Ethernet link partner. Use the same setting for the Ethernet link partner.</p>
Auto Mdx	<p>Disabled: The Auto Medium Dependent Interface (MDI)/Medium Dependent Interface Crossover (MDIX) capability is disabled.</p> <p>Enabled: The Auto Medium Dependent Interface (MDI)/Medium Dependent Interface Crossover (MDIX) capability is enabled.</p>

Authorization Control page

Menu option: **System > Configuration > Authorization Control** (Figure 164).

Authorization control is used when Access Method is configured to **Group Access**, and Encryption Algorithm is configured to **TLS-RSA**. In the HCMP topology, Group Access is the only Access Method supported. The Authorization Control page is hidden if it is not applicable.

When Authorization Method is configured to Whitelist, the ODU will connect only if the authenticated MAC address of the remote unit is in the list of authorized ODUs. With the Blacklist option, the ODU will always connect unless the authenticated MAC address has been added to a list of unauthorized ODUs.

The Authorization Control page allows up to 32 MAC addresses to be entered.

Authorization Control does not require an AES license.

Procedure:

- Select **Whitelist** or **Blacklist**
- Update the MAC Addresses
- To save changes, click **Submit Configuration**.



Note The associated wireless link is automatically dropped if the MAC address of an already-connected ODU is added to the Blacklist or removed from the Whitelist.

Figure 164 Authorization Control page

Authorization

Whitelist must be configured for proper operation.

Authorization Method Whitelist Blacklist

Whitelist data entry

Entry	MAC Address	Enabled
1	00:04:56: 58 : 00 : c0	<input checked="" type="checkbox"/>
2	00:04:56: 58 : 00 : b6	<input checked="" type="checkbox"/>
3	00:04:56: 58 : 00 : 5b	<input checked="" type="checkbox"/>
4	00:04:56: 58 : 00 : 67	<input checked="" type="checkbox"/>
5	00:04:56: 58 : 00 : 6c	<input checked="" type="checkbox"/>
6	00:04:56: 58 : 00 : 85	<input checked="" type="checkbox"/>
7	00:04:56: 58 : 00 : c4	<input checked="" type="checkbox"/>
8	00:04:56: 58 : 01 : 43	<input checked="" type="checkbox"/>
9	00:04:56: 00 : 00 : 00	<input type="checkbox"/>
10	00:04:56: 00 : 00 : 00	<input type="checkbox"/>
...		
29	00:04:56: 00 : 00 : 00	<input type="checkbox"/>
30	00:04:56: 00 : 00 : 00	<input type="checkbox"/>
31	00:04:56: 00 : 00 : 00	<input type="checkbox"/>
32	00:04:56: 00 : 00 : 00	<input type="checkbox"/>

Enable All
Disable All
Clear Configuration

Submit Configuration
Reset Form

Save and Restore Configuration page

Menu option: **System > Configuration > Save And Restore** (Figure 165).

Use the Save & Restore Configuration page to take a snapshot of the latest system configuration as a backup. The file can then be used to restore this unit to a known state, or to configure a replacement unit to the same state. The configuration values are encrypted for security.

Figure 165 Save & Restore Configuration page

Save & Restore Configuration

Save Configuration

A snapshot of the latest system configuration can be saved to a file as a backup. The file can then be used to restore this unit to a known state, or configure a replacement unit to the same state. The configuration values are encrypted for security.

Click the button below to save the configuration file

Restore Configuration

Note: this utility will only restore configuration files that were saved using software version 999.00.

Please select the configuration file to restore

No file selected.

Save the system configuration in the following situations:

- After a new unit has been fully configured as described in this chapter.
- After any change has been made to the configuration.
- Before upgrading the unit to a new firmware version.
- After upgrading the unit to a new firmware version.



Note The restore is only guaranteed to work if the installed firmware version has not been changed since the configuration file was saved. This is why the configuration should always be saved immediately after upgrading the firmware version.



Note The license key is restored automatically if the configuration file is saved and then loaded on the same unit. However, the license key is not restored if the configuration file is loaded on a different unit. Before restoring configuration to a different PTP 700 unit, ensure that a valid license key is installed (with optional capabilities enabled where appropriate).

Most of the configuration can be restored from the backup. However, certain attributes that were part of the configuration are not saved or restored automatically. Use the web interface to reconfigure the following attributes:

- Usernames, passwords and roles for the web-based interface.
- Key of Keys
- Entropy
- HTTPS Private Key
- HTTPS Public Key Certificate
- HTTP Access Enabled
- HTTPS Access Enabled
- Telnet Access Enabled
- HTTP Port Number
- HTTPS Port Number
- Telnet Port Number
- Encryption Algorithm
- Encryption Key
- User-supplied Device Private Key
- User-supplied Device Public Key Certificate
- User-supplied Root CA Certificate
- SNMP Control Of HTTP And Telnet
- SNMP Control of Passwords
- Unit Name

Procedures:

- To save the configuration:
 - Click Save Configuration File.
 - Save the file. The default filename is in the format **MAC-mm-mm-mm_IP-iii-iii-iii-iii.cfg**, where **mm-mm-mm** is MAC address of unit and **iii-iii-iii-iii** is Internet address of unit.
- To restore the configuration:
 - Click **Browse** and navigate to the PC folder containing the saved configuration file (.cfg).
 - Click **Restore Configuration File and Reboot**.
 - Click **OK** to confirm the restore. The configuration file is uploaded and used to reconfigure the new unit to the same state as the old unit. On completion, the unit reboots.



Note If Identity Based User Accounts is Enabled, the restore action can only be taken by a user with the Security Officer role.


See [Creating a user account](#) on page 6-6 to create a new user account for the web-based interface after configuration has been restored.

Reset Configuration page

Menu option: **System > Configuration > Reset Configuration**. Use this page to reset the ODU configuration to default settings, retaining the most recently entered License Key (Figure 166).


The Reset Configuration page resets the configuration to default settings. After successful execution of Reset Configuration, the ODU reboots and is then accessible via the default IP address (i.e. 169.254.1.1).

Figure 166 Reset Configuration page

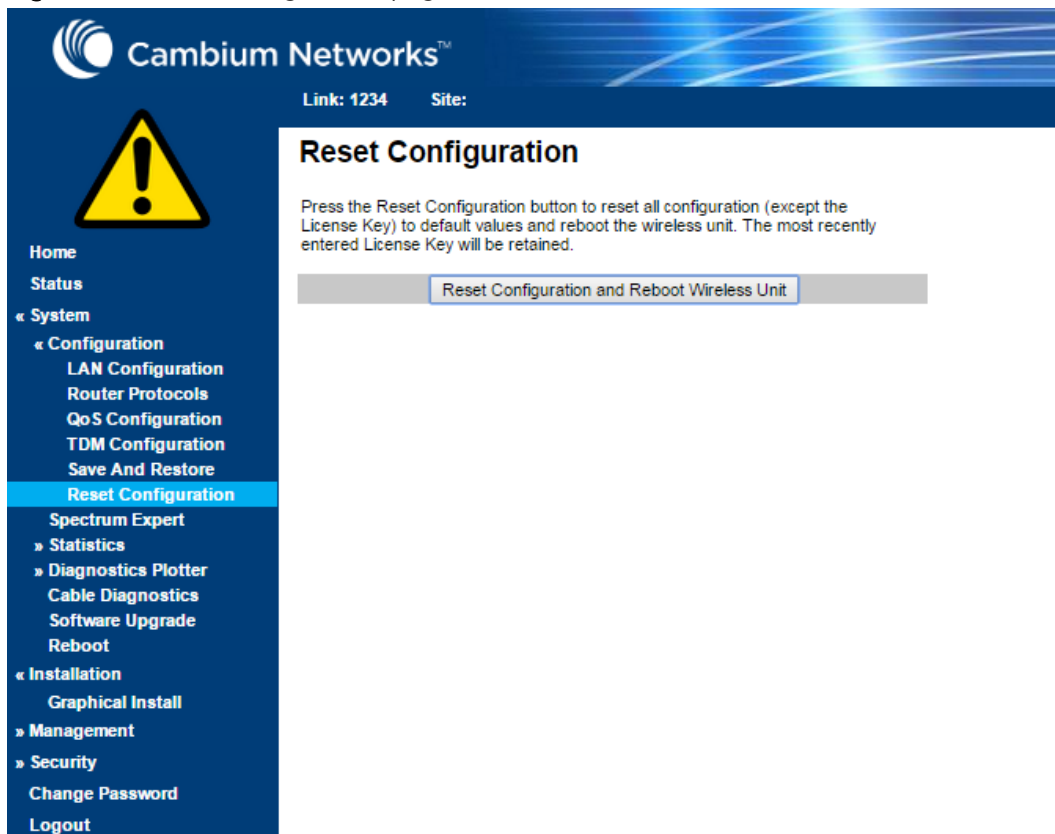

Procedure:

- Click **Reset Configuration**. The user pop up box is displayed to reconfirm:

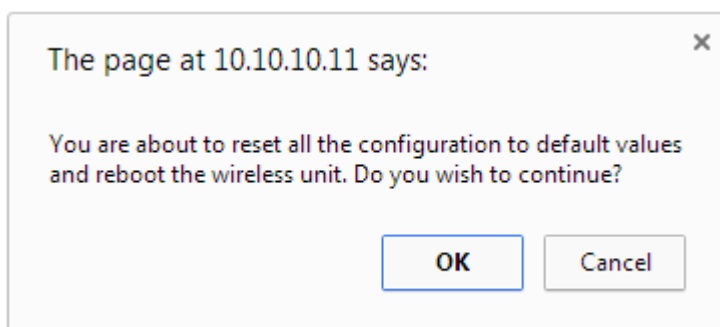

- Click **OK** to restore configuration to the default settings and reboot of unit.

Further reading


For information about...	Refer to...
Erase Configuration	Use this option to erase the entire configuration of the unit. Refer to Resetting all configuration data on page 7-86.

Software Upgrade page

Menu option: **System > Software Upgrade** (Figure 167).

Use this page to upgrade the unit to a new version of PTP 700 operational firmware.

Figure 167 Software Upgrade page

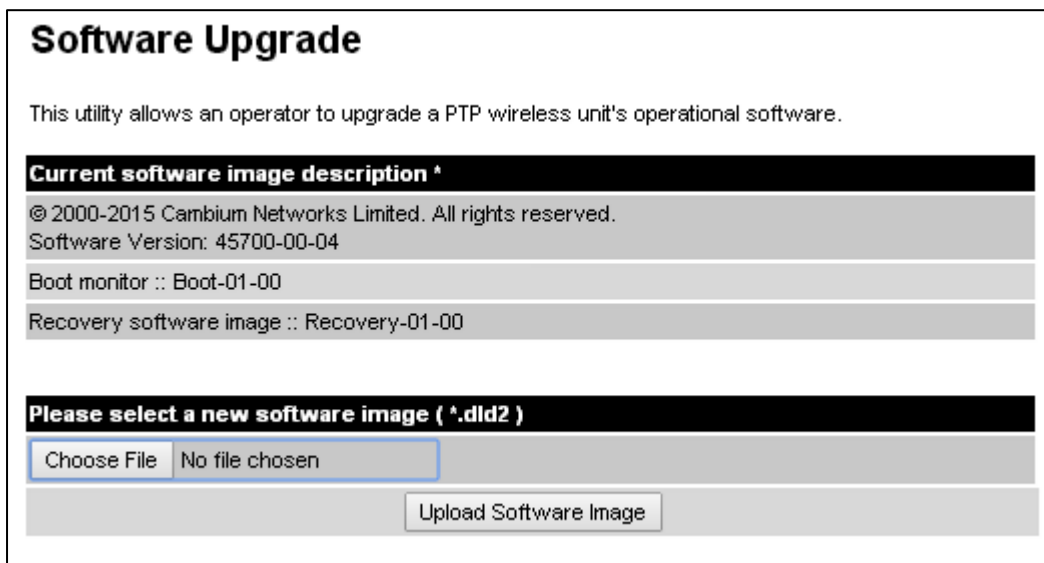

Attention Ensure that the correct units are upgraded, as units cannot easily be downgraded afterwards.



Attention Firmware version must be the same at both ends of the link. Limited operation may sometimes be possible with dissimilar firmware versions, but such operation is not supported by Cambium Networks.



Attention If the link is operational, upgrade the remote end of the link first, then upgrade the local end. Otherwise, the remote end may not be accessible.



Note Separate firmware images are provided for PTP 45700 and PTP 78700. Ensure that the fimeware image is correct for the hardware platform.



Note See [Transition of digital signature algorithms](#) on page 1-78 for details of a transition in digital signatures of replacement firmware.

Preparation:

Obtain the latest firmware from Cambium Support. If this is later than that installed on the PTP 700 unit, perform the procedure below.

Procedure:

- 1 Save the system configuration; see [Save and Restore Configuration page](#) on page 6-77.
- 2 On the Software Upgrade page, click **Browse**. Navigate to the folder containing the downloaded firmware image with file extension DLD3, and click **Open**.
- 3 Click **Upload Software Image**. The Software Upgrade Confirmation page is displayed:

Software Upgrade: Are You Sure?

The tables below compare the image stored in the primary software bank with the image that has just been downloaded. Press the "Program Software Image into Non-Volatile Memory" button to accept the software upgrade.

Current software image description
© 2000-2015 Cambium Networks Limited. All rights reserved. Software Version: 45700-00-04

Uploaded software image description
© 2000-2015 Cambium Networks Limited. All rights reserved. Software Version: 45700-00-05

- 4 Click **Program Software Image into Non-Volatile Memory**. The Progress Tracker page is displayed. On completion, the Software Upgrade Complete page is displayed:

Software Upgrade Complete

The software upgrade was completed Successfully. To complete the upgrade a system reboot is required. Please use the 'Reboot Wireless Unit' button below to reboot the unit.

Current software image description
© 2000-2015 Cambium Networks Limited. All rights reserved. Software Version: 45700-00-05

- 5 Click **Reboot Wireless Unit**, then click **OK** to confirm. The unit reboots with the new firmware installed.
- 6 Save the post-upgrade system configuration; see [Save and Restore Configuration page](#) on page 6-77.



Note The unit will not upload FIPS versions of the firmware unless the unit has the AES encryption and FIPS licenses installed.



Note Users with the Security Officer user role are allowed to upgrade firmware, including swapping between standard (non-FIPS) and FIPS versions.

System Administrator users are allowed to upgrade from one standard version to another standard version, or from one FIPS version to another FIPS version, but are not allowed to swap between standard and FIPS versions.

SSPs are automatically zeroized when the ODU is upgraded from a standard version to a FIPS version, or from a FIPS version to a standard version. See [Creating a user account](#) on page 6-6 to create a new user account for the web-based interface after SSPs have been zeroized.

Management menu

This section describes how to configure web-based management of the PTP 700 unit.

Web-Based Management page

Menu option: **Management > Web** (Figure 168).

Use this page to configure web-based management of the unit.

Figure 168 Web-Based Management page

Attributes	Value	Units
HTTPS Access Enabled	<input type="radio"/> No <input checked="" type="radio"/> Yes	
HTTPS Port Number	<input type="text" value="443"/>	
HTTP Access Enabled	<input type="radio"/> No <input checked="" type="radio"/> Yes	
HTTP Port Number	<input type="text" value="80"/>	
Telnet Access Enabled	<input checked="" type="radio"/> No <input type="radio"/> Yes	
Access Control	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Access Control Internet Address 1	<input type="text" value="1.1.100.27"/>	
Access Control Internet Address 2	<input type="text" value="2001:DB8::28"/>	
Access Control Internet Address 3	<input type="text"/>	
SNMP Control Of HTTP And Telnet	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Control Of Passwords	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
TFTP Client	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Instant Messaging Enabled	<input type="radio"/> No <input checked="" type="radio"/> Yes	
Debug Access Enabled	<input type="radio"/> No <input checked="" type="radio"/> Yes	
Cross Site Request Forgery Protection	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
<input type="button" value="Submit Updated Configuration"/> <input type="button" value="Reset Form"/>		



Attention If the HTTP, HTTPS, Telnet and SNMP interfaces are all disabled, then it will be necessary to use the Recovery image to reset IP & Ethernet Configuration back to defaults to re-enable the interfaces.



Note The HTTP and Telnet interfaces should be disabled if the HTTPS interface is configured. (see [Planning for HTTPS/TLS operation](#) on page 3-72).

Procedure:

- Review and update the attributes (Table 187).
- To save changes, click **Submit Updated Configuration**.

Table 187 Web-Based Management attributes

Attribute	Meaning
HTTPS Access Enabled	<p>Only displayed when HTTPS is configured.</p> <p>No: The unit will not respond to any requests on the HTTPS port.</p> <p>Yes: The unit will respond to requests on the HTTPS port.</p>
HTTPS Port Number	<p>Only displayed when HTTPS is configured. The port number for HTTPS access. A value of zero means the wireless unit uses the default port.</p>
HTTP Access Enabled	<p>No: The unit will not respond to any requests on the HTTP port.</p> <p>Yes: The unit will respond to requests on the HTTP port.</p> <p>Remote management via HTTPS is not affected by this setting.</p>
HTTP Port Number	<p>The port number for HTTP access. A value of zero means the wireless unit uses the default port.</p>
Telnet Access Enabled	<p>No: The unit will not respond to any requests on the Telnet port.</p> <p>Yes: The unit will respond to requests on the Telnet port.</p>
Telnet Port Number	<p>The port number for Telnet access. A value of zero means the wireless unit uses the default port.</p>
Access Control	<p>Enables or disables access control to web-based management by Internet Address.</p>
Access Control Internet Address 1/2/3	<p>A list of up to three IPv4 or IPv6 Addresses permitted to perform web-based management.</p> <p>Only displayed when Access Control is set to Enabled.</p>
SNMP Control of HTTP And Telnet	<p>Disabled: Neither HTTP nor Telnet can be controlled remotely via SNMP.</p> <p>Enabled: Both HTTP and Telnet can be controlled remotely via SNMP.</p>
SNMP Control of Passwords	<p>Enabled: Passwords for identity-based user accounts in the web-based interface can be updated via SNMP. This option can be used together with SNMPv3 to provide a secure means to update passwords from a central network manager.</p> <p>Disabled: Passwords for identity-based user accounts can be updated only via the web-based interface (default).</p>
TFTP Client	<p>Disabled: The unit will not respond to any TFTP firmware download requests.</p> <p>Enabled: Firmware can be downloaded via TFTP, as described in Upgrading firmware using TFTP on page 6-155.</p>
Instant Messaging Enabled	<p>No: Instant Messaging is Disabled.</p> <p>Yes: Instant Messaging is Enabled. The IM interface is under menu option Management > Instant Messaging.</p>

Attribute	Meaning
Debug Access Enabled	Yes: Cambium Technical Support is allowed to access the system to investigate faults.
Cross Site Request Forgery Protection	Enabled: The system is protected against cross-site request forgery attacks at the web-based interface.

Local User Accounts page

Menu option: **Management > Web > Local User Accounts.**

The contents of this page depend upon the setting of Identity Based User Accounts: **Disabled** (Figure 169) or **Enabled** (Figure 170).

Use this page to ensure that user access to the web-based management interface is controlled in accordance with the network operator's security policy. The Identity Based User Accounts option allows multiple users (from one to ten) to access the unit with one of four levels of access: Security Officer, System Administrator, Installer and Read Only. If Identity Based User Accounts are **Enabled**, this procedure may only be performed by a Security Officer.



Note Local User Account Names, Roles and Passwords are sensitive security parameters that can be reset from the Zeroize SSPs page ([Zeroize SSPs page](#)) on page 6-136.

Figure 169 Local User Accounts page (Identity Based User Accounts disabled)

Local User Accounts		
Local User Account Management		
Attributes	Value	Units
Identity Based User Accounts	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
Auto Logout Period	<input type="text" value="10"/>	minutes
Minimum Password Change Period	<input type="text" value="0"/>	minutes
Password Expiry Period	<input type="text" value="0"/>	days
Maximum Number Of Login Attempts	<input type="text" value="3"/>	
Login Attempt Lockout Period	<input type="text" value="1"/>	minutes
Webpage Session Control	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
<input type="button" value="Submit User Account Updates"/> <input type="button" value="Reset To Factory Defaults"/>		



Note Identity Based User Accounts is automatically set to **Enabled** in the FIPS 140-3 secure mode.

Figure 170 Local User Accounts page (Identity Based User Accounts enabled)

Local User Account Management		
Attributes	Value	Units
Identity Based User Accounts	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Auto Logout Period	<input type="text" value="10"/>	minutes
Web Absolute Timeout	<input type="text" value="240"/>	minutes
Minimum Password Change Period	<input type="text" value="0"/>	minutes
Password Expiry Period	<input type="text" value="0"/>	days
Maximum Number Of Login Attempts	<input type="text" value="3"/>	
Login Attempt Lockout Action	<input checked="" type="radio"/> Timeout <input type="radio"/> Disable Account	
Login Attempt Lockout Period	<input type="text" value="1"/>	minutes
Password Expiry Action	<input checked="" type="radio"/> Force Password Change <input type="radio"/> Disable Account	
Password Complexity Configuration		
Minimum Password Length	<input type="text" value="8"/> characters	
Password Can Contain User Name	<input type="radio"/> No <input checked="" type="radio"/> Yes	
Minimum Mandatory Characters	<input type="text" value="Off"/> Lowercase <input type="text" value="Off"/> Uppercase <input type="text" value="Off"/> Numeric <input type="text" value="Off"/> Special	
Maximum Repeated Characters	<input type="text" value="Off"/> Alphabetic <input type="text" value="Off"/> Numeric <input type="text" value="Off"/> Special	
Maximum Consecutive Characters	<input type="text" value="Off"/> Lowercase <input type="text" value="Off"/> Uppercase <input type="text" value="Off"/> Numeric	
Maximum Sequential Characters	<input type="text" value="Off"/> Alphabetic <input type="text" value="Off"/> Numeric	
Maximum Repeated Pattern Length	<input type="text" value="Off"/> characters	
Match Reversed Patterns	<input checked="" type="radio"/> No <input type="radio"/> Yes	
Minimum Characters That Must Change	<input type="text" value="Off"/> characters	
Password Reuse	<input checked="" type="radio"/> Permitted <input type="radio"/> Prohibited	
Special Characters	<input #\$%&'()*+,-.="" :;<='>?@[\\]^_`{ }~"/' type="text" value="!\"/>	
<input type="button" value="Set Default Complexity"/>		

User	Name	Role	Password	Password Confirm	Force Password Change	Disable
1	Serena	Security Officer Show Show	<input type="checkbox"/>	<input type="checkbox"/>
2	Adrian	System Administrator Show Show	<input type="checkbox"/>	<input type="checkbox"/>
3	Ingrid	Installer Show Show	<input type="checkbox"/>	<input type="checkbox"/>
4	Reece	Read Only Show Show	<input type="checkbox"/>	<input type="checkbox"/>
5	readonly2	 Show Show	<input type="checkbox"/>	<input checked="" type="checkbox"/>
6	readonly3	 Show Show	<input type="checkbox"/>	<input checked="" type="checkbox"/>
7	readonly4	 Show Show	<input type="checkbox"/>	<input checked="" type="checkbox"/>
8	readonly5	 Show Show	<input type="checkbox"/>	<input checked="" type="checkbox"/>
9	readonly6	 Show Show	<input type="checkbox"/>	<input checked="" type="checkbox"/>
10	readonly7	 Show Show	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Procedure:

- Choose whether to set Identity Based User Accounts to **Disabled** or **Enabled**.
- Review and update the Local User Account Management attributes (Table 188).
- If Identity Based User Accounts is set to **Enabled**:
 - Review and update the Password Complexity Configuration attributes (Table 189). To return to default values, click **Set Default Complexity**.
 - Review and update up to 10 identity-based user accounts (Table 190).
- If any attributes have been updated, click **Submit User Account Updates**.

Table 188 Local User Account Management attributes

Attribute	Meaning
Identity Based User Accounts	<p>Disabled: Access to the web interface is controlled by a single system administration password.</p> <p>Enabled: Up to 10 users may access the unit.</p>
Auto Logout Period	The time without user activity that elapses before a user is automatically logged out (minutes). A value of zero disables this feature.
Web Absolute Timeout	The time that elapses before a user is automatically logged out (minutes).
Minimum Password Change Period	The minimum time that elapses before a user is allowed to change a password (minutes). A value of zero disables this feature.
Password Expiry Period	The time that elapses before a password expires (days). A value of zero disables this feature.
Maximum Number of Login Attempts	<p>The maximum number of login attempts (with incorrect password) that are allowed before a user is locked out.</p> <p>Also, the maximum number of password change attempts before a user is locked out.</p>
Login Attempt Lockout Action	<p>Only displayed when Identity Based User Accounts is Enabled.</p> <p>Timeout: When a user is locked out, the user is allowed to log in again after a specified period.</p> <p>Disabled: When a user is locked out, the user is disabled.</p>
Login Attempt Lockout Period	<p>Only displayed when Identity Based User Accounts is Disabled.</p> <p>The time that elapses before a locked out user is allowed to log in again (minutes). Only displayed when Login Attempt Lockout Action is set to Timeout.</p>
Password Expiry Action	<p>Only displayed when Identity Based User Accounts is Enabled.</p> <p>The action to be taken by the PTP 700 when a password expires.</p>

Table 189 Password Complexity Configuration attributes

Attribute	Meaning
Minimum Password Length	<p>8..31: The minimum number of characters required in passwords.</p> <p>15..31: The minimum number of characters required in passwords in FIPS Approved mode.</p>
Password Can Contain User Name	<p>No: Passwords must not contain the user name.</p> <p>Yes: Passwords may contain the user name.</p>

Attribute	Meaning
Minimum Mandatory Characters	<p>The minimum number of lowercase, uppercase, numeric and special characters required in passwords.</p> <p>For example, if all values are set to 2, then FredBloggs will be rejected, but FredBloggs(25) will be accepted.</p>
Maximum Repeated Characters	<p>The maximum number of consecutive repeated alphabetic, numeric and special characters permitted in passwords.</p> <p>For example, if all values are set to 2, then aaa, XXX, 999 and \$\$\$ will be rejected, but aa, XX, 99 or \$\$ will be accepted.</p>
Maximum Consecutive Characters	<p>The maximum number of consecutive lowercase, uppercase and numeric characters permitted in passwords.</p> <p>For example, if all values are set to 5, then ALFRED, neuman and 834030 will be rejected.</p>
Maximum Sequential Characters	<p>The maximum number of alphabetic and numeric characters permitted in passwords.</p> <p>For example, if set to 3, then abcd, WXYZ and 0123 will be rejected, but abc, xyz and 123 will be accepted.</p>
Maximum Repeated Pattern Length	<p>The maximum sequence of characters that can be repeated consecutively in passwords.</p> <p>For example, if set to 3, then BlahBlah and 31st31st will be rejected, but TicTicTock and GeeGee will be accepted. Blah-Blah will be accepted because the two sequences are not consecutive.</p>
Match Reversed Patterns	<p>No: Reversed patterns are not checked.</p> <p>Yes: Reversed patterns are checked.</p> <p>For example, if Maximum Repeated Pattern Length is set to 3 and Match Reversed Patterns is set to Yes, then AB1221BA will be rejected.</p>
Minimum Characters That Must Change	<p>The minimum number of password characters that must change every time a password is updated.</p>
Password Reuse	<p>Permitted: A user may reuse a previous password.</p> <p>Prohibited: A user must not reuse a previous password.</p>
Special Characters	<p>User defined set of special characters used in password construction. The only characters permitted in a password are: (a-z), (A-Z), (0-9) and any of the special characters entered here.</p>

Table 190 Identity-based user accounts attributes

Attribute	Meaning
Name	Enter a user name.
Role	Select a role from the list: Security Officer , System Administrator , Installer or Read Only .

Attribute	Meaning
Password	Enter a password for the user. Passwords must comply with the complexity rules (Table 189).
Password Confirm	Retype the password to confirm.
Force Password Change	Force this user to change their password when they next log on.
Disable	Tick the box to disable a user account.



Note At least one locally-authenticated user must be assigned the Security Officer role.

RADIUS Configuration page

Menu option: **Management > Web > Radius Configuration** (Figure 171).

Use this page to configure RADIUS authentication. RADIUS authentication is only available when PTP 700 is configured for Identity-based User Accounts and when RADIUS servers are connected to the network.

Figure 171 RADIUS Configuration page

RADIUS Configuration

Attributes	Value	Units
RADIUS Client	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
RADIUS Primary Server	<input checked="" type="radio"/> Server 1 <input type="radio"/> Server 2	
RADIUS Primary Server Dead Time	<input type="text" value="5"/>	minutes
RADIUS Server Retries	<input type="text" value="2"/>	
RADIUS Server Timeout	<input type="text" value="3"/>	seconds
Authentication Method	<input checked="" type="radio"/> CHAP <input type="radio"/> MS-CHAP-v2	
Authentication Server 1		
RADIUS Server Status	server not yet used	
RADIUS Server Internet Address	<input type="text"/>	
RADIUS Server Authentication Port	<input type="text" value="1812"/>	
RADIUS Server Shared Secret	Enter server shared secret upto 127 alphanumeric, special characters	<input type="button" value="Show"/>
RADIUS Server Shared Secret Confirm	Confirm server shared secret	<input type="button" value="Show"/>
Authentication Server 2		
RADIUS Server Status	server not yet used	
RADIUS Server Internet Address	<input type="text"/>	
RADIUS Server Authentication Port	<input type="text" value="1812"/>	
RADIUS Server Shared Secret	Enter server shared secret upto 127 alphanumeric, special characters	<input type="button" value="Show"/>
RADIUS Server Shared Secret Confirm	Confirm server shared secret	<input type="button" value="Show"/>
<input type="button" value="Submit RADIUS Configuration"/>		



Note Only users with **Security Officer** role are permitted to configure RADIUS authentication.



Note RADIUS is disabled in the FIPS 140-3 Approved Mode.

Procedure:

- Update the attributes ([Table 191](#)).
- Click **Submit RADIUS Configuration**.

Table 191 RADIUS Authentication attributes

Attribute	Meaning
RADIUS Client Enabled	<p>Enabled: PTP 700 users may be authenticated via the RADIUS servers.</p> <p>Disabled: RADIUS authentication is not used. This may only be selected if at least one user with Security Officer privileges exists.</p>
RADIUS Primary Server	Specifies the primary server, determining the order in which the servers are tried.
RADIUS Primary Server Dead Time	Time (in minutes) to hold off trying to communicate with a previously unavailable RADIUS server. Setting the value to zero disables the timer.
RADIUS Server Retries	Number of times the PTP 700 will retry after a RADIUS server fails to respond to an initial request.
RADIUS Server Timeout	Time (in seconds) the PTP 700 will wait for a response from a RADIUS server.
Authentication Method	Method used by RADIUS to authenticate users.
Authentication Server 1 and 2:	
RADIUS Server Status	<p>The status of the RADIUS server. This contains the time of the last test and an indication of success or failure.</p> <p>If the Authentication Server attributes are incorrect, the displayed status is "server config not valid".</p>
RADIUS Server Internet Address	FQDN, IPv4 or IPv6 address of the RADIUS server.
RADIUS Server Authentication Port	Network port used by RADIUS server for authentication services.
RADIUS Server Shared Secret	Shared secret used in RADIUS server communications. May contain alphabetic, numeric, special characters or spaces, but not extended unicode characters. The maximum length is 127 characters.

Attribute	Meaning
RADIUS Server Shared Secret Confirm	Shared secret confirmation.

SSO Configuration page

Menu option: **Management > Web > SSO Configuration** (Figure 172).

Use this page to configure Single Sign On (SSO) authentication. SSO authentication is only available when PTP 700 is configured for Identity-based User Accounts and when a suitable Identity Provider (IdP) is connected to the network.

Figure 172 SSO Configuration page

SSO Configuration

This page controls the Single Sign On configuration.

Attributes	Value	Units
SSO Enable	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
IDP Metadata		
Entity ID	<input type="text" value="https://sso.example-network.com/auth/realms"/>	
Service URL	<input type="text" value="https://sso.example-network.com/auth/realms"/>	
Role Identifier	<input type="text" value="Role"/>	
IDP Public Certificate		
Thumbprint Algorithm: SHA-256		
Thumbprint: ***** b3 b7 80 f0		
Certificate	<input type="button" value="Choose File"/> No file chosen	DER format
SP Metadata		
Unit Entity ID	<input type="text" value="PTP45700_00_04_56_58_00_b8"/>	
SSO Callback URL	<input type="text" value="http://10.130.159.44/saml_auth_resp"/>	
User Role Map		
Enable	IDP User Role	SP User Role
<input checked="" type="checkbox"/>	<input type="text" value="security-officer"/>	Security Officer ▼
<input checked="" type="checkbox"/>	<input type="text" value="system-admin"/>	System Administrator ▼
<input type="checkbox"/>	<input type="text"/>	Read Only ▼
<input type="checkbox"/>	<input type="text"/>	Read Only ▼



Note Only users with **Security Officer** role are permitted to configure SSO authentication.

Procedure:

- Update the attributes (Table 192).
- Click **Submit**.

Table 192 SSO Authentication attributes

Attribute	Meaning
SSO Enable	Disabled: Disables SSO authentication feature. Enabled: Enables SSO authentication feature.
IDP Metadata	
Entity ID	This is the Entity ID of the Identity Provider (IdP) server. It must match the issuer of the SAML Response and the containing Assertion.
Service URL	Specifies the destination within the SAML Request sent to the IdP.
Role Identifier	Identifies the attribute in the SAML Response that contains the user role information sent by the IdP server.
Certificate	Upload or specify the certificate provided by the Identity Provider (IdP) for secure communication.
SP Metadata	
Unit Entity ID	Automatically generated Entity ID for the Service Provider (SP). Can be edited if necessary.
SSO Callback URL	URL to which the SAML Response must be sent back by the IdP.
User Role Map	
Enable	Enables this specific configuration row.
IDP User Role	Specifies the user role that must match the role in Assertions contained in the SAML Response sent by the IdP server.
SP User Role	Specifies the local user role to which the IdP User Role should be mapped during authentication.

Webpage Properties page

Menu option: **Management > Web > Web Properties** (Figure 173).

Use this page to control the display of the web interface.

Figure 173 Webpage Properties page

Webpage Properties		
Properties		
Attributes	Value	Units
Web Properties	<input type="checkbox"/> Disable Spectrum Expert (use old Spectrum Management)	
	<input checked="" type="checkbox"/> Configure Link Registration Timeout Control	
Distance Units	<input checked="" type="radio"/> Metric <input type="radio"/> Imperial	
Use Long Integer Comma Formatting	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Transmitter Mute Control	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Transmitter Channels Control	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
MAC Filtering Control	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
Browser Title	<input type="text" value="\$productName \$ipAddress"/>	
<input type="button" value="Apply Properties"/> <input type="button" value="Reset Form"/>		

Procedure:

- Update the attributes ([Table 193](#)).
- Click Apply Properties.

Table 193 Webpage Properties attributes

Attribute	Meaning
Web Properties	<p>Disable Spectrum Expert (use old Spectrum Management):</p> <ul style="list-style-type: none"> • If not ticked (the default setting), the System Menu includes Spectrum Expert (not Spectrum Management). • If ticked, the System Menu includes Spectrum Management (not Spectrum Expert). <p>Configure Link Registration Timeout Control:</p> <ul style="list-style-type: none"> • If not ticked (the default setting), the Link Registration Timeout and Link Registration Timeout Period controls are hidden. • If ticked, the Wireless Configuration page (Wireless Configuration page on page 6-28) includes the Link Registration Timeout and Link Registration Timeout Period controls.
Distance Units	<p>Metric: Distances are displayed in kilometers or meters.</p> <p>Imperial: Distances are displayed in miles or feet.</p>
Use Long Integer Comma Formatting	<p>Disabled: Long integers are displayed thus: 1234567.</p> <p>Enabled: Long integers are displayed thus: 1,234,567.</p>
Transmitter Mute Control	<p>Disabled: Hides the Enable Transmission attribute.</p> <p>Enabled: Shows the Enable Transmission attribute (System Configuration page on page 6-56).</p>


Attribute	Meaning
Transmitter Channels Control	<p>Disabled: Hides the Transmitter Channels attribute.</p> <p>Enabled: Shows the Transmitter Channels attribute (Wireless Configuration page on page 6-28 and System Configuration page on page 6-56).</p>
MAC Filtering Control	<p>Disabled: Hides the MAC Filtering attribute.</p> <p>Enabled: Shows the MAC Filtering attribute in the LAN Configuration page. See LAN Configuration page on page 6-60.</p> <div style="border: 1px solid black; background-color: #e1f5fe; padding: 5px; margin-top: 10px;">  <p>Note Review MAC Filtering on page 1-47 before enabling the MAC Filtering control.</p> </div>
Send HTTPS Close Notify Alerts	<p>Only displayed when HTTPS is configured.</p> <p>Controls whether or not the HTTPS server sends TLS Close Notify Alerts before it shuts down each socket.</p> <p>Disabled: TLS Close Notify Alerts are not sent before closing each socket. This is the default because these alerts can cause problems with some browsers (e.g. Internet Explorer)</p> <p>Enabled: TLS Close Notify Alerts are sent before closing each socket.</p>
Browser Title	<p>By default, web browser tab titles display PTP 700 model, page title and IP address in the following format:</p> <p>“Cambium PTP 45700 - “ & pageName & “ (IP = ” & ipAddress &”)”</p> <p>To change the default text, enter simple text and optional variables (prefixed with a \$ character). The full list of variables is in Table 194.</p>

Table 194 Browser Title attribute variables

Variable	Meaning
\$groupID	
\$ipAddress	<p>IP Address currently used to identify the ODU, either IPv4 or IPv6 Address, depending upon the setting of IP Address Label in the System Configuration page (Table 176):</p> <ul style="list-style-type: none"> IPv4: \$ipAddress = \$ipv4Address IPv6: \$ipAddress = \$ipv6Address (if not blank) or \$ipv6LinkLocalAddress
\$ipv4Address	IPv4 Address of the ODU, as set in the LAN Configuration page (Table 177).
\$ipv6Address	IPv6 Address of the ODU, as set in the LAN Configuration page (Table 177).
\$ipv6LinkLocalAddress	IPv6 Auto Configured Link Local Address of the ODU. This cannot be updated, but it can be viewed in the LAN Configuration page (Table 177).

Variable	Meaning
\$linkName	Link Name, as set in the System Configuration page (Table 176).
\$masterSlaveMode	Master Slave Mode, as set in the Step 2: Wireless Configuration page (Table 168).
\$productName	The product variant, for example Cambium PTP 700 . Not updateable.
\$pageName	Name of the page currently being browsed.
\$protectionMode	Role and status of the ODU in a Hot Standby link. For example, "Primary Master, Standby".
\$siteName	Site Name, as set in the System Configuration page (Table 176).
\$sysName	Sys Name for this SNMP managed node, as set in the Step 2: SNMP MIB-II System Objects page (Table 201).
\$unitName	

Email Configuration page

Menu option: Management > Email ([Figure 174](#)). Use this page to enable the PTP 700 to generate Simple Mail Transfer Protocol (SMTP) email messages to notify the system administrator when certain events occur.

Figure 174 Email Configuration page

Email Configuration		
Attributes	Value	Units
SMTP Email Alert	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SMTP Enabled Messages	<input checked="" type="checkbox"/> Wireless Link Up Down	
	<input checked="" type="checkbox"/> Channel Change	
	<input checked="" type="checkbox"/> DFS Impulse Interference	
	<input type="checkbox"/> Enabled Diagnostic Alarms	
	<input type="checkbox"/> Main PSU Port Up Down	
	<input type="checkbox"/> Aux Port Up Down	
	<input type="checkbox"/> SFP Port Up Down	
SMTP Server Internet Address	<input type="text"/>	
SMTP Server Port Number	<input type="text" value="25"/>	
SMTP Source Email Address	<input type="text"/>	
SMTP Destination Email Address	<input type="text"/>	
Send SMTP Test Email	<input type="checkbox"/> Yes	
<input type="button" value="Submit Updated Configuration"/> <input type="button" value="Reset Form"/>		

Procedure:

- Update the attributes ([Table 195](#)).
- Click Submit Updated Configuration. The Configuration Change Reboot dialog is displayed.
- Click Reboot Wireless Unit and click OK. The reboot progress message is displayed. On completion, the unit restarts.

Table 195 Email Configuration attributes

Attribute	Meaning
SMTP Email Alert	Controls the activation of the SMTP client.
SMTP Enabled Messages	The SMTP Enabled Messages attribute controls which email alerts the unit will send.
SMTP Server Internet Address	The FQDN, IPv4 or IPv6 Address of the networked SMTP server.
SMTP Server Port Number	The SMTP Port Number is the port number used by the networked SMTP server. By convention the default value for the port number is 25.
SMTP Source Email Address	The email address used by the PTP 700 Series to log into the SMTP server. This must be a valid email address that will be accepted by your SMTP Server.

Attribute	Meaning
SMTP Destination Email Address	The email address to which the PTP 700 Series will send the alert messages.
Send SMTP Test Email	Generate and send an email in order to test the SMTP settings. The tick box will self-clear when Submit is clicked.

Instant Messaging page

Menu option: Management > Instant Messaging (Figure 175).

Use this page to send text-based messages to an operator at the remote end of the wireless link. Type the message (maximum 180 characters) in the edit box and press the **Send** button. The message is added to the message history when it has been received at the remote end of the link.

Instant Messaging is available in PTP and HCMP topologies. At an HCMP Master ODU, select the destination Slave ODU from a list of connected ODUs. HCMP Slaves can exchange messages with the associated Master ODU through this service but HCMP Slaves cannot message each other.

The ODU provides an alert in the Status Bar (Figure 176) if messages are received when the Instant Messaging page is not displayed.



Note Instant Messaging is disabled by default. Enable Instant Messaging using the Web-Based Management page.

Figure 175 Instant Messaging page

Instant Messaging

This page can be used to send messages to remote ODU(s).
To send a message, select the remote ODU, type the message and click Send button.
Messages received from remote ODU will also show up here.

Remote ODU	Message History
<input checked="" type="radio"/> Slave_58_00_C4	<div style="border: 1px solid gray; padding: 5px; min-height: 100px;"> >> Me: Mr Watson - come here - I want to see you. << Other: Right away, Mr. Bell. </div> <div style="border: 1px solid gray; padding: 5px; margin-top: 5px;"> Type a message ... </div> <div style="text-align: right; margin-top: 5px;"> <input type="button" value="Send"/> <input type="button" value="Clear"/> </div>

Figure 176 Unread messages



Diagnostic Alarms page

Menu option: Management > Diagnostic Alarms (Figure 177).

Use this page to select which diagnostic alarms will be notified to the system administrator.

Figure 177 Diagnostic Alarms page

Attributes	Value	Units
Enabled Diagnostic Alarms	<input checked="" type="checkbox"/> Regulatory Band	
	<input checked="" type="checkbox"/> Install Status	
	<input checked="" type="checkbox"/> Install Arm State	
	<input checked="" type="checkbox"/> Unit Out Of Calibration	
	<input checked="" type="checkbox"/> Maximum Link Range Exceeded	
	<input checked="" type="checkbox"/> Incompatible Regulatory Bands	
	<input checked="" type="checkbox"/> Incompatible Master And Slave	
	<input checked="" type="checkbox"/> Port State	
	<input checked="" type="checkbox"/> No Wireless Channel Available	
	<input checked="" type="checkbox"/> SNTP Synchronization Failed	
	<input checked="" type="checkbox"/> Wireless Link Disabled Warning	
	<input checked="" type="checkbox"/> TDD Synchronization Alarm	
	<input checked="" type="checkbox"/> Link Mode Optimization Mismatch	
	<input checked="" type="checkbox"/> Syslog Disabled Warning	
	<input checked="" type="checkbox"/> Syslog Local Nearly Full	
	<input checked="" type="checkbox"/> Syslog Local Wrapped	
	<input checked="" type="checkbox"/> Syslog Client Disabled Warning	
	<input checked="" type="checkbox"/> Data Bridging Status	
	<input checked="" type="checkbox"/> Remaining Full Capacity Trial Time	
	<input checked="" type="checkbox"/> Capacity Variant Mismatch	
<input checked="" type="checkbox"/> TDM Alarms		

Procedure:

- Tick the required alarms. These alarms are described in [Alarms](#) on page 7-24.

- Click Submit Updated Configuration.

Time Configuration page

Menu option: **Management** > Time (Figure 178, Figure 179 and Figure 180). Use this page to set the real-time clock of the PTP 700.

Setting the System Time manually

Use this procedure to set the real-time clock in the PTP 700 without connecting to a networked time server.

If the Time Synchronization Mode attribute is set to **Manual**, it will be necessary to reset the System Time manually after each system reboot.

Procedure:

- If Identity-Based User Accounts is enabled, set Time Minimum Privilege Level
- Set the Time Synchronization Mode attribute to **Manual** (Figure 178).
- Review and update the manual clock attributes (Table 196).
- Click Submit Updated Configuration.

Figure 178 Time Configuration page (SNTP disabled)

Time Configuration		
Attributes	Value	Units
Time Minimum Privilege Level	<input type="radio"/> System Administrator <input checked="" type="radio"/> Security Officer	
Time Synchronization Mode	<input checked="" type="radio"/> Manual <input type="radio"/> SNTP <input type="radio"/> cnMaestro	
Set Time	15 : 30 : 10	
Set Date	2021 ▾ Feb ▾ 15 ▾	
Local Time Settings		
Time Zone	GMT 00.00 ▾	
Daylight Saving	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
<input type="button" value="Submit Updated Configuration"/> <input type="button" value="Reset Form"/>		

Table 196 Manual clock attributes

Attribute	Meaning
Time Minimum Privilege Level	Minimum security level which is permitted to administer Time security settings. Only displayed when Identity Based User Accounts are Enabled on the User Accounts page (Table 188).
Time Synchronization Mode	Manual: the PTP 700 will keep time without connecting to a networked time server.
Set Time	Set hours, minutes and seconds.

Attribute	Meaning
Set Date	Set year, month and day.
Time Zone	Set the time zone offset from Greenwich Mean Time (GMT). To set the clock to UTC time, set Time Zone to GMT 00.00 .
Daylight Saving	Disabled: There is no offset for daylight saving time. Enabled: System clock is moved forward one hour to adjust for daylight saving time. To set the clock to UTC time, set Daylight Saving to Disabled .

Setting the System Clock to synchronize using SNTP

Use this procedure to synchronize the unit with a networked time server:

Procedure:

- If Identity-Based User Accounts is enabled, set Time Minimum Privilege Level
- Set the Time Synchronization Mode attribute to **SNTP** (Figure 179).
- Review and update the SNTP clock attributes (Table 197).
- Click Submit Updated Configuration.

Figure 179 Time Configuration page (SNTP enabled)

Time Configuration

Attributes	Value	Units
Time Minimum Privilege Level	<input type="radio"/> System Administrator <input checked="" type="radio"/> Security Officer	
Time Synchronization Mode	<input type="radio"/> Manual <input checked="" type="radio"/> SNTP <input type="radio"/> cnMaestro	
SNTP Primary Server	<input checked="" type="radio"/> Server 1 <input type="radio"/> Server 2	
SNTP Primary Server Dead Time	<input type="text" value="300"/>	seconds
SNTP Server Retries	<input type="text" value="2"/>	
SNTP Server Timeout	<input type="text" value="3"/>	seconds
SNTP Poll Interval	<input type="text" value="3600"/>	seconds
SNTP Server 1		
SNTP Server Status	01-Sep-2021 14:05:43: OK.	
SNTP Server Internet Address	<input type="text" value="10.130.12.40"/>	
SNTP Server Port Number	<input type="text" value="123"/>	
SNTP Server Authentication Protocol	<input checked="" type="radio"/> None <input type="radio"/> MD5 <input type="radio"/> SHA1	
SNTP Server 2		
SNTP Server Status	Server not yet used	
SNTP Server Internet Address	<input type="text"/>	
SNTP Server Port Number	<input type="text" value="123"/>	
SNTP Server Authentication Protocol	<input type="radio"/> None <input type="radio"/> MD5 <input checked="" type="radio"/> SHA1	
SNTP Server Key Identifier	<input type="text" value="1"/>	
Server Key	<input type="text" value="....."/> Show	
Server Key Confirm	<input type="text" value="....."/> Show	
Status		
SNTP Sync	In Sync	
SNTP Last Sync	01-Sep-2021 14:06:39	
System Clock	01-Sep-2021 14:07:44	
Local Time Settings		
Time Zone	<input type="text" value="GMT 00.00"/> ▼	
Daylight Saving	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
<input type="button" value="Submit Updated Configuration"/> <input type="button" value="Reset Form"/>		

Table 197 SNTP clock attributes

Attribute	Meaning
Time Minimum Privilege Level	Minimum security level which is permitted to administer SNTP security settings. Only displayed when Identity Based User Accounts are Enabled on the User Accounts page (Table 188).
Time Synchronization Mode	SNTP: the ODU will obtain accurate date and time updates from a networked SNTP server.
SNTP Primary Server	Specifies the primary SNTP server, determining the order in which the servers are tried.

Attribute	Meaning
SNTP Primary Server Dead Time	Time (in seconds) to wait before retrying communications with an unresponsive primary SNTP server. Setting the value to zero disables the timer.
SNTP Server Retries	Number of times the PTP will retry after an SNTP server fails to respond.
SNTP Server Timeout	Time (in seconds) the PTP will wait for a response from an SNTP server.
SNTP Poll Interval	The SNTP server polling interval.
SNTP Server 1 and 2:	
SNTP Server Status	Status message reflecting the state of communications with the SNTP server.
SNTP Server Internet Address	The FQDN, IPv4 or IPv6 Address of the networked SNTP server.
SNTP Server Port Number	The port number of the networked SNTP server. By convention the default value for the port number is 123.
SNTP Server Authentication Protocol	Authentication protocol to be used with this SNTP server (None, MD5 or SHA1).
SNTP Server Key Identifier	SNTP key identifier. A key of zeros is reserved for testing.
Server Key	Key used to authenticate SNTP communications. For SHA1, the key must be exactly 40 hexadecimal characters.
Server Key Confirm	Must match the Server Key.
SNTP Sync	This shows the current status of SNTP synchronization. If No Sync is displayed, then review the SNTP Server Internet Address and Port Number. A change of state may generate an SNMP trap or SMTP email alert.
SNTP Last Sync	This shows the date and time of the last SNTP synchronization.
System Clock	This displays the local time, allowing for the Time Zone and Daylight Saving settings.
Local Time Settings:	
Time Zone	Set the time zone offset from Greenwich Mean Time (GMT). To set the clock to UTC time, set Time Zone to GMT 00.00 .
Daylight Saving	Disabled: Daylight saving adjustments will not be applied to the time. Enabled: Daylight saving adjustments will be applied to the time, according to local rules. To set the clock to UTC time, set Daylight Saving to Disabled .

Setting the System Clock to synchronize with the cnMaestro server

Use this procedure to synchronize the unit with system time at a connected cnMaestro server:

Procedure:

- If Identity-Based User Accounts is enabled, set Time Minimum Privilege Level
- Set the Time Synchronization Mode attribute to **cnMaestro** (Figure 180).
- Review and update the SNTP clock attributes (Table 198).
- Click Submit Updated Configuration.

Figure 180 Time Configuration page (cnMaestro enabled)

Time Configuration		
Attributes	Value	Units
Time Minimum Privilege Level	<input type="radio"/> System Administrator <input checked="" type="radio"/> Security Officer	
Time Synchronization Mode	<input type="radio"/> Manual <input type="radio"/> SNTP <input checked="" type="radio"/> cnMaestro	
Local Time Settings		
Time Zone	GMT 00.00 ▼	
Daylight Saving	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
<input type="button" value="Submit Updated Configuration"/> <input type="button" value="Reset Form"/>		

Table 198 cnMaestro clock attributes

Attribute	Meaning
Time Minimum Privilege Level	<p>Minimum security level which is permitted to administer Time security settings.</p> <p>Only displayed when Identity Based User Accounts are Enabled on the User Accounts page (Table 188).</p>
Time Synchronization Mode	<p>cnMaestro: the PTP 700 will synchronize with the cnMaestro server during registration, and thereafter at 24-hour intervals.</p>
Time Zone	<p>Set the time zone offset from Greenwich Mean Time (GMT).</p> <p>To set the clock to UTC time, set Time Zone to GMT 00.00.</p>
Daylight Saving	<p>Disabled: There is no offset for daylight saving time.</p> <p>Enabled: System clock is moved forward one hour to adjust for daylight saving time.</p> <p>To set the clock to UTC time, set Daylight Saving to Disabled.</p>

Syslog Configuration page

Menu option: Management > **Syslog** > **Syslog configuration** (Figure 181).

Use this page to configure system logging. Only users with **Security Officer** role are permitted to configure the syslog client.

Figure 181 Syslog Configuration page

Attributes	Value	Units
Syslog State	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Syslog Client	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Syslog Client Port	514	
Syslog Server 1		
Syslog Server Internet Address	<input type="text"/>	
Syslog Server Port	514	
Syslog Server 2		
Syslog Server Internet Address	<input type="text"/>	
Syslog Server Port	514	
<input type="button" value="Submit Updated Configuration"/> <input type="button" value="Reset Form"/>		



Note To record Coordinated Universal Time (UTC time) in syslog messages, use the Time Configuration page to set Time Zone to **GMT 00.00** and Daylight Saving to **Disabled** ([Time Configuration page](#) on page 6-99).

Procedure:

- Update the attributes ([Table 199](#)).
- Click **Submit Updated Configuration**.

Table 199 Syslog Configuration attributes

Attribute	Meaning
Syslog State	When system logging is enabled, log entries are added to the internal log and (optionally) transmitted as UDP messages to one or two syslog servers.
Syslog Client	Enabled: Event messages are logged. Disabled: Event messages are not logged.
Syslog Client Port	The client port from which syslog messages are sent.
Syslog Server 1 and 2:	
Syslog Server Internet Address	The FQDN, IPv4 or IPv6 Address of the syslog server. Delete the Internet address to disable logging on the syslog server.
Syslog Server Port	The server port at which syslog messages are received.

SNMP pages (for SNMPv3)

This section describes how to configure Simple Network Management Protocol version 3 (SNMPv3) traps using the SNMP Wizard.

Current SNMP Summary (for SNMPv3)

Menu option: **Management > SNMP** (Figure 182).

Use this page to review the current SNMP configuration and start the SNMP Wizard.

Figure 182 Current SNMP Summary page (when SNMP is disabled)

Current SNMP Summary

This page shows a summary of the current SNMP configuration.
Press the 'Continue to SNMP Wizard' button below to change this configuration.

SNMP configuration

Attributes	Value	Units
SNMP Minimum Privilege Level	Security Officer	
SNMP State	Disabled	

Procedure:

- Review the summary.
- If any updates are required, click **Continue to SNMP Wizard**.


Step 1: SNMP Configuration (for SNMPv3)

Menu option: **Management > SNMP**. Part of the SNMP Wizard (Figure 183).

Use this page to enable SNMP, select SNMPv3 and configure access to the SNMP server.

Figure 183 Step 1: SNMP Configuration page (for SNMPv3)

Attributes	Value	Units
SNMP Minimum Privilege Level	<input type="radio"/> System Administrator <input checked="" type="radio"/> Security Officer	
SNMP State	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Access Control	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Access Control Internet Address 1	<input type="text" value="1.11.100.5"/>	
SNMP Access Control Internet Address 2	<input type="text" value="2001:DB8::6"/>	
SNMP Access Control Internet Address 3	<input type="text" value="1.11.100.7"/>	
SNMP Version	<input type="radio"/> v1/2c <input checked="" type="radio"/> v3	
SNMP Security Mode	<input checked="" type="radio"/> MIB-based <input type="radio"/> Web-based	
SNMP Engine ID Format	<input type="radio"/> MAC Address <input type="radio"/> IPv4 Address <input checked="" type="radio"/> Text String <input type="radio"/> IPv6 Address	
SNMP Engine ID Text	<input type="text"/>	
SNMP Port Number	<input type="text" value="161"/>	

Next 

Procedure:

- Set SNMP State to **Enabled**.
- Set SNMP Version to **v3**. The page is redisplayed with SNMPv3 attributes.
- Update the attributes (Table 200).
- Click **Next**.

Table 200 Step 1: SNMP Configuration attributes (for SNMPv3)

Attribute	Meaning
SNMP Minimum Privilege Level	<p>Minimum security level which is permitted to administer SNMP security settings.</p> <p>Only displayed when Identity Based User Accounts are Enabled on the User Accounts page (Table 188).</p>
SNMP State	Enables or disables SNMP.
SNMP Access Control	Enables or disables access control to SNMP management by IP address.
SNMP Access Control Internet Address 1/2/3	<p>A list of up to three IPv4 or IPv6 Addresses permitted to perform SNMP management.</p> <p>Only displayed when SNMP Access Control is set to Enabled.</p>
SNMP Version	SNMP protocol version: v1/2c or v3 .
SNMP Security Mode	<p>MIB-based: SNMPv3 security parameters are managed via SNMP MIBs.</p> <p>Web-based: SNMPv3 security parameters are not available over SNMP, but instead are configured using the SNMP Accounts page, as described in Step 3: SNMP User Policy Configuration (for SNMPv3) on page 6-110.</p>
SNMP Engine ID Format	Specifies whether the Engine ID is generated from the MAC Address, IP4 Address, Text String or IPv6 Address .
SNMP Engine ID Text	Only enabled when SNMP Engine ID Format is set to Text String . Text used to generate the SNMP Engine ID.
SNMP Port Number	The port that the SNMP agent is listening to for commands from a management system.

Step 2: SNMP MIB-II System Objects (for SNMPv3)

Menu option: **Management > SNMP**. Part of the SNMP Wizard ([Figure 184](#)).

Use this page to enter details of the SNMP managed node.

Figure 184 Step 2: SNMP MIB-II System Objects page (for SNMPv3)

Step 2: SNMP MIB-II System Objects		
Attributes	Value	Units
Sys Contact	A.Smith, extn. 3333	
Sys Name	domain.node3	
Sys Location	Telephone closet, 3rd floor	
◀ Back		Next ▶

Procedure:

- Update the attributes ([Table 201](#)).
- Click **Next**.
- The next step depends upon which SNMP Security Mode was selected in the Step 1: SNMP Configuration page:
 - If **Web-based**, go to [Step 3: SNMP User Policy Configuration \(for SNMPv3\)](#) on page 6-110.
 - If **MIB-based**, go to [Confirm SNMP Configuration \(for SNMPv3\)](#) on page 6-114.

Table 201 Step 2: SNMP MIB-II System Objects attributes (for SNMPv3)

Attribute	Meaning
Sys Contact	The name of the contact person for this managed node, together with information on how to contact this person.
Sys Name	An administratively-assigned name for this managed node. By convention, this is the fully qualified domain name of the node.
Sys Location	The physical location of this node, for example Telephone closet, 3rd floor .

Attribute	Meaning
Privacy Protocol	The privacy protocol to be used to access the PTP 700 via SNMP. This is disabled when Security Level is set to No Auth No Priv or Auth No Priv . DES : Data Encryption Standard (DES) symmetric encryption protocol. AES : Advanced Encryption Standard (AES) cipher algorithm.



Note A user configured to use AES privacy protocol will not be able to transmit and receive encrypted messages unless the license key enables the AES capability.

Step 4: SNMP User Accounts Configuration (for SNMPv3)

Menu option: **Management > SNMP**. Part of the SNMP Wizard (Figure 186).

This page is only displayed when SNMP Security Mode is set to **Web-based** in the Step 1: SNMP Configuration page. Use this page to update the SNMP user accounts.

Figure 186 Step 4: SNMP User Accounts Configuration page (for SNMPv3)

Step 4: SNMP User Accounts Configuration

User	Name	Role	Auth/Priv	Passphrase	Passphrase Confirm
1	<input type="text" value="admin"/>	System Administrator ▼	Auth: <input type="text"/>	<input type="text"/>	<input type="text"/>
			Priv: <input type="text"/>	<input type="text"/>	<input type="text"/>
2	<input type="text" value="readonly"/>	Read Only ▼	Auth: <input type="text"/>	<input type="text"/>	<input type="text"/>
			Priv: <input type="text"/>	<input type="text"/>	<input type="text"/>
3	<input type="text" value="readonly1"/>	Disabled ▼			
4	<input type="text" value="readonly2"/>	Disabled ▼			
5	<input type="text" value="readonly3"/>	Disabled ▼			
6	<input type="text" value="readonly4"/>	Disabled ▼			
7	<input type="text" value="readonly5"/>	Disabled ▼			
8	<input type="text" value="readonly6"/>	Disabled ▼			
9	<input type="text" value="readonly7"/>	Disabled ▼			
10	<input type="text" value="readonly8"/>	Disabled ▼			

◀ Back
Next ▶▶

Procedure:

- Update the individual user attributes (Table 203) for up to 10 SNMP users.
- Click **Next**.

Table 203 Step 4: SNMP User Accounts Configuration attributes (for SNMPv3)

Attribute	Meaning
Name	Name to be used by the SNMP user to access the system.
Role	Selects which of the two web-based security profiles are applied to this user: System administrator or Read only . Select Disabled to disable the SNMP account.
Auth/Priv	Indicates whether the Passphrase applies to authentication or privacy protocols.
Passphrase	The phrase to be entered by this SNMP user to access the system using an authentication or privacy protocol. Length must be between 8 and 32 characters. May contain spaces. The Auth Passphrase is hidden when Security Level for this user's Role is set to No Auth No Priv . The Priv Passphrase is hidden when Security Level for this user's Role is set to No Auth No Priv or Auth No Priv .
Passphrase Confirm	Passphrase must be reentered to confirm it has been correctly typed.

Step 5: SNMP Trap Configuration (for SNMPv3)

Menu option: **Management > SNMP**. Part of the SNMP Wizard ([Figure 187](#)).

This page is only displayed when SNMP Security Mode is set to **Web-based** in the Step 1: SNMP Configuration page. Use this page to configure the events that will generate SNMP traps and to set up trap receivers.

Figure 187 Step 5: SNMP Trap Configuration page (for SNMPv3)

Step 5: SNMP Trap Configuration		
Attributes	Value	Units
SNMP Enabled Traps	<input checked="" type="checkbox"/> Cold Start	
	<input checked="" type="checkbox"/> Wireless Link Up Down	
	<input checked="" type="checkbox"/> Channel Change	
	<input checked="" type="checkbox"/> DFS Impulse Interference	
	<input type="checkbox"/> Enabled Diagnostic Alarms	
	<input checked="" type="checkbox"/> Authentication Failure	
	<input type="checkbox"/> Main PSU Port Up Down	
	<input type="checkbox"/> Aux Port Up Down	
Trap Receiver 1		
SNMP Trap Receiver Enabled	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Trap Internet Address	<input type="text" value="1.1.100.16"/>	
SNMP Trap Port Number	<input type="text" value="162"/>	
SNMP Trap User Account	<input type="text" value="User 1: admin"/>	
Trap Receiver 2		
SNMP Trap Receiver Enabled	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Trap Internet Address	<input type="text" value="2001:DB8::17"/>	
SNMP Trap Port Number	<input type="text" value="162"/>	
SNMP Trap User Account	<input type="text" value="User 2: readonly"/>	
<div style="display: flex; justify-content: space-between;"> ◀ Back Next ▶▶ </div>		

Procedure:

- Update the attributes ([Table 204](#)).
- Click **Next**.

Table 204 Step 5: SNMP Trap Configuration attributes (for SNMPv3)

Attribute	Meaning
SNMP Enabled Traps	Select the events that will generate SNMP traps.
SNMP Trap Receiver 1 and SNMP Trap Receiver 2:	
SNMP Trap Receiver Enabled	<p>Disabled: SNMP traps are not sent to the corresponding SNMP Trap Receiver (1 or 2).</p> <p>Enabled: SNMP traps are sent to the corresponding SNMP Trap Receiver (1 or 2).</p>
SNMP Trap Internet Address	The FQDN, IPv4 or IPv6 Address of the SNMP server (trap receiver). This is normally the network management system, but it may be a separate trap receiver.
SNMP Trap Port Number	The server port at which SNMP traps are received.
SNMP Trap User Account	The user name (and associated protocols) to use when sending SNMP traps to the server.

Confirm SNMP Configuration (for SNMPv3)

Menu option: **Management > SNMP**. Part of the SNMP Wizard (Figure 188).

Use this page to review and confirm the updated SNMPv3 configuration of the unit.

Figure 188 Confirm SNMP Configuration page (for SNMPv3) (top and bottom of page shown)

Attributes	Value	Units
SNMP State	Enabled	
SNMP Access Control	Disabled	
•		
Trap Receiver 1		
SNMP Trap Receiver Enabled	Disabled	
<input type="button" value="Confirm SNMP Configuration and Reboot"/>		
<input type="button" value="Back"/>		

Procedure:

- To ensure that the changes take effect, click **Confirm SNMP Configuration and Reboot**. The unit reboots and the changes take effect.

SNMP pages (for SNMPv1/2c)

This section describes how to configure Simple Network Management Protocol version 1 or 2c (SNMPv1 or SNMPv2c) traps using the SNMP Wizard.

Current SNMP Summary (for SNMPv1/2c)

Menu option: **Management > SNMP** (Figure 182).

Use this page to review the current SNMP configuration and start the SNMP Wizard.

Procedure:

- Review the summary.
- If any updates are required, click **Continue to SNMP Wizard**.

Step 1: SNMP Configuration (for SNMPv1/2c)

Menu option: **Management > SNMP**. Part of the SNMP Wizard (Figure 189).

Use this page to enable SNMP, select SNMPv1/2c and configure access to the SNMP server.

Figure 189 Step 1: SNMP Configuration page (for SNMPv1/2c)

Step 1: SNMP Configuration		
Attributes	Value	Units
SNMP Minimum Privilege Level	<input type="radio"/> System Administrator <input checked="" type="radio"/> Security Officer	
SNMP State	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Access Control	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Access Control Internet Address 1	<input type="text" value="1.11.100.5"/>	
SNMP Access Control Internet Address 2	<input type="text" value="2001:DB8::6"/>	
SNMP Access Control Internet Address 3	<input type="text" value="1.11.100.7"/>	
SNMP Version	<input checked="" type="radio"/> v1/2c <input type="radio"/> v3	
SNMP Community String	<input type="text" value="public"/>	
SNMP Port Number	<input type="text" value="161"/>	

Next >>

Procedure:

- Set SNMP State to **Enabled**.
- Set SNMP Version to **v1/2c**. The page is redisplayed with SNMPv1/2c attributes.
- Update the attributes (Table 205).
- Click **Next**.

Table 205 Step 1: SNMP Configuration attributes (for SNMPv1/2c)

Attribute	Meaning
SNMP Minimum Privilege Level	Minimum security level which is permitted to administer SNMP security settings. Only displayed when Identity Based User Accounts are Enabled on the User Accounts page (Table 188).
SNMP State	Enables or disables SNMP.
SNMP Access Control	Enables or disables access control to SNMP management by IP address.
SNMP Access Control Internet Address 1/2/3	A list of up to three IPv4 or IPv6 Addresses permitted to perform SNMP management. Only displayed when SNMP Access Control is set to Enabled .
SNMP Version	SNMP protocol version: v1/2c or v3 .
SNMP Community String	The SNMP community string acts like a password between the network management system and the distributed SNMP clients (PTP 700 ODUs). Only if the community string is configured correctly on all SNMP entities can the flow of management information take place. By convention the default value is set to public .
SNMP Port Number	Enter the port that the SNMP agent is listening to for commands from a management system.

Step 2: SNMP MIB-II System Objects (for SNMPv1/2c)

Menu option: **Management > SNMP**. Part of the SNMP Wizard ([Figure 184](#)). Use this page to enter details of the SNMP managed node. Update the attributes ([Table 201](#)) and click **Next**.

Step 3: SNMP Trap Configuration (for SNMPv1/2c)

Menu option: **Management > SNMP**. Part of the SNMP Wizard (Figure 190).

Figure 190 Step 3: SNMP Trap Configuration page (for SNMPv1/2c)

Step 3: SNMP Trap Configuration		
Attributes	Value	Units
SNMP Trap Version	<input type="radio"/> v1 <input checked="" type="radio"/> v2c	
SNMP Enabled Traps	<input checked="" type="checkbox"/> Cold Start	
	<input checked="" type="checkbox"/> Wireless Link Up Down	
	<input checked="" type="checkbox"/> Channel Change	
	<input checked="" type="checkbox"/> DFS Impulse Interference	
	<input type="checkbox"/> Enabled Diagnostic Alarms	
	<input checked="" type="checkbox"/> Authentication Failure	
	<input type="checkbox"/> Main PSU Port Up Down	
	<input checked="" type="checkbox"/> Aux Port Up Down	
	<input type="checkbox"/> SFP Port Up Down	
Trap Receiver 1		
SNMP Trap Receiver Enabled	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Trap Internet Address	<input type="text" value="2001:DB8::16"/>	
SNMP Trap Port Number	<input type="text" value="162"/>	
Trap Receiver 2		
SNMP Trap Receiver Enabled	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Trap Internet Address	<input type="text" value="1.11.100.17"/>	
SNMP Trap Port Number	<input type="text" value="162"/>	
<< Back		Next >>

Procedure:

- Update the attributes (Table 206).
- Click **Next**.

Table 206 Step 3: SNMP Trap Configuration attributes (for SNMPv1/2c)

Attribute	Meaning
SNMP Trap Version	Select the SNMP protocol version to use for SNMP traps: v1 or v2c .
SNMP Enabled Traps	Select the events that will generate SNMP traps.
SNMP Trap Receiver Enabled	Disabled: SNMP traps are not sent to the corresponding SNMP Trap Receiver (1 or 2). Enabled: SNMP traps are sent to the corresponding SNMP Trap Receiver (1 or 2).
SNMP Trap Internet Address	The FQDN, IPv4 or IPv6 Address of the SNMP server (trap receiver). This is normally the network management system, but it may be a separate trap receiver.
SNMP Trap Port Number	The server port at which SNMP traps are received.

Confirm SNMP Configuration (for SNMPv1/2c)

Menu option: **Management > SNMP**. Part of the SNMP Wizard (Figure 191).

Use this page to review and confirm the updated SNMPv1/2c configuration of the unit.

Figure 191 Confirm SNMP Configuration page (for SNMPv1/2c) (top and bottom of page shown)

Attributes	Value	Units
SNMP State	Enabled	
SNMP Access Control	Enabled	
	•	
SNMP Trap Port Number	162	
SNMP Trap User Account	User 2: readonly	

Confirm SNMP Configuration and Reboot

Back

Procedure:

- To ensure that the changes take effect, click **Confirm SNMP Configuration and Reboot**. The unit reboots and the changes take effect.

Template Manager

Menu option: **Template Manager**

This section describes how to create, import, export and delete custom configuration templates.

Template Description

Use this section to examine the details of an installed standard or custom template.

Figure 192 Template Manager page, Template Description

Attributes	Value	Units
Template Description		
Template Name	Best Performance ▾	
Software Version	03.65	
Serial Number	00:04:56:58:00:b8	
License Compatibility	Yes	
Software Version Compatibility	Yes	

Table 207 Template Description attributes

Attribute	Meaning
Template Name	Displays the details of the selected Template.
Software Version	The firmware version used to create the template. A template cannot be used where the ODU has a newer version than the template.
Serial Number	The MAC Address of the ODU used to create the template.
License Compatibility	<p>Yes: All of the capabilities used in the template are licensed in the ODU License Key.</p> <p>No: One or more of the capabilities used in the template is not licensed in the ODU License Key. The template is not compatible.</p>
Software Version Compatibility	<p>Yes: The firmware version used to create the template is not newer than the firmware installed in the ODU.</p> <p>No: The firmware version used to create the template is newer than the firmware installed in the ODU. The template is not compatible.</p>

Create Template

Use this section to create new custom templates.

Figure 193 Template Manager page, Create Template

Create Template

This feature allows user to save current configuration as template.

Enter template name and click the button below to create a template

Template Type	<input checked="" type="radio"/> New Template <input type="radio"/> Replace Existing Template
Template Name	<input type="text" value="Test Template"/>
Editable Controls	<input checked="" type="checkbox"/> Master Slave Mode <input checked="" type="checkbox"/> Target MAC Address <input checked="" type="checkbox"/> Link Name <input checked="" type="checkbox"/> Group ID <input checked="" type="checkbox"/> Maximum Transmit Power <input checked="" type="checkbox"/> Installation Mode <input checked="" type="checkbox"/> IP Configuration <input checked="" type="checkbox"/> Spectrum Management Control <input checked="" type="checkbox"/> Frequency Control
<input type="button" value="Create Template"/>	

Table 208 Template Description attributes

Attribute	Meaning
Template Type	<p>New Template: Create a new custom template in an empty template slot.</p> <p>Replace Existing Template: Create a new custom template to replace an existing template, overwriting the occupied template slot.</p>
Existing Template	Select the existing template to be overwritten.
Template Name	Enter a descriptive and unique name for the new template.
Editable Controls	Select the attributes that will be available for the Installer user to configure as part of installation. For attributes that are not selected, the current value will be saved in the template.

Import Template

Use this section to import a template file from a management device into an empty template slot on the ODU.

Procedure:

- Click the Choose File button and select a template file from the file system of the management device. Template files have a “.template” extension.
- Click **Import Template File**.

Figure 194 Template Manager page, Import Template

Import Template

This feature allows user to import the template file in device.

Please select the template file to import

Choose File Test Templa...02.template

Import Template File

Export Template

Use this section to export a custom template file to a management device.

Procedure:

- Select the Template to export.
- Click **Export Template File**.

Figure 195 Template Manager page, Export Template

Export Template

This feature allows user to export the template file saved in device.

Select template and click the button below to export the template file

Template Name Test Template 002 ▼

Export Template File

Delete Template

Use this section to delete a custom template file on the ODU, leaving an empty template slot.

Procedure:

- Select the custom template to export, or select **Delete All Templates**.
- Click **Delete Template**.

Figure 196 Template Manager page, Delete Template

Delete Template

This feature allows user to delete the template file saved in device.

Select template and click the button below to delete the template file

Template Name Delete All Templates ▼

Delete Template

Security menu

This section describes how to configure security options using the Security Wizard.

To configure security for the FIPS 140-3 approved mode, read this section and additionally read [Configuring security for FIPS 140-3 applications](#) on page 6-137.



Attention Ensure that the operator's security requirements are configured before connecting the PTP 700 to the network. Otherwise, security may be compromised.

Preparation

Obtain the necessary cryptographic material as described in:

- [Using the Security Wizard](#) on page 3-69.
- [Planning for wireless encryption](#) on page 3-70.
- [Planning for HTTPS/TLS operation](#) on page 3-72.
- [Planning for protocols and ports](#) on page 3-73.

Ensure that the ODU has the AES license. If necessary, order the necessary AES capability upgrade, generate a license key ([Generating license keys](#) on page 6-2) and enter it on the Software License Key page ([Software License Key page](#) on page 6-16).

On the Local User Accounts page ([Local User Accounts page](#) on page 6-85), check that:

- Either: Identity Based User Accounts are set to **Disabled**,
- Or: Identity Based User Accounts are set to **Enabled** and the current user's role is **Security Officer**.

Security Configuration Wizard page

Menu option: **Security**. Displayed only when AES encryption is enabled by license key ([Figure 197](#)). Use this page to review the current security configuration of the unit.

Figure 197 Security Configuration Wizard page

Security Configuration Wizard

This page shows a summary of the current security configuration.
Press the 'Continue to Security Wizard' button below to change this configuration.

Security configuration

Attributes	Value	Units
Key of Keys	Not configured	
DRNG Entropy	Not configured	
User Defined Security Banner	<div style="border: 1px solid blue; height: 100px; width: 100%;"></div>	
Require Acknowledgement Of Notices	No	
Display Login Information	No	
HTTPS Access Enabled	No	
Encryption Algorithm	TLS RSA	
TLS Minimum Security Level	None	
Device Certificate	Factory	
Authorization Method	Blacklist	
HTTP Access Enabled	Yes	
HTTP Port Number	80	
Telnet Access Enabled	No	
SNMP Control Of HTTP And Telnet	Enabled	
SNMP Control Of Passwords	Disabled	
TFTP Client	Enabled	
Debug Access Enabled	Yes	
Cross Site Request Forgery Protection	Enabled	

To continue with the Security Wizard, click **Continue to Security Wizard**.

Security options

Menu option: **Security**. Part of the Security Wizard (Figure 198).

Select optional security features.

Keys of Keys, Entropy, and HTTP and Telnet Options are always enabled.

Set the remaining options to **No** to disable the associated feature, or set to **Yes** to enable the associated feature. Enabled features are configured in the remaining pages of the Security Wizard.


Figure 198 Security Options page

Select Security Configuration Options

This page enables or disables the security features in the ODU.
Key of Keys, Entropy, and HTTP and Telnet Options are always enabled.
Enabled features are configured later in the Security Wizard.

Click on Next to continue.

Key of Keys	Yes
Entropy	Yes
Security Banner	<input checked="" type="radio"/> Yes <input type="radio"/> No
Login Information	<input checked="" type="radio"/> Yes <input type="radio"/> No
HTTPS Configuration	<input checked="" type="radio"/> Yes <input type="radio"/> No
Wireless Security	<input checked="" type="radio"/> Yes <input type="radio"/> No
HTTP and Telnet Options	Yes

Next 

Key of Keys

Menu option: **Security**. Part of the Security Wizard (Figure 199 to Figure 201).

Use this page to enter a Key of Keys to encrypt all sensitive security parameters (SSPs) before they are stored in non-volatile memory.

Figure 199 Key of Keys page

Enter Key of Keys

Enter a 256-bit random number formatted as 64 hexadecimal characters.



For example:
FDDFF8E045AFD2B8C83E19424D8AE9FBE8A31C227155647634079641EAE34995.

Note: Use a different Key of Keys on each ODU. The Key of Keys is used to encrypt Sensitive Security Parameters (SSPs) stored in the unit's non-volatile memory. If the Key of Keys is changed, all of the remaining SSPs must be re-entered.

Click on Next to continue.

Key of Keys	Enter random key of 64 hexadecimal characters	Show
Confirm Key of Keys	Confirm random key	Show

Generate Random Key

Back  **Next** 

Click on the **Show** button to display the entered value as standard text.

Figure 200 Key of Keys page showing entered value

Enter Key of Keys

Enter a 256-bit random number formatted as 64 hexadecimal characters.

For example:
FDDFF8E045AFD2B8C83E19424D8AE9FBE8A31C227155647634079641EAE34995.

Note: Use a different Key of Keys on each ODU. The Key of Keys is used to encrypt Sensitive Security Parameters (SSPs) stored in the unit's non-volatile memory. If the Key of Keys is changed, all of the remaining SSPs must be re-entered.

Click on Next to continue.

Key of Keys	5D24B11121D62F5E19FECEF4A422B011FF264177348592C382ADA3B0D1221183	Hide
Confirm Key of Keys	Confirm random key	Show

Generate Random Key

◀ Back
Next ▶▶

Figure 201 Key of Keys page with configured value

Enter Key of Keys

Enter a 256-bit random number formatted as 64 hexadecimal characters.

For example:
FDDFF8E045AFD2B8C83E19424D8AE9FBE8A31C227155647634079641EAE34995.

Note: Use a different Key of Keys on each ODU. The Key of Keys is used to encrypt Sensitive Security Parameters (SSPs) stored in the unit's non-volatile memory. If the Key of Keys is changed, all of the remaining SSPs must be re-entered.

Click on Next to continue.

Click next to use the new Key of Keys

Thumbprint Algorithm: SHA-256

Thumbprint: ***** b5 53 c2 db

Key of Keys	Show
Confirm Key of Keys	Show

Generate Random Key

◀ Back
Next ▶▶



Note The Key of Keys attribute can be configured using the Security Wizard. It cannot be updated after the Security Wizard is submitted, except by first zeroizing SSPs.

Procedure:

- Enter and confirm the generated Key of Keys.
- Click **Generate Random Key** to enter an internally-generated random key
- Click **Next**.

Entropy

Menu option: **Security**. Part of the Security Wizard (Figure 202 and Figure 203).

Use this page to enter entropy Configure to seed the internal random number algorithm.

Figure 202 Entropy page

Enter Random Number Entropy Input

Enter a 512-bit random number formatted as 128 hexadecimal characters.

For example:
368BF4EE0E771421FD4CE5F8D7E6E7C82AE547D6B852F71A2A850443024625FAD2328F6BAB601102D9455C72CDD5A2FC5BEB64EE26EB846A58A6A268967EA5FE.

Note: Use a different Entropy Input on each ODU. The Entropy Input is used to seed the unit's random number generator.

Click on Next to continue.

Entropy Input	Show
Confirm Entropy Input	Show

◀ Back Next ▶

Figure 203 Entropy page with configured value

Enter Random Number Entropy Input

Enter a 512-bit random number formatted as 128 hexadecimal characters.

For example:
368BF4EE0E771421FD4CE5F8D7E6E7C82AE547D6B852F71A2A850443024625FAD2328F6BAB601102D9455C72CDD5A2FC5BEB64EE26EB846A58A6A268967EA5FE.

Note: Use a different Entropy Input on each ODU. The Entropy Input is used to seed the unit's random number generator.

Click on Next to continue.

Click next to use the new Entropy Input

Thumbprint Algorithm: SHA-256

Thumbprint: ***** 50 0d d3 35

Entropy Input	Show
Confirm Entropy Input	Show

◀ Back Next ▶

Procedure:

- If a valid entropy value exists, then a thumbprint of the Entropy value is displayed. The thumbprint is the final four octets (32 bits) of a SHA2-256 digest of the Entropy value formatted as a text string. If this thumbprint is correct, then take no action. Otherwise, enter the generated value in the Entropy Input and Confirm Entropy Input fields.
- Click **Generate Random Key** to enter an internally-generated random key
- Click **Next**.

Enter User Security Banner

Menu option: **Security**. Part of the Security Wizard (Figure 204).

Use this page to enter a banner that will be displayed every time a user attempts to login to the wireless unit.

Figure 204 Enter User Security Banner page

Enter User Security Banner

Enter banner text to be displayed when users log in to web-based management. Select Yes to require the user to acknowledge the security banner.

Click on Next to continue.

Usage Summary 28 of 1499 characters used

User Defined Security Banner

Text for the Security Banner

Require Acknowledgement Of Notices No Yes

◀ Back Next ▶▶

Below is a presentation of the banner as it will appear on the login page

Text for the Security Banner

I have read, understand and accept the above notice(s)

Procedure:

- Update the User Defined Security Banner (optional).
- Set the Acknowledgement to **No** or **Yes**.
- Click **Next**.

Enter Login Information Settings

Menu option: **Security**. Part of the Security Wizard (Figure 205).

Use this page to choose whether or not to display information about previous login attempts when the user logs into the web interface.

Figure 205 Enter Login Information Settings page

Enter Login Information Settings

Login Information provides details of the most recent successful login and unsuccessful login attempts. An example of Login Information is shown below. Click on Next to continue.

Attributes	Value	Units
Display Login Information	<input type="radio"/> No <input checked="" type="radio"/> Yes	

◀ Back Next ▶▶

Below is a presentation of the Login Information as it will appear on the login page:

Successful login

Time Of Last Login	14-Jun-2017 14:04:15
Internet Address Of Last Login	169.254.1.100

Unsuccessful login attempts

Number Of Unsuccessful Login Attempts	1
New Unsuccessful Login Attempts	0
Time Of Last Unsuccessful Login Attempt	14-Jun-2017 14:04:13
Internet Address Of Last Unsuccessful Login Attempt	169.254.1.100

Procedure:

- Set Display Login Information to **No** or **Yes**.
- Click **Next**.

Enter HTTPS Configuration

Menu option: **Security**. Part of the Security Wizard (Figure 206 and Figure 207).

Use this page to select and upload the HTTPS/TLS Private Key and Public Certificate files.

Figure 206 Enter HTTPS Configuration page

Enter HTTPS Configuration

Upload the RSA Private Key and Public Certificate for the HTTPS interface using 2048-bit key size and SHA256. The certificate subject must be the ODU's IP Address, for example 169.254.1.1. Input must be in Distinguished Encoding Rules (DER) format.

Click on Next to continue.

HTTPS Port Number	<input type="text" value="443"/>	
TLS Private Key	<input type="button" value="Choose File"/> key-1119.der	DER format
TLS Public Certificate	<input type="button" value="Choose File"/> cert-1119.der	DER format

◀ Back Next ▶▶

Figure 207 Configured HTTPS Configuration page

Enter HTTPS Configuration

Upload the RSA Private Key and Public Certificate for the HTTPS interface using 2048-bit key size and SHA256. The certificate subject must be the ODU's IP Address, for example 169.254.1.1. Input must be in Distinguished Encoding Rules (DER) format.

Click on Next to continue.

HTTPS Port Number	<input type="text" value="443"/>	
Click next to use the key from file 10-130-159-44-key.der		
Thumbprint Algorithm: SHA-256		
Thumbprint: ***** 0c fb 8e 2b		
TLS Private Key	<input type="button" value="Choose File"/> No file chosen	DER format
Click next to use the certificate from file 10-130-159-44-cert.der		
Thumbprint Algorithm: SHA-256		
Thumbprint: ***** 85 0b 15 81		
TLS Public Certificate	<input type="button" value="Choose File"/> No file chosen	DER format
<input type="button" value="Back"/>		<input type="button" value="Next"/>



Attention If the certificates expire, your web browser will display security warnings. Always investigate the cause of security warnings and rectify errors in the content or expiry of certificates where necessary. Do not accept or ignore web browser security warnings.

Procedure:

- If a valid TLS private key exists, then a thumbprint of the key is displayed. The thumbprint is the final four octets (32 bits) of a SHA2-256 digest of the private key. If this key is correct, then take no action. Otherwise, click **Browse** and select the generated private key file (.der).
- If a valid TLS public certificate exists, then a thumbprint of the certificate is displayed. The thumbprint is the final four octets (32 bits) of a SHA2-256 digest of the certificate. If this certificate is correct, then take no action. Otherwise, click **Browse** and select the generated certificate file (.der).
- Click **Next**.

Configure Wireless Security

Menu option: **Security**. Part of the Security Wizard (Figure 208 to Figure 212).

Use this page to enable device authentication and authorization, and AES encryption of the wireless link. Wireless link encryption key is used to encrypt all traffic over the PTP 700 wireless link.

Figure 208 Wireless Link Encryption Settings, TLS-RSA

Enter Wireless Link Encryption Settings

Wireless Security provides device authentication and privacy at the wireless interface. Select the same Encryption Algorithm for the local and remote ODUs.

With the TLS RSA option select "Factory" to use the factory-installed key and certificate or "User" to provide a user-generated key and certificate in a later page. Select the minimum security level that can be allowed in the link. With the TLS PSK options, provide a pre-shared key in a later page.

Click on Next to continue.

Attributes	Value	Units
Encryption Algorithm	<input type="radio"/> None <input checked="" type="radio"/> TLS RSA <input type="radio"/> TLS PSK 128-bit <input type="radio"/> TLS PSK 256-bit	
Device Certificate	<input checked="" type="radio"/> Factory <input type="radio"/> User	
TLS Minimum Security Level	AES 256-bit TLS RSA ▼	
Rekey Interval	1440	minutes

◀ Back Next ▶▶

Figure 209 Wireless Link Encryption Settings, User-supplied device certificates

Enter User Device Certificates

Upload the RSA Root CA, Private Key and Public Certificate for device authentication using 2048-bit key size and SHA256. The certificate subject must be the ODU's Unit ESN as 12 hexadecimal characters without punctuation. For example 000456500EF3. The Root CA certificate must form a valid certificate chain with the Public Certificate for the remote ODU. Input must be in Distinguished Encoding Rules (DER) format.

Click on Next to continue.

Device Root CA	Choose File	No file chosen	DER format
Device Private Key	Choose File	No file chosen	DER format
Device Public Certificate	Choose File	No file chosen	DER format

◀ Back Next ▶▶

Figure 210 Wireless Link Encryption Settings, Authorization Control

Enter Authorization settings

Whitelist must be configured for proper operation.

Authorization Method Whitelist Blacklist

Whitelist data entry

Entry	MAC Address	Enabled
1	00:04:56: 58 : 00 : c0	<input checked="" type="checkbox"/>
2	00:04:56: 58 : 00 : b6	<input checked="" type="checkbox"/>
3	00:04:56: 58 : 00 : 5b	<input checked="" type="checkbox"/>
4	00:04:56: 58 : 00 : 67	<input checked="" type="checkbox"/>
5	00:04:56: 58 : 00 : 6c	<input checked="" type="checkbox"/>
6	00:04:56: 58 : 00 : 85	<input checked="" type="checkbox"/>
7	00:04:56: 58 : 00 : c4	<input checked="" type="checkbox"/>
8	00:04:56: 58 : 01 : 43	<input checked="" type="checkbox"/>
9	00:04:56: 00 : 00 : 00	<input type="checkbox"/>
30	00:04:56: 00 : 00 : 00	<input type="checkbox"/>
31	00:04:56: 00 : 00 : 00	<input type="checkbox"/>
32	00:04:56: 00 : 00 : 00	<input type="checkbox"/>

Clear Configuration

Submit Configuration Reset Form

◀ Back Next ▶

Figure 211 Wireless Link Encryption Settings, TLS-PSK

Enter Wireless Preshared Key

Enter a 128-bit random number formatted as 32 hexadecimal characters.

For example:
A6ECBDCAD706A0CFFB3C5CC3E954AE3E.

Use the same Pre-shared Key for the local and remote ODU's. The Pre-shared Key is used to encrypt and decrypt data at the wireless interface.

Click on Next to continue.

Pre-shared Key	Enter wireless pre-shared key of 32 hexadecimal characters	<input type="button" value="Show"/>
Confirm Pre-shared Key	Confirm wireless pre-shared key	<input type="button" value="Show"/>

◀ Back Next ▶

Figure 212 Wireless Link Encryption Settings, TLS-PSK with configured value

Enter Wireless Preshared Key

Enter a 128-bit random number formatted as 32 hexadecimal characters.

For example:
A6ECBDCAD706A0CFFB3C5CC3E954AE3E.

Use the same Pre-shared Key for the local and remote ODUs. The Pre-shared Key is used to encrypt and decrypt data at the wireless interface.

Click on Next to continue.

Click next to use the new Wireless Encryption Key

Thumbprint Algorithm: SHA-256

Thumbprint: ***** 97 78 fa 79

Pre-shared Key	<input style="width: 90%; border: none; border-bottom: 1px solid gray; text-decoration: underline dotted;" type="text"/>	<input style="width: 100%; height: 20px; background-color: green; color: white; border: none;" type="button" value="Show"/>
Confirm Pre-shared Key	<input style="width: 90%; border: none; border-bottom: 1px solid gray; text-decoration: underline dotted;" type="text"/>	<input style="width: 100%; height: 20px; background-color: green; color: white; border: none;" type="button" value="Show"/>

◀ Back
Next ▶

Procedure:

- Select the applicable value in the Encryption Algorithm field.
- For TLS-RSA, select Factory or User device certificates.
- For User device certificates, install Private Key, Public Certificate and Root CA certificate.
- For TLS-RSA and Group Access, configure the Whitelist or Blacklist
- For TLS-PSK, configure the pre-shared key. If a valid encryption key exists, then a thumbprint of the key is displayed. The thumbprint is the final four octets (32 bits) of a SHA2-256 digest of the pre-shared key. If this key is correct, then take no action.
- For TLS-PSK, click **Generate Random Key** to enter an internally-generated random key
- Click **Next**.

HTTP and Telnet options

Menu option: **Security**. Part of the Security Wizard ([Figure 213](#)).

Use this page to configure network management of the PTP 700 using one or more of the following methods: HTTPS, HTTP, Telnet or SNMP.

Figure 213 HTTP and Telnet Settings page

Enter HTTP and Telnet Settings

Configure HTTP, Telnet, TFTP and Debug Access.

WARNING: Management access will be impossible if HTTP, HTTPS and SNMP are all disabled.
To regain access, operate the ODU in recovery mode **WARNING:** Management access will be impossible if HTTP, HTTPS and SNMP are all disabled. To re-gain access, operate the ODU in recovery mode and select "Reset IP and Ethernet Configuration". Click on Next to see a summary of the security configuration.

Attributes	Value	Units
HTTP Access Enabled	<input type="checkbox"/> No <input checked="" type="radio"/> Yes	
HTTP Port Number	<input style="width: 80px;" type="text" value="80"/>	
Telnet Access Enabled	<input checked="" type="radio"/> No <input type="radio"/> Yes	
SNMP Control Of HTTP And Telnet	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
SNMP Control Of Passwords	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
TFTP Client	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Debug Access Enabled	<input type="radio"/> No <input checked="" type="radio"/> Yes	
Cross Site Request Forgery Protection	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	

◀ Back
Next ▶▶



Attention If HTTPS, HTTP, Telnet and SNMP are all disabled, management access will be impossible until the unit is placed in recovery mode.



Note If HTTP, Telnet and SNMP are all disabled, the secure web server becomes the only management tool for the ODU web interface. To reenter the web interface after Step 7 of the Security Wizard, use the URL <https://aa.bb.cc.dd> (where aa.bb.cc.dd is the IP address of the unit).

Review and update the HTTP and Telnet attributes (Table 209) and click **Next**.

Table 209 HTTP and Telnet attributes

Attribute	Meaning
HTTP Access Enabled	<p>No: The unit will not respond to any requests on the HTTP port.</p> <p>Yes: The unit will respond to requests on the HTTP port.</p> <p>Remote management via HTTPS is not affected by this setting.</p>
HTTP Port Number	The port number for HTTP access. Zero means use the default port.
Telnet Access Enabled	<p>No: The unit will not respond to any requests on the Telnet port.</p> <p>Yes: The unit will respond to requests on the Telnet port.</p>
Telnet Port Number	The port number for Telnet access. Zero means use the default port.
SNMP Control of HTTP And Telnet	<p>Disabled: Neither HTTP nor Telnet can be controlled remotely via SNMP.</p> <p>Enabled: Both HTTP and Telnet can be controlled remotely via SNMP.</p>

Attribute	Meaning
SNMP Control of Passwords	Enabled: Passwords for identity-based user accounts in the web-based interface can be updated via SNMP. Use this with SNMPv3 to provide secure password updating from a central network manager. Disabled: Passwords for identity-based user accounts can be updated only via the web-based interface (default).
TFTP Client	Enabled: The unit will respond to TFTP firmware download requests.
Debug Access Enabled	Yes: Cambium Technical Support is allowed to access the system to investigate faults.
Cross Site Request Forgery Protection	Enabled: The system is protected against cross-site request forgery attacks at the web-based interface.

Confirm Security Configuration

Menu option: **Security**. Part of the Security Wizard ([Figure 214](#)).

Use this page to review and confirm the updated security configuration of the unit.


Figure 214 Confirm Security Configuration page

Confirm Security Configuration

Press the button to confirm the security configuration and reboot the ODU.

Attributes	Value	Units
Key of Keys	Modified	
DRNG Entropy	Modified	
User Defined Security Banner		
Require Acknowledgement Of Notices	No	
Display Login Information	Yes	
HTTPS Access Enabled	Yes	
HTTPS Port Number	443	
Private Key	Modified	
Public Certificate	Modified	
Encryption Algorithm	TLS PSK 128-bit	
Wireless Encryption Key	Modified	
HTTP Access Enabled	Yes	
HTTP Port Number	80	
Telnet Access Enabled	No	
SNMP Control Of HTTP And Telnet	Enabled	
SNMP Control Of Passwords	Disabled	
TFTP Client	Enabled	
Debug Access Enabled	Yes	
Cross Site Request Forgery Protection	Enabled	

Confirm Security Configuration and Reboot

 **Back**

Procedure:


- Review all changes that have been made in the Security Wizard.
- To ensure that the changes take effect, click **Commit Security Configuration and Reboot**. The unit reboots and the changes take effect.

Zeroize SSPs page

Menu option: **Security > Zeroize SSPs** (Figure 215).

Use this page if it is necessary to reset the security configuration to default values.

Figure 215 Zeroize SSPs page

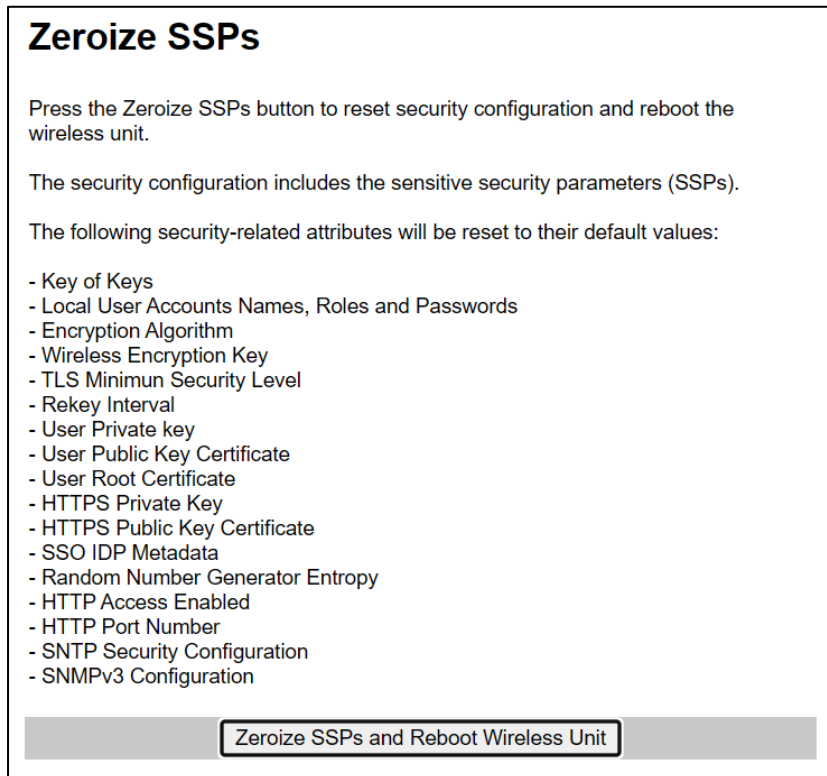

Procedure:

- Click **Zeroize SSPs and Reboot Wireless Unit**.
- Confirm the reboot.



Attention When SSPs have been zeroized, all user accounts are disabled, and the ODU is returned to the “first use” condition. See [Creating a user account](#) on page 6-6 to create a new user account for the web-based interface.

Configuring security for FIPS 140-3 applications

This is a summary of all the configuration tasks that are necessary if the unit is to operate in FIPS 140-3 approved mode. For more information, refer to [FIPS 140-3 mode](#) on page 1-82 and [Security planning](#) on page 3-68.

The common steps for configuring security are described in [Security menu](#) on page 6-122.


Prerequisites for FIPS 140-3 configuration

Use this procedure to confirm that all prerequisites for FIPS 140-3 are ready.

Procedure:

- 1 Ensure that the following cryptographic material has been generated using a FIPS-approved cryptographic generator:
 - Key Of Keys
 - TLS Private Key and Public Certificates (for the correct IP address) with 2048-bit key size, and signed using the SHA2-256 Secure Hash Algorithm.
 - Entropy Configure
 - Wireless Link Encryption Key for AES
- 2 Identify the Port number for HTTPS.
- 3 Ensure that the web browsers used are enabled for HTTPS/TLS operation using FIPS-approved cipher specifications.
- 4 On the **Management, Web** menu, click **Local User Accounts** and check that the current user's role is **Security Officer**.
- 5 Ensure that the installed license key meets all requirements including FIPS 140-3 compatibility:
 - Check that Security Level is "FIPS".
 - Check that Encryption Algorithm is "AES...".
 - If necessary, generate and enter a new license key with the above settings and install as described in [Software License Key page](#) on page 6-16.
- 6 Ensure that the installed firmware version is prefixed "FIPS-". If necessary, upgrade to the latest FIPS validated image as described in [Software Upgrade page](#) on page 6-80.

- To confirm that the above steps have been completed, check that the FIPS 140-3 logo is displayed in the Navigation Bar:

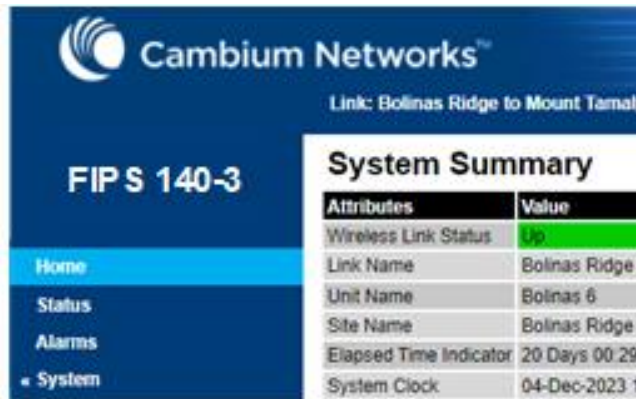

Configuration procedures for FIPS 140-3

To operate the ODU in FIPS 140-3 secure mode:

- Perform the steps in Local [User Accounts](#) page on page 6-85, taking care to configure appropriate identity-based user names and passwords.
- Perform the steps described in [Security menu](#) on page 6-122.

Checking that the unit is in the FIPS 140-3 operational state

Use this procedure to confirm that the unit is now in the FIPS 140-3 operational state:

Procedure:

- On the menu, click **Security** and check the Secure Mode Alarm value.
- If the alarm is "Secure mode is active", the unit is in FIPS 140-3 secure mode and no further action is needed.

Security Configuration Wizard

This page shows a summary of the current security configuration.
Press the 'Continue to Security Wizard' button below to change this configuration.

Security configuration

Attributes	Value	Units
Secure Mode Alarm	Secure Mode Is Active	
Key of Keys	Configured	
Private Key	Configured	
Public Certificate	Configured	

If the alarm is “Secure mode is not configured”, return to [Security menu](#) on page 6-122 and check that all Security Wizard settings are correct for FIPS 140-3.

Security Configuration Wizard

This page shows a summary of the current security configuration.
Press the 'Continue to Security Wizard' button below to change this configuration.

Security configuration

Attributes	Value	Units
Secure Mode Alarm	Secure Mode Is Not Configured	
Key of Keys	Not configured	
Private Key	Not configured	
Public Certificate	Not configured	

If this alarm is displayed, it is also displayed in the System Summary page.

- If the alarm is “Secure mode is configured, but not active”, return to [HTTP and Telnet options](#) on page 6-132 and check that HTTP Access Enabled is set to **No**.

If this alarm is displayed, it is also displayed in the System Summary page.



Note If it is necessary to exit from FIPS 140 2 mode, refer to [Managing security](#) on page 7-57.

External Devices

TD-90 antenna positioner

The External Devices pages are added in the navigation bar when the TD-90 Service is Enabled.

Integrated management of the TD-90 provides a set of web pages with organization and controls for remote management of the TD-90, closely replicating the local web-based management of the TD-90. For further details about managing TD-90, please see *Cambium TD-90 Antenna Positioner User Guide*.



Note The TD-90 antenna positioner cannot be used at an HCMP Master ODU.

System Summary

The System Summary page provides important identification, configuration and overall fault status for the TD-90 antenna positioner.

Figure 216 TD-90 System Summary page

TD90 - System Summary			Remote Side		
Attributes	Value	Units	Attributes	Value	Units
Positioner Name	TD90Master		Remote State	Stopped / Init	
Positioner Serial Number	30251		Remote Geodetic Position		
Positioner Model Number	TD-90		Azimuth	0.0	degrees
Positioner Part Number	C000000L069A		Elevation	0.0	degrees
Manufacturer Date	8MAR19		Latitude	0.000000	
Firmware Version	CMB-1.29.59		Longitude	0.000000	
GPS Status	Connected		Altitude	0.0	meters
Operating Mode	Manual				
Setup Status	Complete				
Error Status	0				
Geodetic Position					
Azimuth	292.2	degrees			
Elevation	0.0	degrees			
Latitude	28.015205				
Longitude	-82.427898				
Altitude	3.3	meters			
Radio / Tracking					
Radio Connection	Connected				
Positioner State	Stopped / Init				

System Setup

The System Setup page provides a single page dedicated for setup and pre-configuration of a TD-90 positioner to work in Mode 1, 2, or 3.

Figure 217 TD-90 System Setup page

TD90 - System Setup

This page controls the setup and pre-configuration of a TD90 positioner.


Attributes	Value	Units
Scan / Peak Settings		
Dwell Time	<input type="text" value="6"/>	seconds
Scan Step Size	10.0	degrees
Peak Step Size	1.0	degrees
Fixed End Mode	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
GPS Settings		
Disable GPS	<input checked="" type="radio"/> No <input type="radio"/> Yes	
Override GPS	<input checked="" type="radio"/> Don't Override <input type="radio"/> Override	
Target GPS Location		
(Optional) Remote Coordinates	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled	
<input type="button" value="Submit Configuration"/> <input type="button" value="Reset Form"/>		

Manual Control

The Manual Control page provides a tool to manually move a TD-90 positioner by slewing around or commanding to a specific azimuth and elevation.

Figure 218 TD-90 Manual Control page

TD90 - Manual Control

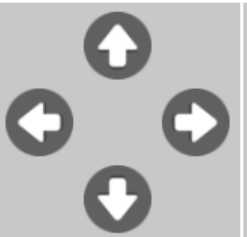Attributes	Value	Units
Slew Controls		
Geodetic Position		
Azimuth	0.0	degrees
Elevation	0.0	degrees
Pedestal Position		
Azimuth	0.0	degrees
Elevation	0.0	degrees
Peaking		
RSSI	0	
Pedestal Angles		
Azimuth	<input type="text" value="0.0"/>	degrees
Elevation	<input type="text" value="0.0"/>	degrees
<input type="button" value="Go"/>		
Controls		
<input style="background-color: green; color: white;" type="button" value="Run"/> <input type="button" value="Stow"/> <input type="button" value="Repeak"/>		

Positioner Configuration

The Positioner Configuration page provides a tool to set TD-90 positioner configuration items such as pedestal limits, stow position, orientation of installation, and unit name.

Figure 219 TD-90 Positioner Configuration page

TD90 - Positioner Configuration

This page allows to set TD90 positioner configuration items such as pedestal limits elevation and orientation.

Attributes	Value	Units
Limits		
Maximum Pedestal Azimuth	200	degrees
Minimum Pedestal Azimuth	-200	degrees
Maximum Geodetic Azimuth	360	degrees
Minimum Geodetic Azimuth	0	degrees
Maximum Elevation	30	degrees
Minimum Elevation	-30	degrees
Current		
Pedestal Azimuth	-162.9	degrees
Geodetic Azimuth	292.2	degrees
Stow Position		
Pedestal Azimuth	0.0	degrees
Elevation	0.0	degrees
Orientation		
Inverted	<input checked="" type="radio"/> No <input type="radio"/> Yes	
<input type="button" value="Submit Configuration"/> <input type="button" value="Reset Form"/>		

Firmware Upgrade

The Software Upgrade page allows updates of TD-90 firmware.

Figure 220 TD-90 Software Upgrade page

TD90 - Software Upgrade

This page allows an operator to upgrade a TD90 positioner's operational software.

Please select a new software image

No file chosen

Compass Setup

The Compass Setup page provides a tool to monitor and configure the onboard TD-90 magnetic compass. Due to the fact that the TD-90 is tactical and moved to various locations where magnetic environments can change, it is necessary to have the ability to monitor and re-calibrate the on-board compass. The compass is only required for Mode 1 and 2 operation and is intended to help speed up the acquisition time to establish a radio link. Mode 3 is the default mode and will establish a radio link with no GPS or Compass aid.

Figure 221 TD-90 Compass Setup page

TD90 - Compass Setup

This page controls the monitoring and configuration of onboard TD90 magnetic compass.

Attributes	Value	Units
Compass Sensor Calibration		
Heading	292.2	degrees
Compass Sensor	291	degrees
Compass Calibration State	●	

Errors

The Errors page provides a window to monitor error conditions. An error indicator does not necessary indicate the TD-90 will not establish a link but may explain why a particular link takes longer to acquire or switch acquisition modes. [Figure 222](#) shows the Errors page when no error conditions have been detected.

Figure 222 TD-90 Errors page

TD90 - Errors

There are no Errors.

Reboot

The Reboot page provides a way to reboot the attached TD-90 from the PTP 700 ODU.

Figure 223 TD-90 Reboot page

TD90 - Reboot

Use this page to reboot the TD90 positioner.

Click the button below to reboot TD90 positioner

Aligning fixed beam antennas

This section describes how to align the antennas for Master and Slave ODUs in the PTP topology, and Slave ODUs in the HCMP topology, using the web interface to assist with alignment, and checking wireless performance after alignment.

Use this procedure for Integrated, Connectorized or Connectorized+Integrated ODUs, or for Beam Steering ODUs with Automatic Alignment disabled.

Hardware installation

Check that hardware installation of ODUs and antennas is complete, and that antennas have been approximately aligned using compass bearing or by reference to landmarks or other geographical features.

Ensure that the ODUs are powered up.

Management connection

Connect suitable management stations (typically laptops) to Master and Slave ODUs, as described in [Connecting to the unit](#) on page 6-4. Log into the local unit as described in [Logging into the web interface](#) on page 6-7.

Arm the ODUs for installation

Use this procedure to confirm that the units are in the armed state, ready for alignment.

In the armed state, the modulation mode is fixed at BPSK 0.63 Single, and automatic transmit power control is disabled.

Procedure:

- Select menu option **Home**. The System Summary page is displayed.
- Check that the Install Arm State is set to **Armed**.
- If the units are not armed, use the installation wizard as described in [Standard Installation](#) menu on page 6-12 to configure Installation Mode to Arm With Tones or Arm Without Tones.

Aligning antennas

Use this procedure to manually align fixed beam integrated or connectorized antennas at Master and Slave ODUs. The goal of antenna alignment is to find the center of the main beam. This is done by adjusting the antennas while monitoring the receive signal level.

Preparation:

Ensure that the following parameters are available:

- Location of both sites (latitude and longitude).
- Bearing to the other end of the link for both sites.
- Prediction of receive signal level for both ends of the link.

- Prediction of link loss.

LINKPlanner provides all of these parameters in the form of an installation report.

If a connectorized ODU is installed at either site with two separate antennas for spatial diversity, refer to [Aligning separate antennas for spatial diversity](#) on page 6-145 before starting alignment.



Note For improved radio performance, mount the integrated ODU at 45 degrees to the vertical; this ensures that side-lobe levels are minimized for interference transmitted or received at zero elevation.

To achieve best results, make small incremental changes to elevation and azimuth.



Attention The action of tightening the mounting bolts can alter antenna alignment. This can be helpful when fine-tuning alignment, but it can also lead to misalignment. To prevent misalignment, continue to monitor receive signal level during final tightening of the bolts.

Procedure:

- 1 Without moving the master antenna, adjust the elevation and azimuth of the slave antenna to achieve the highest receive signal level using one of the following methods:
 - [ODU installation tones](#) on page 6-146
 - [Graphical Install page](#) on page 6-147
- 2 Without moving the Slave antenna, adjust the elevation and azimuth of the Master antenna to achieve the highest receive signal level (using one of the above methods).
- 3 Repeat steps 1 and 2 as necessary to fine-tune the alignment to find the center of the beam.
- 4 When the antennas have been aligned on the center of the beam, verify that the receive level is within the predicted range (from the installation report). If this is not the case, go back to step 1.
The current value of receive level can be verified by using the graphical installation method (see [Graphical Install page](#) on page 6-147) or by selecting menu option **Status** and monitoring the Receive Power attribute on the System Status page.
- 5 If after repeated attempts to align, the receive level still does not lie within the predicted range, this may be because the data provided to the prediction tool (such as LINKPlanner) is inaccurate. For example estimates of path obstructions, antenna heights or site locations may be inaccurate. Check this data and update the prediction as necessary.
- 6 Once the antennas have been aligned correctly, tighten the integrated ODU (or connectorized antenna) mountings. To ensure that the action of tightening does not alter antenna alignment, continue to monitor received signal level.

Aligning separate antennas for spatial diversity

Use this procedure if a connectorized ODU is installed at either site with two separate antennas for spatial diversity.

Procedure:

- 1 Connect the horizontal polarization antenna to the ODU, disconnect the vertical polarization antenna, then perform [Aligning antennas](#) on page 6-144.
- 2 Connect the vertical polarization antenna to the ODU, disconnect the horizontal polarization antenna, then perform [Aligning antennas](#) on page 6-144.
- 3 Re-connect the horizontal polarization antennas. The received signal level should increase.
- 4 Weatherproof the antenna connections at the “H” and “V” interfaces of the ODUs, as described in [Weatherproofing an N type connector](#) on page 5-57.

ODU installation tones

This is the first of two methods that may be used to monitor receive signal level during antenna alignment.

The ODU emits audible tones during installation to assist with alignment. The pitch of the alignment tone is proportional to the received power of the wireless signals. Adjust the alignment of the unit in both azimuth and elevation until the highest pitch tone is achieved.



Note When using ODU installation tones to align connectorized antennas, it may not be possible to hear the tones. To overcome this problem, either use an assistant, or use a stethoscope to give a longer reach.

The tones and their meanings are described in [Table 210](#). In each of the states detailed in the table, align the unit to give the highest pitch tone. The term “wanted signal” refers to that of the peer unit being installed.

Table 210 ODU installation tones

State Name	Tone Description	State Description	Pitch Indication
Free Channel Search	Regular beep	Executing band scan	N/A
Scanning	Slow broken tone	Not demodulating the wanted signal	Rx Power
Synchronized	Fast broken tone	Demodulating the wanted signal	Rx Power
Registered	Solid tone	Both Master and Slave units exchanging Radio layer MAC management messages	Rx Power



Attention If, when in the Synchronized or Registered state, the tone varies wildly, there may be interference or a fast fading link. Installing in this situation may not give a reliable link. Investigate the cause of the problem.

During alignment, the installation tones should exhibit the following behavior:

- **Band scan:** When first started up and from time to time, the Master unit will carry out a band scan to determine which channels are not in use. During this time, between 10 and 15 seconds, the Master unit will not transmit and as a consequence of this neither will the Slave unit. During this time the installation tone on the master unit will drop back to the band scan state, and the Slave unit will drop back to the Scanning state with the pitch of the tone set to the background noise level. Alignment of the unit should cease during this time.
- **Radar detection:** If the unit is operating where mandatory radar avoidance algorithms are implemented, the ranging behavior may be affected. The Master has to monitor the initially chosen channel for 60 seconds to make sure it is clear of radar signals before transmitting. If a radar signal is detected during any of the installation phases, a further compulsory 60 seconds channel scan will take place as the master unit attempts to locate a new channel that is free of radar interference.
- **Ranging:** The PTP 700 Series does not require the user to enter the link range. The Master unit typically takes less than 60 seconds to determine the length of the link being installed. The Master unit will remain in the Scanning state until the range of the link has been established. The Master unit will only move to the Synchronized state when the range of the link has been established.

The Slave unit does not have a ranging process. The slave unit will change to the Synchronized state as soon as the wanted signal is demodulated.


- **Retrying same channel:** If, at the end of the ranging period, the Registered state is not achieved due to interference or other reasons, the Master unit will retry twice more on the same channel before moving to another available channel. Should this occur it may take a number of minutes to establish a link in the Registered state.

Graphical Install page

Menu option: **Installation > Graphical Install** (Figure 224).

This is the second of two methods that may be used to monitor receive signal level during antenna alignment.

Figure 224 Graphical Install page

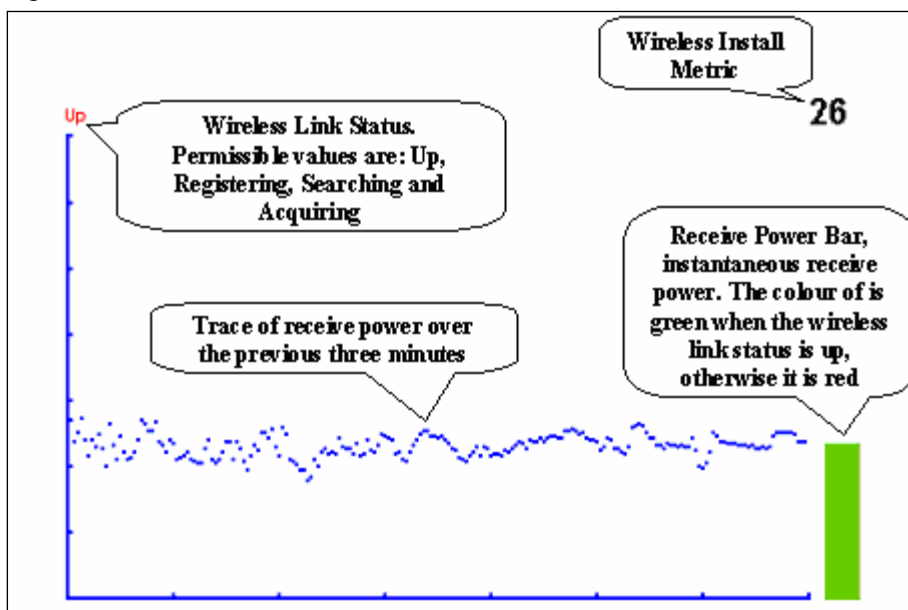

Procedure:

- Check that Wireless Link Status (top left) is “Up”, “Registering”, “Searching” or “Acquiring”.
- While slowly sweeping the antenna, monitor the trace of receive power over the last three minutes.
- Monitor the Receiver Power Bar (bottom right). Green signifies that the wireless link is up and red signifies all other states.
- Monitor the Wireless Install Metric (top right). This is the instantaneous receive power in dBm + 110.



Note To access the PDA version of the graphical installation tool, use this URL - <http://<ip-address>/pda.cgi>. This link is only available to system administrators.

Disarming the units

When antenna alignment is complete, use this procedure to disarm both units in the link in order to:

- Turn off the audible alignment aid.
- Enable adaptive modulation.
- Fully enable spectrum management features (such as DSO, if configured).
- Clear unwanted installation information from the various systems statistics.
- Store the link range for fast link acquisition on link drop.
- Enable higher data rates.



Note After 6 hours, the units will be disarmed automatically, provided that they are armed and that the link is up.

Procedure:

- Select menu option **Installation**. The Disarm Installation page is displayed (Figure 119).
- Click **Disarm Installation Agent**. The confirmation page is displayed (Figure 225).

Figure 225 Optional post-disarm configuration

Installation Disarmed

The installation agent has been successfully disarmed.

To complete the installation process it is recommended that you now visit the [Configuration](#) page and enter the link name and location description fields and optionally save a [backup](#) copy of the link configuration.

You may also wish to visit the [Spectrum Management](#) page and configure the wireless link channel utilization

Comparing actual to predicted performance

For at least one hour of operation after disarming, use this procedure to monitor the link to check that it is achieving predicted levels of performance. LINKPlanner provides the prediction in the form of an installation report.

Procedure:

- Select menu option **System > Statistics**. The System Statistic page is displayed (Figure 226).
- Monitor the following attributes:
 - Link Loss
 - Transmit Data Rate
 - Receive Data Rate

Figure 226 Statistics to be monitored after alignment

System Statistics					
Attributes	Value				Units
System Histograms					
Transmit Power	25.0,	17.5,	-15.0,	14.0	dBm
Receive Power	-37.2,	-64.0,	-110.0,	-51.3	dBm
Vector Error	7.2,	-19.6,	-31.0,	-29.4	dB
Link Loss	110.8,	79.6,	0.0,	107.3	dB
Signal Strength Ratio	0.7,	0.0,	-1.0,	0.0	dB
Transmit Data Rate	20.40,	14.73,	0.00,	20.40	Mbps
Receive Data Rate	20.40,	9.14,	0.00,	20.40	Mbps
Aggregate Data Rate	40.80,	23.88,	0.00,	40.80	Mbps
Histogram Measurement Period	00:07:46				
<input type="button" value="Reset System Histogram Measurement Period"/>					

For more information on the System Statistics page, refer to [System Statistics page](#) on page 7-59.

Beam Steering ODU automatic alignment

This section describes how to align Beam Steering ODUs with Automatic Alignment enabled.

Hardware installation

Check that hardware installation of ODUs is complete, and that the integrated antennas have been approximately aligned using compass bearing or by reference to landmarks or other geographical features.

Ensure that the ODUs are powered up.

Management connection

Connect suitable management stations (typically laptops) to Master and Slave ODUs, as described in [Connecting to the unit](#) on page 6-4. Log into the local unit as described in [Logging into the web interface](#) on page 6-7.

Configure the ODUs for installation with automatic alignment

Use the Wireless Configuration page of the Installation Wizard to configure:

- Automatic Alignment = Enabled
- Null Steering Control = Enabled
- Installation Mode = Arm Without Tones

Confirm the configuration and reboot Master and Slave ODUs.

Automatic alignment

When the ODU is armed for installation with automatic alignment enabled, alignment proceeds as part of link establishment, as follows:

- The Master ODU transmits a downlink acquisition signal using the sector antenna pattern
- The Slave ODU detects the downlink acquisition signal and carries out a coarse beam scan to find the beam with the greatest receive signal strength.
- The Slave ODU then carries out a localized fine beam scan to refine the optimum antenna beam.
- The Slave ODU transmits an uplink acquisition signal.
- The Master ODU detects the uplink acquisition signal and carries out coarse and fine beam scans.
- The link is established using aligned antennas at Master and Slave, and transitions to the OFDM modulation, starting at BPSK 0.63 Single.

Monitor progress of the installation process using the Alignment Status control on the System Status web page.

Disarming the units

When antenna alignment is complete, use this procedure to disarm both units in the link in order to:

- Enable adaptive modulation.
- Fully enable spectrum management features (such as DSO, if configured).
- Clear unwanted installation information from the various systems statistics.
- Store the link range for fast link acquisition on link drop.
- Enable higher data rates.



Note After 6 hours, the units will be disarmed automatically, provided that they are armed and that the link is up.

Procedure:

- Select menu option **Installation**. The Disarm Installation page is displayed (Figure 119).
- Click **Disarm Installation Agent**. The confirmation page is displayed (Figure 227).

Figure 227 Optional post-disarm configuration

Installation Disarmed

The installation agent has been successfully disarmed.

To complete the installation process it is recommended that you now visit the [Configuration](#) page and enter the link name and location description fields and optionally save a [backup](#) copy of the link configuration.

You may also wish to visit the [Spectrum Management](#) page and configure the wireless link channel utilization

Comparing actual to predicted performance

For at least one hour of operation after disarming, use this procedure to monitor the link to check that it is achieving predicted levels of performance. LINKPlanner provides the prediction in the form of an installation report.

Procedure:

- Select menu option **System > Statistics**. The System Statistic page is displayed (Figure 228).
- Monitor the following attributes:
 - Link Loss
 - Transmit Data Rate
 - Receive Data Rate

Figure 228 Statistics to be monitored after alignment

System Statistics					
Attributes	Value			Units	
System Histograms					
Transmit Power	25.0,	17.5,	-15.0,	14.0	dBm
Receive Power	-37.2,	-64.0,	-110.0,	-51.3	dBm
Vector Error	7.2,	-19.6,	-31.0,	-29.4	dB
Link Loss	110.8,	79.6,	0.0,	107.3	dB
Signal Strength Ratio	0.7,	0.0,	-1.0,	0.0	dB
Transmit Data Rate	20.40,	14.73,	0.00,	20.40	Mbps
Receive Data Rate	20.40,	9.14,	0.00,	20.40	Mbps
Aggregate Data Rate	40.80,	23.88,	0.00,	40.80	Mbps
Histogram Measurement Period	00:07:46				
Reset System Histogram Measurement Period					

For more information on the System Statistics page, refer to [System Statistics page](#) on page 7-59.

Force Realignment

The menu item **Beam Steering Antenna** displays only on the PTP 45700 Beam Steer ODU.

Figure 229 Beam Steering Antenna page

Beam Steering Antenna

This page controls the configuration of beam steering antenna.

Attributes	Value	Units
Automatic Alignment	Enabled	
Null Steering Control	Disabled	
Minimum Azimuth	-60	degrees
Maximum Azimuth	60	degrees
Minimum Elevation	-15	degrees
Maximum Elevation	15	degrees

Force Realignment

Force realignment initiates the automatic alignment of the beam-steering antenna. The beam steering antenna will realign itself to point towards the peer radio.

Force Realignment

The alignment orientation saves in the data manager upon the completion of alignment for the first time after traversing the Installation Wizard and configuring the ODU. This is useful for fixed installations, but there are situations where operators transport and reinstall the ODUs at a different location or want to re-run the alignment to verify or optimize the link.

To initiate the automatic alignment of the beam-steering antenna, use the **Force Realignment** button on either or both Master and Slave beam-steer ODUs.

Automatic alignment at one end of a link

Beam Steering ODUs will normally be used in pairs, in a link where both ends have automatic alignment enabled, with installation as described in [Beam Steering ODU automatic alignment](#). However, it is possible to create a link between one ODU with automatic alignment and one ODU with a fixed beam antenna. In this case, a modified installation procedure is required, as detailed below:

Automatic alignment at the Slave

- 1 Mechanically install Master and Slave ODUs with approximate alignment based on compass bearing or landmarks.
- 2 Arm the Master and Slave ODUs for installation.
- 3 The Slave ODU will search for the downlink acquisition signal and complete coarse and fine automatic alignment, and the link will establish with OFDM modulation (BPSK 0.63 Single).
- 4 Manually align the antenna at the Master ODU for maximum received signal strength.
- 5 Disarm installation at Master and Slave ODUs.

Automatic alignment at the Master

- 1 Mechanically install Master and Slave ODUs with approximate alignment based on compass bearing or landmarks.
- 2 Arm the Master and Slave ODUs for installation.
- 3 The Slave ODU will search for the downlink acquisition signal and transmit the uplink acquisition signal immediately.
- 4 The Master ODU will complete coarse and fine automatic alignment, and the link will establish with OFDM modulation (BPSK 0.63 Single).
- 5 Manually align the antenna at the Slave ODU for maximum received signal strength.
- 6 Disarm installation at Master and Slave ODUs.

Other configuration tasks

This section describes other configuration tasks.

Connecting to the network

Use this procedure to complete and test network connections.

Procedure:

- 1 If a management PC is connected directly to the PTP 700, disconnect it.
- 2 Confirm that all ODU Ethernet interface cables (PSU, SFP and Aux) are connected to the correct network terminating equipment or devices.

If Main PSU Port is not allocated to the Data or Management services, it is not necessary to connect the PSU LAN port to network terminating equipment.
- 3 Test that the unit is reachable from the network management system by opening the web interface to the management agent, or by requesting ICMP echo response packets using the Ping application. For in-band management, test that both units are reachable from one PC.

If the network management system is remote from the sites, either ask co-workers at the management center to perform this test, or use remote login to the management system.
- 4 Test the data network for correct operation across the wireless link. This may be by requesting ICMP echo response packets between hosts in the connected network segments, or by some more structured use of network testing tools.
- 5 Monitor the Ethernet ports and wireless link to confirm that they are running normally. For instructions, see [System Summary page](#) on page 7-2 and [Standard System Status page](#) on page 7-3.

Upgrading firmware using TFTP

Use this procedure to upgrade firmware remotely using Trivial FTP (TFTP) triggered by SNMP.

Procedure:

- 1 Check that the TFTP client is enabled. Refer to [Web-Based Management](#) page on page 6-83.
- 2 Set tFTP attributes as described in [Table 211](#).
- 3 Monitor tFTP attributes as described in [Table 212](#).
- 4 Reboot the ODU as described in [Rebooting the unit](#) on page 7-89.

Table 211 Setting tFTP attributes

Attribute	Meaning
tFTPServerInternetAddress	<p>The FQDN, IPv4 or IPv6 address of the TFTP server from which the TFTP software upgrade file Name will be retrieved.</p> <p>For example, to set the TFTP server IP address for the unit at 10.10.10.10 to the IPv4 address 10.10.10.1, enter this command:</p> <pre>snmpset_d.exe -v 2c -c public 10.10.10.10 .iso.3.6.1.4.1.17713.7.9.19.0 a 10.10.10.1</pre>
tFTPServerPortNumber	<p>This setting is optional. The port number of the TFTP server from which the TFTP firmware upgrade file name will be retrieved (default=69).</p>
tFTPSoftwareUpgrade FileName	<p>The filename of the firmware upgrade to be loaded from the TFTP server.</p> <p>For example, to set the TFTP firmware upgrade filename on 10.10.10.10 to "B1095.dld", enter this command:</p> <pre>snmpset_d.exe -v 2c -c public 10.10.10.10 .iso.3.6.1.4.1.17713.7.9.7.0 s B1095.dld</pre>
tFTPStartSoftware Upgrade	<p>Write "1" to this attribute to start the TFTP firmware upgrade process. The attribute will be reset to 0 when the upgrade process has finished.</p> <p>For example, enter this command:</p> <pre>snmpset_d.exe -v 2c -c public 10.10.10.10 .iso.3.6.1.4.1.17713.7.9.8.0 i 1</pre>

Table 212 Monitoring tFTP attributes

Attribute	Meaning
tFTPSoftwareUpgradeStatus	<p>This is the current status of the TFTP firmware upgrade process. Values:</p> <ul style="list-style-type: none"> idle(0) uploadinprogress(1) uploadsuccessfulprogrammingFLASH(2) upgradesuccessfulreboottorunthenewsoftwareimage(3) upgradedfailed(4). <p>For example, enter this command:</p> <pre>snmpget_d.exe -v 2c -c public 10.10.10.10 .iso.3.6.1.4.1.17713.7.9.9.0</pre>
tFTPSoftwareUpgradeStatus Text	<p>This describes the status of the TFTP firmware upgrade process, including any error details.</p> <p>For example, enter this command:</p> <pre>snmpget_d.exe -v 2c -c public 10.10.10.10 .iso.3.6.1.4.1.17713.7.9.10.0</pre>
tFTPSoftwareUpgradeStatus AdditionalText	<p>This is used if tFTPSoftwareUpgradeStatusText is full and there are more than 255 characters to report. It contains additional text describing the status of the TFTP firmware upgrade process, including any error details.</p> <p>For example, enter this command:</p> <pre>snmpget_d.exe -v 2c -c public 10.10.10.10 .iso.3.6.1.4.1.17713.7.9.11.0</pre>

Chapter 7: Operation

This chapter provides instructions for operators of the PTP 700 wireless Ethernet bridge.

The following topics are described in this chapter:

- [System summary and status](#) on page 7-2
- [Rebooting and logging out](#) on page 7-22
- [Alarms, alerts and messages](#) on page 7-24
- [Spectrum Management](#) on page 7-32
- [Managing security](#) on page 7-57
- [System statistics](#) on page 7-59
- [Recovery mode](#) on page 7-80.

System summary and status


This section describes how to use the summary and status pages to monitor the status of the Ethernet ports and wireless link.

System Summary page

Menu option: **Home** (Figure 230).

This page contains a high-level summary of the status of the wireless link and associated equipment.

Figure 230 System Summary page

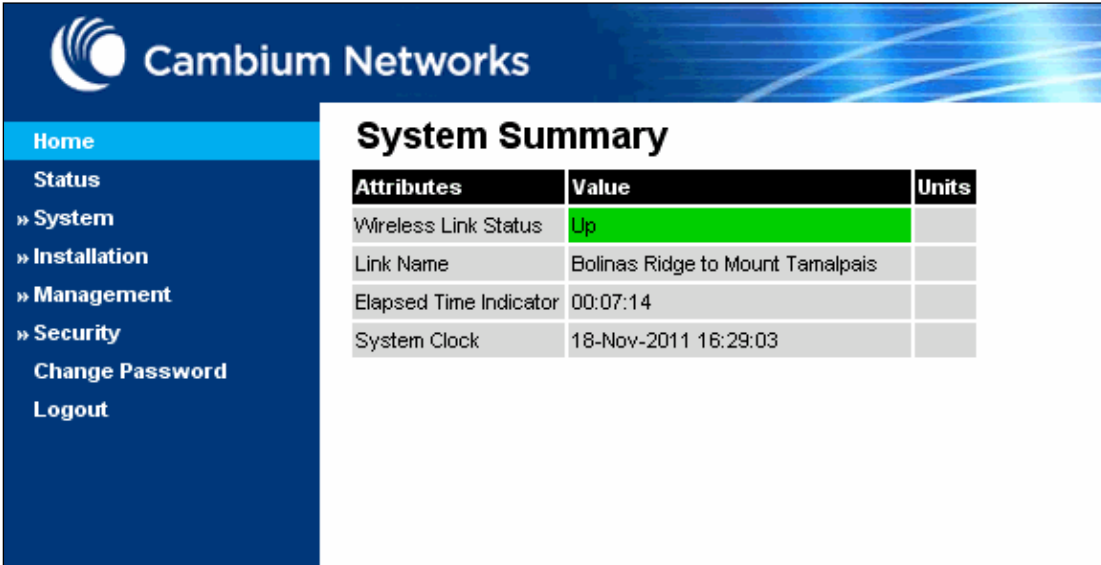

Attributes	Value	Units
Wireless Link Status	Up	
Link Name	Bolinás Ridge to Mount Tamalpais	
Elapsed Time Indicator	00:07:14	
System Clock	18-Nov-2011 16:29:03	

Procedure:

- Review the attributes (Table 213).
- Check that the Wireless Link Status is “Up” on both units. If it is not “Up”, review any uncleared system alarms: these are displayed below the System Clock attribute. For more information, refer to [Alarms](#) on page 7-24.

Table 213 System Summary attributes

Attribute	Meaning
Wireless Link Status	<p>Current status of the wireless link.</p> <p>A green background with status text “Up” means that the point-to-point link is established.</p> <p>A red background with suitable status text (for example “Searching”) indicates that the link is not established.</p>
Link Name	The name of the PTP link, as set in the System Configuration page.

Attribute	Meaning
Elapsed Time Indicator	The time (hh:mm:ss) that has elapsed since the last system reboot. The system can reboot for several reasons, for example, commanded reboot from the system reboot webpage, or a power cycle of the equipment.
System Clock	The system clock presented as local time, allowing for zone and daylight saving (if set).

Standard System Status page

PTP topology

Menu option: **Status** (Figure 231). This page provides a detailed view of the operation of the PTP 700 link, including identification, management, wireless and network interfaces.

Figure 231 System Status page (PTP topology)

System Status - Point To Point - Master			
Attributes	Value	Units	
Equipment			
Link Name	Bolinas Ridge to Mount Tamalpais		
Unit Name	Bolinas 6		
Site Name	Bolinas Ridge		
Software Version	45700-03-65		
Hardware Version	B0P04.03-C-FPS		
Unit SKU	C045070B003B		
Unit ESN	0004565800B8		
Unit MSN	U9SD0B1ZP6J4		
Regulatory Band	95 - 4.5 GHz - Development Key		
Elapsed Time Indicator	00:05:23		
Ethernet / Internet			
Main PSU Port Status	Copper Link Up		
Main PSU Port Speed And Duplex	1000 Mbps Full Duplex		
MAC Address	00:04:56:58:00:b8		
Management			
cnMaestro Server	cnMaestro On-Premises		
cnMaestro Connection Status	Connecting		
cnMaestro Connection Status Message			
Remote Identification			
Remote Unit Name	Tamalpais 2		
Remote MAC Address	00:04:56:58:00:a8		
Remote Internet Address	http://10.130.159.48		
TDD Synchronization			
TDD Synchronization Interface	Disabled		
Status Page Refresh Period	<input type="text" value="3"/>	Seconds	
Wireless			
Wireless Link Status	Up		
Wireless Link Up Time	00:05:00		
Wireless Encryption	None		
Data Bridging Status	Enabled		
Transmit Frequency	4410	MHz	
Receive Frequency	4410	MHz	
Maximum Transmit Power	10	dBm	
EIRP	30.0	dBm	
Remote Maximum Transmit Power	10	dBm	
Transmit Power	10.0, 9.6, -15.0, 10.0	dBm	
Receive Power	-50.7, -52.9, -110.0, -51.2	dBm	
Vector Error	7.2, -27.3, -34.7, -28.4	dB	
Link Loss	104.3, 99.4, 0.0, 104.2	dB	
Signal Strength Ratio	0.9, 0.6, 0.6, 0.7	dB	
Transmit Data Rate	99.80, 94.57, 0.00, 99.80	Mbps	
Receive Data Rate	141.86, 95.46, 0.00, 99.80	Mbps	
Aggregate Data Rate	199.60, 190.03, 0.00, 199.60	Mbps	
Link Capacity Variant	Full		
Link Capacity	199.60	Mbps	
Wireless Link Availability	100.0000	%	
Data Bridging Availability	100.0000	%	
Transmit Modulation Mode	256QAM 0.81 (Dual) (20 MHz)		
Receive Modulation Mode	256QAM 0.81 (Dual) (20 MHz)		
Link Symmetry	1 to 1		
Receive Modulation Mode Detail	Running At Maximum Receive Mode		
Range	0.2	km	
		<input type="button" value="Update Page Refresh Period"/> <input type="button" value="Reset form"/>	

In the PTP topology, the two PTP 700 Series units are arranged in a master and slave relationship. The roles of the units in this relationship are displayed in the page title. The master unit will always have the title “- Master”, and the slave will always have “- Slave” appended to the “Systems Status” page title.

Automatic Alignment

When a Beam Steering ODU is used with Automatic Alignment enabled, the Wireless section of the System Status page displays additional controls, as shown in [Figure 232](#).

Figure 232 System Status page (Wireless section, PTP topology, Automatic Alignment enabled)

Attributes	Value	Units
Wireless		
Wireless Link Status	Up	
Wireless Link Up Time	08:18:48	
Wireless Encryption	None	
Data Bridging Status	Enabled	
Transmit Frequency	4420	MHz
Receive Frequency	4420	MHz
Maximum Transmit Power	-10	dBm
Alignment Status	Pre Aligned	
Beam Azimuth	-3	degrees
Beam Elevation	1	degrees
EIRP	11.0	dBm
Remote Maximum Transmit Power	-10	dBm



Note Link Symmetry is configured at the master ODU only. The appropriate matching Link Symmetry is set at the slave ODU automatically. For example, if Link Symmetry is configured as **2 to 1** at the master ODU, then the slave ODU will be set automatically as **1 to 2**. In this example, the master-slave direction has double the capacity of the slave-master direction.

HCMP topology

Menu option: **Status** (Figure 233 to Figure 235). This page provides a detailed view of the operation of the PTP 700 link including identification, management, wireless and network interfaces.

Figure 233 System Status page (Master, HCMP topology, Wireless Interface set to a single link)

System Status - High Capacity Multi-Point - Master

Attributes	Value	Units
Wireless Interface Selector	Slave_58_01_D5	

Attributes	Value	Units
Equipment		
Unit Name	Master_AJ	
Site Name		
Software Version	45700-G7PFP-B40+ wdog	
Hardware Version	B0P05.01-C-FPS	
Unit ESN	000456580262	
Unit MSN	2249RS0566	
Regulatory Band	91 - 4.7 GHz - Development Key	
Elapsed Time Indicator	01:12:19	
Ethernet / Internet		
Main PSU Port Status	Copper Link Up	
Main PSU Port Speed And Duplex	1000 Mbps Full Duplex	
Group ID	0	
MAC Address	00:04:56:58:02:62	
Remote Unit Name	Slave_58_01_D5	
Remote MAC Address	00:04:56:58:01:d5	
Remote Internet Address	http://10.10.10.11	
TDD Synchronization		
TDD Synchronization Status	Not Synchronized (No GPS/Sync In)	
Status Page Refresh Period	3600	Seconds

Attributes	Value	Units
Wireless		
Wireless Link Status	Up	
Wireless Encryption	AES 256-bit TLS RSA	
Maximum Transmit Power	28	dBm
Remote Maximum Transmit Power	28	dBm
Transmit Power	23.0, 23.0, 23.0, 23.0	dBm
Receive Power	-46.0, -46.2, -46.4, -46.2	dBm
Vector Error	-30.3, -35.5, -39.0, -37.2	dB
Link Loss	67.2, 67.2, 67.2, 67.2	dB
Transmit Data Rate	57.89, 57.89, 57.89, 57.89	Mbps
Receive Data Rate	2.78, 2.78, 2.78, 2.78	Mbps
Link Capacity Variant	Full	
Link Capacity	60.68	Mbps
Transmit Modulation Mode	256QAM 0.81 (Dual) (40 MHz)	
Receive Modulation Mode	BPSK 0.63 (40 MHz)	
Receive Modulation Mode Detail	Running At User-Configured Max Modulation Mode	
Range	0.2	km

Figure 234 System Status page (Master, HCMP topology, Wireless Interface set to “All Wireless Interfaces”)

System Status - High Capacity Multi-Point - Master				
Attributes	Value			Units
Wireless Interface Selector	All Wireless Interfaces			
Attributes	Value	Value	Value	Units
Equipment				
Unit Name	Master_AJ			
Site Name				
Software Version	45700-G7PFP-B40+ wdog			
Hardware Version	B0P05.01-C-FPS			
Unit ESN	000456580262			
Unit MSN	2249RS0566			
Regulatory Band	81 - 4.7 GHz - Development Key			
Elapsed Time Indicator	01:13:47			
TDD Synchronization				
TDD Synchronization Status	Not Synchronized (No GPS/Sync In)			
Ethernet / Internet				
Main PSU Port Status	Copper Link Up			
Main PSU Port Speed And Duplex	1000 Mbps Full Duplex			
Group ID	0			
MAC Address	00:04:56:58:02:62			
Remote MAC Address	00:04:56:58:01:d5	Not Available	Not Available	
Remote Internet Address	http://10.10.10.11	Not Available	Not Available	
Wireless				
Remote Unit Name	Slave_58_01_D5	Not Available	Not Available	
Wireless Link Status	Up	Initialising	Searching	
Wireless Encryption	AES 256-bit TLS RSA	None	None	
Maximum Transmit Power	28			dBm
Remote Maximum Transmit Power	28	Not Available	Not Available	dBm
Transmit Power	23.0,	23.0	28.0, 28.0	0.0, 0.0 dBm
Receive Power	-46.2,	-46.2	-109.9, -110.0	0.0, 0.0 dBm
Vector Error	-35.5,	-36.6	0.0, 0.0	0.0, 0.0 dB
Link Loss	67.2,	67.2	0.0, 0.0	0.0, 0.0 dB
Transmit Data Rate	57.89,	57.89	0.00, 0.00	0.00, 0.00 Mbps
Receive Data Rate	2.78,	2.78	0.00, 0.00	0.00, 0.00 Mbps
Link Capacity	60.68			0.00 0.00 Mbps
Transmit Modulation Mode	256QAM 0.81 (Dual)			Acquisition Acquisition
Receive Modulation Mode	BPSK 0.63			Acquisition Acquisition
Channel Bandwidth	40 MHz			
Range	0.2	Not Available	0.0	km
Status Page Refresh Period	3600			seconds
<input type="button" value="Updated Page Refresh Period"/> <input type="button" value="Reset Form"/>				

Figure 235 System Status page (Slave, HCMP topology)

System Status - High Capacity Multi-Point - Slave					
Equipment			Wireless		
Attributes	Value	Units	Attributes	Value	Units
Link Name			Wireless Link Status	Up	
Site Name	AJ bench		Wireless Encryption	AES 256-bit TLS RSA	
Software Version	45700-G7PFP-B471+ lwdog		Maximum Transmit Power	17	dBm
Hardware Version	B0P05.01-C-FPS		Remote Maximum Transmit Power	24	dBm
Unit ESN	000456580186		Transmit Power	17.0, 12.3, -15.0, 17.0	dBm
Unit MSN	2249RS0201		Receive Power	-55.7, -62.8, -110.0, -57.9	dBm
Regulatory Band	95 - 4.5 GHz - Development Key		Vector Error	7.2, -12.1, -39.0, -25.5	dB
Elapsed Time Indicator	00:02:15		Link Loss	111.9, 34.0, 0.0, 80.9	dB
Ethernet / Internet			Transmit Data Rate	5.18, 1.24, 0.00, 1.90	Mbps
Main PSU Port Status	Copper Link Up		Receive Data Rate	15.45, 3.38, 0.00, 15.45	Mbps
Main PSU Port Speed And Duplex	1000 Mbps Full Duplex		Link Capacity Variant	Full	
Group ID	123		Link Capacity	17.21	Mbps
MAC Address	00:04:56:58:01:86		Wireless Link Availability	100.0000	%
Remote MAC Address	00:04:56:58:02:62		Data Bridging Availability	97.4709	%
Remote Internet Address	http://10.10.10.10		Transmit Modulation Mode	QPSK 0.63 (Single) (20 MHz)	
			Receive Modulation Mode	64QAM 0.92 (Dual) (20 MHz)	
			Dual Payload	Enabled	
			Receive Modulation Mode Detail	Limited By The Wireless Conditions	
			Range	12.1	km
Status Page Refresh Period	<input type="text" value="3600"/>	Seconds	<input type="button" value="Update Page Refresh Period"/> <input type="button" value="Reset form"/>		

In the HCMP topology, one PTP 700 Series unit is the Master and up to eight PTP 700 Series units are configured as Slaves. The roles of the units in this relationship are displayed in the page title. The master unit will always have the title “ - High Capacity MultiPoint - Master”, and the slave will always have “- High Capacity MultiPoint - Slave” appended to the “Systems Status” page title.

Procedures:

- Only on a device configured as in HCMP mode as a Master, set the Wireless Interface Selector to the Wireless Interface the diagnostic data needs to be displayed for. Note the Remote MAC Address indicates the MAC address of the unit currently connected, if any, to the selected wireless interface.

Equipment

The Equipment section of the System Status page contains the attributes described in Table 214.

Table 214 System Status attributes - Equipment

Attribute	Meaning
Link Name	The link name is allocated by the system administrator and is used to identify the equipment on the network. The link name attribute is limited to a maximum size of 63 ASCII characters.
Site Name	The site name is allocated by the system administrator and can be used as a generic scratch pad to describe the location of the equipment or any other equipment related notes. The site name attribute is limited to a maximum size of 63 ASCII characters.
Software Version	The version of PTP 700 firmware installed on the equipment.

Attribute	Meaning
Hardware Version	The PTP 700 hardware version. Formatted as “vvvv-I”, “vvvv-C” or “vvvv-C+I” where vvvv is the version of the printed circuit card. The “-I” suffix indicates a PTP 700 Integrated unit. The “-C” suffix indicates a PTP 700 Connectorized unit. The “-C+I” suffix indicates a PTP 700 Connectorized+Integrated unit.
Unit ESN	The Electronic Serial Number of the ODU.
Unit MSN	The Mechanical Serial Number of the ODU.
Unit SKU	The Cambium Part Number of the ODU
Unit Color	White, Green, Desert Tan The color of the external paint finish of the ODU.
Regulatory Band	This is used by the system to constrain the wireless to operate within regulatory regime of a particular band and country. The license key provides the capability to operate in one or more regulatory bands. The Installation Wizard is used to choose one of those bands.
Elapsed Time Indicator	The elapsed time indicator attribute presents the total time in years, days, hours, minutes and seconds since the last system restart. The system can restart for several reasons, for example commanded reboot from the system reboot web page, or a power cycle of the equipment.

Ethernet / Internet

The Ethernet / Internet section of the System Status page contains the attributes described in [Table 215](#).

Table 215 System Status attributes – Ethernet / Internet

Attribute	Meaning
Main PSU Port Status	The current status of the Ethernet link to the PSU port: <ul style="list-style-type: none"> Green “Copper Link Up”: The Ethernet link is established. Red “Down”: The Ethernet link is not established.
Main PSU Port Speed and Duplex	The negotiated speed and duplex setting of the Ethernet link to the PSU port. The speed setting is specified in Mbps.
Aux Port Status	The current status of the Ethernet link to the Aux port: <ul style="list-style-type: none"> Green “Copper Link Up”: The Ethernet link is established. Red “Down”: The Ethernet link is not established.
Aux Port Speed and Duplex	The negotiated speed and duplex setting of the Ethernet link to the Aux port. The speed setting is specified in Mbps.

Attribute	Meaning
SFP Port Status	The current status of the Ethernet link to the SFP port: <ul style="list-style-type: none"> Green “Fiber Link Up”: The Ethernet link is established. Red “Down”: The Ethernet link is not established.
SFP Port Speed and Duplex	The negotiated speed and duplex setting of the Ethernet link to the SFP port. The speed setting is specified in Mbps.
MAC Address	The MAC Address of this unit.

Management

The Management section of the System Status page contains the attributes described in [Table 216](#).

Table 216 System Status attributes - Management

Attribute	Meaning
cnMaestro Server	<p>cnMaestro On-Premises: The ODU will connect to the On Premises server.</p> <p>cnMaestro Cloud: The ODU will connect to the Cloud server.</p>
cnMaestro Connection Status	<p>The status of the connection between the ODU and the cnMaestro server.</p> <p>Connected: The ODU is connected to the cnMaestro Server.</p> <p>Not Connected: The ODU is not connected to the cnMaestro Server. This is default state in which transactions begin.</p> <p>DNS Failed: The ODU could not resolve the supplied cnMaestro Server Internet Address.</p> <p>Error returned by Server: An error occurred on the server. The cnMaestro Connection Status Message attribute will display the details.</p> <p>Connecting: Connection is in progress. The ODU is communicating with the cnMaestro Server.</p> <p>Approval Pending: A connection has been established. The ODU is in cnMaestro Server’s On-boarding queue, waiting for a cnMaestro user to approve the ODU as a new device. After the device is approved, the ODU should transition to the Connected state.</p> <p>Ownership Error: The cnMaestro server is unable to match the supplied Cambium ID or Onboarding Key with its configured data.</p>
cnMaestro Connection Status Message	Error text generated by the cnMaestro server when an error is returned.

Remote Identification

The Remote Identification section of the System Status page contains the attributes described in [Table 217](#).

Table 217 System Status attributes – Remote Identification

Attribute	Meaning
Remote Unit Name	The configured Unit Name of the peer unit. If the link is down, this is set to “Not available”.
Remote MAC Address	The MAC Address of the peer unit. If the link is down, this is set to “Not available”.
Remote Internet Address	The Internet Address of the peer unit. To open the web interface of the peer unit, click on the hyperlink. If the link is down, this is set to “Not available”. Depending on the settings of IP Version (Table 177) and IP Address Label (Table 176), this may be either an IPv4 or an IPv6 address.

Protection

The Protection section of the System Status page contains the attributes described in [Table 218](#).

Table 218 System Status attributes – Protection

Attribute	Meaning
Protection State	Unprotected: The Primary and/or Secondary link is not available, and so the Hot Standby system is not protecting the end-to-end connection.
Hot Standby Link State	Standby: The ODU is part of a wireless link in the Standby state. This may be because the link has a fault and is therefore unavailable, or because the link is fault-free, but neighbor link is in the Active state. Active: The ODU is in a wireless link in the Active state. The link is fault-free and is forwarding traffic in the Data and Management services.

Wireless

The Wireless section of the System Status page contains the attributes described in [Table 219](#).

Table 219 System Status attributes – Wireless

Attribute	Meaning
Wireless Link Status	The current status of the wireless link: <ul style="list-style-type: none"> Green “Up”: The wireless link is established. Red “Down”: The wireless link is not established.
Wireless Link Up Time	The time in hours, minutes, seconds that the present wireless link has been established.

Attribute	Meaning
Wireless Encryption	<p>For the HCMP topology only, the encryption algorithm used for the wireless link:</p> <ul style="list-style-type: none"> • None: The wireless link is not encrypted. • AES 128-bit TLS RSA: The wireless link is encrypted using the AES TLS RSA algorithm with a 128-bit key. • AES 256-bit TLS RSA: The wireless link is encrypted using the AES TLS RSA algorithm with a 256-bit key.
Data Bridging Status	<p>Enabled: The link is bridging Ethernet frames.</p> <p>Blocked By Protection: The link is not bridging Ethernet frames because it is in the Standby state as part of a Hot Standby system.</p> <p>Disabled: The link is not bridging Ethernet frames because the Lowest Data Modulation Mode is not being achieved.</p>
Transmit Frequency	The radio frequency of the transmit radio channel (MHz).
Receive Frequency	The radio frequency of the receive radio channel (MHz).
Maximum Transmit Power	The maximum transmit power that the local wireless unit is permitted to use to sustain a link.
Alignment Status	<p>Displayed in a Beam Steering ODU with Automatic Alignment enabled.</p> <p>Initializing: The ODU is preparing for installation with automatic alignment.</p> <p>Sector: The ODU is receiving using the sector antenna pattern.</p> <p>Coarse Scan: The ODU is receiving using the direction pattern and scanning to find the coarse beam position with the largest received signal strength.</p> <p>Fine Scan: The ODU is receiving using the direction pattern and scanning to find the fine beam position with the largest received signal strength.</p> <p>Complete: Installation with automatic alignment is complete.</p> <p>Pre Aligned: The ODU has applied azimuth and elevation values determined in an earlier installation.</p>
Beam Azimuth	<p>Displayed in a Beam Steering ODU with Automatic Alignment enabled.</p> <p>The azimuth angle of the selected antenna beam (in degrees) relative to the centre of the antenna coverage.</p>
Beam Elevation	<p>Displayed in a Beam Steering ODU with Automatic Alignment enabled.</p> <p>The elevation angle of the selected antenna beam (in degrees) relative to the centre of the antenna coverage.</p>
EIRP	The effective isotropic radiated power of the ODU (dBm), based on Transmit Power, Cable Loss and Antenna Gain.
Remote Maximum Transmit Power	The maximum transmit power that the remote wireless unit is permitted to use to sustain a link.

Attribute	Meaning
Transmit Power	The maximum, mean, minimum and latest measurements of Transmit Power (dBm). See System histograms on page 7-59.
Receive Power	The maximum, mean, minimum and latest measurements of Receive Power (dBm). See System histograms on page 7-59.
Vector Error	<p>The maximum, mean, minimum and latest measurements of Vector Error (dB). See System histograms on page 7-59.</p> <p>Vector Error compares the received signals In phase / Quadrature (IQ) modulation characteristics to an ideal signal to determine the composite error vector magnitude. The expected range for Vector Error is approximately -2 dB (NLOS link operating at sensitivity limit on BPSK 0.67) to -33 dB (short LOS link running 256 QAM 0.81).</p>
Link Loss	<p>The maximum, mean, minimum and latest measurements of Link Loss (dB). See System histograms on page 7-59. The link loss is the total attenuation of the wireless signal between the two point-to-point units. The link loss calculation is:</p> $P_{ll} = P_{T_x} - P_{R_x} + g_{T_x} + g_{R_x} - c_{T_x} - c_{R_x}$ <p>Where:</p> <p>P_{ll} = Link Loss (dB)</p> <p>P_{T_x} = Transmit power of the remote wireless unit (dBm)</p> <p>P_{R_x} = Received signal power at the local unit (dBm)</p> <p>g_{T_x}, g_{R_x} = Antenna gain at the remote and local units respectively (dBi). This is the gain of the integrated or connectorized antenna.</p> <p>c_{T_x}, c_{R_x} = Cable loss at the remote and local units respectively (dB). It is RF cable loss which connects ODU to Connectorized antenna.</p> <p>For connectorized ODUs, the link loss calculation is modified to allow for the increased antenna gains at each end of the link.</p>
Transmit Data Rate	The maximum, mean, minimum and latest measurements of Transmit Data Rate (Mbps). See System histograms on page 7-59.
Receive Data Rate	The maximum, mean, minimum and latest measurements of Receive Data Rate (Mbps). See System histograms on page 7-59.
Link Capacity Variant	<p>Indicates the licensed capacity from the License Key. Link Capacity Variant is one of the following:</p> <ul style="list-style-type: none"> • Full • Lite <p>When a link is established, this attribute shows the lower of the licensed capacity at each end. For example, if this end is Full and the other end is Lite, it shows "Lite". To see the licenses in the installed License Key, go to the Installation Wizard.</p>

Attribute	Meaning
Link Capacity	The maximum aggregate data rate capacity available for user traffic, assuming the units have been connected using Gigabit Ethernet. The link capacity is variable and depends on the prevailing wireless conditions as well as the distance (range) between the two wireless units.
Transmit Modulation Mode	The modulation mode currently being used on the transmit channel.
Receive Modulation Mode	The modulation mode currently being used on the receive channel.
Link Symmetry	A ratio that expresses the division between transmit and receive time in the TDD frame. The first number in the ratio represents the time allowed for the transmit direction and the second number represents the time allowed for the receive direction.
Receive Modulation Mode Detail	The receive modulation mode in use. For a list of values and their meanings, see Table 220 .
Range	The range between the PTP 700 Series ODUs. This is displayed in kilometers by default, but can be changed to miles by updating the Distance Units attribute to imperial, as described in Webpage Properties page on page 6-92.

Table 220 Receive Modulation Mode Detail values and meanings

Value	Meaning
Running At Maximum Receive Mode	The link is operating at maximum modulation mode in this channel and maximum throughput has been obtained.
Running At User-Configured Max Modulation Mode	The maximum modulation mode has been capped by the user and the link is operating at this cap.
Restricted Because Installation Is Armed	The Installation Wizard has been run and the unit is armed, forcing the link to operate in the lowest modulation mode. To remove this restriction, re-run the Installation Wizard to disarm the unit.
Restricted Because Of Byte Errors On The Wireless Link	The receiver has detected data errors on the radio and reduced the modulation mode accordingly. The radio may achieve a higher modulation mode as shown by the vector error, but there is some other error source, probably RF interference.
Restricted Because Channel Change Is In Progress	This is a transient event where the modulation mode is temporarily reduced during a channel change.
Limited By The Wireless Conditions	The radio is running at the maximum achievable modulation mode given the current wireless conditions shown by the vector error. The radio is capable of reaching a higher modulation mode if wireless conditions (vector error) improve.

Synchronous Ethernet



Note Synchronous Ethernet is available in the PTP topology.

The Synchronous Ethernet section of the System Status page contains the attributes described in [Table 221](#).

Table 221 System Status attributes – Synchronous Ethernet

Attribute	Meaning
Sync E Tracking State	<p>The state of frequency tracking in Synchronous Ethernet. For a list of values and their meanings, see Table 222.</p> <p>In normal operation, with the Synchronous Ethernet feature enabled and a valid timing source present, one end of the link should be in the “Locked Local, Holdover Acquired State”, the other end should be in the “Locked Remote, Holdover Acquired” state.</p> <p>Further status information for the Synchronous Ethernet features is available in the Sync E Status page. See SyncE Status page on page 7-73.</p>

Table 222 Sync E Tracking State values and meanings

Value	Meaning
Disabled	The synchronous Ethernet feature is disabled.
Acquiring Wireless Lock	Synchronous Ethernet is not operational because the wireless link is establishing.
Free Running	Synchronous Ethernet is operational, but with no timing source or history. This is a temporary state.
Locked Local, Acquiring Holdover	Sync E tracking has locked to a synchronisation signal from a cabled Ethernet port on the local ODU. This is a temporary state until the unit has acquired holdover history.
Locked Local, Holdover Acquired	Sync E tracking has locked to a synchronisation signal from a cabled Ethernet port on the local ODU and has acquired holdover history.
Holdover	There is currently no source for the tracking loop, but previously the tracking loop was in a Locked, Holdover Acquired state. The system is using the last known good frequency.

Value	Meaning
Locked Remote, Acquiring Holdover	The tracking loop has locked to a synchronisation signal from the remote ODU. This is a temporary state until the unit has acquired holdover history.
Locked Remote, Holdover Acquired	The tracking loop has locked to a synchronisation signal from the remote ODU and has acquired holdover history.

TDD Synchronization

The TDD Synchronization section of the System Status page contains the attributes described in [Table 223](#).

Table 223 System Status attributes – TDD Synchronization

Attribute	Meaning
TDD Synchronization Status	The status of TDD synchronization. Displayed at a TDD Master if TDD synchronization is active. For a list of values and their meanings, see Table 224 and Table 225 .

Table 224 TDD Synchronization Status values and meanings for PTP-SYNC

Value	Meaning
Inactive	TDD Synchronization has been administratively disabled. This value is not displayed in the System Status page, but can be determined from the SNMP MIB. TDD Synchronization Status is always in the Inactive state at a TDD Slave unit.
Cluster Timing Master	The ODU has been configured as a Cluster Master with an internal reference, and is communicating correctly with the PTP SYNC unit.
Initialising	The wireless link is down, and the master ODU is attempting to synchronize the TDD frame structure with an external 1 pps reference. Synchronization proceeds more rapidly in this state than in the Acquiring Lock state, because the TDD master does not need to consider the ability of the TDD slave to track changes in frame timing.
PTP-SYNC Not Connected	The ODU is not able to communicate with the PTP SYNC unit.
Locked	The master ODU has locked the TDD frame structure to the 1 pps reference received at the Configure of the PTP-SYNC unit. The ODU may be a Cluster Master or a Cluster Slave. The ODU is transmitting.

Value	Meaning
Holdover (No GPS Sync In)	<p>The 1 pps reference has been lost at the Configure to the PTP-SYNC unit, and the ODU in a free running state.</p> <p>The ODU is transmitting.</p> <p>If the reference Configure is not restored, the Holdover state will terminate automatically after a period set by TDD Holdover Duration.</p>
Holdover	<p>The ODU is a Cluster Slave and the 1 pps reference has been lost at the Configure to an upstream PTP-SYNC unit. The ODU is locked to an upstream ODU that is in the Holdover (No GPS Sync In) state.</p> <p>The ODU is transmitting.</p> <p>If the reference Configure is not restored at the upstream PTP-SYNC unit, the Holdover state will terminate automatically after a period set by TDD Holdover Duration.</p>
Not Synchronized (No GPS Sync In)	<p>The 1 pps reference has been lost at the Configure to the PTP-SYNC unit and the holdover period has expired.</p> <p>If the ODU is configured for TDD Holdover Mode = Best Effort then the ODU will be transmitting, otherwise it will be muted.</p>
Not Synchronized	<p>The ODU is a Cluster Slave and the 1 pps reference has been lost at the Configure to an upstream PTP-SYNC unit. The holdover period has expired.</p> <p>If the ODU is configured for TDD Holdover Mode = Best Effort then the ODU will be transmitting, otherwise it will be muted.</p>
Acquiring Lock	<p>The wireless link is up and the master ODU is attempting to synchronize the TDD frame structure with an external 1 pps reference. Frame timing changes at the TDD master are constrained to allow for tracking by the TDD slave.</p> <p>This state is not allowed when TDD Holdover Mode = Strict.</p>

Table 225 TDD Synchronization Status values and meanings for direct connection

Value	Meaning
Inactive	<p>TDD Synchronization has been administratively disabled.</p> <p>This value is not displayed in the System Status page, but can be determined from the SNMP MIB.</p> <p>TDD Synchronization Status is always in the Inactive state at a TDD Slave unit.</p>

Value	Meaning
Initialising	<p>The wireless link is down, and the master ODU is attempting to synchronize the TDD frame structure with an external 1 pps reference.</p> <p>Synchronization proceeds rapidly in this state because the TDD master does not need to consider the ability of the TDD slave to track changes in frame timing.</p>
Locked	<p>The TDD frame structure is locked to a 1 pps reference from the directly-connected partner ODU.</p> <p>The ODU is transmitting.</p>
Holdover	<p>The ODU is transmitting.</p> <p>If the reference Configure is not restored, the Holdover state will terminate automatically after a period set by TDD Holdover Duration.</p>
Not Synchronized	<p>The holdover period has expired.</p> <p>If the ODU is configured for TDD Holdover Mode = Best Effort then the ODU will be transmitting, otherwise it will be muted.</p>

IEEE 1588 Transparent Clock



Note IEEE 1588 Transparent Clock is available in the PTP topology.

The IEEE 1588 Transparent Clock section of the System Status page contains the attributes described in [Table 226](#).

Table 226 System Status attributes - IEEE 1588 Transparent Clock

Attribute	Meaning
Transparent Clock	Indicates if the IEEE 1588 transparent clock feature is enabled.

Simplified System Status page

Menu option: **Status** ([Figure 236](#) and [Figure 237](#)). This page provides a simplified view of the operation of the PTP 700 link from both the wireless and network perspectives.

Figure 236 System Status page (Simplified web interface)

System Status - Point To Point - Slave

Attributes	Value	Units
ODU		
System Clock	05-Oct-2020 13:47:18	
Main PSU Port Status	Down	
Channel Bandwidth	10 MHz	
Transmit Power	26.0	dBm
Transmit Frequency	4405	MHz
Receive Frequency	4405	MHz
Wireless		
Remote Unit Name	Bolinas 4	
Wireless Link Status	Up	
Wireless Encryption	None	
Receive Power	-47.8	dBm
Vector Error	-29.0	dB
Transmit Data Rate	9.43	Mbps
Receive Data Rate	9.43	Mbps
Range	0.1	km
Remote Internet Address	http://10.130.159.44	
Status Page Refresh Period	<input style="width: 80px;" type="text" value="3600"/>	seconds
<input type="button" value="Updated Page Refresh Period"/> <input type="button" value="Reset Form"/>		

Alarms

Attributes	Value	Units
Main PSU Port Status	Down	

In the PTP topology, the two PTP 700 Series units are arranged in a master and slave relationship. The roles of the units in this relationship are displayed in the page title. The master unit will always have the title “- Master”, and the slave will always have “- Slave” appended to the “Systems Status” page title.

Figure 237 System Status page (HCMP Master, Simplified web interface)

System Status - High Capacity Multi-Point - Master		
Attributes	Value	Units
ODU		
System Clock	01-Jan-1970 00:00:00	
Main PSU Port Status	Copper Link Up	
Channel Bandwidth	40 MHz	
Transmit Power	23.0	dBm
Transmit Frequency	6000	MHz
Receive Frequency	6000	MHz
Wireless link #1		
Remote Unit Name	HCMP4_Link1_670_Slave_12	
Wireless Link Status	Up	
Wireless Encryption	None	
Receive Power	-56.4	dBm
Vector Error	-30.8	dB
Transmit Data Rate	40.43	Mbps
Receive Data Rate	3.89	Mbps
Range	0.1	km
Remote Internet Address	http://10.110.230.12	
Wireless link #2		
Remote Unit Name	HCMP4_Link1_670_Slave_15	
Wireless Link Status	Up	
Wireless Encryption	None	
Receive Power	-56.8	dBm
Vector Error	-31.3	dB
Transmit Data Rate	40.43	Mbps
Receive Data Rate	3.89	Mbps
Range	0.1	km
Remote Internet Address	http://10.110.230.15	

In the HCMP topology, one PTP 700 Series unit is the Master and up to eight PTP 700 Series units are configured as Slaves. The roles of the units in this relationship are displayed in the page title. The master unit will always have the title “ - High Capacity MultiPoint - Master”, and the slave will always have “- High Capacity MultiPoint - Slave” appended to the “Systems Status” page title.

ODU

The ODU section of the System Status page contains the attributes described in [Table 227](#).

Table 227 System Status attributes - Equipment

Attribute	Meaning
System Clock	The system clock presented as local time, allowing for zone and daylight saving (if set).
Main PSU Port Status	The current status of the Ethernet link to the PSU port: <ul style="list-style-type: none"> Green Copper Link Up: The Ethernet link is established. Red Down: The Ethernet link is not established.
Channel Bandwidth	Bandwidth of the transmit and receive radio channels.

Attribute	Meaning
Transmit Power	The latest measurement of Transmit Power (dBm).
Transmit Frequency	The radio frequency of the transmit radio channel (MHz).
Receive Frequency	The radio frequency of the receive radio channel (MHz).

Wireless

The Wireless section of the System Status page contains the attributes described in [Table 228](#). At a Master ODU in the HCMP topology, this section is repeated for each of the wireless links.

Table 228 System Status attributes - Wireless

Attribute	Meaning
Remote Unit Name	The configured Unit Name of the peer unit. If the link is down, this is set to Not available.
Wireless Link Status	The current status of the wireless link: <ul style="list-style-type: none"> Green Up: The wireless link is established. Red Down: The wireless link is not established.
Wireless Encryption	The encryption algorithm used for the wireless link: <ul style="list-style-type: none"> None: The wireless link is not encrypted. AES 128-bit TLS RSA: The wireless link is encrypted using the AES TLS RSA algorithm with a 128-bit key. AES 256-bit TLS RSA: The wireless link is encrypted using the AES TLS RSA algorithm with a 256-bit key. AES 128-bit TLS PSK: The wireless link is encrypted using the AES TLS PSK algorithm with a 128-bit key. AES 256-bit TLS PSK: The wireless link is encrypted using the AES TLS PSK algorithm with a 256-bit key.
Receive Power	The latest measurement of Receive Power (dBm).
Vector Error	The latest measurement of Vector Error (dB).
Transmit Data Rate	The latest measurement of Transmit Data Rate (Mbps).
Receive Data Rate	The latest measurement of Receive Data Rate (Mbps).
Range	The range between the PTP 700 Series ODUs, displayed in kilometers.
Remote Internet Address	The IPv4 Internet Address of the peer unit. To open the web interface of the peer unit, click on the hyperlink. If the link is down, this is set to Not available.

Alarms

In the simplified web interface, active alarms are displayed on the System Status page. The alarms are identical to alarms displayed in the standard web interface, and are listed in [Table 229](#) on page [7-24](#).

Rebooting and logging out

This section describes how to reboot the unit and log out of the web interface.

Login Information page

Menu option: **Management > Web > Login Information** (Figure 238).

Use this page to show recent successful and unsuccessful login attempts on this account.

Figure 238 Login Information page

Login Information		
This page shows details of recent successful and unsuccessful login attempts on this account.		
Login Information for the System Administrator		
Attributes	Value	Units
Successful login		
Elapsed Time Since The Last Successful Login Attempt	00:00:05	
Internet Address Of Last Login	169.254.1.3	
Unsuccessful login attempts		
Number Of Unsuccessful Login Attempts	1	
New Unsuccessful Login Attempts	0	
Elapsed Time Since The Last Unsuccessful Login Attempt	00:00:07	
Internet Address Of Last Unsuccessful Login Attempt	169.254.1.3	

Reboot Wireless Unit page

Menu option: **System > Reboot** (Figure 239).

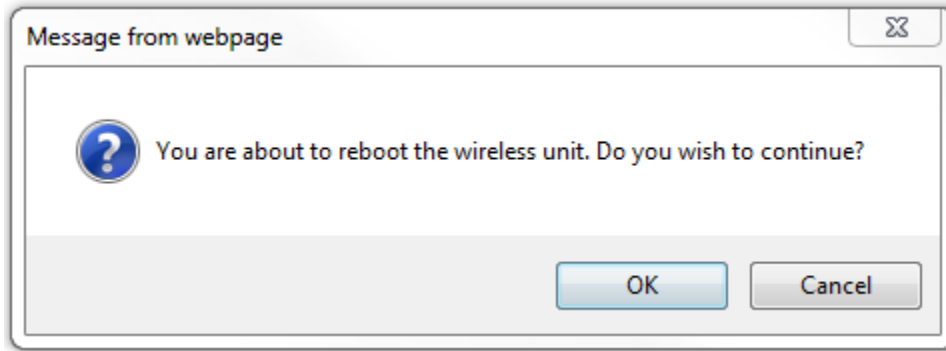
Use this page to reboot the ODU or view a list of previous reboot reasons.

Figure 239 Reboot Wireless Unit page

Reboot Wireless Unit	
Use this page to reboot the wireless unit	
Attributes	Value
Previous Reasons For Reset/Reboot	User Reboot - Console (21-May-2013 10:33:21) ▼
<input type="button" value="Reboot Wireless Unit"/>	

Procedure:

- Use the drop-down list to view the Previous Reasons For Reset/Reboot.
- If a reboot is required:
 - Click Reboot Wireless Unit. The Reboot Confirmation dialog is displayed (Figure 240).
 - Click OK. The reboot progress message is displayed. On completion, the unit restarts.

Figure 240 Reboot confirmation pop up

Change Password page

Menu option: **Change Password** (Figure 241). Use this page to change a personal password.

Figure 241 Change Password page (System Administration example)

A security officer can change the passwords of other users using the User Accounts page, as described in [Local User Accounts page](#) on page 6-85.

Procedure:

- Enter and confirm the new password. If Identity Based User Accounts is Disabled, the new password must be between eight and 31 characters. If Identity Based User Accounts is Enabled, the new password must comply with the complexity rules ([Table 189](#)).

Logging out

To maintain security, always log out at the end of a session: on the menu, click **Logout**.

The unit will log out automatically if there is no user activity for a set time, configured as Auto Logout Period in the Local User Accounts page ([Figure 169](#) and [Figure 170](#)).

All sessions are automatically logged out after Web Absolute Timeout, regardless of user activity.

Alarms, alerts and messages

This section describes how to use alarms, alerts and syslog messages to monitor the status of a PTP 700 link.

Alarms

Whenever system alarms are outstanding, a yellow warning triangle is displayed on the navigation bar. The warning triangle is visible from all web pages.

Procedure:

- Click the warning triangle or the menu option **Alarms** to navigate to the Alarms page. The warning triangle and the Alarms menu item are hidden if there are no active alarms.

The example in [Figure 242](#) shows the warning triangle in the navigation bar and an alarm displayed in the Alarms page. The alarms are defined in [Table 229](#).

A change of state in most alarms generates an SNMP trap or an SMTP email alert.

Figure 242 Alarms page

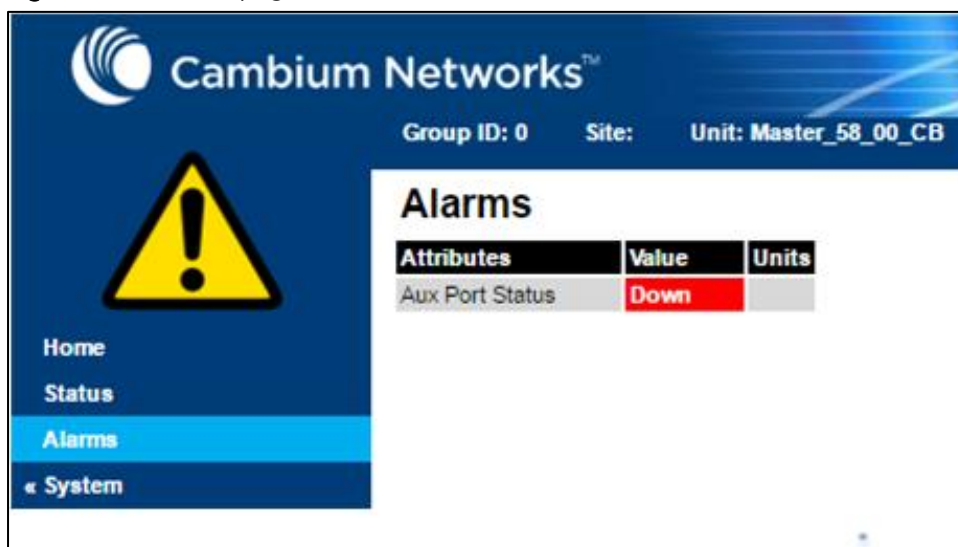


Table 229 System alarms

Alarm	Meaning
Aux Port Configuration Mismatch	Ethernet fragments (runt packets) have been detected when the Aux port is in full duplex. This indicates an auto-negotiation or forced configuration mismatch.
Aux Port Disabled Warning	The Aux port link has been administratively disabled via the SNMP Interface.
Aux Port PoE Output Status	The Aux port link is down. The most likely cause is that the unit has no Ethernet cable plugged into its Aux port.

Alarm	Meaning
Aux Port Status	The Aux port link is down. The most likely cause is that the unit has no Ethernet cable plugged into its Aux port.
Cable Diagnostics Warning	“Test In Progress“ means that the Cable Diagnostics test has been initiated on one or more ports and is in progress.
Capacity Variant Mismatch	The link ends are different capability variants, for example, one is Full and the other is Lite.
Data Bridging Status	<p>Enabled: The link is bridging Ethernet frames.</p> <p>Blocked By Protection: The link is not bridging Ethernet frames because it is in the Standby state as part of a Hot Standby system.</p> <p>Disabled: The link is not bridging Ethernet frames because the Lowest Data Modulation Mode is not being achieved.</p>
Device Certificate Status	Please contact customer support if this error is displayed.
Hot Standby Configuration Check	The configuration of the ODU is not compatible with the configuration of a Hot Standby neighbor.
Hot Standby Neighbor Link Status	The neighbor link in a Hot Standby configuration has a fault, or its status is unknown. Possible values are “Unknown”, “Wireless Link Down”, “Master Data Port Down”, “Slave Data Port Down”.
Install Status	Signaling was received with the wrong MAC address. It is very unusual to detect this, because units with wrongly configured Target MAC Address will normally fail to establish a wireless link. However, rare circumstances may establish a partial wireless link and detect this situation.
Install Arm State	A wireless unit is in installation mode. After installation, the wireless unit should be disarmed. This will increase the data-carrying capacity and stop the installation tone generator. The wireless link is disarmed from the “Installation” process, see Disarming the units on page 6-148.
Incompatible Regulatory Bands	The two linked units have different Regulatory Bands. To clear this alarm, obtain and install license keys for the correct country and select the same Regulatory Band at each end of the link.
Incompatible Master and Slave	The master and slave ends of the wireless link are different hardware products, or have different firmware versions. It is very unusual to detect this because incompatible units will normally fail to establish a wireless link. However, some combinations may establish a partial wireless link and detect this situation.
Link Mode Optimization Mismatch	The Master and Slave ODUs are configured to use different link mode optimization methods (one is set to IP and the other TDM).

Alarm	Meaning
Main PSU Port Configuration Mismatch	Ethernet fragments (runt packets) have been detected when the PSU port is in full duplex. This indicates an auto-negotiation or forced configuration mismatch.
Main PSU Port Disabled Warning	The PSU port link has been administratively disabled via the SNMP Interface.
Main PSU Port Status	The PSU port link is down. The most likely cause is that the unit has no Ethernet cable plugged into its Aux port.
No Wireless Channel Available	Spectrum Management was unable to locate a suitable wireless channel to operate on.
Port Allocation Mismatch	<p>The local and remote ODUs have different services configured. The following alarms are raised on the port configuration mismatch:</p> <ul style="list-style-type: none"> • Mismatch in Out of Band Remote Management Service: The Out of Band Management Service is configured at the local unit but it is not configured at the remote unit or vice versa.
Regulatory Band	The installed license key contains an invalid Regulatory Band. The wireless unit is prohibited from operating outside the regulated limits.
Remaining Full Capacity Time Trial	Time remaining on the full capability trial period. Activated when seven days or less of the trial period remain.
Remote Transparent Clock Compatibility	The local and remote units have different IEEE 1588 transparent clock configurations. Both units must have the same configuration for the feature to work correctly.
Secure Mode Alarm	The unit is operating in the FIPS secure mode, but is not in the operational state. To clear an alarm value of Secure mode is not configured ensure that all settings are correct for FIPS 140-3 in the Security Wizard. To clear an alarm value of Secure mode is configured, but not active ensure that HTTP Access Enabled is set to No .
SFP Error	<p>A non-OK value indicates that the SFP link is down. There are two possible causes:</p> <ul style="list-style-type: none"> • Either: the fiber link has been installed but disabled (because the license key does not include SFP support), • Or: the SFP link could not be established even though an SFP carrier was detected (due perhaps to a cabling fault or the link is disabled at the link partner).
SFP Port Configuration Mismatch	Ethernet fragments (runt packets) have been detected when the SFP port is in full duplex. This indicates an auto-negotiation or forced configuration mismatch.

Alarm	Meaning
SFP Port Disabled Warning	The SFP port link has been administratively disabled via the SNMP Interface.
SFP Port Status	The SFP port link is down. The most likely cause is that the unit has no Ethernet cable plugged into its SFP port.
SNTP Synchronization failed	SNTP has been enabled but the unit is unable to synchronize with the specified SNTP server.
Sync E tracking state	The state of the Synchronous Ethernet feature, if there is a problem.
Syslog Client Enabled/Disabled Warning	The local syslog client has been enabled or disabled.
Syslog Enabled/ Disabled Warning	The local log of event messages has been enabled or disabled.
Syslog Local Nearly Full	The local log of event messages is nearly full.
Syslog Local Wrapped	The local log of event messages is full and is now being overwritten by new messages.
TDD Synchronization Alarm	<p>The reference signal for TDD Synchronization is absent and the ODU is now in holdover with more than 80% of the holdover period elapsed (Reference Signal Lost) or the ODU has reached the end of the configured holdover period and may not be correctly synchronized with the remaining units in the wireless network (Synchronization Lost).</p> <p>If TDD Synchronization Alarm = Synchronization Lost and TDD Holdover Mode = Strict, the ODU will be muted and the wireless link will be down.</p>
Transparent Clock Source Port Alarm	If SFP was the selected transparent clock source port but the media did not negotiate to Fiber.
Unit Out Of Calibration	The unit is out of calibration and must be returned to the factory using the RMA process for re-calibration.
Wireless Link Disabled Warning	The wireless link has been administratively disabled via the SNMP Interface. The wireless interface MIB-II ifAdminStatus attribute has been set to DOWN . To enable the Ethernet interface, set the ifAdminStatus attribute to UP .

Email alerts

The management agent can be configured to generate alerts by electronic mail when certain events occur. The alerts are defined in [Table 230](#).

Table 230 Email alerts

Alert	Meaning
Wireless Link Up Down	There has been a change in the status of the wireless link.
Channel Change	DFS has forced a change of channel.
DFS Impulse Interference	DFS has detected impulse interference.
Enabled Diagnostic Alarms	Diagnostic alarms have been enabled.
Main PSU Port Up Down	There has been a change in the status of the PSU data port.
Aux Port Up Down	There has been a change in the status of the Aux port.
SFP Port Up Down	There has been a change in the status of the SFP port.

Syslog page

Menu option: **Management > Syslog** (Figure 243).

Use this page to view the local log of event messages.

Figure 243 Syslog local log


◀ Previous Page Refresh ↻

Filter Out Reports Below This
Level:

Entries 989 to 890 (0 filtered)

Entry	Relative Time	Timestamp	Facility	Priority	Text
989	00:00:05	Sep 02 13:27:21	Security	Info	event; auth_login; Web user=Geri; from=10.130.1.73; port=443; connection=HTTPS; authentication=local;
988	00:00:17	Sep 02 13:27:09	Security	Info	event; auth_login; Web user=MeIC; from=10.130.1.175; port=443; connection=HTTPS; authentication=local;
987	00:00:56	Sep 02 13:26:28	Security	Info	event; auth_logout; Web user=Geri; from=10.130.1.175; port=443; connection=HTTPS; authentication=local;
986	00:01:05	Sep 02 13:26:19	Security	Info	event; auth_login; Web user=Geri; from=10.130.1.175; port=443; connection=HTTPS; authentication=local;
985	00:01:51	Sep 02 13:25:35	NTP	Warning	status; SNTP Sync; was=No Sync; now=In Sync;



Note For more information about system logging, refer to:

- [System logging \(syslog\)](#) on page 1-75 describes the system logging feature.
- [Syslog Configuration page](#) on page 6-104 describes how to enable system logging.

Format of syslog server messages

PTP 700 generates syslog messages in this format:

```

SP = " " = %x20
CO = ":" = %x3A
SC = ";" = %x3B
LT = "<" = %x3C
GT = ">" = %x3E
syslog = pri header SP message
pri = LT "1"- "182" GT
header = timestamp SP hostname
timestamp = month SP days SP hours ":" minutes ":" seconds
month = "Jan" | "Feb" | "Mar" | "Apr" | "May" | "Jun" | "Jul" | "Aug" | "Sep" | "Oct" | "Nov" | "Dec"
days = " 1"- "31"
hours = "00"- "23"
minutes = seconds = "00"- "59"
hostname = "0.0.0.0"- "255.255.255.255"
message = "PTP700" CO SP (configuration | status | event)
configuration = "configuration" SC SP attribute-name SC SP ("Web user=" web-user | "SNMP user" | "SNTP") SC SP
"was=" previous-value SC SP "now=" new-value SC
status = "status" SC SP attribute-name SC SP "was=" previous-value SC SP "now=" new-value SC
event = "event" SC SP identifier SC SP event-message-content SC

```

Configuration and status messages

Configuration and status messages contain all of the relevant attributes.

This is an example of a configuration message:

```
PTP700: configuration; IP Address; Web user=John Smith; was=10.10.10.10; now=169.254.1.1;
```

This is an example of a status message:

```
PTP700: status; Data Port Status; was=Down; now=Up;
```

Event messages

Event messages are listed in [Table 231](#).

This is an example of an event message:

```
PTP700: event; auth_login; web user=MarkT; from=169.254.1.1; port=80; connection=HTTP;
authentication=local;
```

Table 231 Event messages

Facility	Severity	Identifier	Message content
security(4)	warning(4)	auth_idle	
security(4)	info(6)	auth_login	
security(4)	warning(4)	auth_login_failed	

Facility	Severity	Identifier	Message content
security(4)	warning(4)	auth_login_locked	"Web user=" user-name SC SP
security(4)	info(6)	auth_logout	"from=" IP-address SC SP "port=" port-number SC SP "connection=" ("HTTP" "HTTPS") SC SP "authentication=" ("local" "RADIUS") SC
kernel(0)	warning(4)	cold_start	"PTP wireless bridge has reinitialized, reason=" reset-reason SC
security(4)	warning(4)	license_update	"License Key updated" SC
syslog(5)	warning(4)	log_full	"Syslog local flash log is 90% full" SC
syslog(5)	warning(4)	log_wrap	"Syslog local flash log has wrapped" SC
security(4)	info(6)	radius_auth	"RADIUS user=" user-name SC SP "server " ("1" "2") " at " IP-address SP "succeeded" SC
security(4)	warning(4)	radius_auth_fail	"RADIUS user=" user-name SC SP "server " ("1" "2") " at " IP-address SP ("failed" "succeeded" "failed (no response)") SC
security(4)	alert(1)	resource_low	"Potential DoS attack on packet ingress " ("warning" "cleared") SC
security(4)	warning(4)	sec_zeroize	"Sensitive Security Parameters (SSPs) zeroized" SC
local6(22)	warning(4)	snmpv3_asn1	"ASN.1 parse error" SC
security(4)	warning(4)	snmpv3_auth	"Authentication failure" SC
local6(22)	warning(4)	snmpv3_decryption	"Decryption failure" SC
local6(22)	warning(4)	snmpv3_engine_id	"Unknown engine ID" SC
local6(22)	warning(4)	snmpv3_sec_level	"Unknown security level" SC
kernel(0)	warning(4)	sys_reboot	"System Reboot, reason=" reset-reason SC
security(4)	warning(4)	sys_software_upgrade	"Software upgraded from " firmware-version " to " firmware-version SC
local6(22)	warning(4)	telnet_idle	"Telnet user=" user-name SC SP
local6(22)	info(6)	telnet_login	"from=" IP-address SC SP "port=" port-number SC
local6(22)	warning(4)	telnet_login_failed	
local6(22)	info(6)	telnet_logout	
local6(22)	info(6)	tftp_complete	"TFTP software upgrade finished" SC

Facility	Severity	Identifier	Message content
local6(22)	info(6)	tftp_failure	"TFTP software upgrade failed, reason=" reason SC
local6(22)	info(6)	tftp_start	"TFTP software upgrade started" SC
NTP(12)	info(6)	time_auth	"SNTP authentication succeeded at IP-address=" IP-address SC SP "port-number=" port SC
NTP(12)	warning(4)	time_auth_failed	"SNTP authentication failed at IP-address=" IP-address SC SP "port-number=" port SC
NTP(12)	warning(4)	time_conn_failed	"SNTP connection failed at IP-address=" IP-address SC SP "port-number=" port SC SP "reason=" reason SC
security(4)	info(6)	eap_tls_auth	"MAC=" MAC-address SC "Authentication success" SC "Cipher=" cipher SC cipher = "None" "AES 128-bit TLS RSA" "AES 256-bit TLS RSA"
security(4)	warning(4)	eap_tls_auth_failure	"MAC=" MAC-address SC "reason=" eap-tls-auth-reason SC eap-tls-auth-reason = "Authentication timeout" "Authentication error" "Certificates not installed" "Installed certificate has a common name mismatch" "Invalid certificate Root CA" "Installed certificate has invalid key length" "Certificate common name does not match with any entry in whitelist" "TLS handshake failed."
security(4)	info(6)	eap_tls_rekey	"MAC=" MAC-address SC "Rekey success" SC "Cipher=" cipher SC
security(4)	warning(4)	eap_tls_rekey_failure	"MAC=" MAC-address SC "reason=" eap-tls-rekey-reason SC eap-tls-rekey-reason = "Rekey timeout" "Rekey error" "Certificate common name does not match with any entry in whitelist" "TLS handshake failed."

Spectrum Management

This section describes how to use the Spectrum Management pages to monitor the radio spectrum usage of the PTP 700 link.

Spectrum Expert and Spectrum Management pages

There are two alternative web pages providing access the spectrum monitoring information:

- the Spectrum Expert page, and
- the Spectrum Management page.

The Spectrum Expert page is the default as it is effectively a superset of the Spectrum Management page. However, it makes use of features only available in the most recent web browsers. It also requires additional data to be sent across the wireless link, thus reducing the capacity available for other types of traffic when the page is displayed.



Note Internet Explorer versions up to and including IE8 do not support the HTTP features used in the Spectrum Expert page.

For these reasons, the PTP 700 Series may be configured to use the Spectrum Management page instead of the Spectrum Expert page. This is done by checking the **Disable Spectrum Expert (use old Spectrum Management)** control in the **Web Property** attribute under the **Management > Web > Web Properties** menu, as shown in [Figure 244](#).

Figure 244 Disabling Spectrum Management page advanced web page

Webpage Properties		
Properties		
Attributes	Value	Units
Web Properties	<input checked="" type="checkbox"/> View Summary and Status pages without login	
	<input checked="" type="checkbox"/> Disable Spectrum Expert (use old Spectrum Management)	
Distance Units	<input checked="" type="radio"/> Metric <input type="radio"/> Imperial	
Use Long Integer Comma Formatting	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Popup Help	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled	
Auto Logout Period	<input type="text" value="10"/>	minutes
Browser Title	<input type="text" value="\$productName"/>	
<input type="button" value="Apply Properties"/> <input type="button" value="Reset Form"/>		



Note When configured to use the Spectrum Expert page, the PTP 700 is capable of automatically detecting whether the browser accessing the unit supports the required features. If it does not, the Spectrum Management page will be returned instead of the spectrum Expert page. Internet Explorer 8 is not compatible with the Spectrum Expert page.

Spectrum Expert page

Menu option: **System > Spectrum Expert**

This page is used to view and configure spectrum usage.

The Spectrum Expert page displays the following plots:

- The Local Receive Spectrum for PTP or HCMP wireless topology, and
- The Peer Receive Spectrum for PTP wireless topology.

The Spectrum Expert page has two display modes:

- Standard Display mode – The ‘Standard’ Display mode is the mode which displays only the operational subband channels (shown in [Figure 245](#)). In this mode, the Extended Spectrum Scanning attribute could be Enabled but the Extended display box could be un-checked.

It has further two types of plot:

- Standard Display mode without realtime line
- Standard Display mode with realtime line
- Extended Display mode – The ‘Extended’ Display Mode shows the entire DSO Full Band range of channels along with highlighted operational channels (shown in [Figure 246](#)). In this mode, the Extended Spectrum Scanning attribute is Enabled.

This mode also has two types of plot:

- Extended Display mode without realtime line
- Extended Display mode with realtime line

The Extended display mode selection checkbox appears when the Extended Spectrum Scanning attribute is set to Enabled.

See [Interpreting the receive spectrum plot](#) on page 7-41 for details on the how to interpret these plots.


In a Beam Steering ODU with Automatic Alignment enabled, the Spectrum Expert page includes a Force Realignment button. Use this control to restart automatic alignment. This is useful when a link has been installed during installation, but one or both of the ODUs has subsequently been mechanically misaligned, or some other change in the wireless path has occurred.



Attention Do not leave the ODU with Extended Spectrum Scanning enabled during normal operation because this adversely affects the DSO response in the operating band.

Standard Display mode


Figure 245 Spectrum Expert page - Standard Display mode

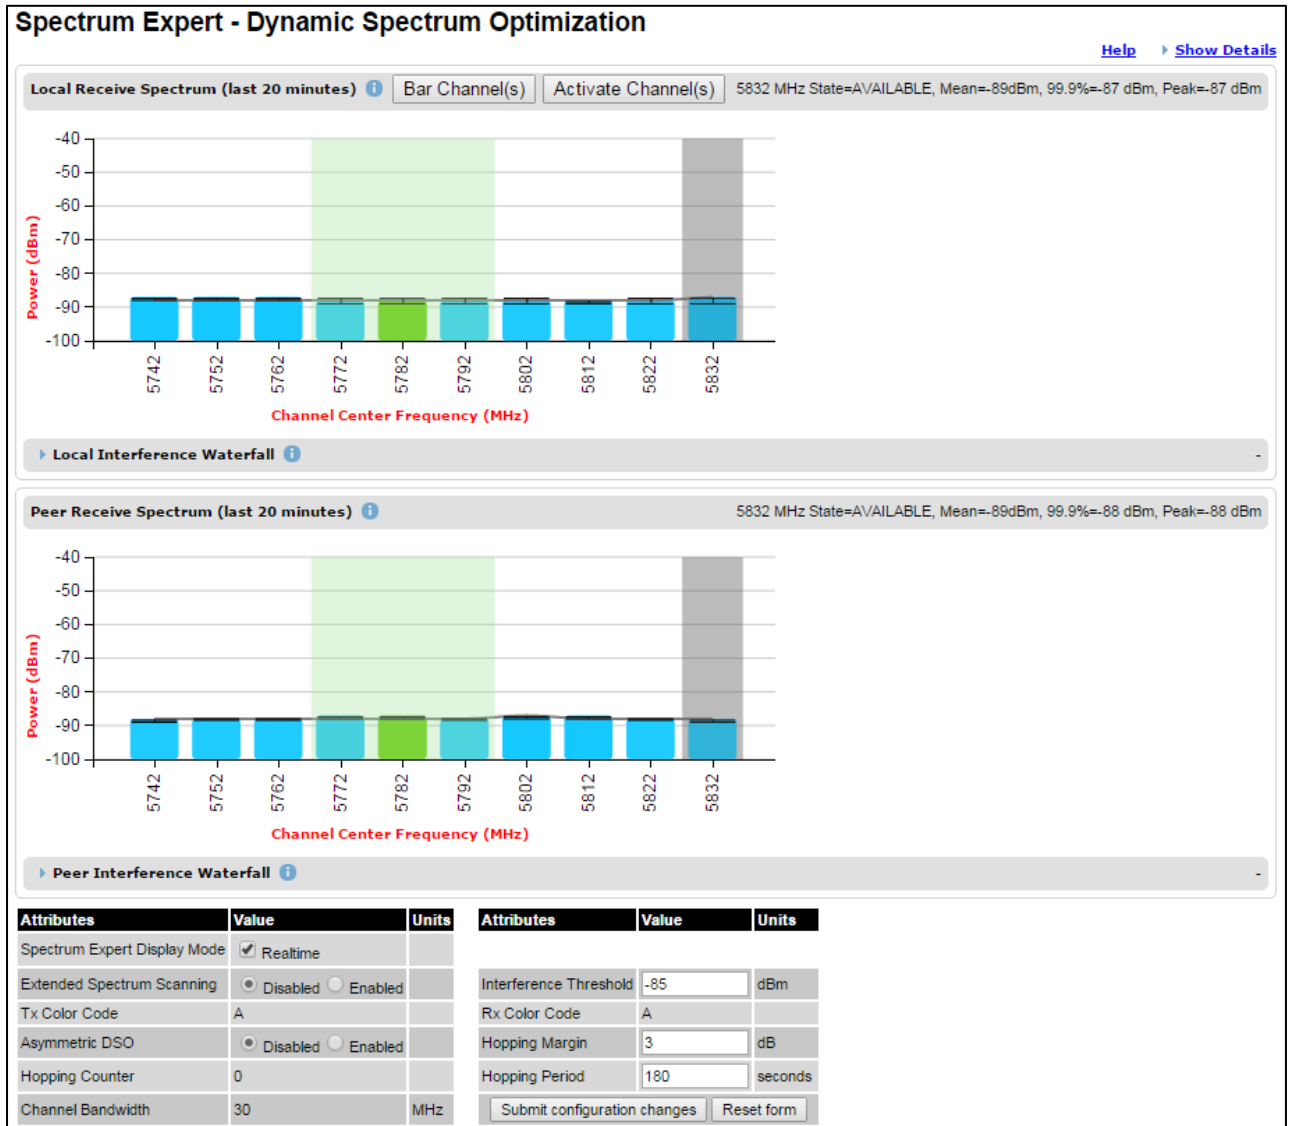

Note When Wireless Network Topology is set to HCMP, only the Local Receive Spectrum is shown on both the Master and the Slaves.

Extended Display Mode

Figure 246 Spectrum Expert page – Extended Display mode

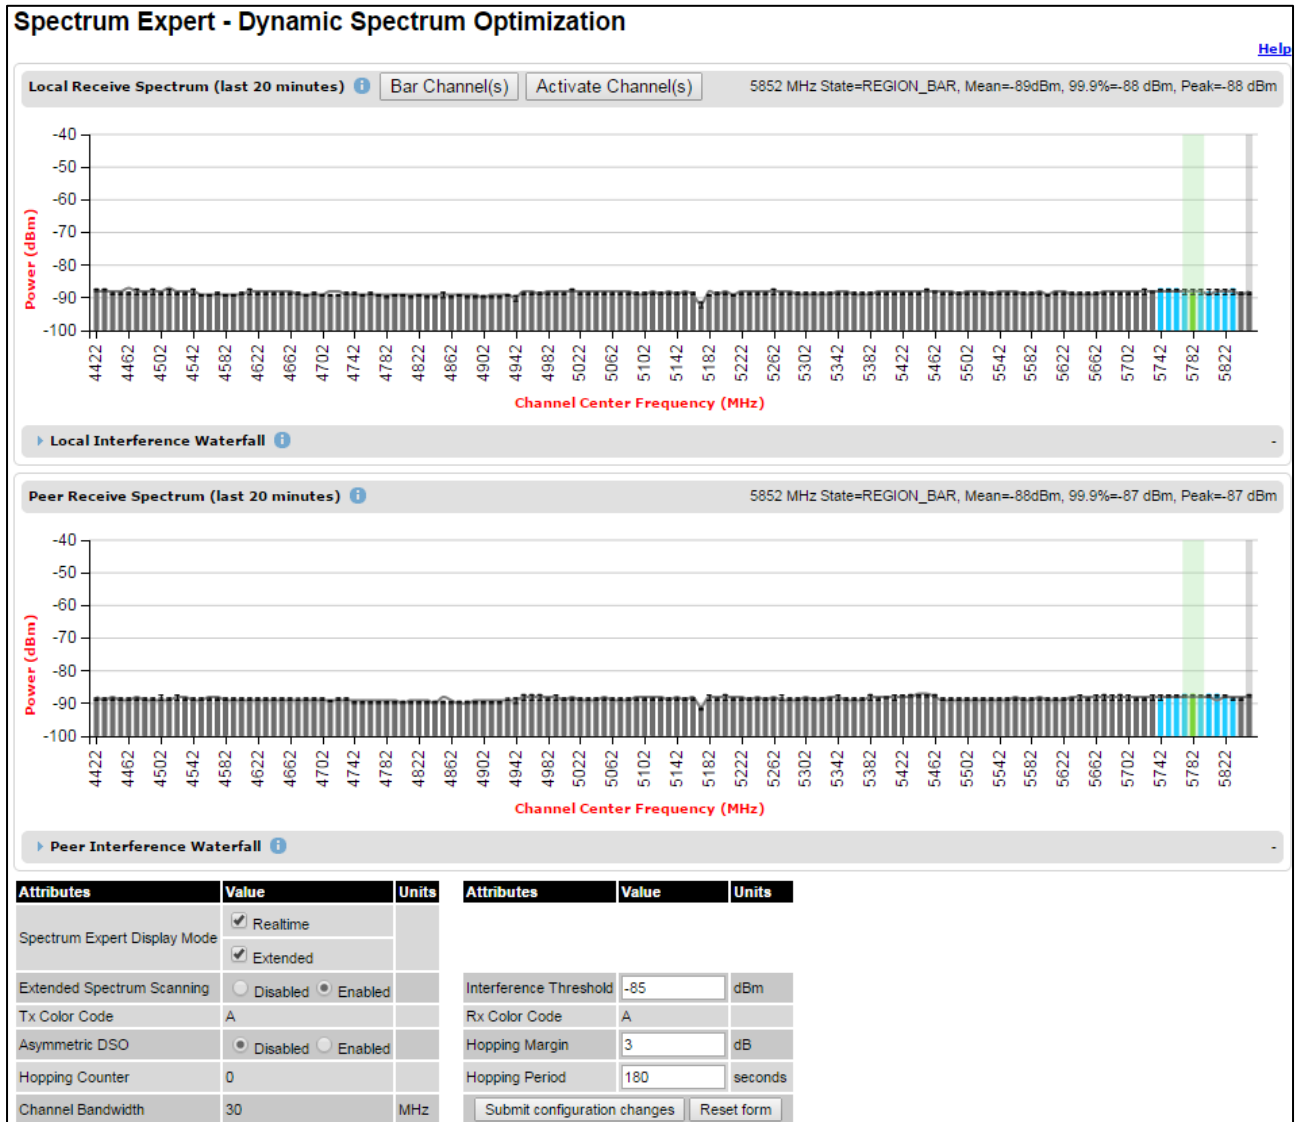

Note Figure 245 shows the default layout for a unit configured as a Master. On a unit configured as Slave, some of the controls at the bottom of the page are not available. In the remainder of this section, the screen shots shown are for the Master Unit.



Note For Spectrum Expert Extended Display mode, Extended Spectrum Scanning is Enabled and Display mode is set to Extended.



Note When Wireless Network Topology is set to HCMP, only the Local Receive Spectrum is shown on both the Master and the Slaves.

Standard Display with extended layout

The page layout may be changed from the compact layout to the extended layout by clicking on the **Show Details** hyperlink on the top right of the page shown in [Figure 245](#).

This hyperlink is only visible when the Extended Display checkbox in Spectrum Expert Display Mode is not selected.


A screen shot of the Spectrum Expert page in the extended layout is shown in [Figure 247](#). It displays the following additional plots:

- The Local Timeseries, and
- The Peer Timeseries.

These plots are on the right of the corresponding Receive Spectrum plots. See [Selecting a Channel and a Time period](#) on page 7-49 for details on the timeseries plots.

Clicking on the **Hide Details** hyperlink returns to the compact layout.

Figure 247 Spectrum Expert page with Receive Spectrum and Timeseries for the Local unit

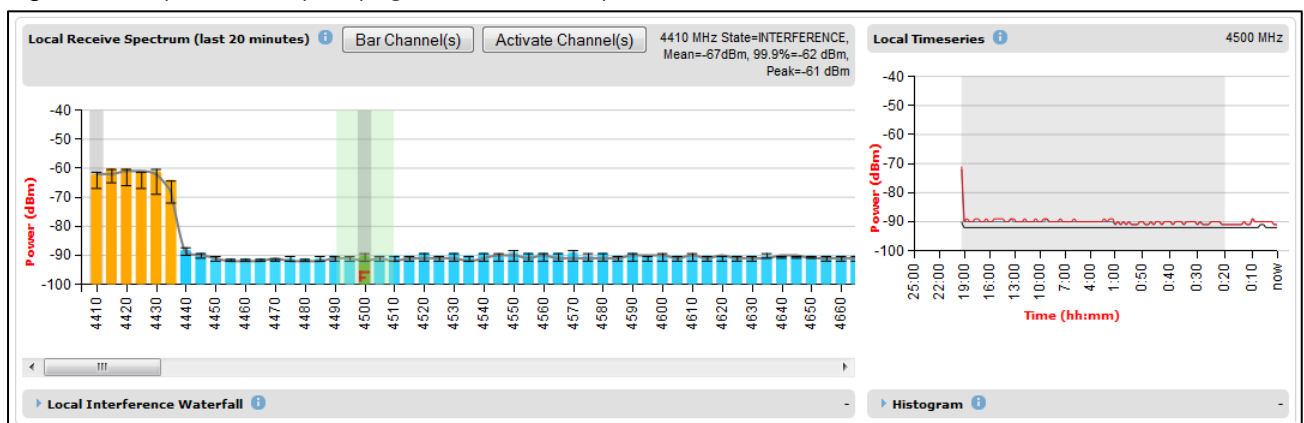

Full layout

The page layout may be extended further to give access to more information on either or both the local and the peer interference spectra.

For the local interference spectrum, clicking on the **Local Interference Waterfall** hyperlink below the Local Receive Spectrum plot shows:

- The Local Interference Waterfall plot, if the Local TimeSeries was not shown ([Figure 248](#)), or
- The Local Interference Waterfall and the Histogram plots otherwise ([Figure 249](#)).

The same can be done for the peer section of the page.

Details on how to interpret the Interference Waterfall and Histogram plots are provided in sections [Interpreting the Interference Waterfall plot](#) on page 7-51 and [Interpreting the histogram plot](#) on page 7-53 respectively.

Figure 248 Spectrum Expert page showing the Receive Spectrum and Interference Waterfall for the Local unit


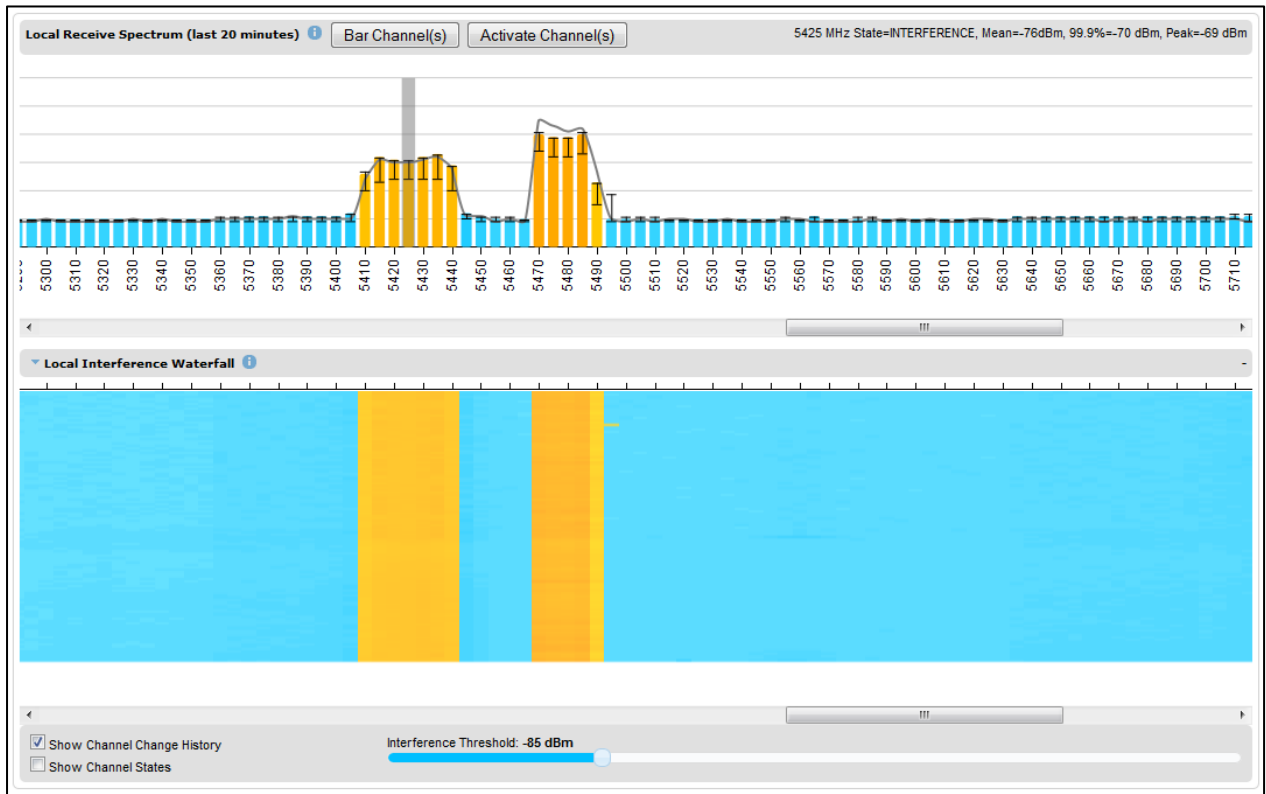


Figure 249 Spectrum Expert page showing the Receive Spectrum, Timeseries, Interference Waterfall and Histogram for the Local unit

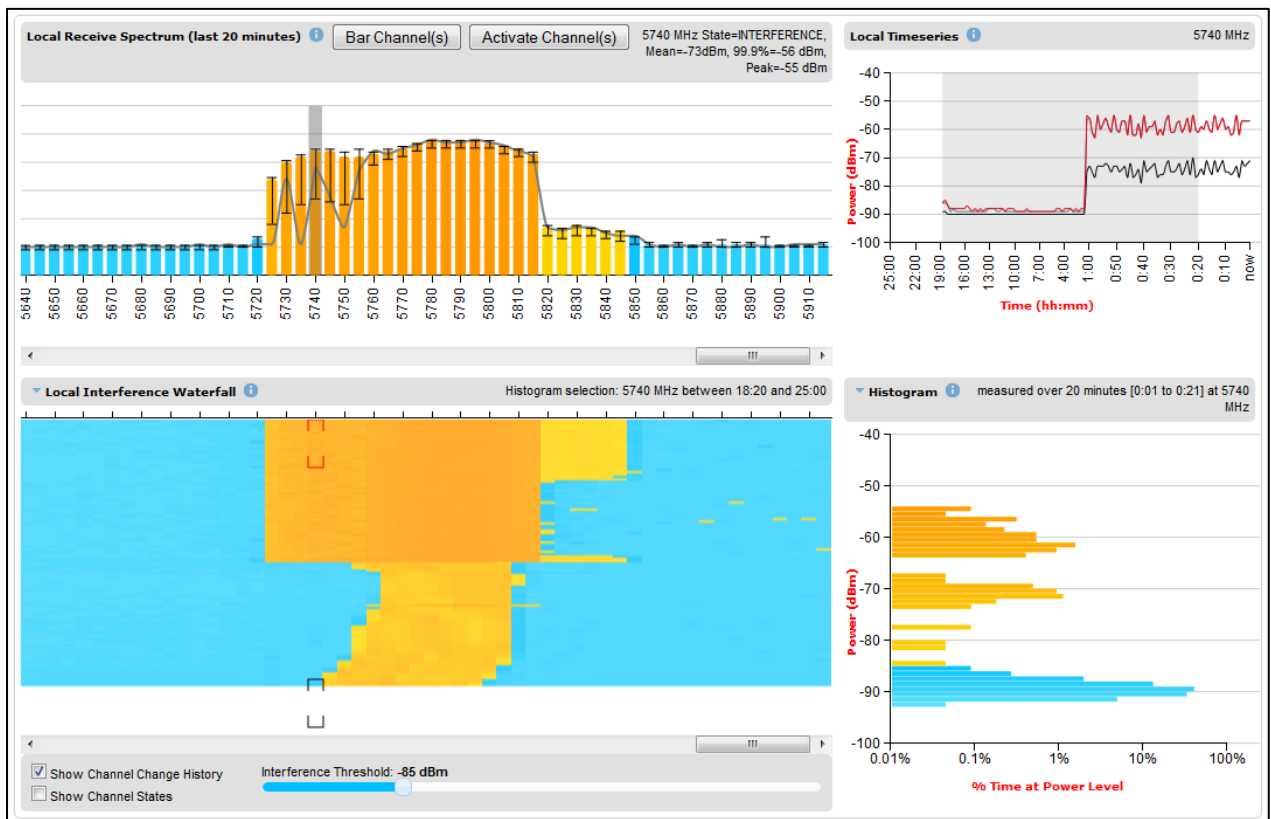

Spectrum Expert page with Slave Scan


The page layout in an HCMP Slave with Slave Scan is shown in [Figure 250](#).

When Slave Scan is configured at a Slave ODU, the Spectrum Expert page allows channels to be administratively barred using the **Bar Channel(s)** and **Activate Channel(s)** buttons. Bar unused channels to reduce the scan time.

The Slave Scan channel scan can be monitored by observing progress of the green colored channel marker.

Restart the channel scan on the lowest channel using the **Force Scan** button. This option is useful if physical installation (for example, antenna alignment) is changed whilst a scan is in progress.

Figure 250 Spectrum Expert page with Slave Scan

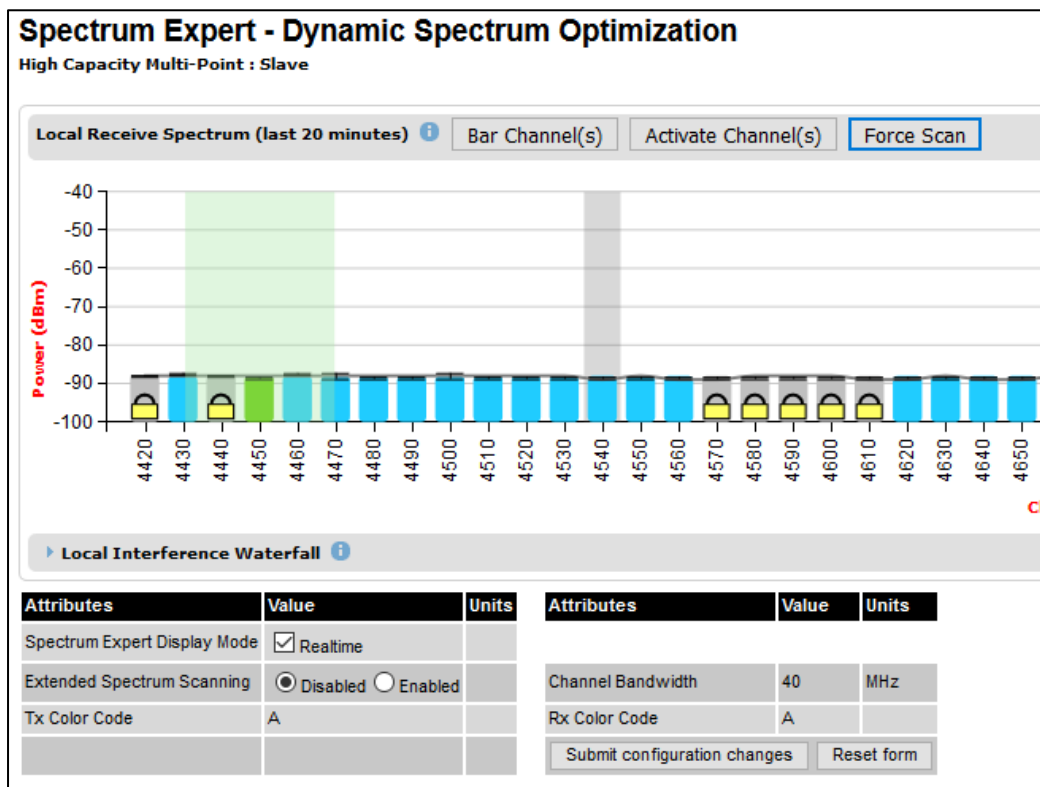

Spectrum Management page

Menu option: **System > Spectrum Management**

Note that this page is only shown when the Spectrum Expert page has been disabled, as explained in [Spectrum Expert and Spectrum Management pages](#) on page 7-32.

Use this page to view and configure spectrum usage. The width of the vertical green bar represents the channel width (10 MHz illustrated).



Note The extended view is available only in Spectrum Expert, and not in Spectrum Management.



Note When Wireless Network Topology is set to HCMP, only the Local Receive Spectrum is shown on both the Master and the Slaves.

Figure 251 Spectrum Management page (Master unit)

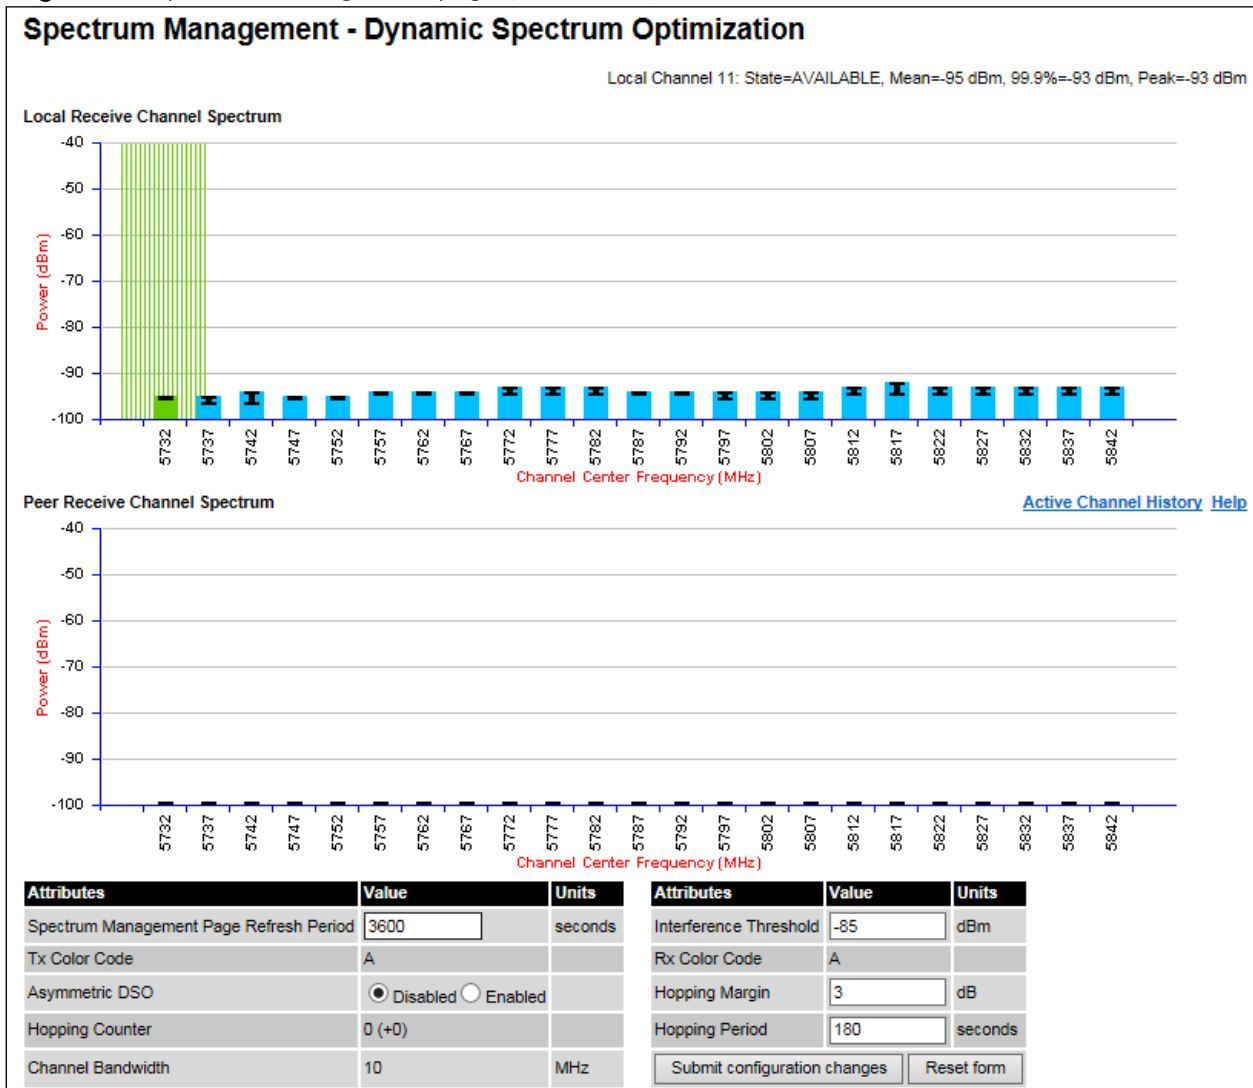


Figure 251 shows the Spectrum Management page layout for a unit configured as a Master. On a unit configured as Slave, some of the controls at the bottom of the page are not available.

Spectrum Management Settings

All spectrum management configuration changes are applied at the master ODU only. These changes are then sent from the master to the slave, so that both master and slave keep identical copies of spectrum management configuration. It is therefore possible to swap master and slave roles on an active PTP 700 link without modifying Spectrum Management configuration.

The default channelization can be modified by varying the lower center frequency attribute in the installation wizard, as described in [Wireless Configuration](#) page on page 6-28.



Note Before attempting to improve the performance of the spectrum management algorithm by changing the default configuration, consult the Cambium Point-to-Point distributor or one of the system field support engineers.

Procedure:

- Review the configuration attributes ([Table 232](#))
- Update the attributes as required. At the slave unit, only Page Refresh Period can be updated.
- To save changes, click Submit configuration changes.

Table 232 Spectrum Management attributes

Attribute	Meaning
Spectrum Expert Display Mode	<p>Realtime: When set to Realtime, an additional line appears on the Receive Spectrum plots showing the most recent measurements of interference level for every channel</p> <p>Extended: Extended Display mode is visible only when Extended Scanning is enabled.</p> <p>This control is available in the Spectrum Expert page only.</p>
Extended Spectrum Scanning	<p>Enabled: Enables scanning of entire DSO full band channels.</p> <p>Disabled: Only the operational subband channels are scanned.</p> <p>This control is available in the Spectrum Expert page only.</p>
Spectrum Management Page Refresh Period	<p>The page refreshes automatically according to the setting entered here (in seconds).</p> <p>This control is available in the Spectrum Management page only.</p>
Hopping Margin	<p>Uses this margin when making a channel hop decision. If the interference level of the target channel is lower than that of the active channel by at least the Hopping Margin, the link will hop to the target channel. The default setting is 3 dB in non-radar regions, or 10 dB in radar regions.</p>
Asymmetric DSO	<p>Only displayed in non-radar regions when DSO is enabled. The default configuration of symmetric operation constrains the link to operate symmetrically, using the same transmit and receive channels. When in symmetric mode the slave unit will always follow the master. If the master moves to a new channel the slave will hop to the same channel. When the Point-to-Point link is configured as an asymmetric link both the master and slave are free to select the best channel from their own set of local interference metrics.</p>
Spectrum Management Control	<p>Only displayed in radar regions. The options are DFS and DFS with DSO.</p>

Attribute	Meaning
Hopping Period	The Spectrum Management algorithm evaluates the metrics every “Hopping Period” seconds (180 seconds by default) looking for a channel with lower levels of interference. If a better channel is located, Spectrum Management performs an automated channel hop. If SNMP or SMTP alerts are enabled an SNMP TRAP or an email alert is sent warning the system administrator of the channel change.
Hopping Counter (not configurable)	This is used to record the number of channel hops. The number in the (+) brackets indicates the number of channel changes since the last screen refresh.
Interference Threshold	Spectrum Management uses the interference threshold to perform instantaneous channel hops. If the measured interference on a channel exceeds the specified threshold, then DSO will instruct the wireless to immediately move to a better channel. If a better channel cannot be found the PTP 700 Series will continue to use the current active channel. (Default -85 dBm).
Interference Tolerance Margin	Only displayed for the PTP 45700 Beam Steer ODU: If the SINR after completing Null Steering is above the Interference Threshold plus the Interference Tolerance Margin and maximum modulation is achieved, the link continues to operate at the same frequency, and a DSO channel change is not considered.
Channel Bandwidth (not configurable)	This shows the value of the variable channel bandwidth selected.
Tx Color Code (not configurable)	This shows the Tx Color Code selected during Installation.
Rx Color Code (not configurable)	This shows the Rx Color Code selected during Installation.

Interpreting the receive spectrum plot

The Spectrum Expert page has two graphical plots:

- Local Receive Spectrum
- Peer Receive Spectrum

A more detailed example of one of these plots is shown in [Figure 245](#).

For more information, select the **Help** hyperlink at the top right of the Spectrum Expert page and follow the instructions.

X axis and Y axis

The X-axis shows a stylized view of the selectable wireless channels. Note that the distance between adjacent channels may be smaller than the channel bandwidth. If this is the case, adjacent channels overlap. Channels are displayed separately for clarity. The axis is labeled using the channel center frequencies in MHz. The Y-axis shows the interference power levels from -100 to -40 dBm.

Channel states

The active channel (Channel 9 in [Figure 245](#)) is always marked using hatched green and white lines on the Spectrum Management page or solid green on the Spectrum Expert page. The width of the hatching is directly proportional the channel bandwidth or spectral occupancy of the channel.

The individual channel metrics are displayed using a colored bar and an “I” bar. The colored bar represents the channel state ([Table 233](#)).

Table 233 Channel states represented in the Spectrum Expert plot

Color	State	Meaning
Green	Active	The channel is currently in use, hosting the wireless link.
Orange	Interference	The channel has interference above the interference threshold.
Blue	Available	The channel has an interference level below the interference threshold and is considered by the Spectrum Management algorithm suitable for hosting the Point-to-Point link.
Light Grey	Barred	The system administrator has barred this channel from use. For improved visibility, an additional red “lock” symbol is used to indicate that a channel is barred but The lock is not shown in Extended view.
Red	Radar Detected	A radar signal has been detected and operation on this channel is currently not allowed.
Dark Grey	Region Barred	Extended scanned channels outside the range of configured operational subband channels

Key metrics

The “I” bar and top of the colored bar represent three key metrics ([Table 234](#)). The vertical part of the “I” bar represents the statistical spread between the peak and the mean of the statistical distribution.

The arithmetic mean is the true power mean and not the mean of the values expressed in dBm.

Spectrum Management uses the 99.9% Percentile as the prime interference measurement. All subsequent references to interference level refer to this percentile measurement.

Table 234 Key metrics represented in the Spectrum Expert plot

Metric	Description	How represented
Peak of Means	The largest mean interference measurement encountered during the quantization period. The peak of means is useful for detecting slightly longer duration spikes in the interference environment.	Upper horizontal bar.

Metric	Description	How represented
Mean of Means	The arithmetic mean of the measured means during a quantization period. The mean of means is a coarse measure of signal interference and gives an indication of the average interference level measured during the quantization period. The metric is not very good at predicting intermittent interference and is included to show the spread between the Mean of Means, the 99.9% Percentile and the Peak of Means.	Lower horizontal bar.
99.9% Percentile of the Means	The value of mean interference measurement which 99.9% of all mean measurements fall below, during the quantization period. The 99.9% percentile metric is useful for detecting short duration repetitive interference that by its very nature has a minimal effect of the mean of means.	Top of the colored bar.
Realtime interference level	The arithmetic mean of the power measured during the last quantization period. The quantization period is two seconds.	Continuous line.

Spectrum Expert page in fixed frequency mode

When the link is operating in fixed frequency mode, the Spectrum Expert page uses two visual cues (Figure 252). The main page title has the “Fixed Frequency Mode” suffix and the selected channels are identified by a red capital “F”.

Figure 252 Spectrum Expert page for Fixed Frequency – Standard display mode


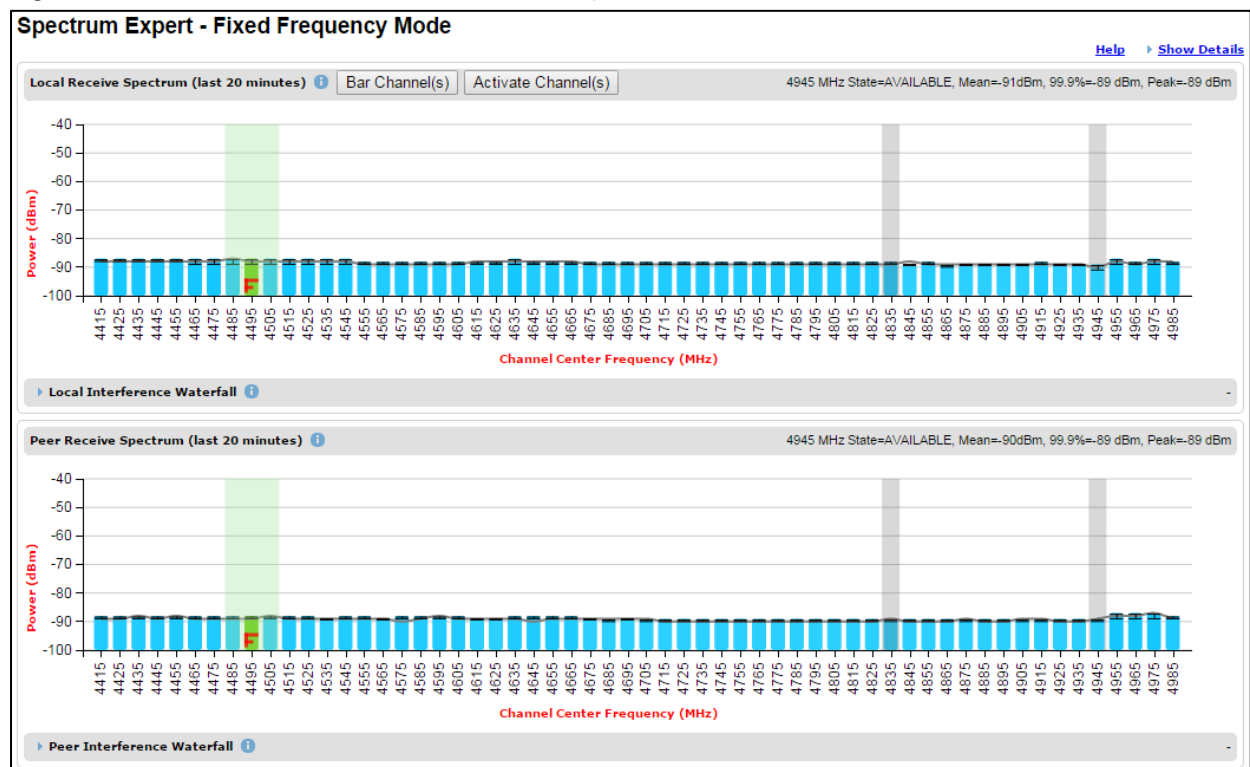


Figure 253 Spectrum Expert page for Fixed Frequency - Extended display mode

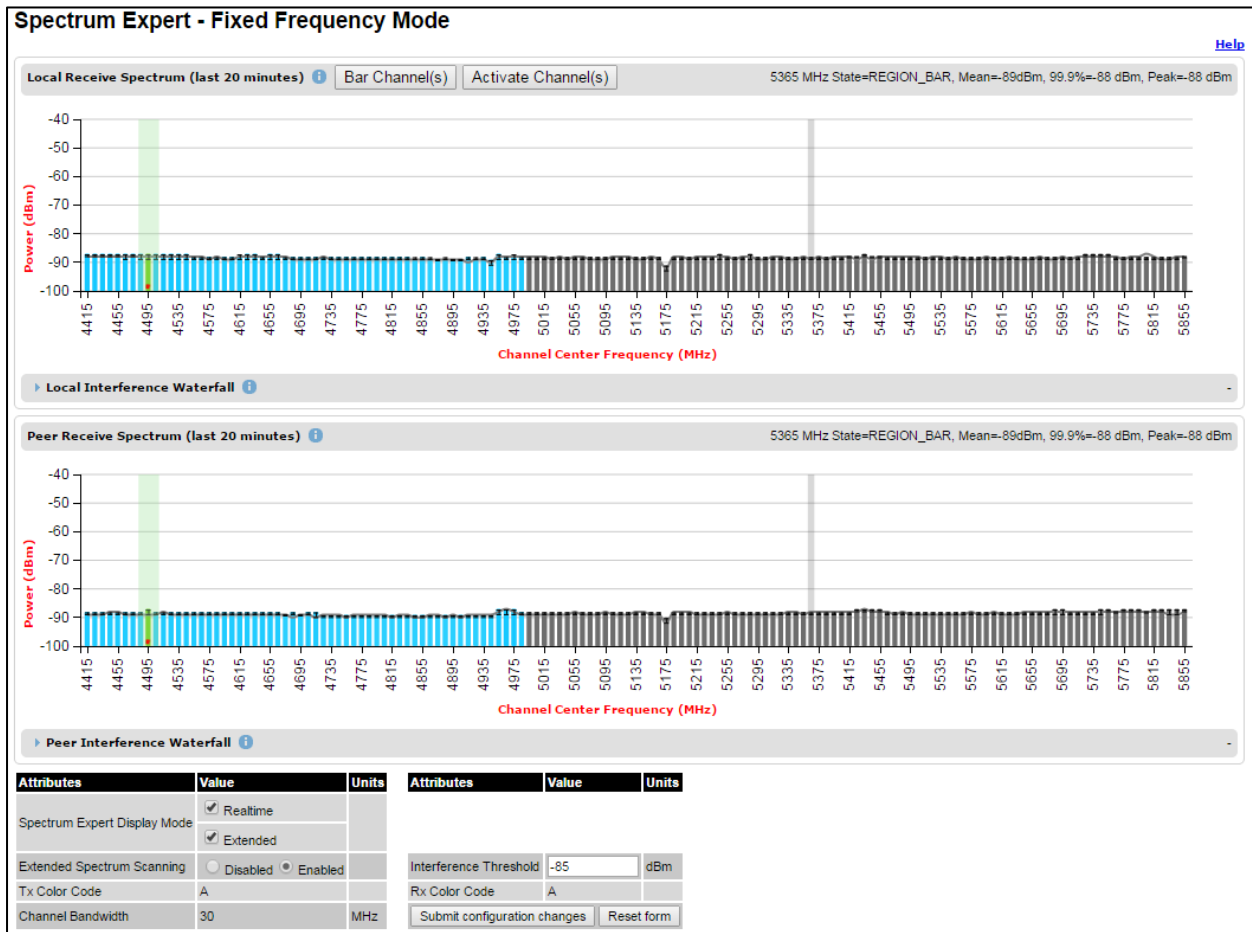

Channel barring is disabled in fixed frequency mode; it is not required as dynamic channel hopping is prohibited in this mode.

The only controls available to the master are the Spectrum Expert Display Mode and Interference Threshold attributes. They will have no effect on the operation of the wireless link and will only effect the generation of the channel spectrum graphics.

Spectrum Expert page in radar avoidance mode

When the link is operating in radar avoidance mode, the Spectrum Expert page (Figure 254) contains the following additional information:

- The main page title has the “Radar Avoidance” suffix.
- The only controls available to the master are the Interference Threshold attribute. This has no effect on the operation of the wireless link and will only affect the generation of the channel spectrum graphics.
- Extra color coding of the interference histogram is provided (Table 235).

Figure 254 Spectrum Expert page with radar avoidance – Standard Display
Spectrum Expert - Radar Avoidance with Dynamic Spectrum Optimization


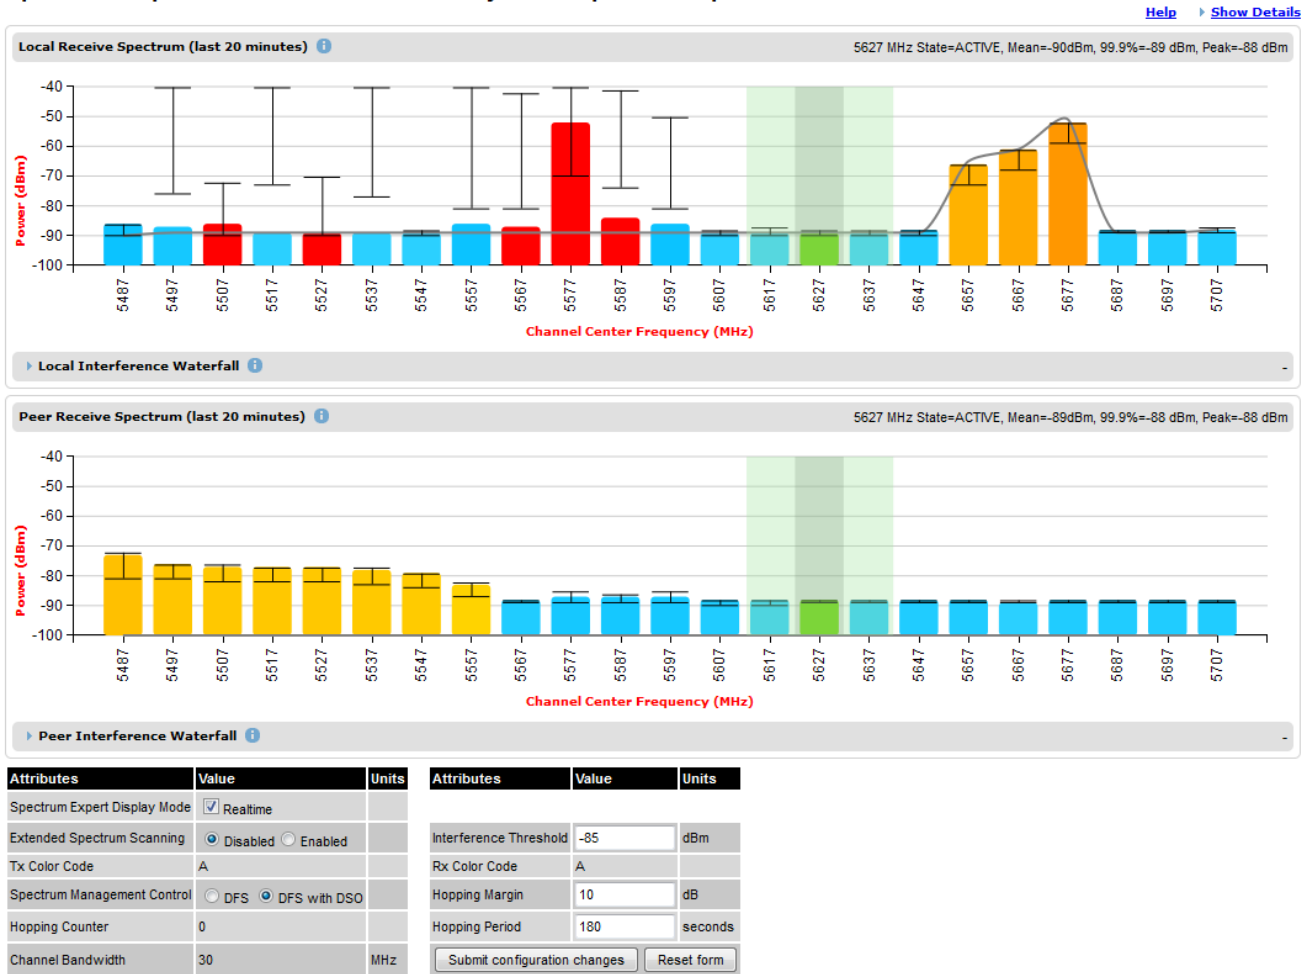


Figure 255 Spectrum Expert page with radar avoidance - Extended Display
Spectrum Expert - Radar Avoidance with Dynamic Spectrum Optimization

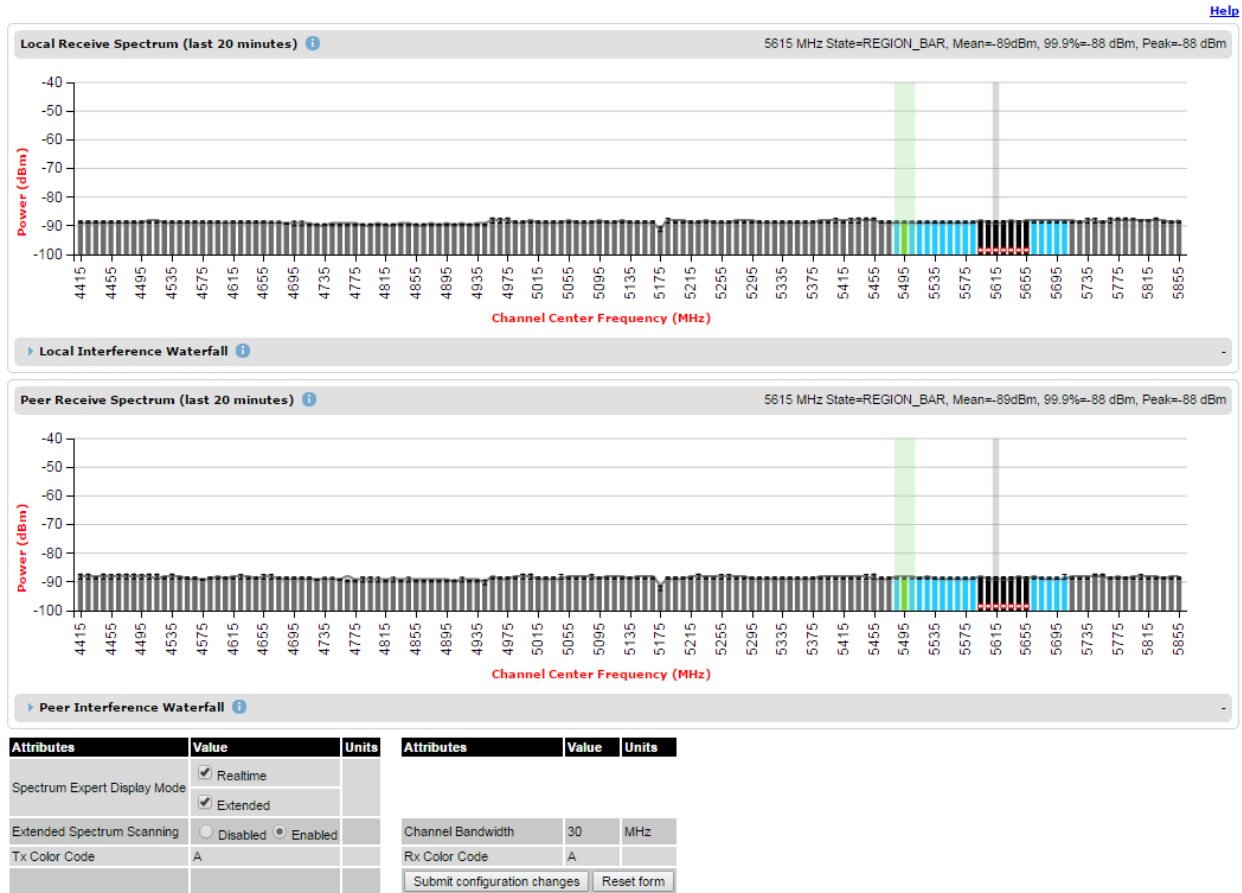

When operating with RTTT (Road transport and Traffic Telematics) Avoidance enabled or other regulatory restrictions on channel usage, all channels marked with a “no entry” symbol with their associated statistics colored black are the prohibited channels. These channels are never used to host the wireless link, but CAC measurements are still taken so that adjacent channel biases can be calculated correctly and so the user can see if other equipment is in use.

Table 235 Channel states in the Spectrum Expert plot (radar avoidance)

Color	State and color	Meaning
Green	Active	This channel is currently in use hosting the Point-to-Point wireless link.
Orange	Interference	This channel has interference above the interference threshold
Blue	Available	This channel has an interference level below the interference threshold and is considered by the Spectrum Management algorithm suitable for hosting the Point-to-Point link

Color	State and color	Meaning
Dark grey	Barred	The system administrator has barred this channel from use. Because the low signal levels encountered when a unit is powered up in a laboratory environment prior to installation (which makes the grey of the channel bar difficult to see). An additional red “lock” symbol is used to indicate that a channel is barred.
Light grey	Unavailable	This channel needs to be monitored for one minute and found free of radar signal before it can be used for transmitting.
Red	Radar Detected	Impulsive Radar Interference has been detected on this channel and the channel is unavailable for 30 minutes. At the end of the 30 minute period a Channel Availability Check is required to demonstrate no radar signals remain on this channel before it can be used for the radio link.
Black	Region Bar	This channel has been barred from use by the local region regulator

Barring channels

Procedure:

- Log into the Master unit.
- Select menu option **System > Spectrum Expert**. The Spectrum Expert page is displayed.
- Select one channel by clicking on the graphical display. If required, select additional channels using control clicking, or select a range of channels using shift clicking. The example in [Figure 256](#) shows three channels selected at 4965 MHz, 4970 MHz and 4975 MHz.
- Click on the **Bar Channel(s)** button. A confirmation dialogue is displayed as shown in [Figure 257](#). Click **OK**.
- Barred channels are indicated by the lock symbol as shown in [Figure 258](#) on page 7-49.

To activate previously barred channels, select the barred channels and click on **Activate Channel(s)**.



Note The **Bar Channel(s)** and **Activate Channel(s)** buttons are available on the Master unit, but not on the Slave unit.

Figure 256 Selecting channels for barring

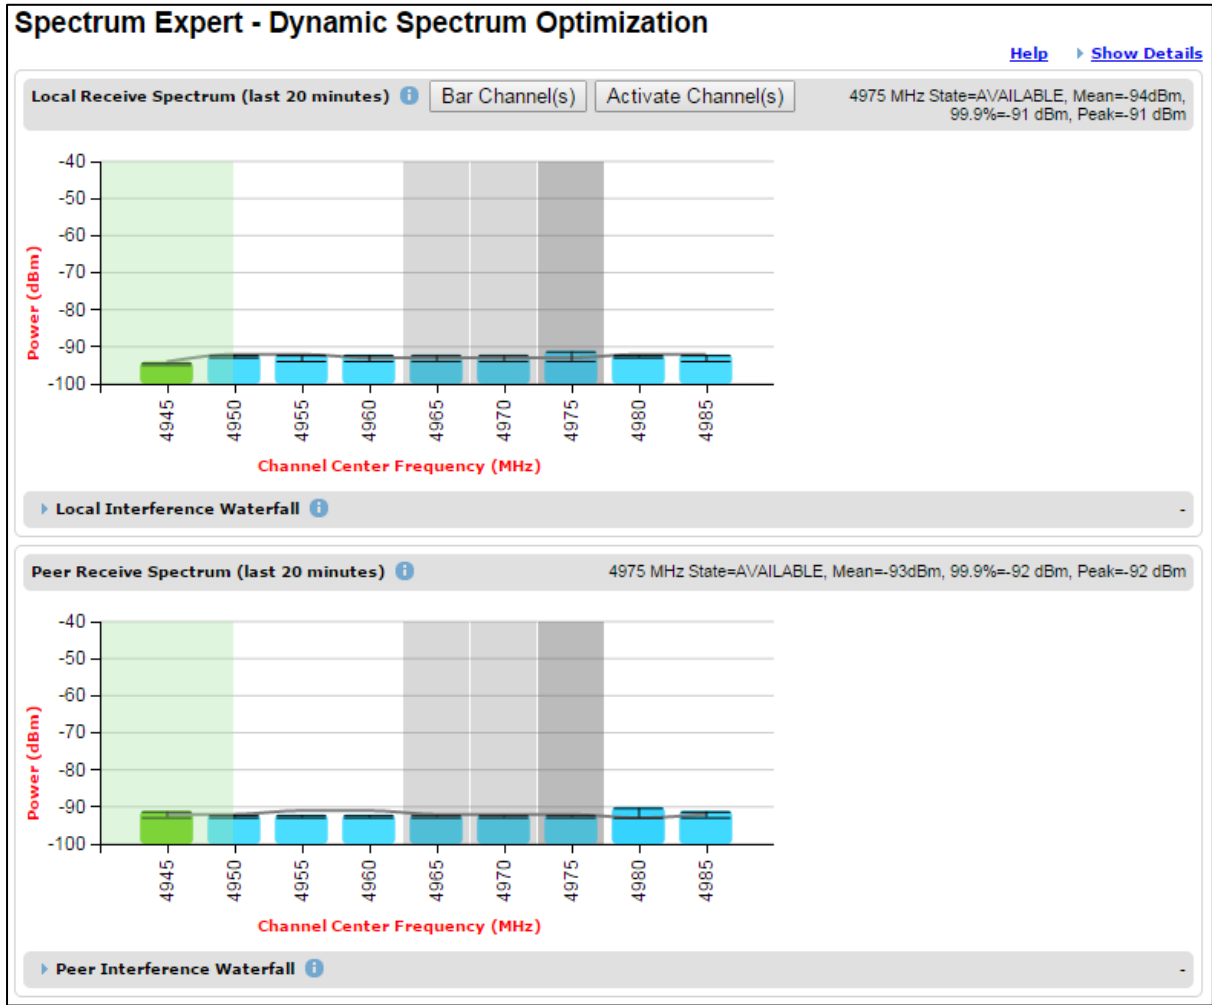


Figure 257 Channel barring confirmation


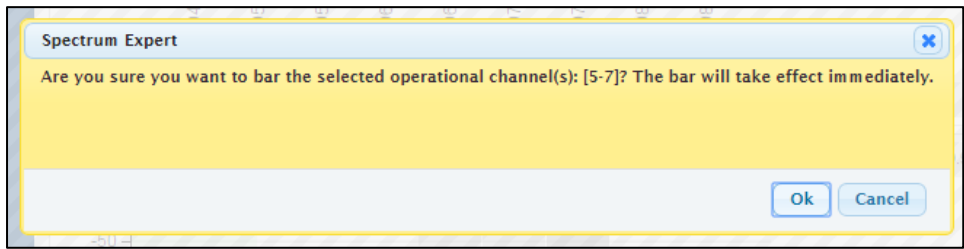


Figure 258 Barred channels

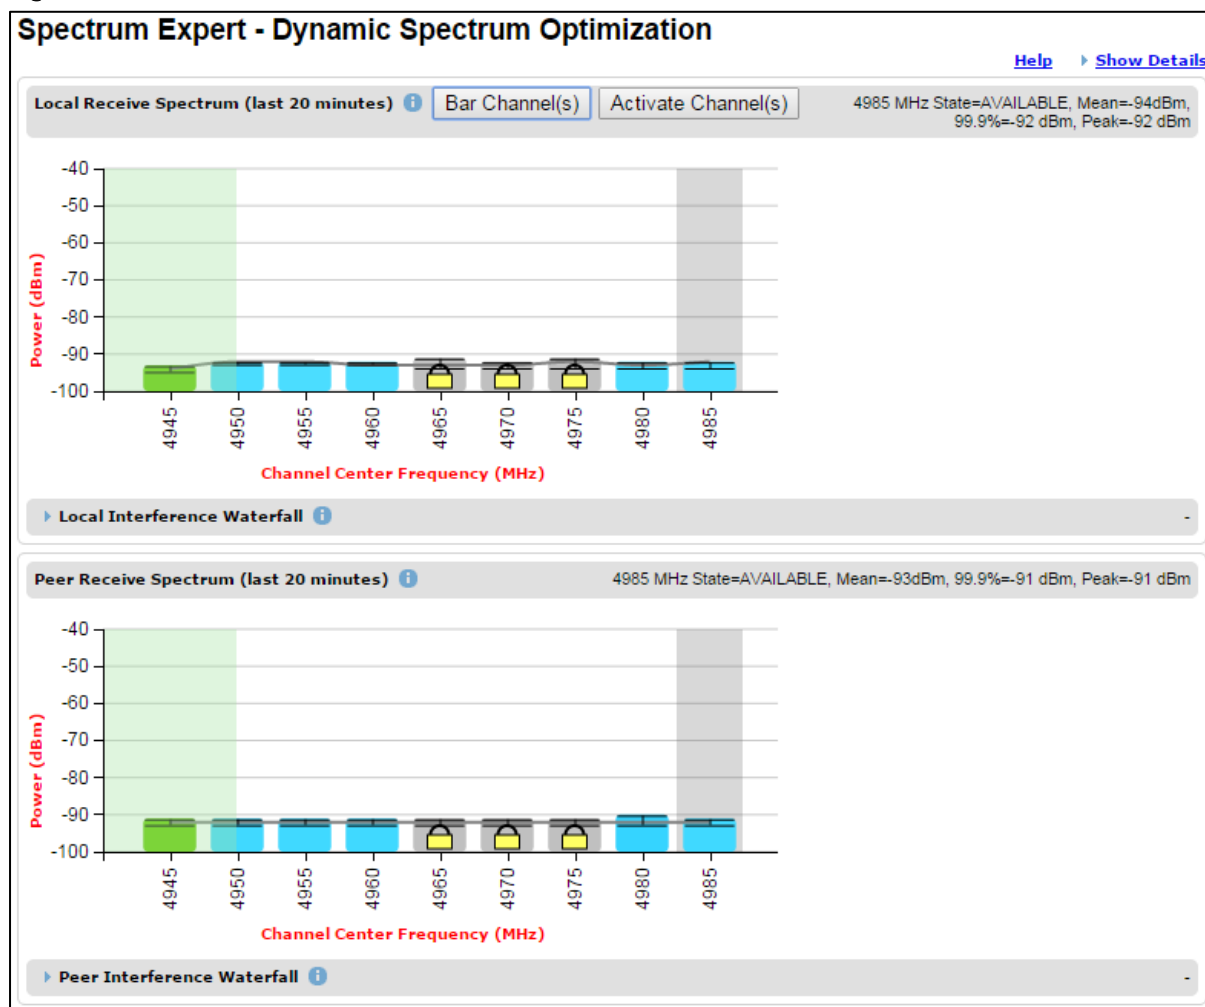

Selecting a Channel and a Time period


The Timeseries plot uses measurements for the selected channel. The Histogram plot uses measurements for the selected channel and the selected measurement period.

To select a channel, place the cursor in the Receive Spectrum display or the Interference Waterfall display. The Timeseries plot updates automatically to show the data for the selected channel. To select a combination of channel and time period, place the cursor in the Interference Waterfall display. The Histogram plot automatically updates to show data for the selected channel and time period.

The selected channel is shown with a grey background in the Receive Spectrum display and by the horizontal position of square brackets in the Interference Waterfall display. The selected time period is shown by the vertical position of the square brackets.

The Selected Channel is centred on 5740 MHz, and the time period is from 2:20 to 9:00 in the example in [Figure 259](#).

The selected frequency and time period are also displayed in the heading for the Timeseries and Histogram plots.

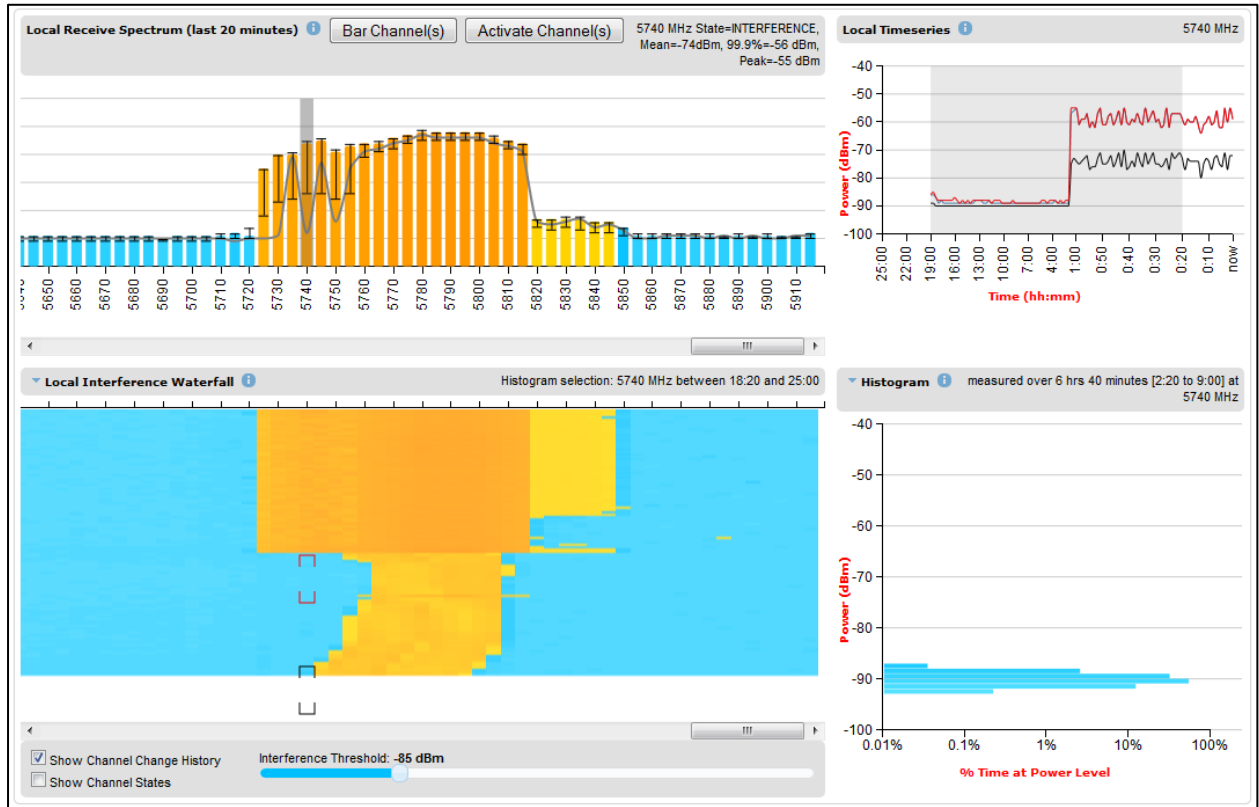Figure 259 Selecting a channel on the Receive Spectrum

To freeze the selection of channel and time period, click on the cursor position. The frequency and time period are now fixed until a new combination is selected by clicking in a different location. The frozen time period is shown by red brackets in the Interference Waterfall display.


Interpreting the timeseries plot

This plot displays the interference measurements of all previous measurement quantization periods for the selected channel, up to a maximum of 25 h (Figure 260).

The channel is selected as described in [Selecting a Channel and a Time period](#). The center frequency of the selected channel is indicated in MHz at the top right of the Timeseries plot.

The colored lines represent interference measurements, with the color map provided in [Table 236](#).

A white background indicates the measurement period which is used to generate the Receive Spectrum plot. Typically, only the last 20 min are used, although any period of time where the wireless link has been down is excluded.

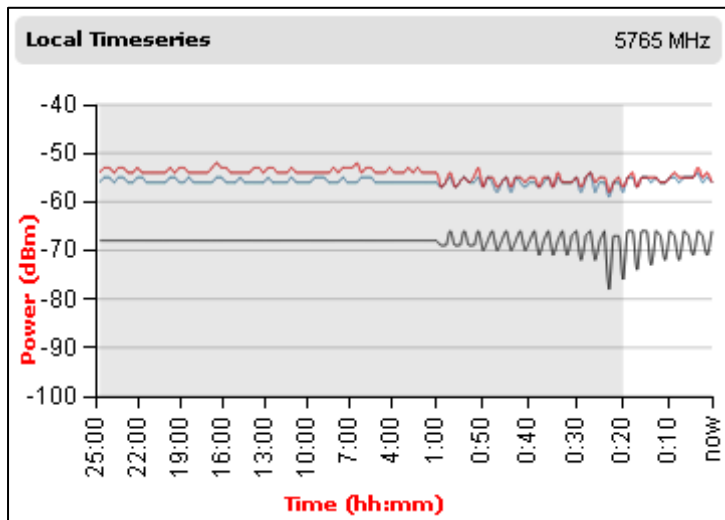Figure 260 Spectrum Expert, Timeseries plot**Table 236** Interference represented in the time series plot

Color	Meaning
RED	Peak of Means interference measurement
BLACK	99.9% percentile of means interference measurement
BLUE	Mean of Means interference measurement

Interpreting the Interference Waterfall plot

The Interference Waterfall indicates the level of interference for all the channels in the band over the last 25 h. [Figure 261](#) shows a screen capture example.


The channel and measurement period are selected as described in [Selecting a Channel and a Time period](#) on page 7-49. The center frequency of the selected channel and the time period are indicated at the top right of the Interference Waterfall plot.

The X-axis corresponds to the channel center frequency and is horizontally aligned with the Receive Spectrum plot.

The Y-axis corresponds to the time in the past in hours and minutes, with the most recent period being at the top of the plot.

Each channel and measurement period is indicated using the color scale given in [Table 233](#).

Figure 261 Spectrum Expert, Interference Waterfall plot

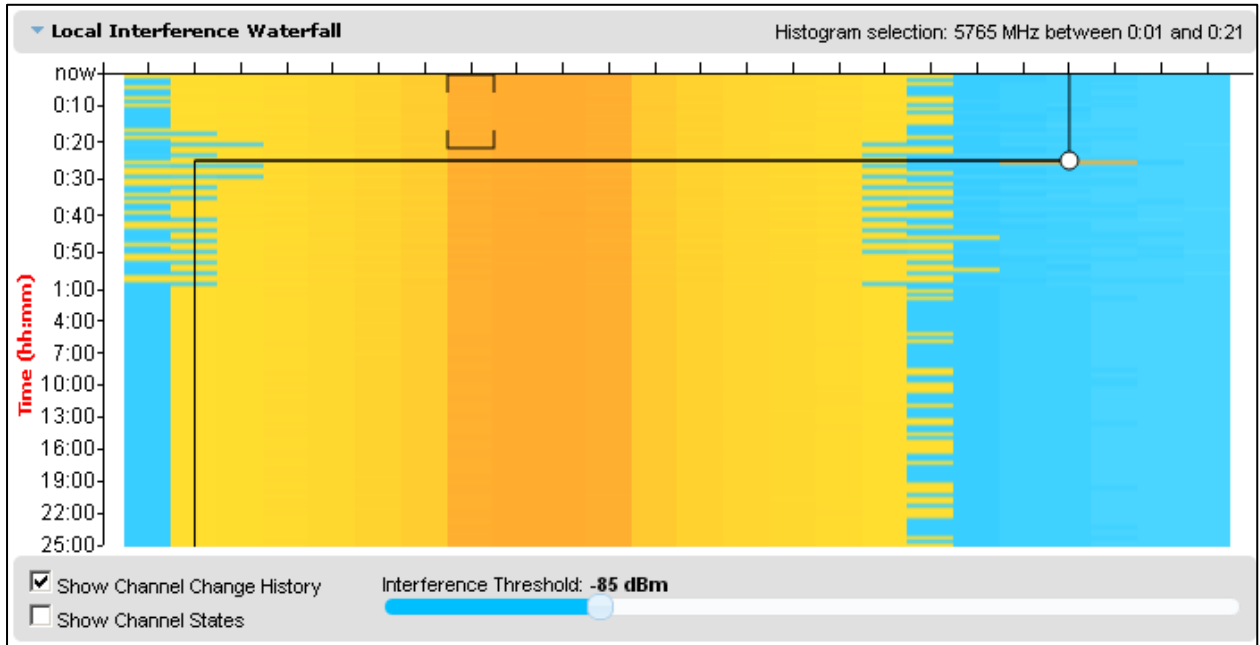


Setting the interference threshold

The interference threshold may be set using the sliding control located directly below the Interference Waterfall plot. This is an alternative to the method described in [Spectrum Management Settings](#) on page 7-38. For either method, the change to the Interference Threshold is not taken into account until the Submit button is clicked.

Viewing the active channel history

To display the active channel history, tick the Show Channel Change History control right below the Interference Waterfall plot. The active channel history over the last 25 hours is plotted as a black line overlay on the Interference Waterfall plot. A circle is displayed every time the active channel has changed. By hovering above the circle, the reason for the channel change is indicated, as shown in [Figure 262](#).


Figure 262 Spectrum Expert, Interference Waterfall with active channel history

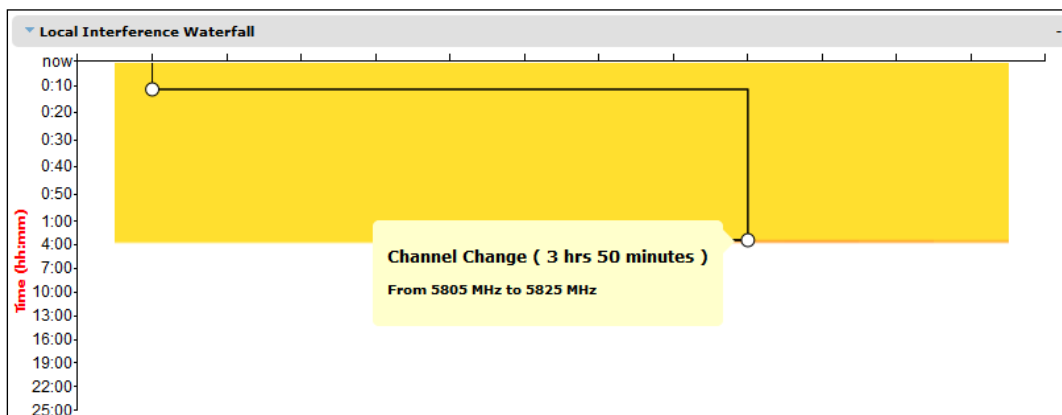

Viewing the channel states

To display the Channel States, tick the Show Channel State control right below the Interference Waterfall plot. Figure 263 shows an example of the Interference Waterfall when the Channel States are displayed. The colors used are defined in [Channel states](#) on page 7-42.

Figure 263 Spectrum Expert page, Interference Waterfall plot with channel states

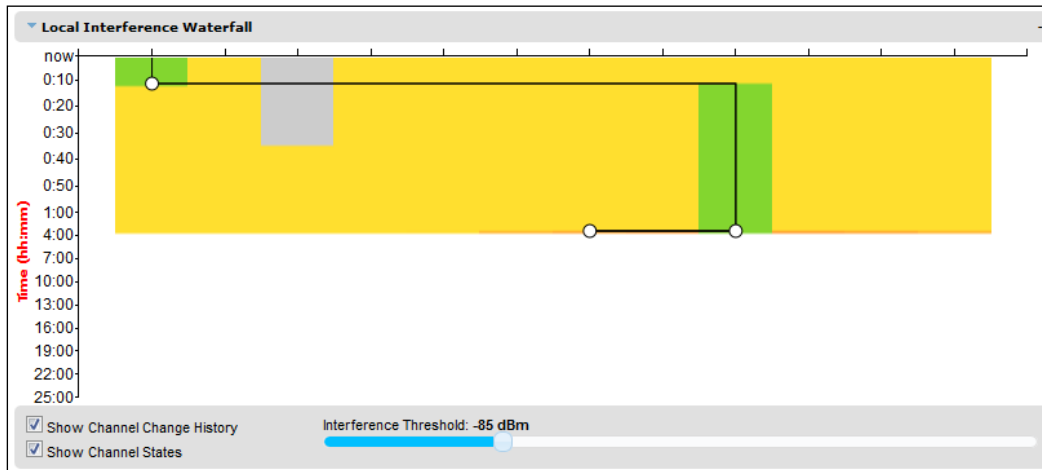

Interpreting the histogram plot

The histogram plot indicates the percentage of the measurements in the selected measurement period where the interference level for the selected channel is at a given level ([Figure 264](#)).


The channel and measurement period are selected as described in [Selecting a Channel and a Time period](#) on page 7-49. The combined selection is indicated graphically by a pair of brackets in the Waterfall plot, and in text form on the top right of the Histogram plot, as shown in [Figure 263](#).

The X-axis corresponds to a percentage of the measurements in the measurement period on a logarithmic scale.

The Y-axis corresponds to actual interference level in dBm.

The bar for each each power level is of the same color as in the Interference Waterfall plot.

Figure 264 Spectrum Expert page, histogram plot

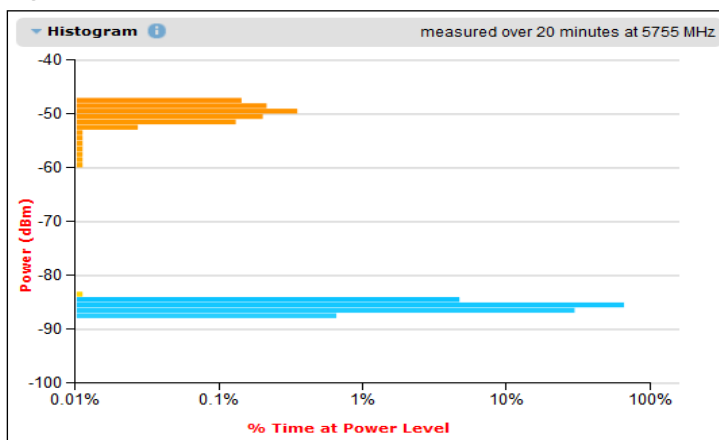

Spectrum Expert example

In this example from a real-world link, shown in [Figure 265](#), the channel at 5740 MHz has been selected for analysis.


The Spectrum display is based in the most recent 20 minute period. The height of the colored bar in the selected channel shows that the 99.9th percentile of the interference is at about -66 dBm. The orange color of the bar is a reminder that this level is above the interference threshold of -85 dBm.

The upper bar of the “I” bar indicates the peak level of the interference. The lower bar of the “I” bar indicates the mean level of the interference. The height of the “I” bar represents the peak to mean ratio. In this channel, the peak to mean ratio is about 15 dB.

The red and black traces in the Timeseries plot show that the peak and mean interference levels have been maintained at approximately constant levels over a period of about two hours. Before that period, the interference level was considerably lower, at about -90 dBm.


In the Interference Waterfall plot, the selected time period is from 2 hours 20 minutes to 9 hours ago. The plot shows that interference occurred suddenly, across a broad band of channels, shortly after the selected period, or about two hours ago, and that it has been maintained at an approximately constant level since then. The Histogram plot shows that, prior to the onset of interference, the interference level was consistently close to -90 dBm, corresponding to the earlier part of the Timeseries plot.

Figure 265 Spectrum Expert, example 1

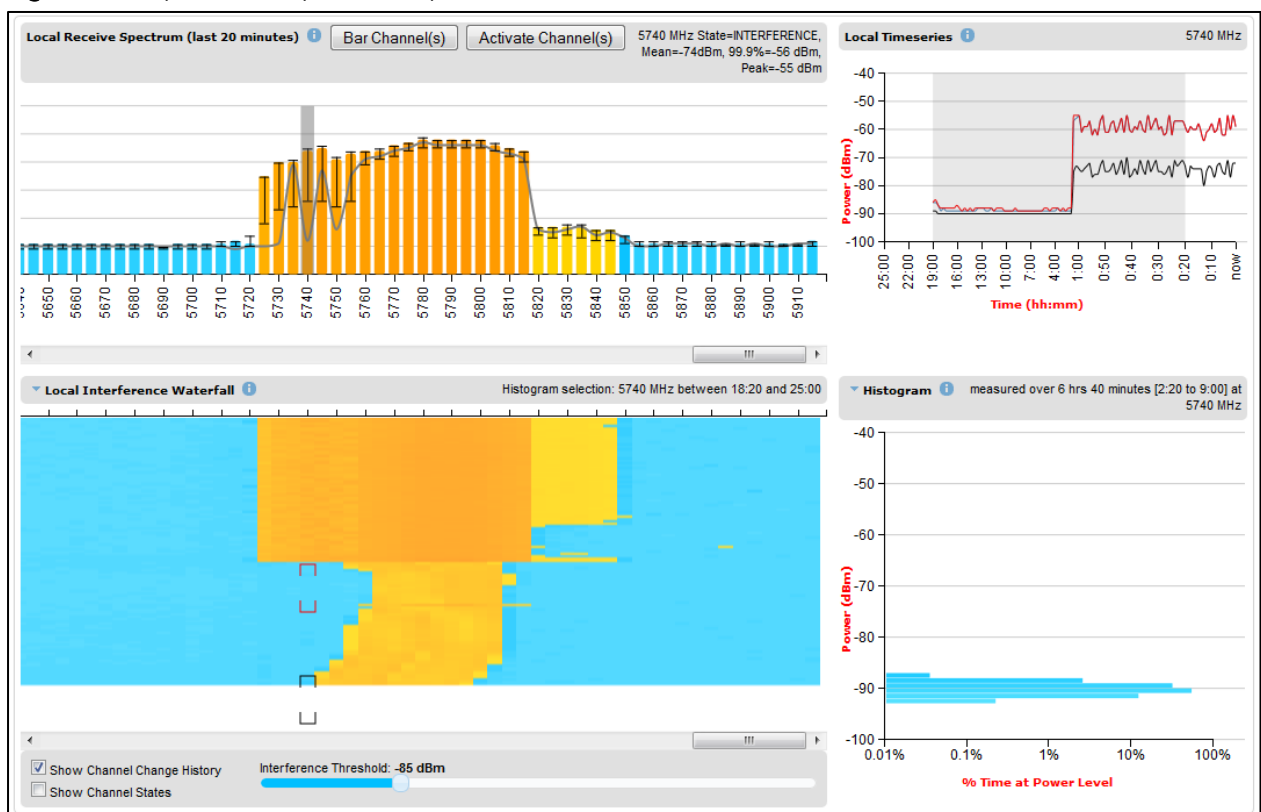

In [Figure 266](#), the time period for the Histogram plot has been set to the most recent 20 minutes. The histogram shows that interference levels are distributed over the range of approximately -74 dBm to approximately -54 dBm.

Figure 266 Spectrum Expert, example 2

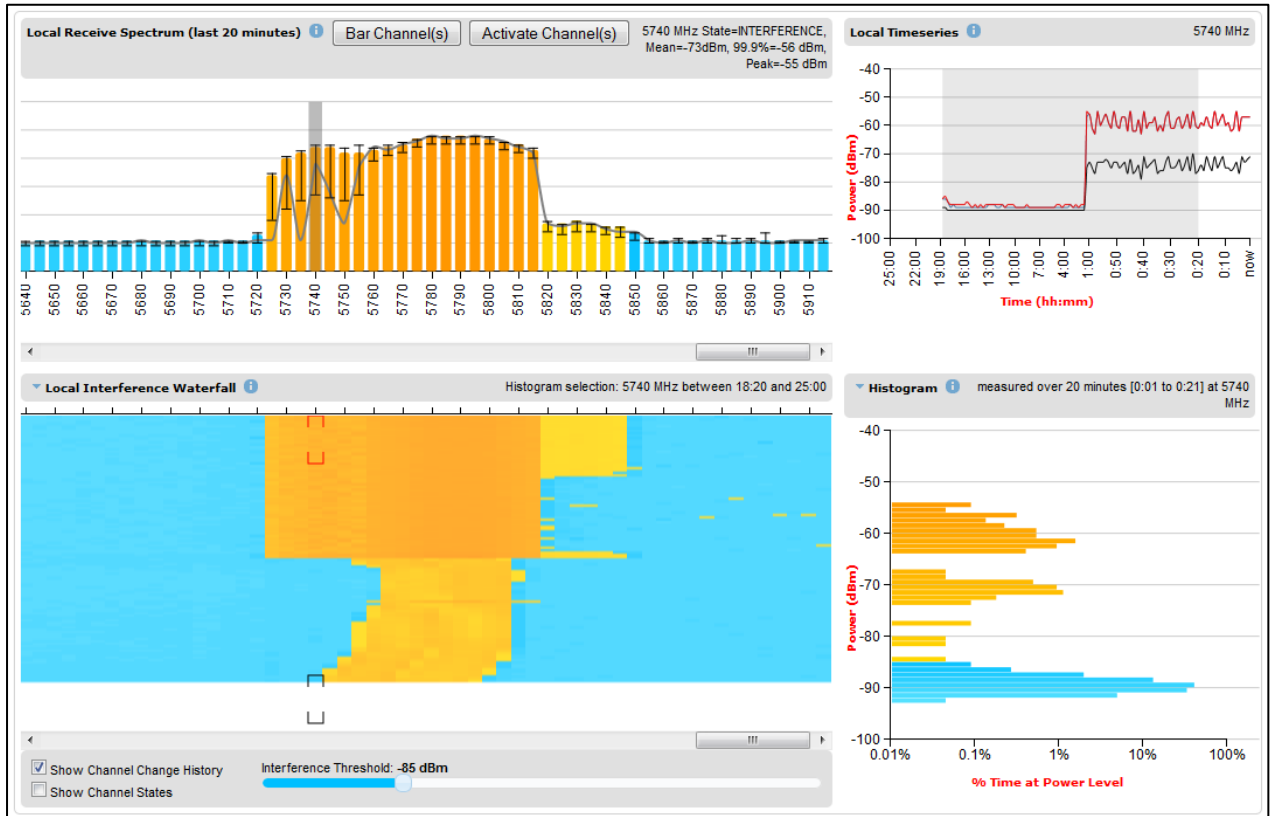

The interference observed in Figure 266 for the channel at 5740 MHz during the recent two hour period is not compatible with satisfactory operation a PTP 700 link.

The situation is, if anything, even worse in the channel at 5780 MHz, as shown in Figure 267, where the interference level was historically worse, and in the recent period was consistently in the range -52 dBm to -58 dBm.

Figure 268 shows the recent history of the channel at 5835 MHz. In this case, the peak interference is less than -80 dBm. This channel is likely to support satisfactory operation at a receive signal level of -60 dBm or greater.

Figure 267 Spectrum Expert, example 3


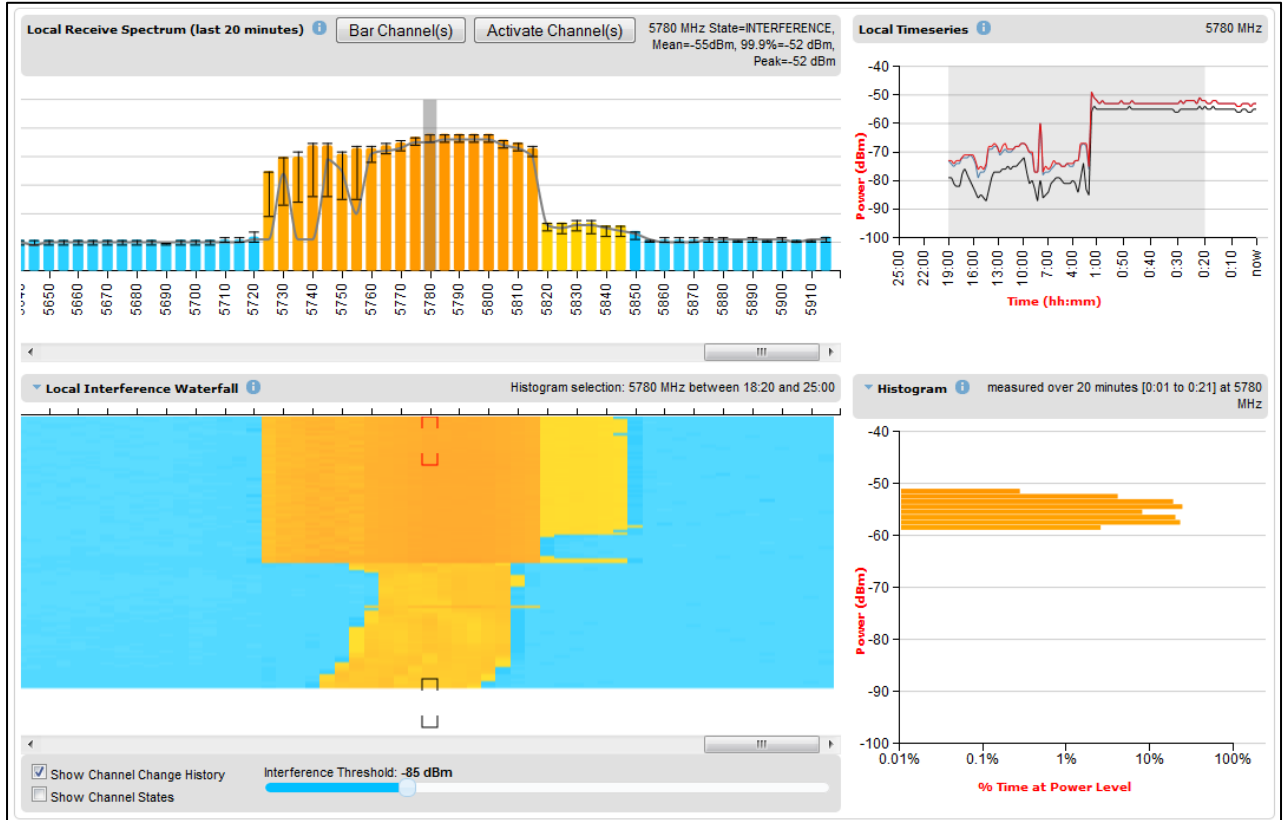


Figure 268 Spectrum Expert, example 4

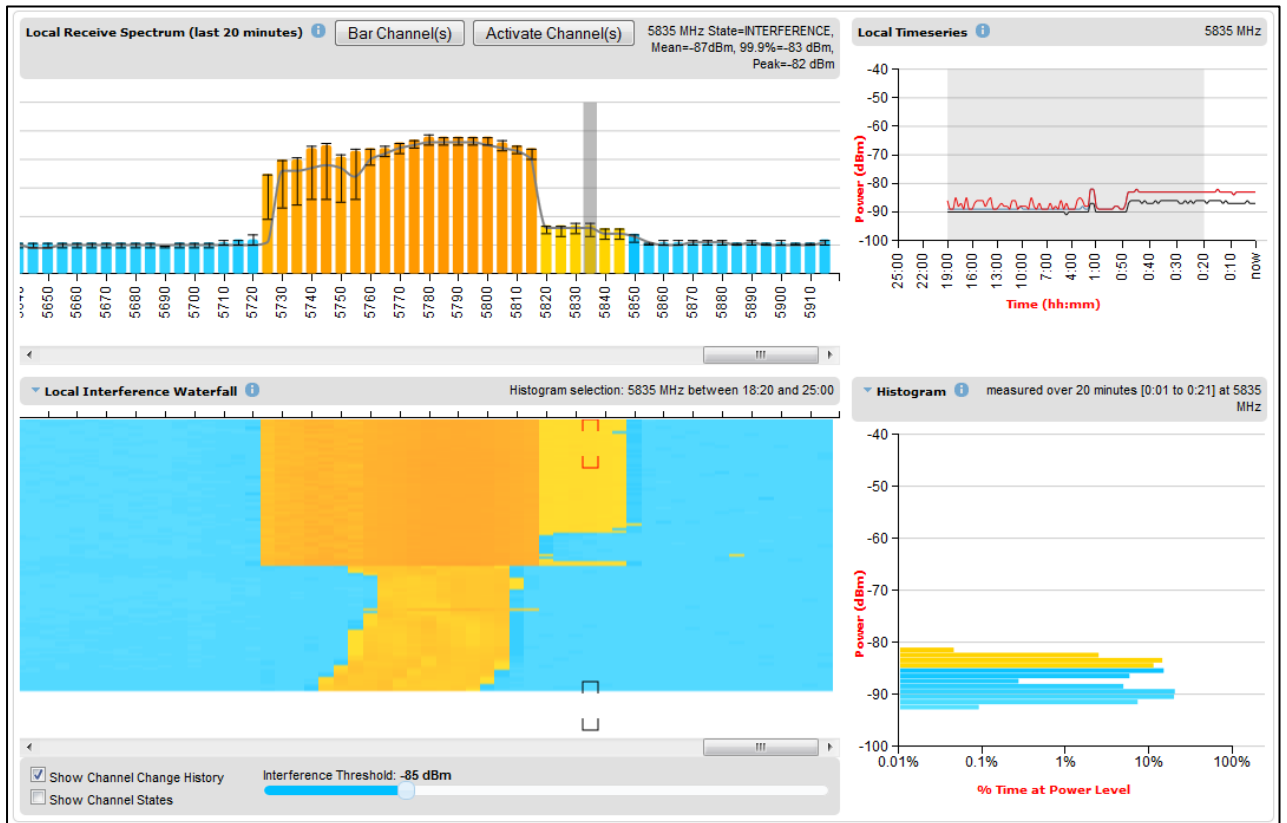

Managing security

This section describes the following procedures:

- Exiting FIPS 140-3 approved mode
- Zeroizing sensitive security parameters

Other security configuration procedures are described in [Security menu](#) on page 6-122.

Exiting FIPS 140-3 approved mode

To exit from the FIPS 140-3 approved mode, install standard (non-FIPS) PTP 700 firmware.



Note The sensitive security parameters (SSPs) are zeroized when the unit exits from the FIPS 140-3 approved mode.

Zeroizing sensitive security parameters

Use this procedure to zeroize sensitive security parameters (SSPs) as follows:

- Key of keys.
- AES encryption keys for the wireless interface.
- Private key for the HTTPS/TLS interface.
- Entropy value for the HTTPS/TLS interface.
- Private key for the User-supplied Device Certificate.
- User account passwords for the web-based interface.
- SNTP server keys for SHA1
- SNMPv3 USM authentication keys
- SNMPv3 USM privacy keys

Procedure:

- On the Security menu, click Zeroize SSPs.
- Click Select Zeroize SSPs and Reboot Wireless Unit.
- Confirm the reboot.



Note Alternatively, select the Zeroize SSPs option in Recovery mode as described in [Zeroize Sensitive Security Parameters](#) on page 7-87.



Attention When SSPs have been zeroized, all user accounts are disabled, and the ODU is returned to the “first use” condition. See [Creating a user account](#) on page 6-6 to create a new user account for the web-based interface.

System statistics

This section describes how to use the system statistics pages to manage the performance of the PTP 700 link, use the following web pages:

System Statistics page

Menu option: **System > Statistics**. Use this page to check system statistics.

System histograms

The System Histograms section of the System Statistics page ([Figure 269](#) and [Figure 270](#)) contains eight diagnostic attributes that are presented as arrays of four elements ([Table 237](#)).

Figure 269 System Histograms section of the System Statistics page (PTP Topology)

System Statistics					
Attributes	Value				Units
System Histograms					
Transmit Power	25.0,	17.5,	-15.0,	14.0	dBm
Receive Power	-37.2,	-64.0,	-110.0,	-51.3	dBm
Vector Error	7.2,	-19.6,	-31.0,	-29.4	dB
Link Loss	110.8,	79.6,	0.0,	107.3	dB
Signal Strength Ratio	0.7,	0.0,	-1.0,	0.0	dB
Transmit Data Rate	20.40,	14.73,	0.00,	20.40	Mbps
Receive Data Rate	20.40,	9.14,	0.00,	20.40	Mbps
Aggregate Data Rate	40.80,	23.88,	0.00,	40.80	Mbps
Histogram Measurement Period	00:07:46				
<input type="button" value="Reset System Histogram Measurement Period"/>					

Figure 270 System Histograms section of the System Statistics page (HCMP Topology, Wireless Interface Selector set to “All Wireless Interfaces”)

System Statistics

Attributes	Value	Units
Wireless Interface Selector	All Wireless Interfaces	

Attributes	Value	Value	Value	Units
Remote Unit Name	Slave_58_01_D5	Not Available	Not Available	

System Histograms

Transmit Power	23.0, 23.0	28.0, 28.0	0.0, 0.0	dBm
Receive Power	-46.2, -46.2	-109.9, -110.0	0.0, 0.0	dBm
Vector Error	-35.5, -33.7	0.0, 0.0	0.0, 0.0	dB
Link Loss	67.2, 67.2	0.0, 0.0	0.0, 0.0	dB
Signal Strength Ratio	3.1, 3.2	0.0, 0.0	0.0, 0.0	dB
Transmit Data Rate	57.89, 57.89	0.00, 0.00	0.00, 0.00	Mbps
Receive Data Rate	2.78, 2.78	0.00, 0.00	0.00, 0.00	Mbps
Aggregate Data Rate	60.67, 60.67	0.00, 0.00	0.00, 0.00	Mbps

Histogram Measurement Period: 01:00:00

Attributes	Value	Units
Elapsed Time Indicator	01:21:18	
Statistics Page Refresh Period	3600	seconds

The element arrays represent the following:

- Max: The maximum value measured over the last hour.
- Mean: The mean of a set of values recorded at one second intervals over the last hour.
- Min: The minimum value measured over the last hour.
- Latest: The latest value measured.

The values are calculated over the time that has elapsed since the link was established or since the measurement period was reset.

Use the [Diagnostics Plotter page](#) on page 7-76 to plot these attributes against time. Use the [Generate Downloadable Diagnostics page](#) on page 7-78 to extract historical data for these attributes to a CSV file.

Procedure:

- To reset and restart measurement, click **Reset System Histograms and Measurement Period**.

Table 237 System Histogram attributes in the System Statistics page

Attribute	Meaning
Transmit Power	The transmit power histogram, calculated over a one hour period.
Receive Power	The receive power histogram, calculated over a one hour period.
Vector Error	The vector error measurement compares (over a one hour period) the received signal IQ modulation characteristics to an ideal signal to determine the composite vector error magnitude.
Link Loss	Link loss calculated (over a one hour period) as follows: $\text{Peer_Tx_Power (dBm)} - \text{Local_Rx_Power (dBm)} + 2 \times \text{Antenna_Pattern (dBi)}$
Signal Strength Ratio	<p>The Signal Strength Ratio (calculated over a one hour period) is:</p> $\frac{\text{Power received by the vertical antenna Configure (dB)}}{\text{Power received by the horizontal antenna Configure (dB)}}$ <p>This ratio is presented as: max, mean, min, and latest. The max, min and latest are true instantaneous measurements; the mean is the mean of a set of one second means.</p> <p>Signal Strength Ratio is an aid to debugging a link. If it has a large positive or negative value then investigate the following potential problems:</p> <ul style="list-style-type: none"> • An antenna coaxial lead may be disconnected. • When spatial diversity is employed, the antenna with the lower value may be pointing in the wrong direction. • When a dual polar antenna is deployed, the antenna may be directed using a side lobe rather than the main lobe. <p>When there is a reflection from water on the link and spatial diversity is employed, then one expects large, slow swings in Signal Strength Ratio. This indicates the antenna system is doing exactly as intended.</p>
Transmit, Receive and Aggregate Data Rates	The data rates in the transmit direction, the receive direction and in both directions, expressed in Mbps (max, mean, min, and latest). The max, min and latest are true instantaneous measurements. The mean is the mean of a set of one second means.
Histogram Measurement Period	The time over which the system histograms were collected.

Wireless Port Counters (PTP topology)

The System Counters section of the System Statistics page (Figure 271) contains Data Port Counters (Table 238), Management Agent Counters (Table 239) and Wireless Port Counters and Performance Information (Table 240).

Figure 271 System Counters section of the System Statistics page

Attributes	Value	Units
Data Port Counters		
Tx Frames	197 (+197)	
Rx Frames	248 (+248)	
Second Data Port Counters		
Tx Frames	14 (+14)	
Rx Frames	3 (+3)	
Management Agent Counters		
Packets To Internal Stack	203 (+203)	
Packets From Internal Stack	293 (+293)	
Wireless Port Counters and Performance Information		
Tx Frames	100 (+100)	
Rx Frames	104 (+104)	
Link Symmetry	1 to 1	
Link Capacity	226.65	Mbps
Transmit Modulation Mode	256QAM 0.81 (Single) (30 MHz)	
Receive Modulation Mode	256QAM 0.81 (Dual) (30 MHz)	
Receive Modulation Mode Detail	Running At User-Configured Max Modulation Mode	
Wireless Link Availability	100.0000	%
Data Bridging Availability	100.0000	%
Byte Error Ratio	1.355e-8	
Counter Measurement Period	00:01:32	
Reset System Counters		

Procedure:

- To reset all system counters to zero, click **Reset System Counters**.

The packet counter attributes each contain a number in parentheses; this shows the number of packets received since the last page refresh.

Table 238 Data Port Counters

Attribute	Meaning
Tx Frames	The total number of good frames the bridge has sent for transmission through the port selected for Data Service
Rx Frames	The total number of good frames the bridge has received through the port selected for Data Service

Table 239 Management Agent Counters

Attribute	Meaning
Packets To Internal Stack	The total number of good packets the bridge has transmitted to the internal stack (for example, ARP, PING and HTTP requests).
Packets From Internal Stack	The total number of good packets the bridge has received from the internal stack (ARP responses, PING replies, HTTP responses).

Table 240 Wireless Port Counters and Performance Information

Attribute	Meaning
Tx Frames	Total number of good frames on the Data path, the bridge has sent for transmission through the wireless interface.
Rx Frames	Total number of good frames on the Data path, the bridge has received from the wireless interface.
Tx Frame Management	Total number of good management frames, the bridge has sent for transmission through the wireless interface
Link Symmetry	Ratio between transmit and receive time in the TDD frame. The first number is the time allowed for the transmit direction and the second number is the time allowed for the receive direction.
Link Capacity	The maximum aggregate data capacity available for user traffic under the current radio link conditions, assuming the units have been connected using Gigabit Ethernet. The sum of the displayed Transmit and Receive data rates may be lower than this figure if the link is not fully loaded by the current traffic profile.
Transmit Modulation Mode	The modulation mode currently being used on the transmit channel. The number in brackets after the modulation mode and coding rate string is the effective data rate available to all MAC layer protocols.
Receive Modulation Mode	The modulation mode currently being used on the receive channel. The number in brackets after the modulation mode and coding rate string is the effective data rate available to all MAC layer protocols.
Receive Modulation Mode Detail	The receive modulation mode in use. For a list of values and their meanings, see Table 220 .
Wireless Link Availability	Wireless link availability calculated since the last system counters reset.
Ethernet Bridging Availability	Link availability for bridging Ethernet traffic calculated since the last reset of the system counters. This is the percentage of time in which the Ethernet Bridging Status attribute has been set to "Enabled".
Byte Error Ratio	The ratio of detected Byte errors to the total number of bytes since the last system reboot. This measurement is made continually using null frames when there is no user data to transport.

Attribute	Meaning
Counter Measurement Period	The time over which the system counters were collected.

Other attributes

The bottom section of the System Statistics page (Figure 272) contains two attributes (Table 241).

Figure 272 Other attributes section of the System Statistics page

Attributes	Value	Units
Elapsed Time Indicator	00:07:55	
Statistics Page Refresh Period	<input type="text" value="3600"/>	seconds
<input type="button" value="Submit Page Refresh Period"/>		

Procedure:

- After updating the Statistics Page Refresh Period field, click **Submit Page Refresh Period**.

Table 241 Other attributes in the System Statistics page

Attribute	Meaning
Elapsed Time Indicator	Elapsed time since the last system reboot.
Statistics Page Refresh Period	The statistics page refreshes automatically according to the setting entered here (in seconds).

Wireless Port Counters page

PTP topology

Menu option: **System > Statistics > Wireless Port Counters** (Figure 273).

Use this page to check the Ethernet performance of the wireless bridge.

Figure 273 Wireless Port Counters page (PTP topology)

Wireless Port Counters					
Attributes	Value	Units	Attributes	Value	Units
Tx Frames	132 (+32)		Rx Frames	491 (+387)	
			Rx Frames With Crc Error	0 (+0)	
Tx Frames Q0	0 (+0)		Rx Frames Q0	0 (+0)	
Tx Frames Q1	125 (+125)		Rx Frames Q1	160 (+160)	
Tx Frames Q2	0 (+0)		Rx Frames Q2	0 (+0)	
Tx Frames Q3	0 (+0)		Rx Frames Q3	0 (+0)	
Tx Frames Q4	0 (+0)		Rx Frames Q4	0 (+0)	
Tx Frames Q5	0 (+0)		Rx Frames Q5	0 (+0)	
Tx Frames Q6	0 (+0)		Rx Frames Q6	0 (+0)	
Tx Frames Q7	7 (+7)		Rx Frames Q7	331 (+331)	
Tx Drops Q0	0 (+0)				
Tx Drops Q1	0 (+0)				
Tx Drops Q2	0 (+0)				
Tx Drops Q3	0 (+0)				
Tx Drops Q4	0 (+0)				
Tx Drops Q5	0 (+0)				
Tx Drops Q6	0 (+0)				
Tx Drops Q7	0 (+0)				
Tx Frames Second Data	3 (+3)		Rx Frames Second Data	198 (+198)	
Tx Drops Second Data	0 (+0)				
Attributes	Value	Units	Attributes	Value	Units
Counter Page Refresh Period	3600	seconds	Counter Measurement Period	00:05:36	
<input type="button" value="Submit Page Refresh Period"/>			<input type="button" value="Reset System Counters"/>		

Procedure:

- Review the attributes (Table 242).
- To change the refresh period, update the Counter Page Refresh Period attribute and click **Submit Page Refresh Period**.
- To reset all counters to zero, click **Reset System Counters**.

Table 242 Wireless Port Counters attributes

Attribute	Meaning
Tx/Rx Frames	Number of frames transmitted and received over the wireless bridge.
Rx Frames With Crc Error	Number of received frames with CRC errors.
Tx/Rx Frames Q0...Q7	Number of transmitted and received frames for each Traffic Class.
Tx Drops Q0...Q7	Number of transmitted frames dropped for each Traffic Class.
Rx Drops Q0...Q7	Total number of frames dropped due to the lack of sufficient capacity in the receive buffer, for each Traffic Class.

HCMP topology

Menu option: **System > Statistics > Wireless Port Counters** (Figure 274 to Figure 276).

Use this page to check the Ethernet performance of the wireless bridge.

Figure 274 Wireless Port Counters page (Master, HCMP topology, Wireless Interface Selector set to a single link)

Wireless Port Counters

Attributes	Value	Units
Wireless Interface Selector	Slave_58_01_D5	

Attributes	Value	Units
Tx Frames	75,333 (+0)	
Tx Frames Q0	75,333 (+0)	
Tx Frames Q1	0 (+0)	
Tx Frames Q2	0 (+0)	
Tx Frames Q3	0 (+0)	
Tx Drops Q0	0 (+0)	
Tx Drops Q1	0 (+0)	
Tx Drops Q2	0 (+0)	
Tx Drops Q3	0 (+0)	
Byte Error Ratio	3.574e-9	

Attributes	Value	Units
Rx Frames	171,324 (+0)	
Rx Frames With Error	3 (+0)	
Rx Frames Q0	171,322 (+0)	
Rx Frames Q1	0 (+0)	
Rx Frames Q2	0 (+0)	
Rx Frames Q3	2 (+0)	

Attributes	Value	Units
Counter Page Refresh Period	3600	seconds

Attributes	Value	Units
Counter Measurement Period	01:25:01	

Figure 275 Wireless Port Counters page (Master, HCMP topology, Wireless Interface Selector set to All Wireless Links)

Wireless Port Counters				
Attributes	Value			Units
Wireless Interface Selector	All Wireless Interfaces ▾			
Attributes	Value	Value	Value	Units
Remote Unit Name	Slave_58_01_D5	Not Available	Not Available	
Tx Frames	75,333 (+0)	0 (+0)	0 (+0)	
Rx Frames	171,324 (+0)	0 (+0)	0 (+0)	
Rx Frames With Error	3 (+0)	0 (+0)	0 (+0)	
Tx Frames Q0	75,333 (+0)	0 (+0)	0 (+0)	
Tx Frames Q1	0 (+0)	0 (+0)	0 (+0)	
Tx Frames Q2	0 (+0)	0 (+0)	0 (+0)	
Tx Frames Q3	0 (+0)	0 (+0)	0 (+0)	
Tx Drops Q0	0 (+0)	0 (+0)	0 (+0)	
Tx Drops Q1	0 (+0)	0 (+0)	0 (+0)	
Tx Drops Q2	0 (+0)	0 (+0)	0 (+0)	
Tx Drops Q3	0 (+0)	0 (+0)	0 (+0)	
Rx Frames Q0	171,322 (+0)	0 (+0)	0 (+0)	
Rx Frames Q1	0 (+0)	0 (+0)	0 (+0)	
Rx Frames Q2	0 (+0)	0 (+0)	0 (+0)	
Rx Frames Q3	2 (+0)	0 (+0)	0 (+0)	
Byte Error Ratio	3.533e-9	0	0	
Attributes	Value			Units
Counter Page Refresh Period	3600			seconds
Counter Measurement Period	01:25:58			
<input type="button" value="Submit Page Refresh Period"/> <input type="button" value="Reset System Counters"/>				

Figure 276 Wireless Port Counters page (Slave, HCMP topology)

Wireless Port Counters					
Attributes	Value	Units	Attributes	Value	Units
Tx Frames	843 (+70)		Rx Frames	464 (+40)	
Tx Frames Q0	843 (+70)		Rx Frames With Error	0 (+0)	
Tx Frames Q1	0 (+0)		Rx Frames Q0	464 (+40)	
Tx Frames Q2	0 (+0)		Rx Frames Q1	0 (+0)	
Tx Frames Q3	0 (+0)		Rx Frames Q2	0 (+0)	
Tx Drops Q0	0 (+0)		Rx Frames Q3	0 (+0)	
Tx Drops Q1	0 (+0)				
Tx Drops Q2	0 (+0)				
Tx Drops Q3	0 (+0)				
Byte Error Ratio	0				
Attributes	Value	Units	Attributes	Value	Units
Counter Page Refresh Period	5	seconds	Counter Measurement Period	00:04:07	
<input type="button" value="Submit Page Refresh Period"/>			<input type="button" value="Reset System Counters"/>		

Procedure:

- Only on a device configured as in HCMP topology as a Master, select one interface using the Wireless Interface Selector. Note the Remote MAC Address indicates the MAC address of the unit currently connected, if any, to the selected wireless interface.
- Review the attributes (Table 243).
- To change the refresh period, update the Counter Page Refresh Period attribute and click **Submit Page Refresh Period**.
- To reset all counters to zero, click **Reset System Counters**.

Table 243 Wireless Port Counters attributes, HCMP mode

Attribute	Meaning
Tx/Rx Frames	Number of frames transmitted and received over the wireless link.
Rx Frames With Error	Number of received frames with errors.
Tx/Rx Frames Q0...Q3	Number of transmitted and received frames for each Traffic Class.
Tx Drops Q0...Q3	Number of frames discarded for each Traffic Class by taildrop.

Main Port Counters page (PTP topology only)

Menu option: **System > Statistics > Main Port Counters** (Figure 277). Use this page to check the Ethernet performance of the PSU port. The displayed counters vary depending on which port is being used to bridge the traffic.

Figure 277 Main Port Counters page (when main port is bridging traffic)

Main Port Counters					
Attributes	Value	Units	Attributes	Value	Units
Tx Octets	684,506 (+684,506)		Rx Octets	398,584 (+398,584)	
Tx Frames	6,177 (+2)		Rx Frames	6,044 (+2)	
Tx Drops	0 (+0)		Rx Frames With Crc Error	0 (+0)	
Tx Broadcasts	5,368 (+5,368)		Rx Broadcasts	5,554 (+5,554)	
Tx IEEE1588 Event Frames	0 (+0)		Rx IEEE1588 Event Frames	0 (+0)	
			Rx Frames Undersize	0 (+0)	
Tx Frames 64 Bytes	5,912 (+5,912)		Rx Frames 64 Bytes	5,968 (+5,968)	
Tx Frames 65 To 127 Bytes	41 (+41)		Rx Frames 65 To 127 Bytes	57 (+57)	
Tx Frames 128 To 255 Bytes	17 (+17)		Rx Frames 128 To 255 Bytes	2 (+2)	
Tx Frames 256 To 511 Bytes	6 (+6)		Rx Frames 256 To 511 Bytes	11 (+11)	
Tx Frames 512 To 1023 Bytes	4 (+4)		Rx Frames 512 To 1023 Bytes	2 (+2)	
Tx Frames 1024 To 1600 Bytes	197 (+197)		Rx Frames 1024 To 1600 Bytes	4 (+4)	
Tx Frames 1601 To Max Bytes	0 (+0)		Rx Frames 1601 To Max Bytes	0 (+0)	
			Rx Frames Oversize	0 (+0)	
			Rx Pause Frames	0 (+0)	
Attributes	Value	Units	Attributes	Value	Units
Counter Page Refresh Period	<input type="text" value="3600"/>	seconds	Counter Measurement Period	00:08:09	
<input type="button" value="Submit Page Refresh Period"/>			<input type="button" value="Reset System Counters"/>		

Procedure:

- Review the attributes ([Table 244](#)).
- To change the refresh period, update the Counter Page Refresh Period attribute and click **Submit Page Refresh Period**.
- To reset all counters to zero, click **Reset System Counters**.

Table 244 Main Port Counters attributes

Attribute	Meaning
Tx/Rx Octets	Total number of octets (bytes) transmitted and received over the interface.
Tx/Rx Frames	Total number of frames transmitted and received over the interface. This includes both good and bad frames.
Tx Drops	Total number of transmit frames dropped.
Rx Frames With Crc Error	Total number of received frames with CRC errors.
Tx/Rx Broadcasts	Total number of good transmitted and received broadcast packets.
Tx/Rx IEEE1588 Event Frames	Only displayed when IEEE 1588 Transparent Clock is enabled. Total number of transmitted or received IEEE 1588 Event frames

Attribute	Meaning
Rx Frames Undersize	Total number of frames received that are less than 64 bytes.
Tx/Rx Frames 64 Bytes	Total number 64 byte frames transmitted and received.
Tx/Rx Frames xxxx to yyyy Bytes	Total number of frames transmitted and received in the size range xxxx to yyyy bytes.
Tx/Rx Frames 1601 to Max bytes	Total number of frames transmitted and received in the size range 1601 to maximum bytes.
Rx Frames Oversize	Total number of frames received that are greater than the maximum number of bytes.
Rx Pause Frames	Total number of received pause frames.

Aux Port Counters page (PTP topology only)

Menu option: System > Statistics > Aux Port Counters (Figure 278).

Use this page to check the Ethernet performance of the Aux port.

Figure 278 Aux Port Counters page (when Aux port is allocated to the Local Management Service)

Aux Port Counters					
Attributes	Value	Units	Attributes	Value	Units
Tx Frames	568 (+52)		Rx Frames	3 (+0)	
Tx Drops	0 (+0)		Rx Frames With Crc Error	0 (+0)	
			Rx Frames Undersize	0 (+0)	
Attributes	Value	Units	Attributes	Value	Units
Counter Page Refresh Period	3000	seconds	Counter Measurement Period	00:12:00	
<input type="button" value="Submit Page Refresh Period"/>			<input type="button" value="Reset System Counters"/>		

Procedure:

- Review the attributes (Table 245).
- To change the refresh period, update the Counter Page Refresh Period attribute and click **Submit Page Refresh Period**.
- To reset all counters to zero, click **Reset System Counters**.

Table 245 Aux Port Counters attributes

Attribute	Meaning
Tx/Rx Frames	Total number of frames transmitted and received over the interface. This includes both good and bad frames.
Rx Frames With Crc Error	Total number of received frames with CRC errors.

Attribute	Meaning
Tx Drops	Number of frames dropped due to excessive collision, late collision or frame ageing
Rx Frames Undersize	Number of short frames (<64 Bytes) with or without a valid CRC

SFP Port Counters page (PTP topology only)

Menu option: System > Statistics > SFP Port Counters (Figure 279).

Use this page to check the Ethernet performance of the SFP port.

Figure 279 SFP Port Counters page (when SFP port is allocated to the Local Management Service)

SFP Port Counters

Attributes	Value	Units	Attributes	Value	Units
Tx Frames	0 (+0)		Rx Frames	0 (+0)	
			Rx Frames With Crc Error	0 (+0)	

Attributes	Value	Units	Attributes	Value	Units
Counter Page Refresh Period	<input type="text" value="3600"/>	seconds	Counter Measurement Period	00:20:56	

Submit Page Refresh Period

Reset System Counters

Procedure:

- Update the attributes (Table 246).
- To change the refresh period, update the Counter Page Refresh Period attribute and click **Submit Page Refresh Period**.
- To reset all counters to zero, click **Reset System Counters**.

Table 246 SFP Port Counters attributes

Attribute	Meaning
Tx/Rx Frames	Total number of frames transmitted and received over the interface. This includes both good and bad frames.
Rx Frames With Crc Error	Total number of received frames with CRC errors.

Ethernet Port Counters page (HCMP topology only)

Menu option: **System > Statistics > Ethernet Port Counters** (Figure 280). Use this page to check the performance of all Ethernet. The displayed counters vary depending on which port is being used to bridge the traffic.

Figure 280 Ethernet Port Counters page (HCMP topology)

Ethernet Port Counters					
Main Port Counters					
Attributes	Value	Units	Attributes	Value	Units
Tx Octets	3,465,824 (+0)		Rx Octets	113,761 (+0)	
Tx Frames	2,638 (+0)		Rx Frames	1,464 (+0)	
Tx Broadcasts	0 (+0)		Rx Frames With Error	0 (+0)	
			Rx Broadcasts	0 (+0)	
			Rx Frames Undersize	0 (+0)	
			Rx Frames Oversize	0 (+0)	
Aux Port Counters					
Attributes	Value	Units	Attributes	Value	Units
Tx Octets	0 (+0)		Rx Octets	0 (+0)	
Tx Frames	0 (+0)		Rx Frames	0 (+0)	
Tx Broadcasts	0 (+0)		Rx Frames With Error	0 (+0)	
			Rx Broadcasts	0 (+0)	
			Rx Frames Undersize	0 (+0)	
			Rx Frames Oversize	0 (+0)	
SFP Port Counters					
Attributes	Value	Units	Attributes	Value	Units
Tx Octets	0 (+0)		Rx Octets	0 (+0)	
Tx Frames	0 (+0)		Rx Frames	0 (+0)	
Tx Broadcasts	0 (+0)		Rx Frames With Error	0 (+0)	
			Rx Broadcasts	0 (+0)	
			Rx Frames Undersize	0 (+0)	
			Rx Frames Oversize	0 (+0)	
Attributes	Value	Units	Attributes	Value	Units
Counter Page Refresh Period	5	seconds	Counter Measurement Period	01:52:50	
<input type="button" value="Submit Page Refresh Period"/>			<input type="button" value="Reset System Counters"/>		

Procedure:

- Review the attributes (Table 247).
- To change the refresh period, update the Counter Page Refresh Period attribute and click **Submit Page Refresh Period**.
- To reset all counters to zero, click **Reset System Counters**.

Table 247 Ethernet Port Counters attributes (HCMP topology)

Attribute	Meaning
Tx/Rx Octets	Total number of octets (bytes) transmitted and received over the interface.
Tx/Rx Frames	Total number of frames transmitted and received over the interface. This includes both good and bad frames.
Rx Frames With Error	Total number of received frames with CRC errors.

Attribute	Meaning
Tx/Rx Broadcasts	Total number of good transmitted and received broadcast packets.
Rx Frames Undersize	Total number of frames received that are less than 64 bytes.
Rx Frames Oversize	Total number of frames received that are greater than the maximum number of bytes.

Management Counters page (HCMP topology only)

Menu option: **System > Statistics > Management Counters** (Figure 281). Use this page to check the performance of all Ethernet. The displayed counters vary depending on which port is being used to bridge the traffic.

Figure 281 Management Counters page (HCMP topology)

Management Counters					
Attributes	Value	Units	Attributes	Value	Units
Tx Frames Management	15,350 (+27)		Rx Frames Management	8,505 (+24)	
Tx Drops Management	0 (+0)				
Attributes	Value	Units	Attributes	Value	Units
Counter Page Refresh Period	5	seconds	Counter Measurement Period	01:53:57	
<input type="button" value="Submit Page Refresh Period"/>			<input type="button" value="Reset System Counters"/>		

Procedure:

- Review the attributes (Table 248).
- To change the refresh period, update the Counter Page Refresh Period attribute and click **Submit Page Refresh Period**.
- To reset all counters to zero, click **Reset System Counters**.

Table 248 Management Counters attributes (HCMP topology)

Attribute	Meaning
Tx Frames Management	Total number of frames transmitted over the management interface.
Tx Drops Management	Total number of transmit frames dropped over the management interface.
Rx Frames Management	Total number of frames received over the management interface.

SyncE Status page

Menu option: **System > Statistics > SyncE Status**

Use this page to monitor the state of the Synchronous Ethernet function.

Figure 282 SyncE Status page

SyncE Status					
Attributes	Value	Units	Attributes	Value	Units
Sync E Tracking State	Locked Local, Holdover Acquired				
Main PSU Port					
Main PSU Port Accepted QL Rx	QL-PRC		Main PSU Port Sync E Rx Status	Good	
Main PSU Port QL Rx	QL-PRC		Main PSU Port Sync E Master Slave Status	Slave	
Main PSU Port QL Tx	QL-DNU / QL-DUS		Main PSU Port Gigabit Master Slave Status	Slave	
Aux Port					
Aux Port QL Rx	None		Aux Port Sync E Master Slave Status	Master	
Aux Port QL Tx	QL-PRC		Aux Port Gigabit Master Slave Status	Not Applicable	
SFP Port					
SFP Port QL Rx	None		SFP Port Sync E Master Slave Status	Master	
SFP Port QL Tx	None		SFP Port Gigabit Master Slave Status	Slave	
Page Refresh Period	<input type="text" value="3"/>	Seconds	<input type="button" value="Submit Page Refresh Period"/>		

Procedure:

- Review the attributes
- To change the refresh period, update the Page Refresh Period attribute and click **Submit Page Refresh Period**

Table 249 Sync E Status attributes

Attribute	Meaning
Sync E Tracking State	The state of the Synchronous Ethernet state machine. See Table 250 for further details.
Main PSU Port Accepted QL Rx	The “accepted” QL received by the Main PSU Port. This should be the same as Main PSU Port QL Rx, unless: <ul style="list-style-type: none"> • an “Overwrite” has been configured • the system is starting up or recovering from an exception
Main PSU Port QL Rx	The QL currently being received at the Main PSU Port
Main PSU Port QL Tx	The QL currently being transmitted at the Main PSU Port
Main PSU Port SyncE Rx Status	The overall status of the incoming synchronous Ethernet signal on the Main PSU port. This port is available as a valid synchronization source if the status is Good . The port may potentially be a valid source in the near future if the status is Wait-to-Restore .
Main PSU Port Sync E Master Slave Status	This attribute indicates if the Main PSU Port is operating as a Synchronous Ethernet master (providing a source of timing for downstream devices) or slave (receiving a source of timing from an upstream device).

Attribute	Meaning
Main PSU Port Gigabit Master Slave Status	This attribute indicates if the Main PSU Port's Gigabit Ethernet physical interface is operating as a master (generating a clock) or slave (locking to a clock generated at the other end of the Ethernet link).
Aux Port QL Rx	The QL currently being received on the Aux Port
Aux Port Accepted QL Rx	The "accepted" QL received by the Aux Port. This should be the same as Aux Port QL Rx, unless the system is starting up or recovering from an exception
Aux Port QL Tx	The QL currently being transmitted at the Aux Port
Aux Port Sync E Master Slave Status	The Aux Port operates as a Synchronous Ethernet master (providing a source of timing for downstream devices).
Aux Port Gigabit Master Slave Status	This attribute indicates if the Aux Port's Gigabit Ethernet physical interface is operating as a master (generating a clock) or slave (locking to a clock generated at the other end of the Ethernet link).
SFP Port QL Rx	The QL currently being received on the SFP Port
SFP Port Accepted QL Rx	The "accepted" QL received by the SFP Port. This should be the same as SFP Port QL Rx, unless: <ul style="list-style-type: none"> an "Overwrite" has been configured the system is starting up or recovering from an exception The ODU synchronizes to the best frequency reference as determined by the Port Accepted QL Rx values at the nominated Sync E Slave Ports of local and remote ODUs.
SFP Port QL Tx	The QL currently being transmitted at the SFP Port
SFP Port Sync E Master Slave Status	This attribute indicates if the SFP Port is operating as a Synchronous Ethernet master (providing a source of timing for downstream devices) or slave (receiving a source of timing from an upstream device).
SFP Port Gigabit Master Slave Status	This attribute indicates if the SFP Port's Gigabit Ethernet physical interface is operating as a master (generating a clock) or slave (locking to a clock generated at the other end of the Ethernet link). The Master Slave Status is Not Applicable unless a Copper SFP module is present.

The "Sync E Tracking State" attribute can take the following values:

Table 250 Sync E Tracking State

Value	Meaning
Disabled	The synchronous Ethernet feature is disabled.

Acquiring Wireless Lock	Synchronous Ethernet is not operational because real-time clocks have not completed alignment.
Free Running	Synchronous Ethernet is operational, but with no timing source or history. This is a temporary state.
Locked Local, Acquiring Holdover	Sync E tracking has locked to a synchronisation signal from a cabled Ethernet port on the local ODU. This is a temporary state until the unit has acquired holdover history.
Locked Local, Holdover Acquired	Sync E tracking has locked to a synchronisation signal from a cabled Ethernet port on the local ODU and has acquired holdover history.
Holdover	There is currently no source for the tracking loop, but previously the tracking loop was in a Locked, Holdover Acquired state. The system is using the last known good frequency.
Locked Remote, Acquiring Holdover	The tracking loop has locked to a synchronisation signal from the remote ODU. This is a temporary state until the unit has acquired holdover history.
Locked Remote, Holdover Acquired	The tracking loop has locked to a synchronisation signal from the remote ODU and has acquired holdover history.

In normal operation, with the Synchronous Ethernet feature enabled and a valid timing source present, one end of the link should be in the “Locked Local, Holdover Acquired State”, the other end should be in the “Locked Remote, Holdover Acquired” state.

The Sync E Tracking State attribute remains in the Acquiring Wireless Lock state for a period of time after the wireless link has established whilst the two ODUs establish precise synchronization. The duration of this period depends on channel bandwidth, varying from less than one minute at 45 MHz, up to two minutes for 5 MHz.

Diagnostics Plotter page

Menu option: **System** > Diagnostics Plotter ([Figure 283](#) and [Figure 284](#)).

Use this page to monitor the performance of an operational PTP 700 link over time.

Figure 283 Diagnostic Plotter page (PTP topology)


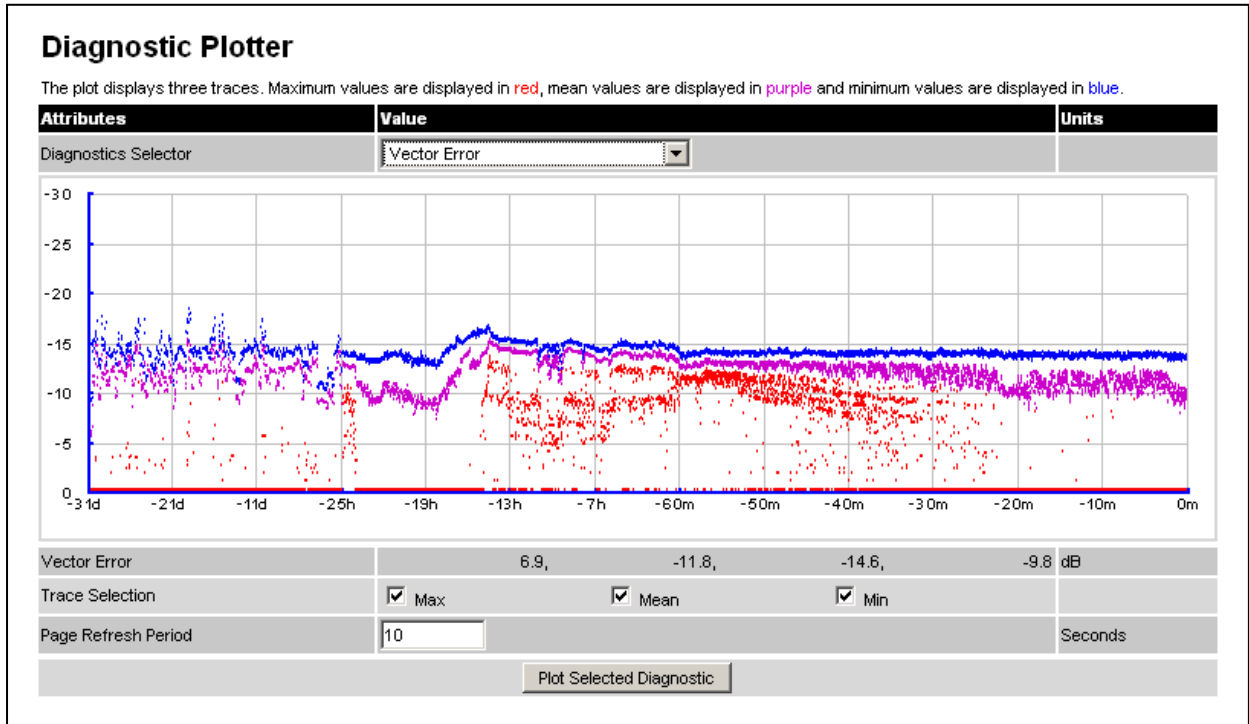


Figure 284 Diagnostic Plotter page (HCMP topology)

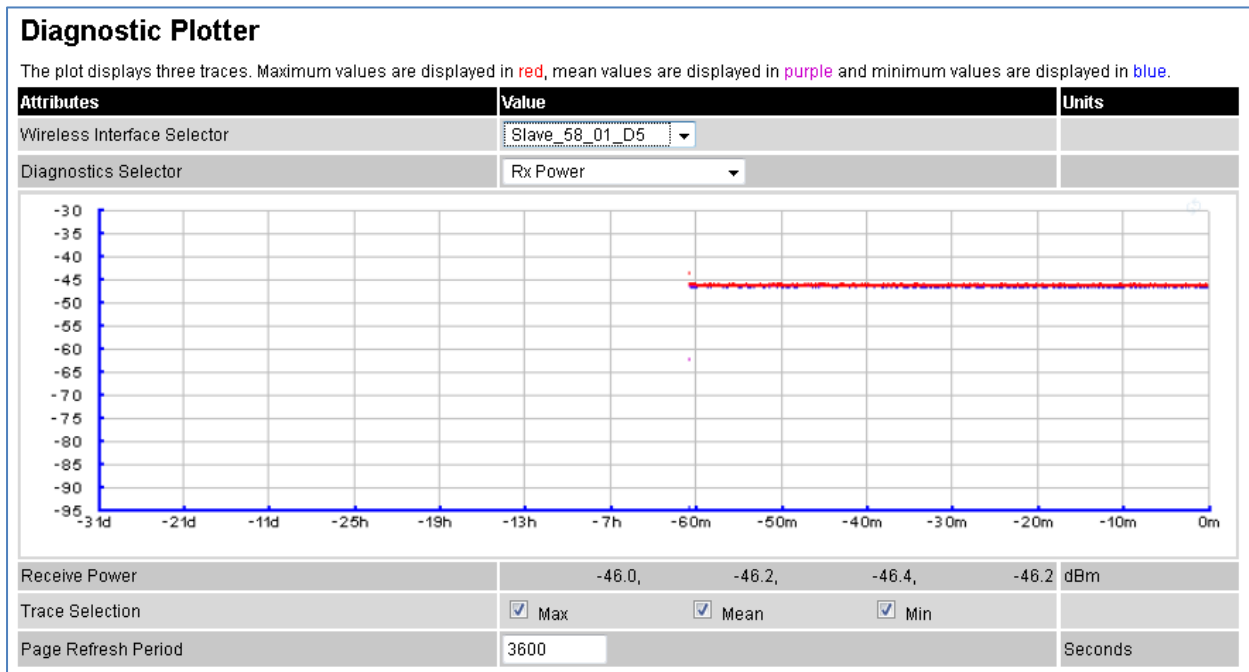

Procedure:

- Only on a device configured as in HCMP topology as a Master, set the Wireless Interface Selector to the Wireless Interface the diagnostic data needs to be displayed for. Note the Remote MAC Address indicated the MAC address of the unit currently connected, if any, to the selected wireless interface.

- Select a diagnostic from the Diagnostics Selector drop-down list. These are the same as the System Histogram attributes in the System Statistics page (Table 237) plus those listed in Table 251.
- Tick the required Trace Selection boxes: Max, Mean and Min.
- Update the Page Refresh Period as required. The default period is 3600 seconds (1 hour). To monitor the performance of a link in real time, select a much shorter period, for example 60 seconds.
- Click Plot Selected Diagnostic. The selected diagnostic trace is displayed in the graph. Maximum values are displayed in red, mean values are displayed in purple and minimum values are displayed in blue.

Table 251 Diagnostic Plotter specific System Histogram attributes

Attribute	Meaning
PCB Temperature	The temperature in degrees Celsius measured by a sensor on the printed circuit board of the ODU. The PCB temperature will normally be higher than the ambient temperature.
Tx Link Capacity Utilization	The Tx Link Capacity Utilization measures the percentage of the instantaneous transmit capacity actually uses to carry traffic. Note that this percentage is relative to the instantaneous capacity of the link in the transmit direction and that this capacity is dependent over time of the modulation the link operates in.

Generate Downloadable Diagnostics page

Menu option: **System** > Diagnostics Plotter > CSV Download (Figure 285).

Use this page to download diagnostics data to a CSV file.

Figure 285 Generate Downloadable Diagnostics page

Attributes	Value
Diagnostics Selector	Vector Error

Generate Diagnostics

Procedure:

- Select a diagnostic from the Diagnostics Selector drop-down list.
- Click Generate Diagnostics. The Generate Downloadable Diagnostics page is redisplayed with the name of the generated CSV file.
- Click on the CSV file name and save the CSV file to the hard drive of the local computer.
- Open the CSV file in MS Excel and use it to generate reports and diagrams. The CSV file contains at most 5784 entries, recorded over a 32 day period:
 - 3600 entries recorded in the last hour.
 - 1440 entries recorded in the previous 24 hours.

- 744 entries recorded in the previous 31 days.

Recovery mode

This section describes how to recover a PTP 700 unit from configuration errors or firmware image corruption.

Entering recovery mode

Use this procedure to enter recovery mode manually.



Note The unit may enter recovery mode automatically, in response to some failures.



Note Once the unit has entered recovery, it will switch back to normal operation if no access has been made to the recovery web page within 30 seconds.



Note See [Transition of digital signature algorithms](#) on page 1-78 for details of a transition in digital signatures of replacement firmware.

Procedure:

- 1 Apply power to PSU for at least 10 seconds.
- 2 Remove power for two seconds.
- 3 Re-apply power to the PSU.
- 4 When the unit is in recovery mode, access the web interface by entering the default IP address **169.254.1.1**. The Recovery Image Warning page is displayed:



- 5 Click on the warning page image. The Recovery Option Page is displayed ([Figure 286](#)).
- 6 Review the Software Version and Recovery Reason ([Table 252](#)).
- 7 Select a recovery option ([Table 253](#)).

Figure 286 Recovery Options page

Recovery Options

Software Upgrade:

Configuration Management

Software Version:: Recovery-01-00

Recovery Reason:: Unknown

MAC Address:: 00:00:ff:50:00:25

Table 252 Recovery Options attributes

Attribute	Meaning
Software Version	The firmware version of the recovery operating system permanently installed during manufacture.
Recovery Reason	The reason the unit is operating in Recovery mode, for example “Invalid or corrupt image”. “Unknown” usually means there has been a power outage.
MAC Address	The MAC address of the unit programmed during manufacture.

Table 253 Recovery Options buttons

Button	Purpose
Upgrade Software Image	Use this option to restore a working firmware version when firmware corruption is suspected, or when an incorrect firmware image has been loaded. Refer to Upgrading firmware image on page 7-83.
Reset IP & Ethernet Configuration back to factory defaults	Use this option to reset the IP and Ethernet attributes to factory defaults. Refer to Resetting IP & Ethernet configuration on page 7-84.
Erase Configuration	Use this option to reset the entire configuration of the unit to factory defaults. Refer to Resetting all configuration data on page 7-86.
Zeroize Sensitive Security Parameters	Use this option to reset the security configuration to default values. Refer to Zeroize Sensitive Security Parameters on page 7-87.
Reboot	Use this option to reboot the unit. Refer to Rebooting the unit on page 7-89.

Upgrading firmware image


Use this option to restore a working firmware image from the Recovery Options page ([Figure 286](#)).

Procedure:

- 1 Click **Browse**.
- 2 Navigate to the required firmware image. This may be the most recent image if firmware corruption is suspected, or an older image if an incorrect image has just been loaded. Click on the image and click **Open**.

RECOVERY-02-00 loads only firmware images with the DLD3 file extension. Earlier Recovery versions load only firmware images with the DLD2 file extension.

- 3 Click **Upgrade Software Image**. The Confirmation page is displayed. Click **Program Software Image into Non-Volatile Memory**. The Upgrade Progress Tracker page is displayed:

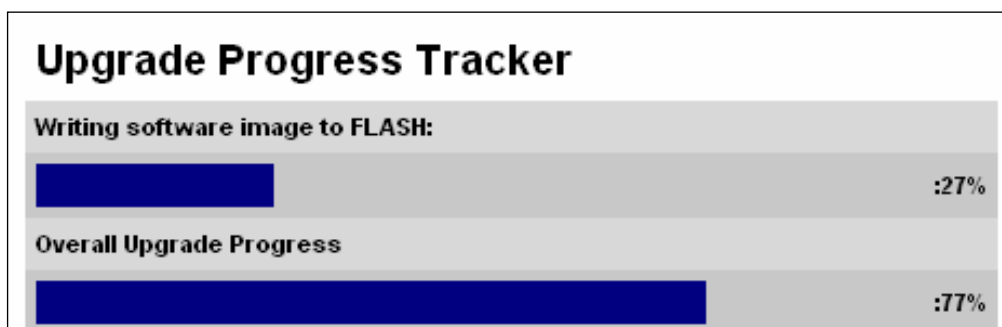

- 4 When the Software Upgrade Complete page is displayed, check that the correct image has been downloaded:



- 5 Click **Reboot Wireless Unit**. When the “**Are you sure?**” message is displayed, click **OK**.
- 6 The unit will now reboot and restart in normal operational mode, and the link should recover. If the unit or link fails to recover, refer to [Testing link end hardware](#) on page 8-7.



Note The unit will not upload FIPS versions of the firmware unless the unit has the AES encryption and FIPS licenses installed.



Note SSPs are automatically zeroized if FIPS firmware is loaded in a unit to replace standard (non-FIPS) firmware, or standard (non-FIPS) firmware is loaded in a unit to replace FIPS firmware.



Attention When SSPs have been zeroized, all user accounts are disabled, and the ODU is returned to the “first use” condition. See [Creating a user account](#) on page 6-6 to create a new user account for the web-based interface.

Resetting IP & Ethernet configuration


Use this option in the Recovery Options page to reset IPv4, IPv6 and Ethernet configuration to default values ([Figure 286](#)). This procedure resets the IP Version attribute to **IPv4**. It also resets the IPv6 configuration. The reset action affects the following attributes:

- IP Version
- IPv4 Address
- Subnet Mask
- Gateway IP Address
- use VLAN For Management Interfaces
- VLAN Management VID
- VLAN Management Priority
- IPv6 Address
- IPv6 Prefix Length
- IPv6 Gateway Address
- Data Service


- Management Service
- Local Management Service
- Data Port Wireless Down Alert
- Management Port Wireless Down Alert
- Main PSU Port Auto Negotiation
- Main PSU Port Auto Neg Advertisement
- Main PSU Port Auto Mdx
- Aux Port Auto Negotiation
- Aux Port Auto Neg Advertisement
- Aux Port Auto Mdx
- Aux Port Power Over Ethernet Output
- SFP Port Auto Negotiation
- SFP Port Auto Neg Advertisement
- SFP Port Auto Mdx
- Local Packet Filtering
- SNMP Access Control
- Access Control
- IP Address Label

Procedure:

- 1 Click **Reset IP & Ethernet Configuration back to factory defaults**. The reset pop up box is displayed:

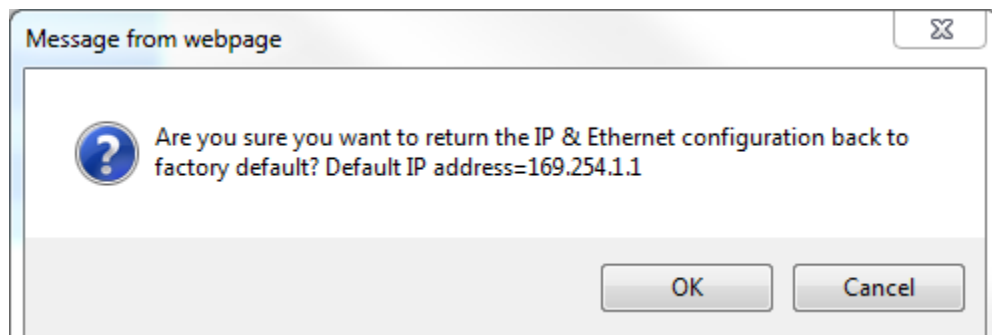

- 2 Record the IP address, as it will be needed to log into the unit after recovery.
- 3 Click **OK**. The reset confirmation page is displayed:

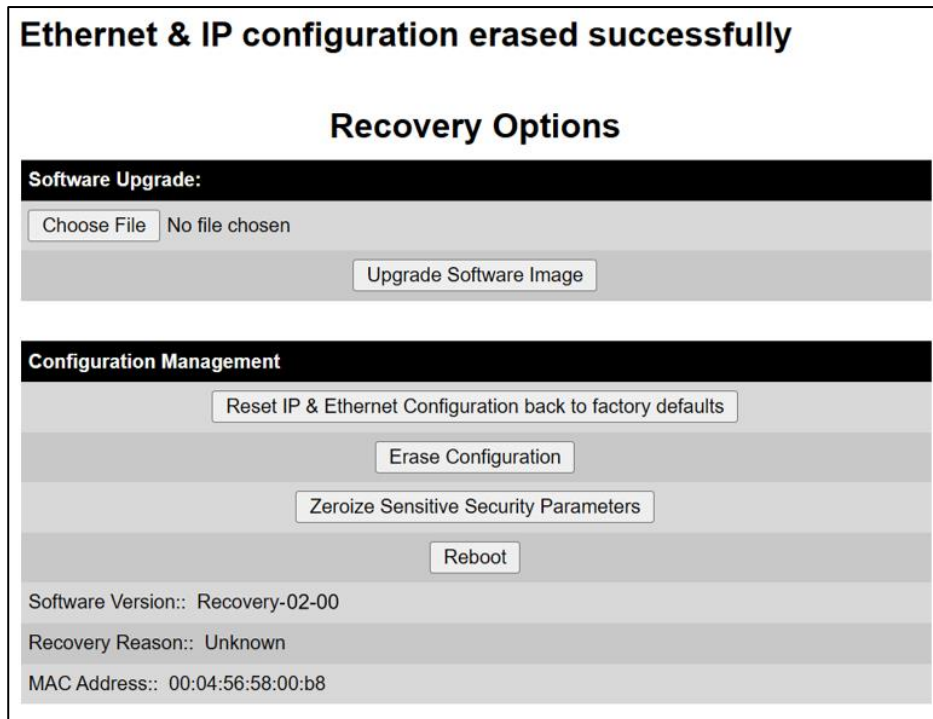

- 4 Click **Reboot**. When the “Are you sure you want to REBOOT this unit?” message is displayed, click **OK**.
- 5 The unit will now reboot. The unit should now start up in normal mode but with the IP and Ethernet configuration reset to factory defaults. If the unit fails to recover, refer to [Testing link end hardware](#) on page 8-7 and [Cable Diagnostics](#) on page 8-2.

Resetting all configuration data




Note Wireless Topology is not reset by this procedure.


Use this option in the Recovery Options page to reset the entire configuration of the unit (including IP, Ethernet and SSPs) to default values ([Figure 286](#)).

Procedure:

- 1 Click **Erase Configuration**. The erase pop up box is displayed:

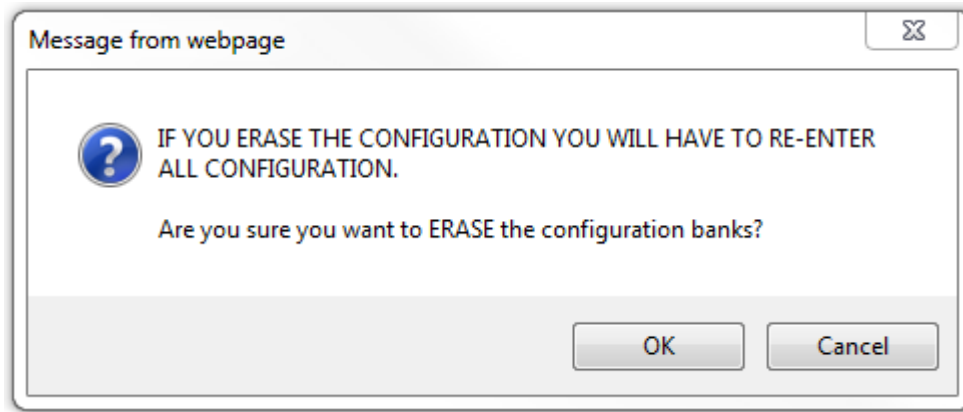

- 2 Click **OK**. The erase confirmation page is displayed:

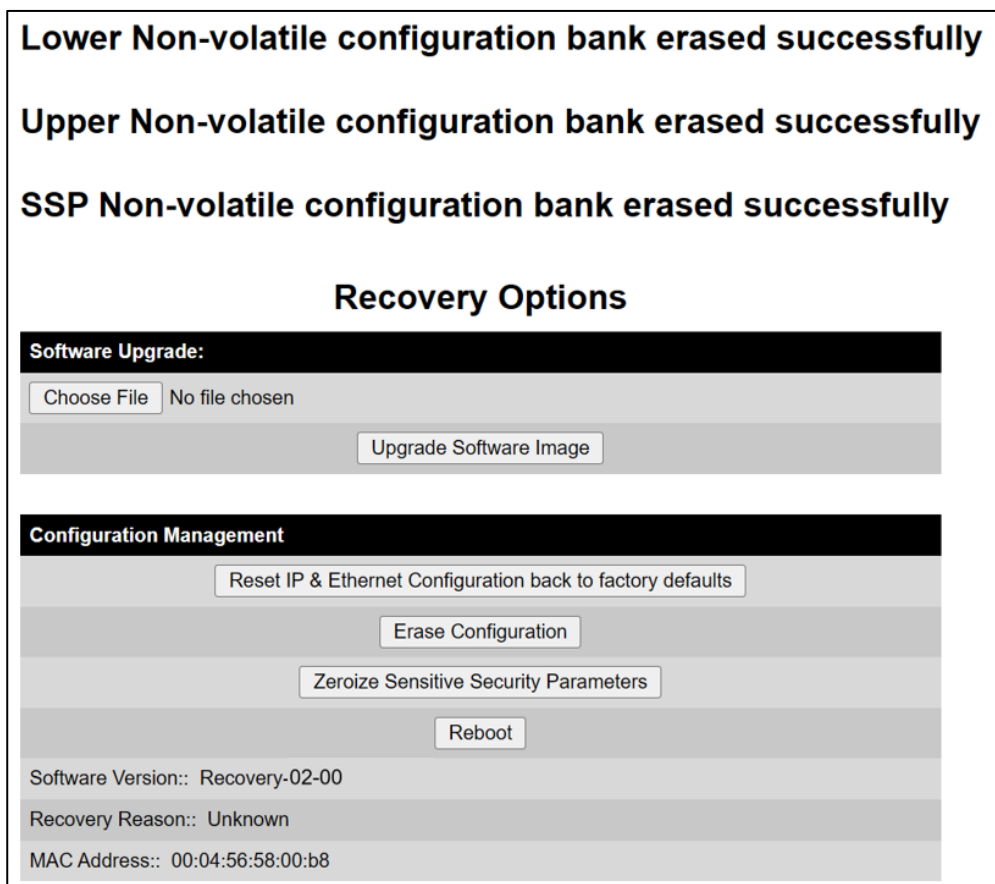

- 3 Click **Reboot**. When the confirmation message is displayed, click **OK**.
- 4 The unit reboots and starts up in normal mode but with all configuration reset to default values. If the unit fails to start up, refer to [Testing link end hardware](#) on page 8-7 and [Cable Diagnostics](#) on page 8-2.

Zeroize Sensitive Security Parameters


Use this option in the Recovery Options page to reset the security configuration of the unit to default values ([Figure 286](#)). This action includes the following attributes:

- Key of Keys


- Local User Accounts Names, Roles and Passwords
- Encryption Algorithm
- Wireless Encryption Key
- HTTPS Private Key
- HTTPS Public Key Certificate
- Random Number Generator Entropy
- User-supplied Device Private Key
- HTTP Access Enabled
- HTTP Port Number
- SNTP server keys for SHA1
- SNTP server authentication protocol
- SNTP server key identifier
- SNMPv3 USM authentication keys
- SNMPv3 USM privacy keys

Procedure:

- 1 Click **Zeroize Sensitive Security Parameters**. The confirmation pop up box is displayed:

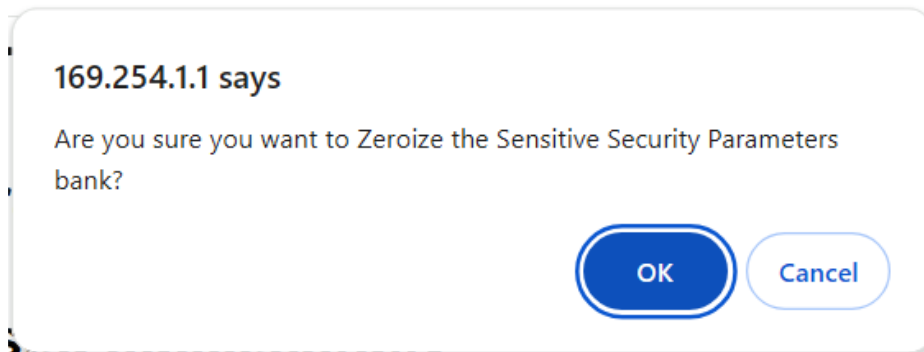

- 2 Click **OK**. The zeroize SSPs confirmation page is displayed:

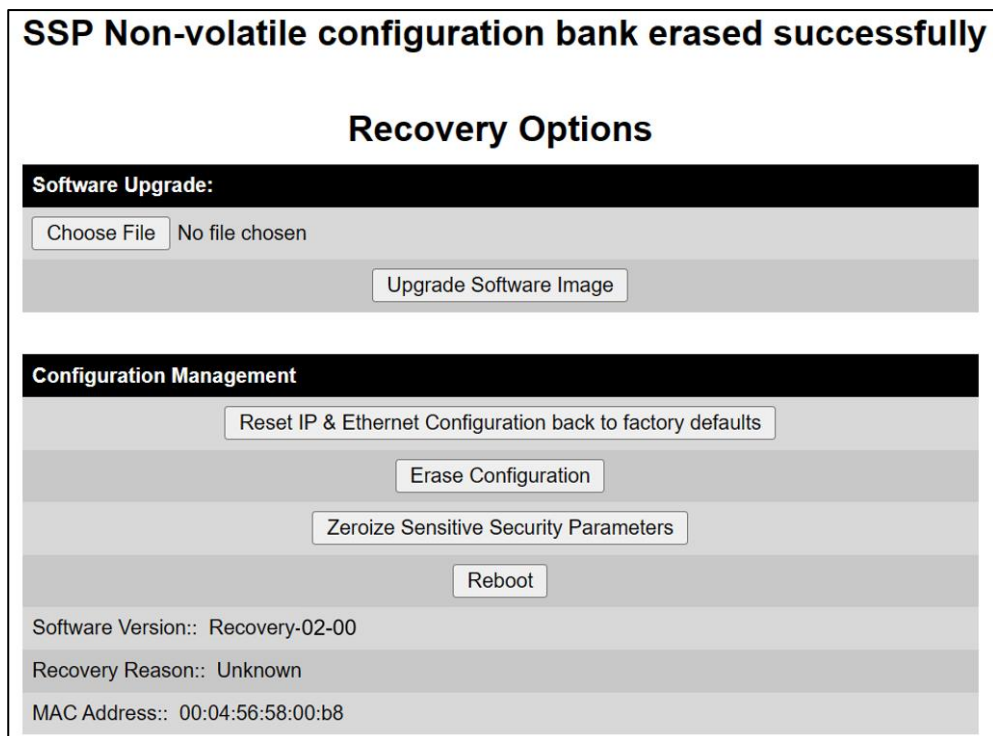

- 3 Click **Reboot**. When the “Are you sure you want to REBOOT this unit?” message is displayed, click **OK**.
- 4 The unit will now reboot. The unit should now start up in normal mode but with the security configuration reset to default values. If the unit fails to recover, refer to [Testing link end hardware](#) on page 8-7 and [Cable Diagnostics](#) on page 8-2.



Attention When SSPs have been zeroized, all user accounts are disabled, and the ODU is returned to the “first use” condition. See [Creating a user account](#) on page 6-6 to create a new user account for the web-based interface.

Rebooting the unit

Use this option to reboot the unit from the Recovery Options page ([Figure 286](#)).

Procedure:

- Click **Reboot**.
- When the “Are you sure you want to REBOOT this unit?” message is displayed, click **OK**. The unit will now reboot. The unit should now start up in normal operational mode. If the unit fails to start up, refer to [Testing link end hardware](#) on page 8-7.

Chapter 8: Troubleshooting

This chapter contains procedures for identifying and correcting faults in a PTP 700 link. These procedures can be performed either on a newly installed link, or on an operational link if communication is lost, or after a lightning strike.

The following topics are described in this chapter:

- [Cable Diagnostics](#) on page 8-2 describes how to perform cable diagnostics test to detect cabling related faults.
- [Testing link end hardware](#) on page 8-7 describes how to test the link end hardware, either when it fails on startup, or after a lightning strike.
- [Testing the radio link](#) on page 8-13 describes how to test the link when there is no radio communication, or when it is unreliable, or when the data throughput rate is too low.
- [Testing PTP-SYNC](#) on page 8-15 describes how to test the PTP-SYNC unit and its connections when the PTP-SYNC LEDs do not illuminate correctly, or when a synchronization fault is suspected.

Cable Diagnostics

This section describes how to diagnose cable faults.

The Cable Diagnostics feature may be used to test Ethernet cables connected to the Main PSU port and the Aux port. The feature uses Time Domain Reflectometry (TDR) technology to test individual twisted pairs in the cable, to identify open circuit and short circuit faults, and indicate the approximate location of the fault:

- Open circuit - An open circuit is detected when the impedance is greater than 300 ohms.
- Short circuit - A short circuit is detected when the impedance is less than 33 ohms.
- Approximate location of the fault - The fault location is reported as a distance from the ODU along the cable, and is accurate to +/- 2 meters (6.5 feet).



Note

- The cable diagnostics results are provided only as a guide.
- The feature reliably detects all open circuit and short circuit faults in cable pairs, but it is not possible to reliably detect short circuit faults between wires in different cable pairs. Except for that specific circumstance, an OK result for all pairs means the cable is good.
- The presence of LPUs can affect the accuracy and reliability of the results.

Before initiating the test, confirm that all outdoor drop cables (that is those that connect the ODU to equipment inside the building) are specified as supported, as defined in [Outdoor copper Cat5e Ethernet cable](#) on page 2-28.

Test scenarios

The Cable Diagnostics test may be performed in following scenarios:

Scenarios	Actions
Main PSU port "Down"	<p>Check for physical Ethernet cable connectivity between Power over Ethernet (PoE) and Customer Data Network (or LAN).</p> <p>If the cable connectivity is OK, Perform Cable Diagnostics test.</p>
Aux port "Down"	<p>Check for physical Ethernet cable connectivity between ODU and Customer Data Network or Management Agent.</p> <p>If the cable connectivity is OK, Perform Cable Diagnostics test.</p>
Main PSU or Aux port is "Up" but the Ethernet speed is noticed slow	<p>There is a possibility that one or more cable pairs have intermittent contact with the RJ45 connector pin. This could result in intermittent communication errors.</p> <p>Follow procedure Ethernet packet test.</p>

If Ethernet Rx Crc and Align counter is greater than ten (>10), Perform [Cable Diagnostics test](#).

If Packet Error Rate is greater than 1 in 1 million, Perform [Cable Diagnostics test](#).

If Number of lost packets are less than two (<2) after performing [Test ping packet loss](#), perform [Cable Diagnostics test](#).

Otherwise check the ODU's parameter configurations.

Cable Diagnostics test

Menu option: **System > Cable Diagnostics**

The Cable Diagnostics feature determines a fault in a cable and its approximate location based on Time Domain Reflectometry (TDR).

When the test is initiated for the selected port(s), the ODU sends a known signal (+1V) over the twisted pair cable. The transmitted signal will travel down the cable until it reflects off a fault. The magnitude of the reflection and the time it takes for the reflection to come back can be used to calculate the distance to the fault on the cable. For example, a +1V reflection will indicate an open close to the PHY and a -1V reflection will indicate a short close to the PHY.

Based on the returned signal, the radio identifies the cable status and estimates the distance of the fault. The result of the cable test will be displayed.

The cable diagnostics test can be carried out for Main PSU and AUX ports. This test is not supported for SFP port.

Attention

- On the Main PSU port, the presence of LPUs can affect the accuracy of the cable diagnostics results for some cable configurations. When a fault is detected, the feature reports the distance corresponding to the final TDR signal reflection. In configurations where there is a short cable from the ODU to the first LPU (< 2m), and a moderately long cable to the second LPU (30m), the final TDR signal reflection may come from one of the LPUs itself, rather than the fault. For example, a fault in the first short cable may be reported at or near the second LPU.
- On the Aux port, the presence of LPUs can affect the reliability of the cable diagnostics results for many cable configurations. Frequently, open circuit faults may be reported when the cable is OK, and fault distances may be reported corresponding to the LPU locations. Cable diagnostics tests on the Aux port should be repeated a number of times to establish a pattern.



Note All cable diagnostics results should be verified with an external cable tester before remedial action is taken.

All four twisted pairs of the cable are tested separately, and results are displayed for each pair.

The pin to pair mapping of a cable is shown in [Table 254](#).

Table 254 Pin to pair mapping of a cable (T568B termination)

Pin	Pair	Wire	Color (Supplied cable)	Color (Conventional)	Pins on plug face
1	2	1	Light Orange	White/Orange	
2	2	2	Orange	Orange	
3	3	1	Light Green	White/Green	
4	1	2	Blue	Blue	
5	1	1	Light Blue	White/Blue	
6	3	2	Green	Green	
7	4	1	Light Brown	White/Brown	
8	4	2	Brown	Brown	

Procedure


- 1 Select ports for cable diagnostics test:

Cable Diagnostics


This feature uses Time Domain Reflectometry (TDR) technology to identify open circuit and short circuit faults in individual twisted pairs of Ethernet cables connected to the Main PSU port and the Aux port, and indicate the approximate distance to the fault

Attributes	Value	Units
Cable Diagnostics Ports	<input checked="" type="checkbox"/> Main PSU Port	
	<input type="checkbox"/> Aux Port	
<input type="button" value="Start Test"/>		

- 2 Click "Start Test" button to begin the test:



- 3 The confirmation pop up box is displayed. Click the "OK" button to proceed with the test:

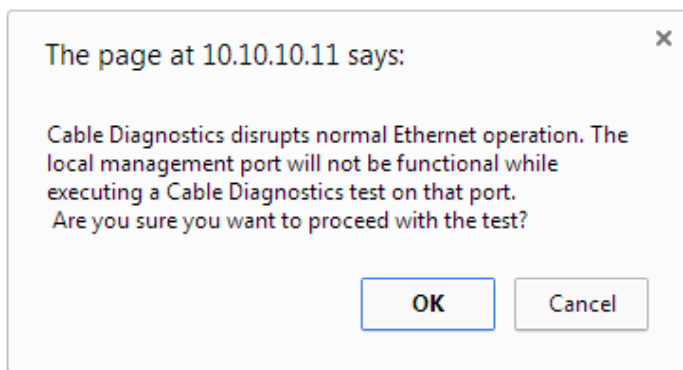




Note The Local Management port connection will be lost when the local management port is under test. However, the management port will be accessible when the other ports are under test.

- 4 On completion of the test, the web page is refreshed automatically, and the results are displayed:

Cable Diagnostics Results

The cable diagnostics results are provided only as a guide. The presence of LPUs can affect the accuracy and reliability of the results (see the User Guide for more details).

 All cable diagnostics results should be verified with an external cable tester before remedial action is taken.

Main PSU Port

Attributes	Value	Units
Last Test Time	01-Jan-1970 00:06:53	

Cable Pair	Results	Distance to Fault	Units
Pair 1	Short Circuit	6	meters
Pair 2	OK		
Pair 3	OK		
Pair 4	Short Circuit	6	meters

Aux Port

Attributes	Value	Units
Last Test Time		

Cable Pair	Results	Distance to Fault	Units
Pair 1	Not Tested		
Pair 2	Not Tested		
Pair 3	Not Tested		
Pair 4	Not Tested		



Note The last test performed results are shown for user reference purpose.

Table 255 Cable Diagnostics attributes

Attribute	Meaning
Cable Diagnostics Ports	Select ports on which Cable Diagnostics must be executed.
Last Test Time	The date and time when a Cable Diagnostics test was last executed successfully.

Attribute	Meaning
Cable Pair	<p>The result of the most recent execution of cable diagnostics on a cable pair.</p> <p>There are four twisted pairs in each Cat5 cable. The cable diagnostics test is performed on each pair of the cable.</p>
Results	<p>OK: Reported when the test is passed for a respective cable pair.</p> <p>Open Circuit: Reported when the impedance is greater than 330 ohms.</p> <p>Short Circuit: Reported when impedance is less than 33 ohms.</p>
Distance	<p>The estimate of the distance from the ODU to the fault detected on the cable pair during the most recent execution of Cable Diagnostics.</p> <p>Fault in cables longer than 160 meters (525 feet) may not be detected.</p> <p>The error margin is +/- 2 meters (6.5 feet).</p>
Units	Unit of cable length in meters.

Testing link end hardware

This section describes how to test the link end hardware when it fails on startup or during operation.

Before testing link end hardware, confirm that all outdoor drop cables, that is those that connect the ODU to equipment inside the building, are of the supported type, as defined in [Outdoor copper Cat5e Ethernet cable](#) on page 2-28.

AC+DC Enhanced Power Injector 56V LED sequence

For the AC+DC Enhanced Power Injector 56V, the expected power-up LED sequence is:

- The Power (green) LED illuminates steadily.
- After about 45 seconds, the Ethernet (yellow) LED blinks slowly 10 times.
- The Ethernet (yellow) LED illuminates steadily, then blinks randomly to show Ethernet activity.

If this sequence does not occur, take appropriate action depending on the LED states:

- [Power LED is off](#) on page 8-7
- [Power LED is blinking](#) on page 8-7
- [Ethernet LED did not blink 10 times](#) on page 8-8
- [Ethernet LED blinks ten times then stays off](#) on page 8-8
- [Ethernet LED blinks irregularly](#) on page 8-9 (for example a short blink followed by a long blink)
- [Power LED is on, Ethernet LED blinks randomly](#) on page 8-9

If a fault is suspected in the ODU-PSU drop cable, perform [Test resistance in the drop cable](#) on page 5-26.

Power LED is off

Meaning: Either the PSU is not receiving power from the AC/DC outlet, or there is a wiring fault in the ODU cable.

Action: Remove the ODU cable from the PSU and observe the effect on the Power LED:

- If the Power LED does not illuminate, confirm that the mains power supply is working, for example, check the plug and fuse (if fitted). If the power supply is working, report a suspected PSU fault to Cambium Networks.
- If the Power LED does illuminate, perform [Test resistance in the drop cable](#) on page 5-26.

Power LED is blinking

Meaning: The PSU is sensing there is an overload on the ODU port; this could be caused by a wiring error on the drop cable or a faulty ODU.


Action: Remove the ODU cable from the PSU. Check that pins 4&5 and 7&8 are not crossed with pins 1&2 and 3&6. Check that the resistance between pins 1&8 is greater than 100K ohms. If either check fails, replace or repair the ODU cable.

Ethernet LED did not blink 10 times

Meaning: The ODU flashes the LED on the AC+DC Enhanced Power Injector 56V 10 times to show that the ODU is powered and booted correctly.

Action:

- 1 Remove the ODU cable from the PSU. Examine it for signs of damage. Check that the ODU cable resistances are correct, as specified in [Test resistance in the drop cable](#) on page 5-26. If the ODU cable is suspect, replace it.
- 2 Use the LPU (if installed) to check that power is available on the cable to the ODU. Access the connections by rotating the LPU lid as shown (slacken the lid nut but do not remove it):

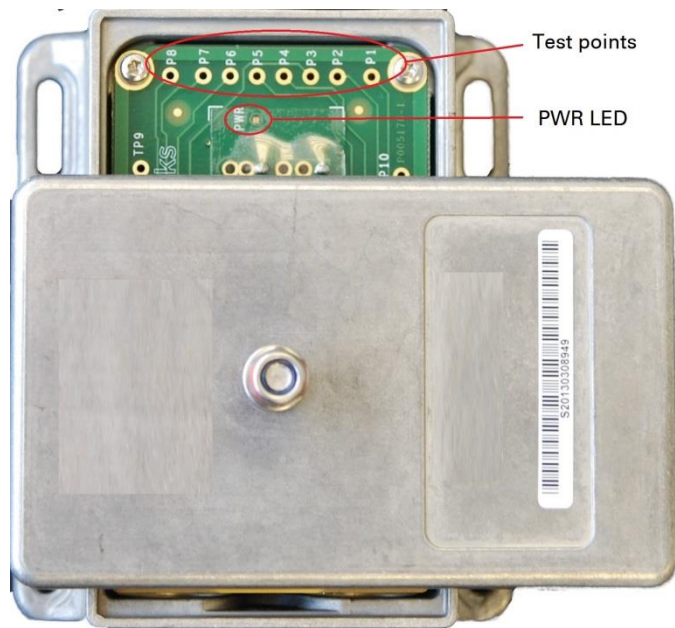

- 4 Check that test point P1 on the LPU PCB corresponds to pin 1 on the RJ45. Repeat for points P2 to P8. This test is only valid if both the PSU and the ODU are disconnected.
- 5 Reconnect the ODU cable to the PSU.
- 6 Check that the PWR LED near the top right of the LPU PCB is illuminated to indicate power in the Ethernet cable.
- 7 If any test fails, replace or repair the cable that connects the PSU to the LPU or ODU.

Ethernet LED blinks ten times then stays off

Meaning: There is no Ethernet traffic between the PSU and ODU.

Action: The fault may be in the LAN or ODU cable:

- Confirm that Ethernet traffic is connected to the AC+DC injector LAN port, confirm the cable is not faulty, replace if necessary.
- If the LAN connection to the AC+DC Power Injector 56V is working, check the drop cable is correctly wired using a suitable cable tester. Repeat the drop cable tests on page [Test resistance in the drop cable](#) on page 5-26.

Ethernet LED blinks irregularly

Meaning: If the Ethernet LED blinks irregularly, for example two rapid blinks followed by a longer gap, this indicates that the ODU has booted in recovery mode. The causes may be: installation wiring, or a corrupt ODU firmware load, or sufficient time has not been allowed between a repeat power up.

Action: Refer to [Recovery mode](#) on page 7-80.

Power LED is on, Ethernet LED blinks randomly

Meaning: Both LEDs are in their normal states, implying that the PSU is receiving power from the AC/DC outlet and there is normal Ethernet traffic between the PSU and ODU.


Action: If, in spite of this, a fault is suspected in the link end hardware:

- If the Ethernet connection to the network is only 100BASE-TX, when 1000BASE-T is expected: remove the ODU cable from the PSU, examine it, and check that the wiring to pins 4&5 and 7&8 is correct and not crossed.
- Perform [Ethernet packet test](#) on page 8-10.

Ethernet packet test

Follow the Ethernet packet test flowchart (Figure 287) and procedures below.

Figure 287 Ethernet packet test flowchart

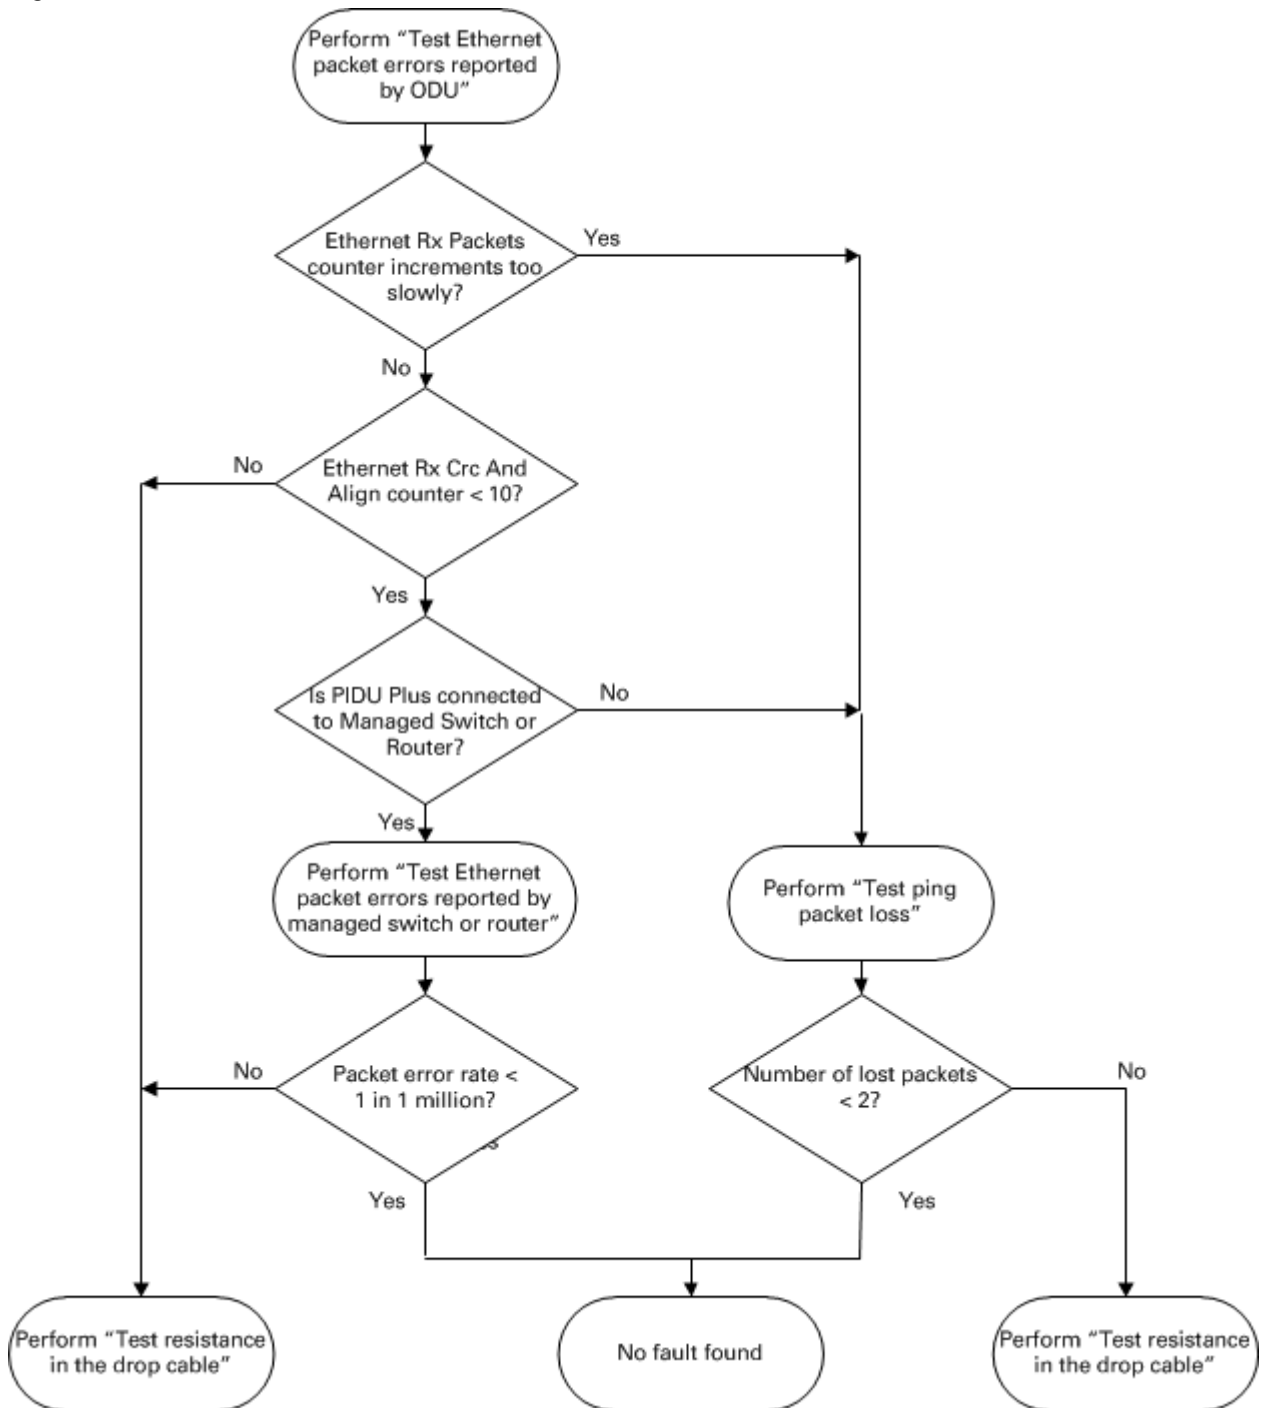

Test Ethernet packet errors reported by ODU

Log into the unit and click **Administration, Statistics, Detailed Counters**. Click **Reset System Counters** at the bottom of the page and wait until the Ethernet Rx Packets counter has reached 1 million (the count will only update when the page is refreshed. If the counter does not increment or increments too slowly, because for example the PTP 700 is newly installed and there is no offered Ethernet traffic, then abandon this procedure and consider using the procedure [Test ping packet loss](#) on page 8-11.

Read the Ethernet Rx Crc And Align counter. The test has passed if this is less than 10.

Test Ethernet packet errors reported by managed switch or router

If the ODU is connected to a managed Ethernet switch or router, it may be possible to monitor the error rate of Ethernet packets. Please refer to the user guide of the managed network equipment. The test has passed if the rate of packet errors reported by the managed Ethernet switch or router is less than 10 in 1 million packets.

Test ping packet loss

Using a computer, it is possible to generate, and monitor packets lost between the PSU and the ODU. This can be achieved by executing the Command Prompt application which is supplied as standard with Windows and MAC operating systems.



Attention This procedure disrupts network traffic carried by the PTP 700 under test:

Procedure:

- 1 Ensure that the IP address of the computer is configured appropriately for connection to the PTP 700 under test, and does not clash with other devices connected to the network.
- 2 If the PSU is connected to an Ethernet switch or router then connect the computer to a spare port, if available.
- 3 If it is not possible to connect the computer to a spare port of an Ethernet switch or router, then the PSU will need to be disconnected from the network in order to execute this test:
 - Disconnect the PSU from the network.
 - Connect the computer directly to the LAN port of the PSU.
- 4 On the computer, open the Command Prompt application.

- 5 Send 1000 ping packets of length 1500 bytes. The process will take 1000 seconds, which is approximately 17 minutes.

If the computer is running a Windows operating system, this is achieved by typing (for an IPv6 address, use the **ping6** command):

```
ping -n 1000 -l 1500 <ipaddress>
```

where <ipaddress> is the IP address of the PTP 700 ODU under test.

If the computer is running a MAC operating system, this is achieved by typing:

```
ping -c 1000 -s 1492 <ipaddress>
```

where <ipaddress> is the IP address of the PTP 700 ODU under test.

- 6 Record how many Ping packets have been lost. This is reported by Command Prompt on completion of the test.

The test has passed if the number of lost packets is less than 2.

Testing the radio link

This section describes how to test the link when there is no radio communication, when it is unreliable, when the data throughput rate is too low, or when a unit is causing radio or TV interference. It may be necessary to test the units at both ends of the link.

No activity

If there is no wireless activity, proceed as follows:

- 1 Check for Alarm conditions on Home page.
- 2 Check that the firmware at each end of the link is the same version.
- 3 Check that the Target Mac address is correctly configured at each end of the link.
- 4 Check Range.
- 5 Check Tx Power.
- 6 Check License keys to ensure that both units are the same product variant.
- 7 Check Master/Slave status for each unit and ensure that one unit is Master and the other unit is slave.
- 8 Check that the link is not obstructed or the ODU misaligned.
- 9 Check the DFS page at each end of the link and establish that there is a quiet wireless channel to use.
- 10 If there are no faults found in the configuration and there is absolutely no wireless signal, retry the installation procedure.
- 11 If this does not work then report a suspected ODU fault to Cambium Networks.

Some activity

If there is some activity but the link is unreliable or does not achieve the data rates required, proceed as follows:

- 1 Check that the interference has not increased using the DSO measurements.
- 2 If a quieter channel is available check that it is not barred.
- 3 Check that the path loss is low enough for the communication rates required.
- 4 Check that the ODU has not become misaligned.

Radio and television interference

If a PTP 700 unit is interfering with radio or television reception (this can be determined by turning the equipment off and on), attempt the following corrective actions:

- Realign or relocate the antenna.
- Increase the separation between the affected equipment and antenna.
- Connect the ODU and PSU power supply into a power outlet on a circuit different from that to which the receiver is connected.
- Contact Cambium Point-to-Point for assistance.

Testing PTP-SYNC

This section describes how to test the PTP-SYNC unit and its connections when the PTP-SYNC LEDs do not illuminate correctly, or when a synchronization fault is suspected.

Checking the PTP-SYNC LEDs

If a fault is suspected in the PTP-SYNC or GPS hardware, check the PTP-SYNC LED states and use [Table 256](#) to choose the correct test procedure.

Table 256 PTP-SYNC indicator LED states

LED	State	Description and test procedure
GPS	Off	No GPS satellite data being received at the GPS/SYNC IN port. Refer to GPS LED does not illuminate or blink on clustered units on page 8-16.
	On steady or blink	GPS satellite data being received.
SYNC	Off	No data being received at the SYNC OUT port.
	On steady or blink	Data being received at the SYNC OUT port. The SYNC LED does not normally illuminate, even in cluster configurations.
STATUS	Off	No power. Refer to LEDs do not illuminate on page 8-15.
	On steady	Power but no satellite lock. Refer to STATUS LED is on steady on page 8-16.
	Blink	Power and satellite lock at either the GPS/SYNC IN or 1PPS IN port.
	Double blink	Possible fault in GPS/SYNC IN or 1PPS IN cables. Refer to STATUS LED double-blinks on page 8-16.
ODU	Off	No signal being received from the ODU. Refer to ODU LED does not illuminate within 90 seconds on page 8-16.
	On	Communication with the ODU is established.
	Blink red	Error in communication with ODU. Refer to ODU LED blinks red on page 8-16,

LEDs do not illuminate

Meaning: The PTP-SYNC unit is not powered up.

Action: Ensure that there is a cable connection between the PSU ODU interface and the PIDU IN interface of the PTP-SYNC unit. Confirm that the PSU is powered up.

STATUS LED is on steady

Meaning: There is power but no satellite lock. This probably indicates that a 1PPS synchronization pulse is not detected by the PTP-SYNC unit.

Action: Depending on system configuration, take one of the following actions:

- System using a GPS receiver module - Ensure that there is a cable connection between the PTP-SYNC GPS/SYNC IN interface and the LPU, also that there is a cable connection between the LPU and the GPS receiver module. Check that the GPS receiver module has an uninterrupted view of the sky.
- System using an alternative 1PPS timing source - Ensure that there is a cable connection between the PTP-SYNC GPS/SYNC IN or 1PPS IN interface and the 1PPS timing source.
- On cluster slave units - Ensure that there is a cable connection between the slave GPS/SYNC IN interface and the SYNC OUT interface of the preceding unit in the chain.

STATUS LED double-blinks

Meaning: There may be a fault in the GPS/SYNC IN or 1PPS IN cables.

Action: Check the GPS wiring in accordance with [Table 47](#).

ODU LED does not illuminate within 90 seconds

Meaning: There may be no communication between PTP-SYNC and ODU.

Action: Ensure that the PTP-SYNC ODU OUT interface is connected to the ODU (and LPUs if installed) via the drop cable.

ODU LED blinks red

Meaning: Error in communication with ODU. Possible causes are: fault in the ODU or PSU cable, maximum recommended cable lengths exceeded, or TDD synchronization is not enabled at the ODU.

Action: Confirm that the ODU and PSU cables are not too long: see [Ethernet standards and cable lengths](#) on page 2-27. Check the ODU cable wiring by following the procedure described in [Test resistance in the drop cable](#) on page 5-26.

GPS LED does not illuminate or blink on clustered units

Meaning: This indicates a fault only when the timing source is a GPS receiver.

Action: [Table 257](#) describes the action to be taken depending upon the behavior of the GPS LEDs at the master and slave(s).

Table 257 Clustered PTP-SYNC units - GPS LEDs Fault-finding

Cluster timing source	GPS LED on master	GPS LED on slave(s)	Diagnosis
GPS receiver providing NMEA data	Blink	Blink	OK
	Off	Any	Fault in GPS unit or GPS cable

Cluster timing source	GPS LED on master	GPS LED on slave(s)	Diagnosis
	Blink	Off	Fault in daisy chain cable
Alternative 1PPS source, no NMEA data	Off	Off	OK
	Off	On	Fault in alternative 1PPS source
One ODU is cluster timing master	Off	Off	OK

Glossary

Term	Definition
AES	Advanced Encryption Standard
ANSI	American National Standards Institution
ARP	Address Resolution Protocol
ATPC	Automatic Transmit Power Control
Aux	Auxiliary
BBDR	Broadband Disaster Relief
BPSK	Binary Phase Shift Keying
BW	Bandwidth
CFM	Connection Fault Management
CHAP	Challenge Handshake Authentication Protocol
CSP	Critical Security Parameter
DC	Direct Current
DER	Distinguished Encoding Rules
DES	Data Encryption Standard
DFS	Dynamic Frequency Selection
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name Server
DSCP	Differentiated Services Code Point
DSO	Dynamic Spectrum Optimization
EAPS	Ethernet Automatic Protection Switching
EIRP	Equivalent Isotropic Radiated Power
EMC	Electromagnetic Compatibility
EMD	Electro-Magnetic Discharge
EPL	Ethernet Private Line
ETSI	European Telecommunications Standards Institute
EU	European Union
FAQ	Frequently Asked Question

GLOSSARY

Term	Definition
FCC	Federal Communications Commission
FIPS	Federal Information Processing Standards
FQDN	Fully Qualified Domain Name
GARP	Generic Attribute Registration Protocol
GE	Gigabit Ethernet
GUI	Graphical User Interface
HTTP	Hypertext Transfer Protocol
IB	In-Band
IC	Industry Canada
ICMP	Internet Control Message Protocol
ICNIRP	International Commission on Non-Ionizing Radiation Protection
IEEE	Institute of Electrical and Electronic Engineers
IP	Internet Protocol
IPSec	Internet Protocol Security
ISM	Industrial Scientific and Medical
ITPE	Initial Transmit Power Estimate
KDB	Knowledge Database
L2CP	Layer Two Control Protocols
LACP	Link Aggregation Control Protocol
LLDP	Link Layer Discovery Protocol
LAN	Local Area Network
LOS	Line-of-Sight (clear line-of-sight, and Fresnel zone is clear)
LPU	Lightning Protection Unit
MAC	Medium Access Control Layer
MDI (-X)	Medium Dependent Interface (-Crossover)
MEF	Metro Ethernet Forum
MIB	Management Information Base
MIMO	Multiple-Configure Multiple-Output
MLD	Multicast Listener Discovery
MPLS	Multiprotocol Label Switching

GLOSSARY

Term	Definition
MRP	Multiple Registration Protocol
MSTP	Multiple Spanning Tree Protocol
MTU	Maximum Transmission Unit
NA	Neighbor Advertisement
NLOS	Non-Line-of-Sight
NMEA	National Marine Electronics Association
NS	Neighbor Solicitation
NTP	Network Time Protocol
NUD	Neighbor Un-reachability Detection
ODU	Outdoor Unit
OFDM	Orthogonal Frequency Division Multiplex
OOB	Out-of-Band
PC	IBM Compatible Personal Computer
PIDU	Powered Indoor Unit
POE	Power over Ethernet
PSU	Power Supply Unit
PTP	Point-to-Point
QAM	Quadrature Amplitude Modulation
QoS	Quality of Service
QPSK	Quadrature Phase Shift Keying
R-APS	Ring Automatic Protection Switching
RADIUS	Remote Authentication Dial-In Service
RAM	Random Access Memory
RF	Radio Frequency
RFC	Request for Comments
RoW	Rest of World
RMA	Return Material Authorization
RSSI	Received Signal Strength Indication
RSTP	Rapid Spanning Tree Protocol
SAN	Subject Alternative Name

GLOSSARY

Term	Definition
SELV	Safety Extra Low Voltage
SFP	Small Form-factor Pluggable
SLAAC	Stateless Address Auto-configuration
SMTP	Simple Mail Transport Protocol
SNMP	Simple Network Management Protocol
SNTP	Simple Network Time Protocol
SSO	Single Sign On
SSP	Sensitive Security Parameters
STP	Spanning Tree Protocol
Syslog	System Logging
TC	Traffic Class
TCP	Transmission Control Protocol
TDD	Time Division Duplexing
TDM	Time Division Multiplexing
TDWR	Terminal Doppler Weather Radar
TGB	Tower Ground Bus bar
TLS	Transport Layer Security
UNII	Unlicensed National Information Infrastructure
URL	Universal Resource Location
USM	User-based Security Model
UTC time	Coordinated Universal Time
UTP	Unshielded Twisted Pair
UV	Ultraviolet
VACM	View-based Access Control Model
VLAN	Virtual Local Area Network
WEEE	Waste Electrical and Electronic Equipment